



READ BEFORE USE

IMPORTANT INSTRUCTIONS

Only for South Africa

Additional installation information for SMEG gas hobs and stoves supplied to South Africa

All Smeg appliances comply with SANS 1539 and have been issued with Permit numbers by the Liquefied Petroleum Gas Safety Association of Southern Africa.

Gas Type: LPG (Note: This appliance may have been supplied ex factory with setting and jets for Natural Gas. Your installer must make the necessary changes and adjustments before handing over the installed appliances for use).

Operating Pressure: 2.8 kPa. Note that this appliance may only be used with a LPG regulator of 2.8 kPa outlet pressure and that complies with requirements of SABS 1237.

- This appliance may only be installed by a registered LPGas Practitioner/Installer. All registered Gas fitters are provided with an identity card, which also carries their registration number. Make a note of this. The LPGas Practitioner/Installer should also provide you with a written certificate after completing the work. Before the installer hands over the installed appliance ensure that you are informed of the location of the isolation or shut off valve in the gas supply line to the appliance and how to operate it.
- Do not modify the appliance in any way as this may make it unsafe.
- Note carefully the ventilation requirements indicated in the specific model instruction booklet. This information is vital for the safety of the occupants of the area in which the appliance is installed and used.
- Never check for gas leaks with a naked flame. Always use a soapy water solution applied with a brush to the areas where you suspect there may be a gas leak. Do not use the appliance if you suspect a gas leak.
- There are no preset service intervals for this appliance. Refer to the section on maintenance and cleaning in the instruction booklet for details on how to care for your SMEG appliance.
- After removing burner caps or burner heads to clean them or the hob surface around the burners, always take care that the burner heads are properly located in position and that the igniter post and flame failure thermocouple are not damaged in any way. It is important that these devices fit correctly into the location holes provided in the burner heads. They will not function correctly if not properly located. The burner caps locate by means of the ridge on the underside. Note that burners will not work efficiently if the burner caps are not properly located. There are drawings of a typical burner assembly in your instruction booklet.



Instructions

FOR YOUR SAFETY

IF YOU SMELL GAS:

- Turn off gas supply at bottle
- Extinguish all naked flames
- Do not operate any electrical appliances
- Ventilate the area
- Check for leaks as detailed in this manual

If odour persists, contact your dealer or gas supplier immediately.

Do not tamper with the appliance.

BURN-BACK (FIRE IN BURNER TUBE OR CHAMBER)

In the event of a burn-back, where the flame burns back to the jet, immediately turn off the gas supply at the control valve on the panel. After ensuring the flame is extinguished, wait for 1 minute and re-light the appliance in the normal manner. Should the appliance burn back again, close the control valve and call a service technician. Do not use the appliance again until the service technician has declared that it is safe to do so.

GAS-PRESSURE REGULATOR

This appliance requires an operating pressure of 2,8 kPa at the appliance. A suitable LPG regulator that complies with the requirements of the current edition of SANS 1237 must be installed.

IMPORTANT INFORMATION FOR THE USER

This appliance may only be installed by a registered LP Gas installer. All registered installers are provided with a card carrying their registration number. Ask to be shown the card before allowing the installation work to commence and make a note of the Installer QCC number. Upon completion of the installation, the installer is required to explain the operational details of the appliance together with the safety instructions. You will be asked to sign acceptance of the installation and be provided with a Certificate of Compliance (CoC). You should only sign for acceptance of the installation when the installation is completed to your satisfaction.

Note that your invoice is required in the event that you wish make a guarantee claim. Keep the CoC in a safe place as it may be required in the future (e.g. when selling your property).

IMPORTANT INFORMATION FOR THE INSTALLER.

This appliance may only be installed by a LP gas installer registered with the South African Qualification and Certification Committee for Gas (SAQCC Gas). The appliance must be installed in accordance with the requirements of the current edition and any fire department regulations and/or local by laws applicable to the area. If in doubt check with the relevant authority before undertaking the installation. Upon completion of the installation you are required to fully explain and demonstrate to the user the operational details and safety practices applicable to the appliance and the installation, and issue a fully completed Certificate of Conformity.