

User Manual

— TABLET PC —



Charger specifications

- ⦿ Charger specs should match the input voltage/current shown on the back of the product.
 - ⦿ Please only use chargers that meets the above specification.
 - ⦿ Please do a full recharge every 3 months if the product is going to stay unused for an extended period.
 - ⦿ For first use after storage, the product may require a 30 minute charging session before charging status is indicated.
- **Before charging, inspect the port and cable plug for damage, debris, or moisture. If overheating or smoke occurs, immediately disconnect the power and unplug the cable.**

Button Functions

- **Power button:** 
 - When the device is off, long press power button for 3 secs to turn on the device.
 - When the device is on, short press power button to turn on/off screen.
 - When the device is on, long press power button for 3 secs to access the shutdown interface, long press for 10 secs to force shut down the device.
- **Volume+ button:** Press to increase the volume. 
- **Volume- button:** Press to decrease the volume. 

Control the screen

Tap

Lightly touch items to select or launch them.



Touch and hold

Touch and hold the item for about 2 seconds.



Drag and drop

Touch and hold an item, and then move it to a new location.



Swipe

Up, Down, Left or Right Swipe.



Zoom in and out

Bring your thumb and forefinger , together or apart to zoom in and out.



Do not let the screen come into contact with other electronic devices. Electrostatic discharge may cause the screen to malfunction.


To avoid damaging the screen, do not use any sharp objects to tap it or press too hard with fingertips or other objects. It is recommended not to use a fixed image on part or all of the screen for an extended period. Otherwise, it may cause screen burn-in. The device may not recognize touch inputs near the edges of the screen, as this area is not within the touch input zone.

Navigation Methods

Settings Path: Open “Settings” - “System” - “Gestures” → ‘Navigation mode’ - **Select “Gesture navigation” or “3-button navigation”.**

Using Virtual Buttons

3-button navigation: Go back, Home, and switch apps with buttons at the bottom of your screen.

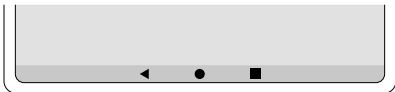

Button	Function
◀ Back	Tap to return to the previous screen.
● Home	Tap to return to the home screen.
■ Recent Apps	Tap to open the list of recent applications.

 
 
Using Swipe Gestures

Gesture navigation: To go home, swipe up from the bottom of the screen. To switch

apps, swipe up from the bottom, hold, then release. To go back, swipe from either the left or right edge.



Powering On and Entering the System

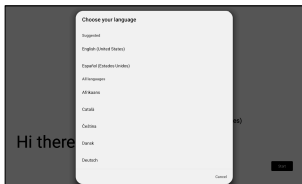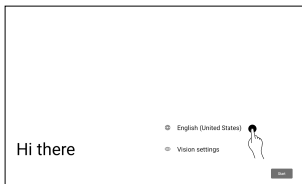


Select “Language”, Tap “Start”

Set up using another device


(Recommended to Skip Setup)

 To copy settings, accounts, and more from another phone or tablet, keep it nearby and unlocked.

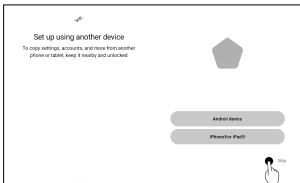

WLAN Network

 
(Recommended to Skip Setup)

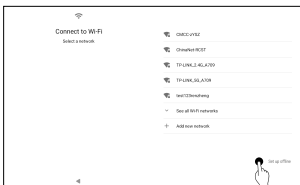

Tap "Set up offline" → Tap "Continue"

Set Date & Time

 Set the date and time for your location

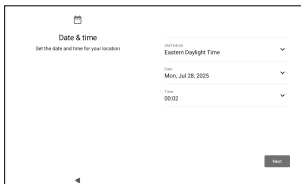



Date & time

Set the date and time for your location

GMT+08:00
Eastern Daylight Time

 
Date
Mon, Jul 28, 2025

Time
00:02

Next

Set PIN Code

(Recommended to set up later, please tap “Skip”)

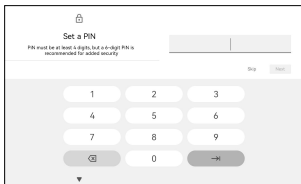



Set a PIN

PIN must be at least 4 digits, but a 6-digit PIN is recommended for added security

_____|____

Skip Next

1 2 3

4 5 6

7 8 9

< 0 →

Device Basic Functions

Wi-Fi Connection

1. Open “Settings” and go to “Network & Internet.”
2. Turn on Wi-Fi, select a wireless network, and enter the password to connect.

Display Settings

Open “Settings” and go to “Display.”

1. Brightness Level: Slide the brightness bar to adjust screen brightness.
2. Screen timeout: Set the screen timeout duration.
3. Display Size and text: Adjust the system font size.
4. Auto-rotate screen: Automatically rotate the screen based on device orientation.

Wallpaper & style:

Open “Settings” and go to “Wallpaper & style.”

Select wallpaper, colors and more.

Sound Settings

Open “Settings” and go to “Sound.”

1. Volume Adjustment: Adjust media, alarm, and ringtone volume.
2. Notification Sound: Customize notification tones.
3. Ringtone: Change the default ringtone.
4. Other Sounds: Set lock screen sounds, touch feedback, etc.

Connecting to a PC

1. Connect the device to the PC using a USB cable.
2. When the USB connection options appear on the device, select “File Transfer” mode
3. You can copy, move, or delete data on the device from the PC.

App Management

Open “Settings” and go to “Apps” . You can uninstall apps, clear cache and data, or force-stop apps.

1. Third-Party Apps: Can be uninstalled.
2. System Apps: Cannot be uninstalled.

Users

Open “Settings” and go to “Users” .

1. The system supports multiple user logins.
2. Each user can set up their own apps and content.

Location

Open “Settings” and go to “Location” .

1. Toggle the “Use Location” switch to enable/disable location services.
2. View recent location requests and configure location permissions per app.

Security & privacy

Open “Settings” and go to “Security & privacy” .

Screen Lock Mode: Choose between swipe, pattern, PIN, or password.

Language & keyboard input

Open “Settings” go to “System”→“Language & region” or “ Keyboard”

1. Language: Click on "Language & region", then click on "System Language" to add the desired language.
2. Screen keyboard: Click on "Keyboard", then click on "On-Screen Keyboard", and then click on "Gboard" to add the desired screen keyboard.

Factory Reset

1. Open “Settings” go to “System”→“Reset Options” and perform a factory reset.
2. A factory reset will erase all personal data; back up your data before resetting.

App Split-Screen

1. In split-screen view, you can run up to two apps simultaneously.
2. Use the “Recent Apps” button to open apps.
3. Tap the “Recent Apps” button to open the list of recently used apps.
4. Swipe left or right, tap an app icon, and select “Open in Split-Screen View.”

USB OTG Function

1. Use an OTG cable to connect a USB drive, mouse, or keyboard.
2. Ensure the device's battery level is above 50% for proper operation of external devices.

Troubleshooting

Wi-Fi Connection Drops Frequently or Video Quality Is Poor

1. Ensure the device's built-in antenna is not obstructed.
2. In areas with weak signals or poor reception, the device may not receive a strong enough signal, potentially causing Wi-Fi router issues.
3. Restart the router or change the router channel.

Battery Drains Faster Than When First Purchased

1. Exposing the device or battery to extremely cold or hot temperatures may reduce the available charge.
2. Using features or apps like GPS, games, or the internet consumes battery faster.
3. Batteries are consumables; over time, the available charge capacity will decrease.

Error Message When Opening the Camera

1. The device requires sufficient storage space and battery issues. run the camera app.
2. If you receive an error message, try granting the necessary permissions.
3. Restart the device.
4. If the camera still doesn't work after these steps, contact the Service Center.

Device Cannot Find Current Location

1. GPS signals may be obstructed in certain locations, such as indoors.
2. Set the device to use WLAN or mobile networks to determine your location under these conditions.
3. Some models support GPS.

Safety Maintenance

Operating Environment Precautions

1. Do not store the device in extremely low or high temperatures
2. Do not expose the device to direct sunlight for extended periods.
3. Do not leave the device in extremely hot areas for long, such as inside a car in summer.
4. Do not place the device in areas that may overheat, such as on an electric blanket.

5. Do not store the device near or inside heaters, microwaves, hot cooking equipment, or high-pressure containers.
6. Do not use data cables with damaged or peeling outer layers, or use faulty chargers or batteries.

When the Device Overheats, Follow These Instructions

1. If you feel discomfort due to the device overheating, stop using it.
2. Disconnect the charger and close all running apps
3. Wait for the device to cool down before recharging.
4. Keep the device updated with the latest software version
5. Conflicts between running apps may cause overheating; restart the device.
6. Turn off WLAN, GPS when not in use.
7. Close apps that increase battery consumption or run in the background when not in use.
8. Delete unnecessary files or unused apps.
9. Lower screen brightness.
10. If the device overheats or remains hot for a long time, pause usage briefly.
11. If overheating persists, contact the Service Center or an authorized service center.

Recommended Operating Temperature Range

1. The recommended operating temperature range for the device is 0°C to 35°C.
2. Using the device outside this range may cause damage or shorten battery life.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.