



Worktable Caster with Expanding Rubber Stem

Installation Instructions for Models 28-129S, 28-125S, 28-118S, & 28-124S



Step 1. Hold the swivel bearing (E) with one hand and turn the grip nut (B) clockwise with the other hand to expand the rubber sleeve (C).

Step 2. Expand the rubber sleeve (C) until it fits snugly into the tubing. Insert all the way into the leg.

Step 3. Turn the swivel bearing (E) counter-clockwise to further expand the rubber sleeve (C) and tighten into the leg.

Krowne Metal Corporation

100 Haul Rd. Wayne, NJ 07470 • Toll Free: (800) 631-0442 • Fax: (973) 872-1129
sales@krowne.com • www.krowne.com • www.facebook.com/KrowneMetal • www.twitter.com/KrowneMetal