

BND-60/SU105N

dual outlet 7-day digital timer with individual control

Operating instructions



MANUAL: Operating mode set to manual

AUTO: Operating mode set to auto

MO/TU/WE/TH/FR/SA/SU: Days of the week

AM/PM: Before noon/after noon

TIMER1/TIMER2: Timer to control each socket

 : Screen lock

Note:

Charge the internal battery


If the screen is blank, plug the timer into any outlet for 30 minutes to charge the internal battery.

Reset the timer

Press the "RESET" button with the tip of a small non-metallic insulated tool, such as a pencil or toothpick.

Illustration of the buttons

1. WEEK: Select day(s) of the week
2. TIME: Set time
3. TIMER: Select timer(s)
4. CLOCK: Set day/time or display clock
5. MODE 1/MODE 2: Set operating mode for TIMER 1/TIMER 2
6. R: Reset
7. WEEK+TIME: Activate/deactivate random function
8. TIME+TIMER: Activate/deactivate DST
9. TIMER+CLOCK: Unlock screen

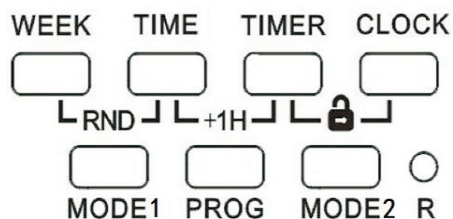

Operation Instructions

UNLOCK THE SCREEN


The screen will be locked 90 seconds after the timer is left unoperated. To unlock press TIMER and CLOCK at the same time.

SET CURRENT DAY AND TIME

1. Press and hold CLOCK, press WEEK to select current day of the week.
2. Press and hold CLOCK, press TIME to set current time with 1-minute increments. Hold TIME to fast scroll. Please pay attention that AM/PM is correct.

PROGRAM THE TIMER(S)

1. Press PROG, 1 ON will display on the screen.

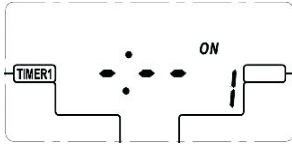

2. Press WEEK to select desired day or days from below options:

MO TU WE TH FR SA SU

MO

TU

WE

TH

FR

SA

SU

MO TU WE TH FR

SA SU

MO TU WE TH FR SA

MO WE FR


TU TH SA

MO TU WE


TH FR SA

3. Press TIME to set the time for PROG 1 ON with 1-minute increment. Hold TIME to fast scroll.

4. PRESS TIMER to select the timer(s) to perform the program. We can select TIMER 1 (to control the left outlet), TIMER 2 (to control the right outlet) or both.

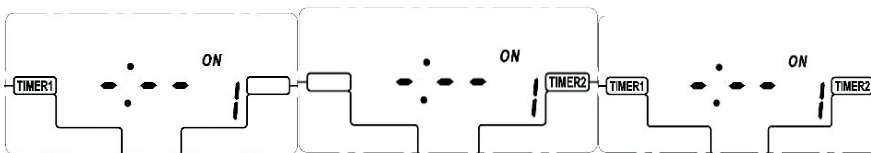

5. Press PROG to save PROG 1 ON and 1 OFF will display.

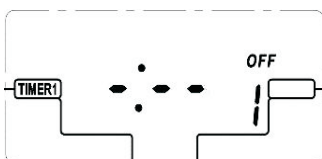

6. Repeat Steps 2-4 to edit PROG 1 OFF.

7. Follow the same steps to set up to 8 ON/OFF programs.

t.

Note: Press MODE 1/MODE 2 to clear or resume the current setting.

OPERATING MODES

Each timer operates in two modes: MANUAL and AUTO.

In MANUAL mode, timer program is bypassed and the outlet can be switched on or off manually by pressing MODE 1/MODE 2.

In AUTO mode, the outlet will be switched on or off automatically as programmed. You can also press MODE 1/MODE 2 to temporarily turn on or off an outlet.

To switch between MANUAL and AUTO modes for each outlet, press and hold MODE 1/MODE 2 for 4 seconds.

DST (Daylight saving time)

In clock display screen, press TIME and TIMER at the same time to activate/deactivate DST. When activated, the icon +1h will display on the screen.

RANDOM SECURITY FUNCTION

In clock display screen, press WEEK and TIME at the same time to activate/deactivate the random function. When activated, the icon RND will display on the screen and will flash when an ON/OFF program is active; the ON and OFF times of an ON/OFF program will be both postponed by 2 to 32 minutes. Random function only takes effect for programs with an interval of 33 minutes or longer.

BN-LINK INC.

3545 Granada Ave El Monte Ca 91731

Custom Service Assistance: 1.909.592.1881

E-mail: support@bn-link.com

[Http://www.bn-link.com](http://www.bn-link.com)

Hours: 9AM - 5PM PST, Mon - Fri

Designed in California Made in China