



2.5.13 Repeat Customization

Supports flexible setting of repeat time intervals. You can select units by day, week, month, or year as needed, customize the repeat cycle, and meet diverse repetition requirements.

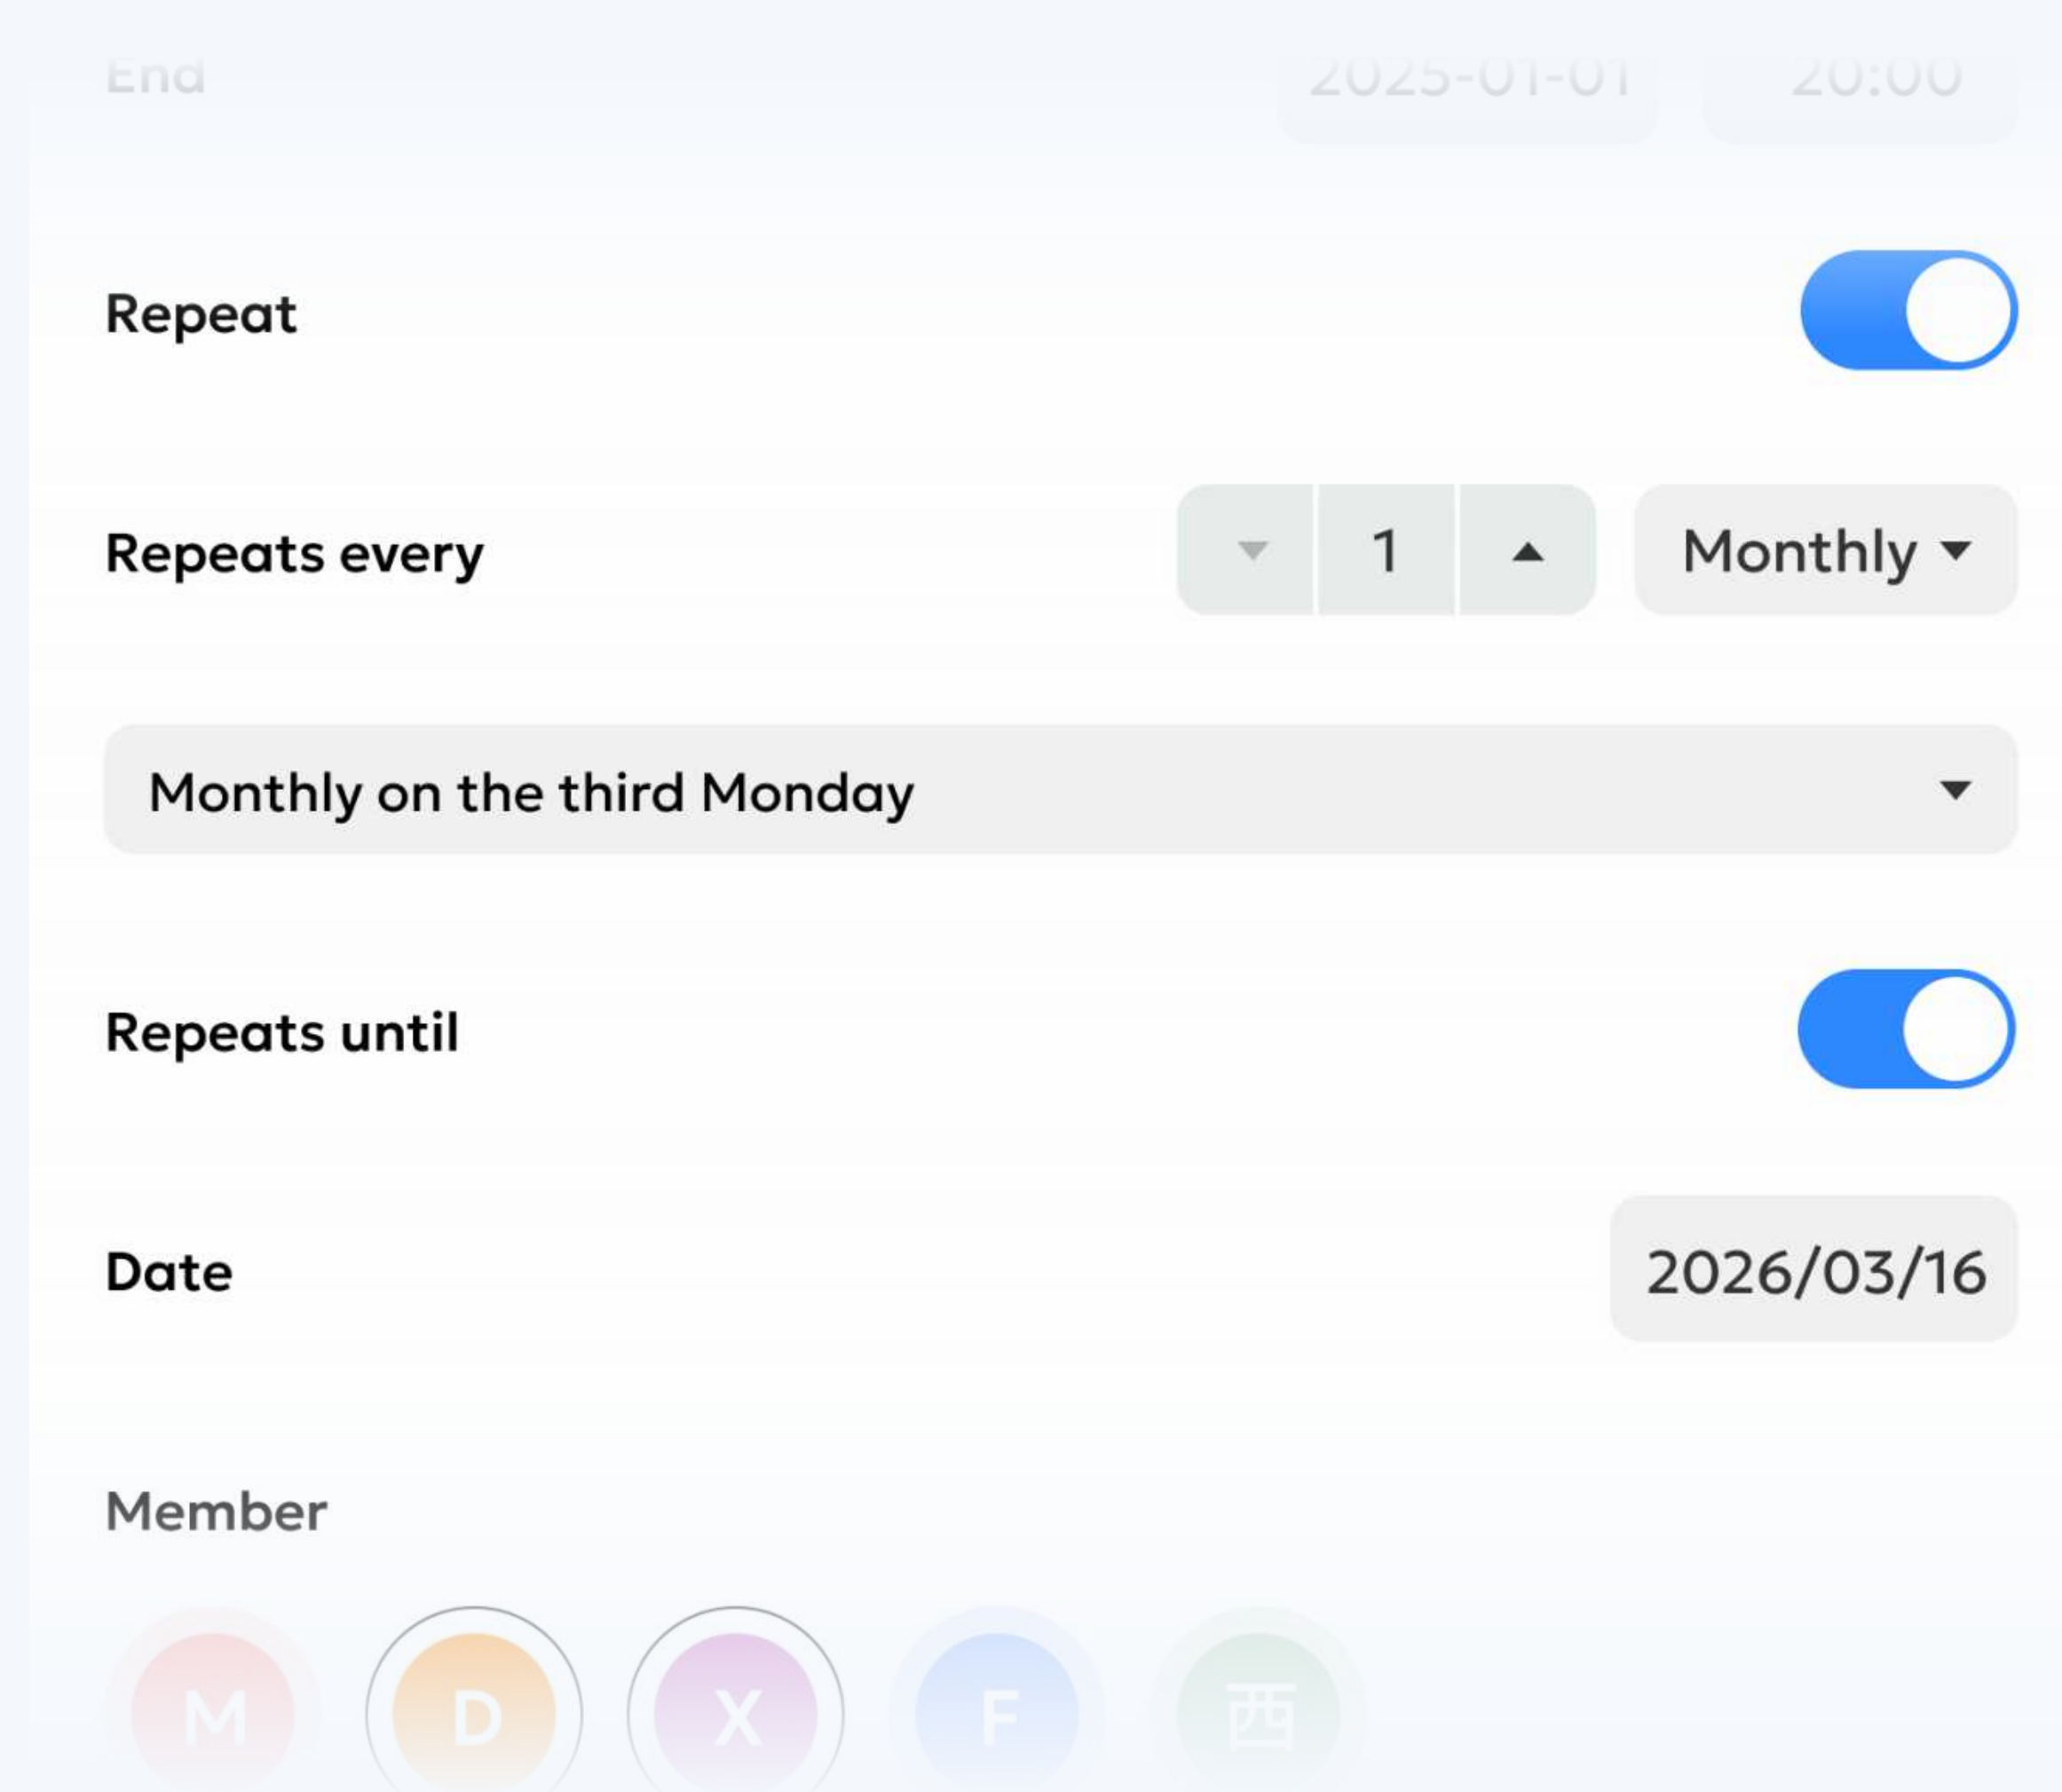

The screenshot shows a settings panel for repeat customization. At the top, there is an 'End' section with a date '2025-01-01' and a time '20:00'. Below this is a 'Repeat' toggle switch which is turned on. Underneath, the 'Repeats every' section has a dropdown menu set to '1' and a unit selector set to 'Monthly'. Below that is another dropdown menu set to 'Monthly on the third Monday'. The 'Repeats until' toggle switch is also turned on. Below this is a 'Date' field showing '2026/03/16'. At the bottom, there is a 'Member' section with five circular icons labeled 'M', 'D', 'X', 'F', and '西'.

2.5.14 Switch to Photo Frame Mode

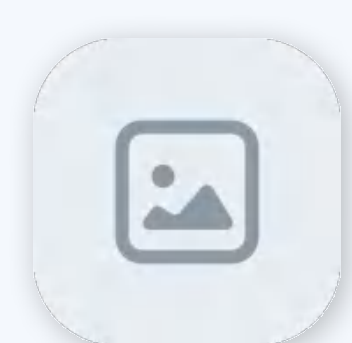

Click the “Photos” button to quickly switch to Photo Frame mode.

2.5.15 Sleep Mode



Click to access sleep time settings. Once the sleep function is enabled, the screen will turn off during the set sleep period.


The screen will automatically turn off after 10 seconds of inactivity.

2.5.16 Calendar Screensaver

Turn on the switch, and the screensaver will be automatically activated after 5 minutes of inactivity. It synchronously displays photos in the photo frame, meeting both schedule reminder and visual appreciation needs.

2.6 Art Gallery

Automatically loops world-class artworks, bringing elegant art into your living space.

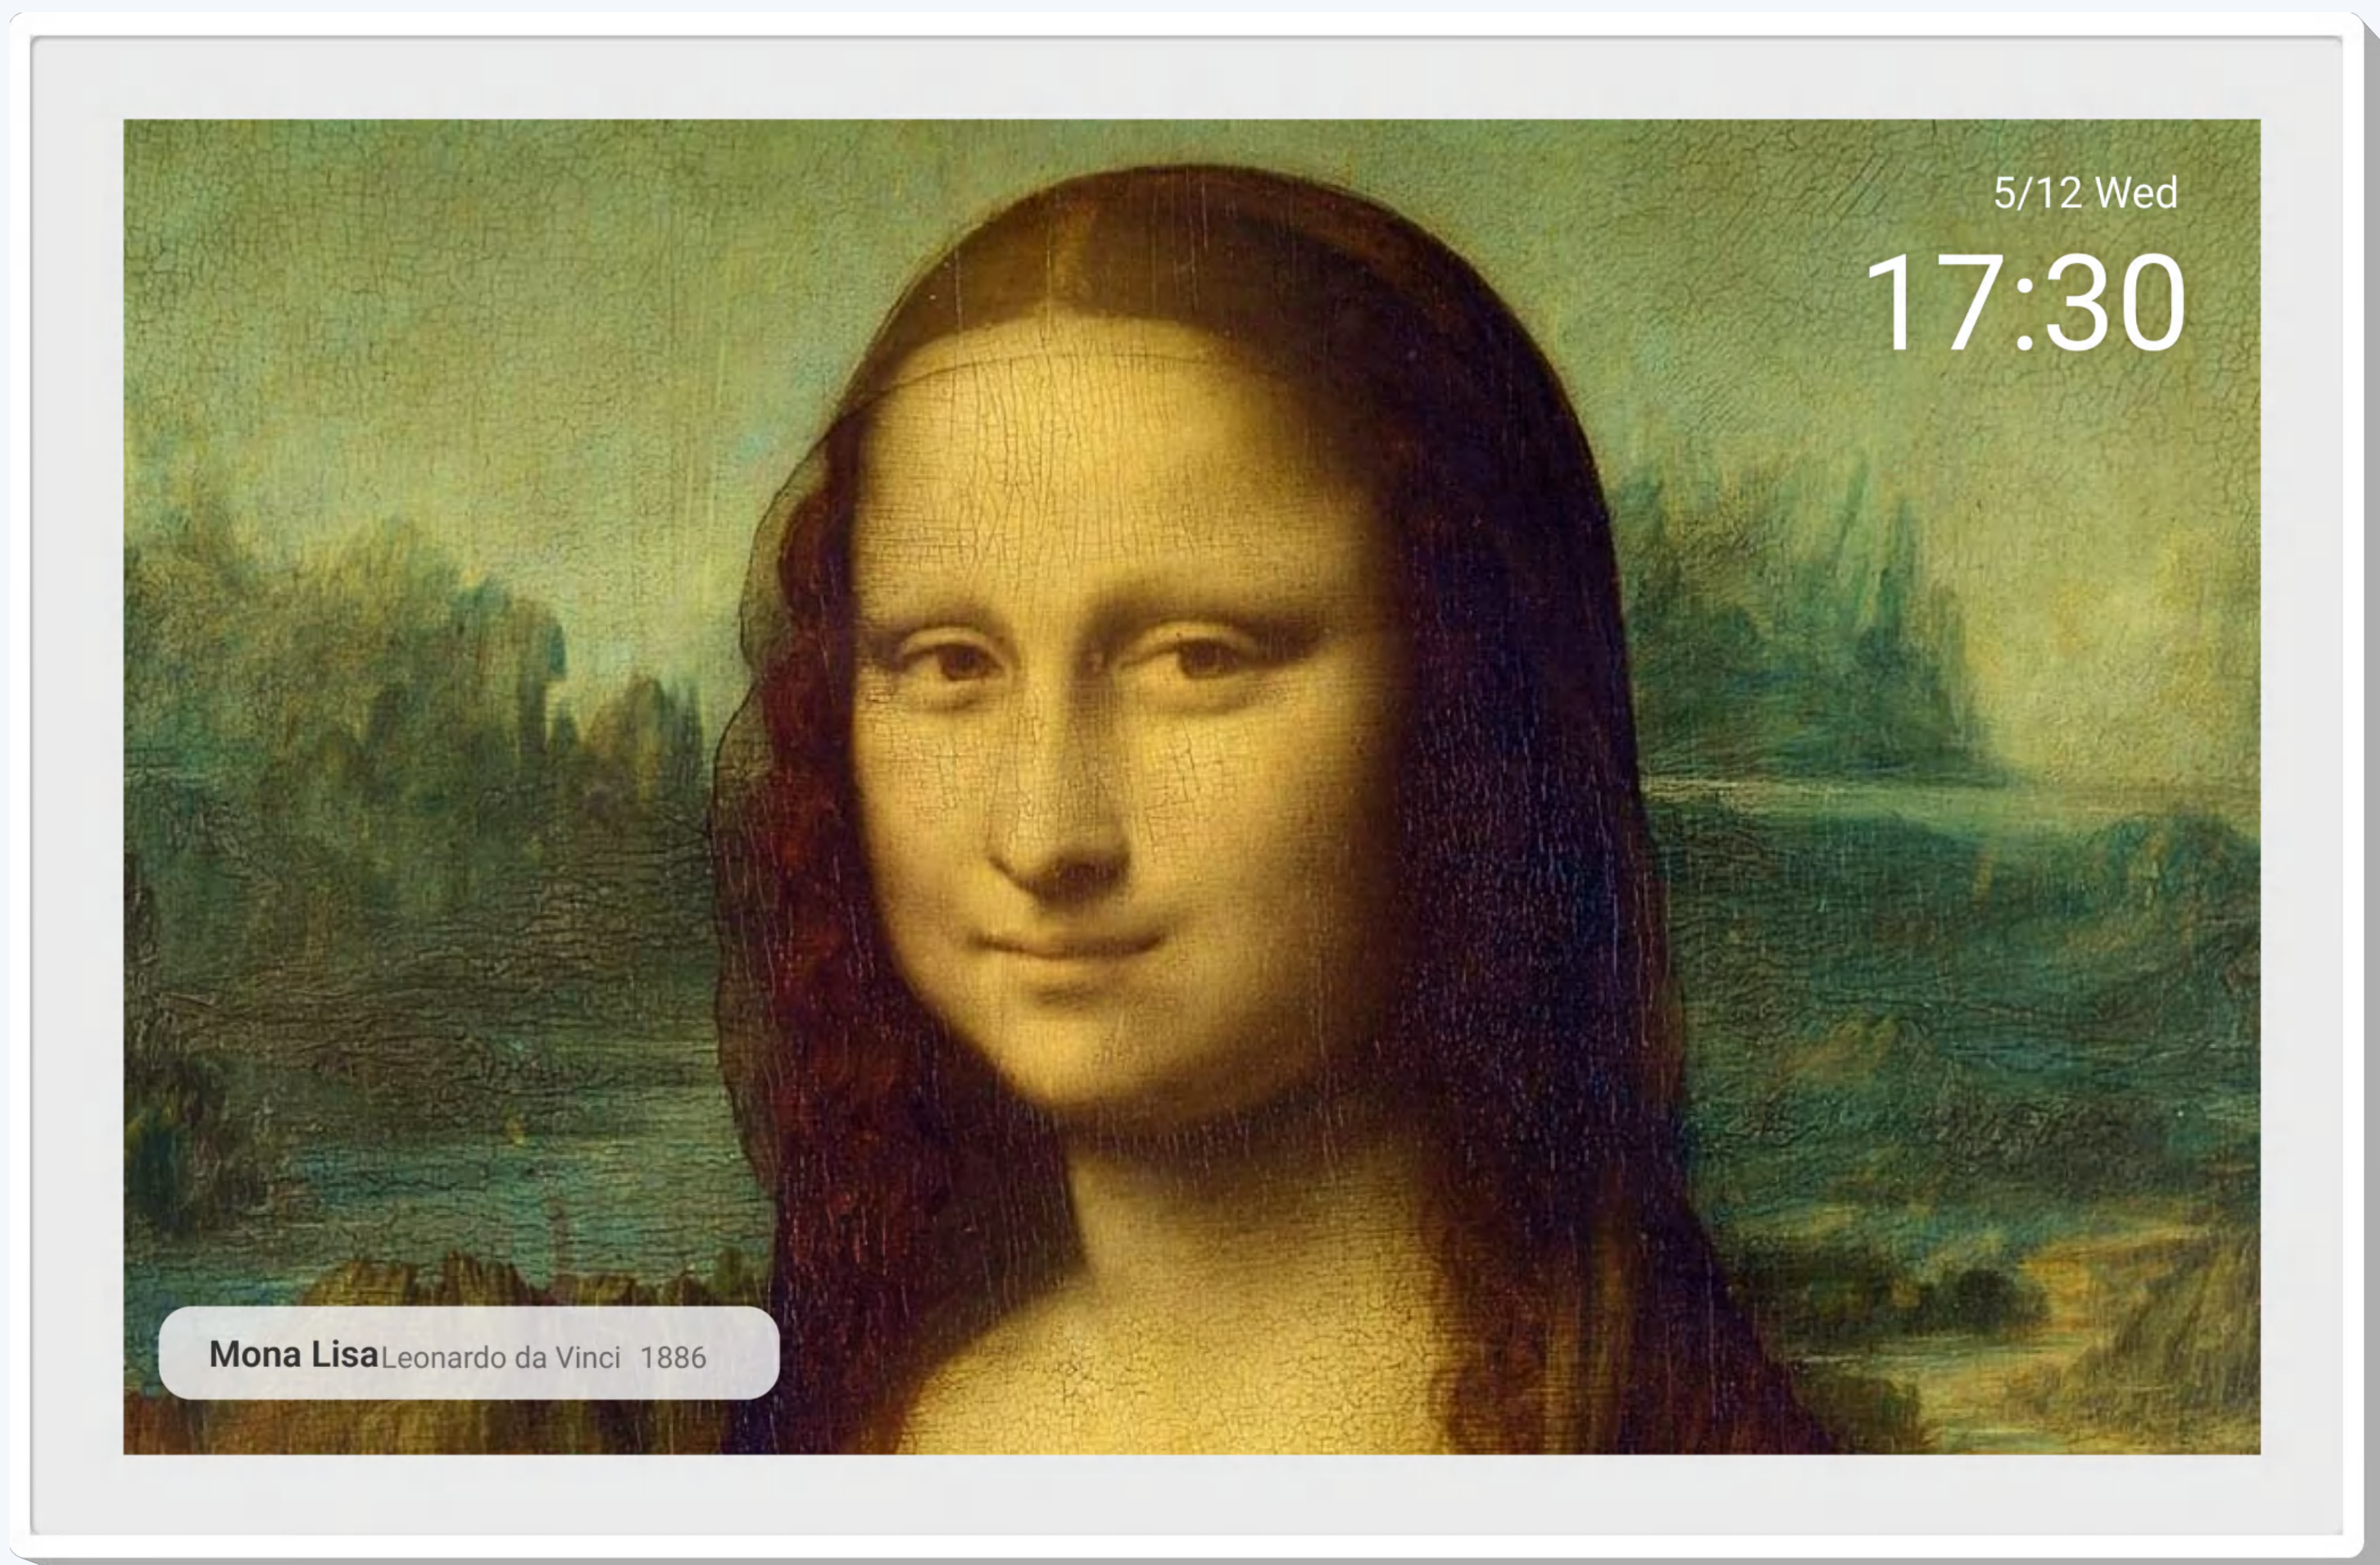

2.6.1 Display of Art Paintings

The name of the painting, the author and the time.

2.6.2 Switch Interval Time

Supports switching of playback intervals of 【5s | 10s | 60s | 5min | 1h | 24h】 , the actual interval is subject to the smart display.


2.6.3 Select Mode



Support clicking the "Select Mode" button to quickly switch to other Photo-Frame or Family- Calendar modes.

2.7 How to Send Blessings


1. Open the Gallery view in the FotoCube mobile app and locate the “Greeting” icon in the top left corner.
2. Write down your wish in words.
3. Choose a festival style.
4. Select the device to which you want to send your blessing.

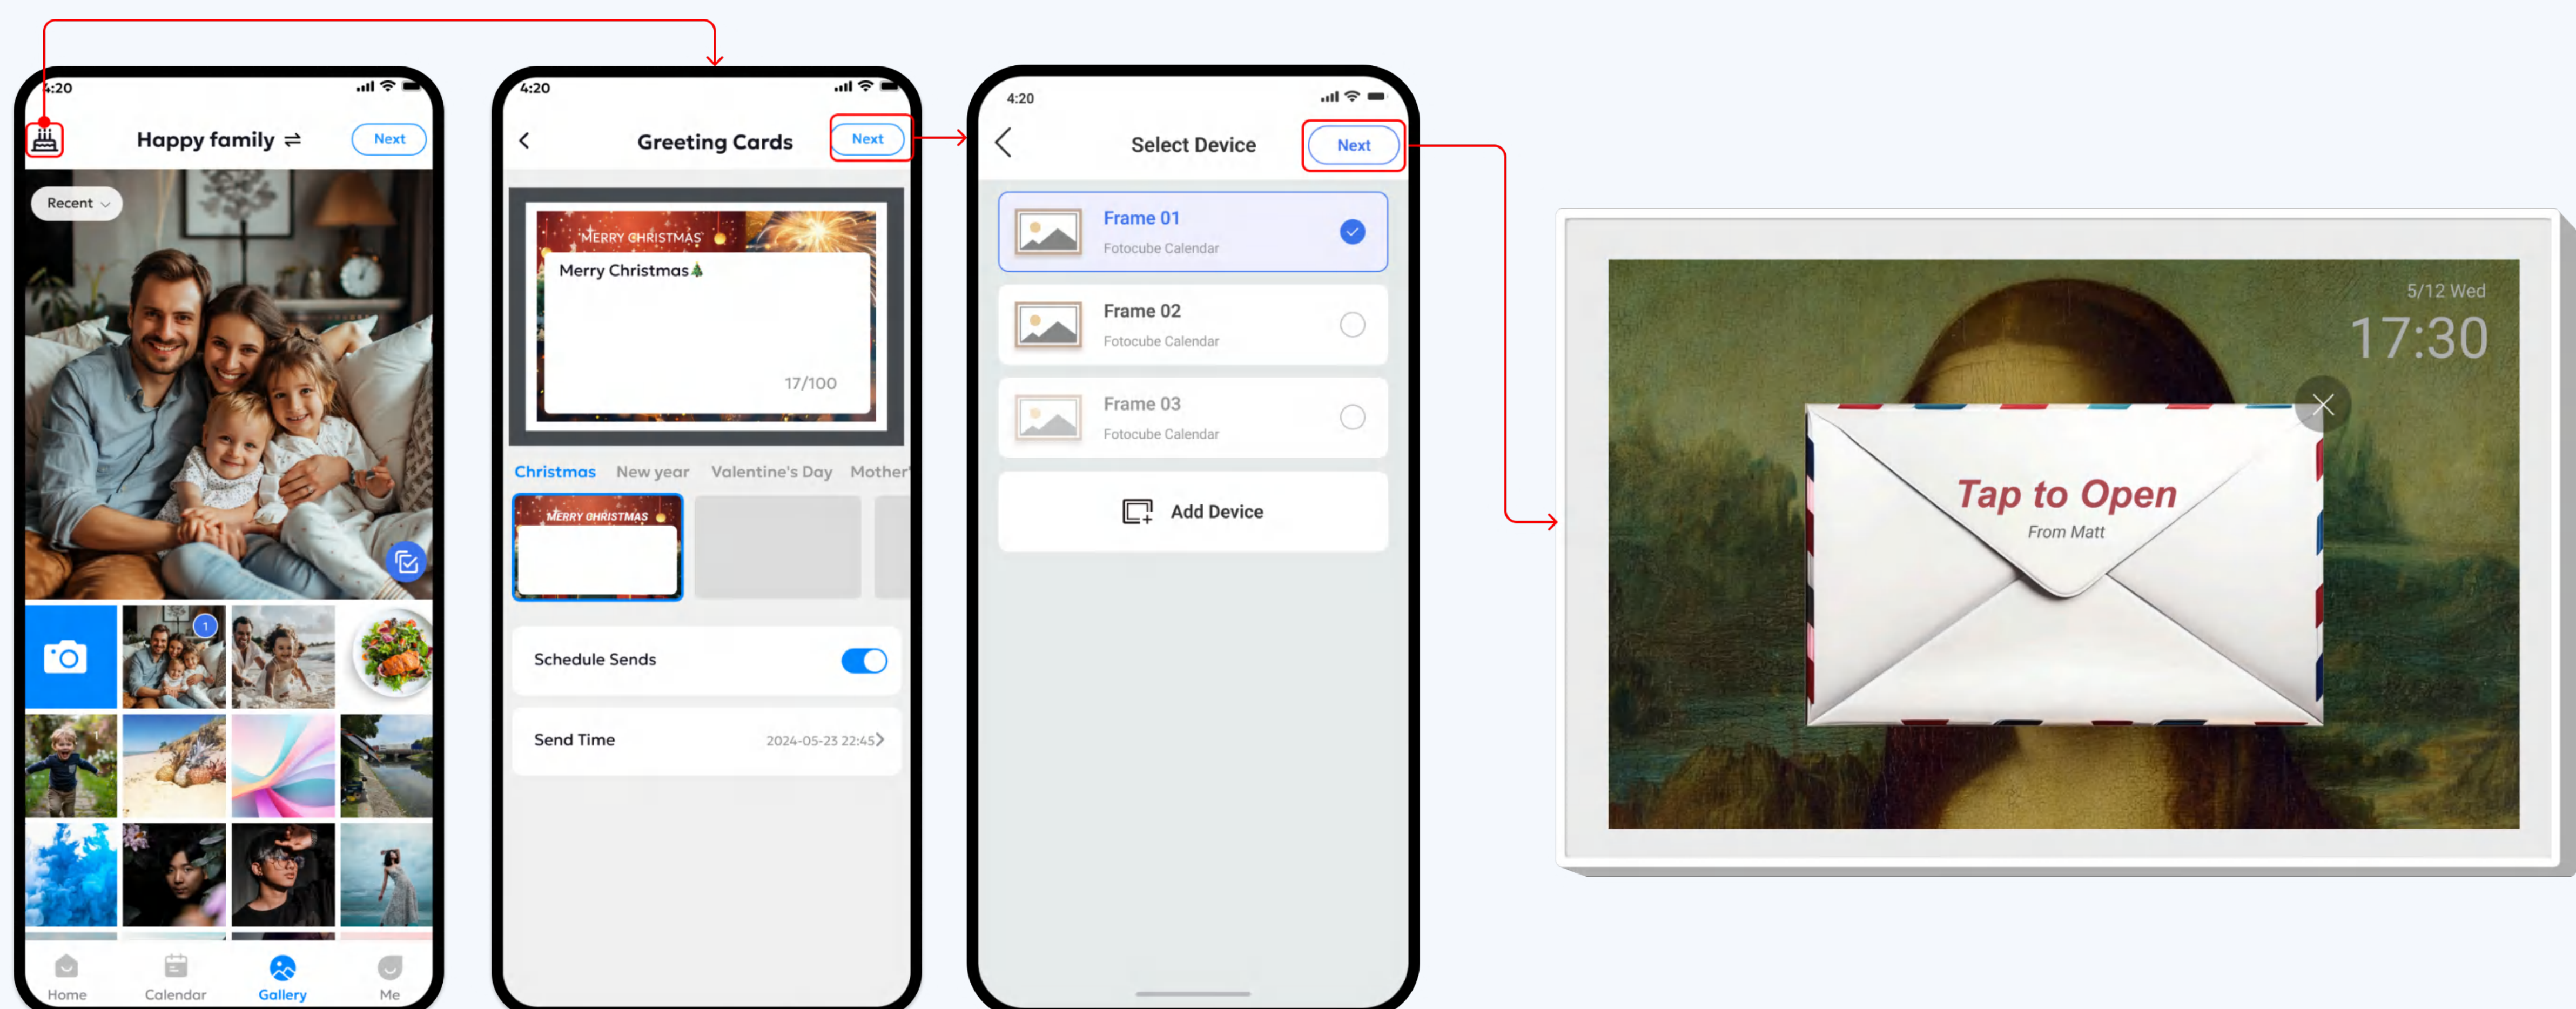

2.8 System Settings

The name of the painting, the author and the time.

2.8.1 Device Settings

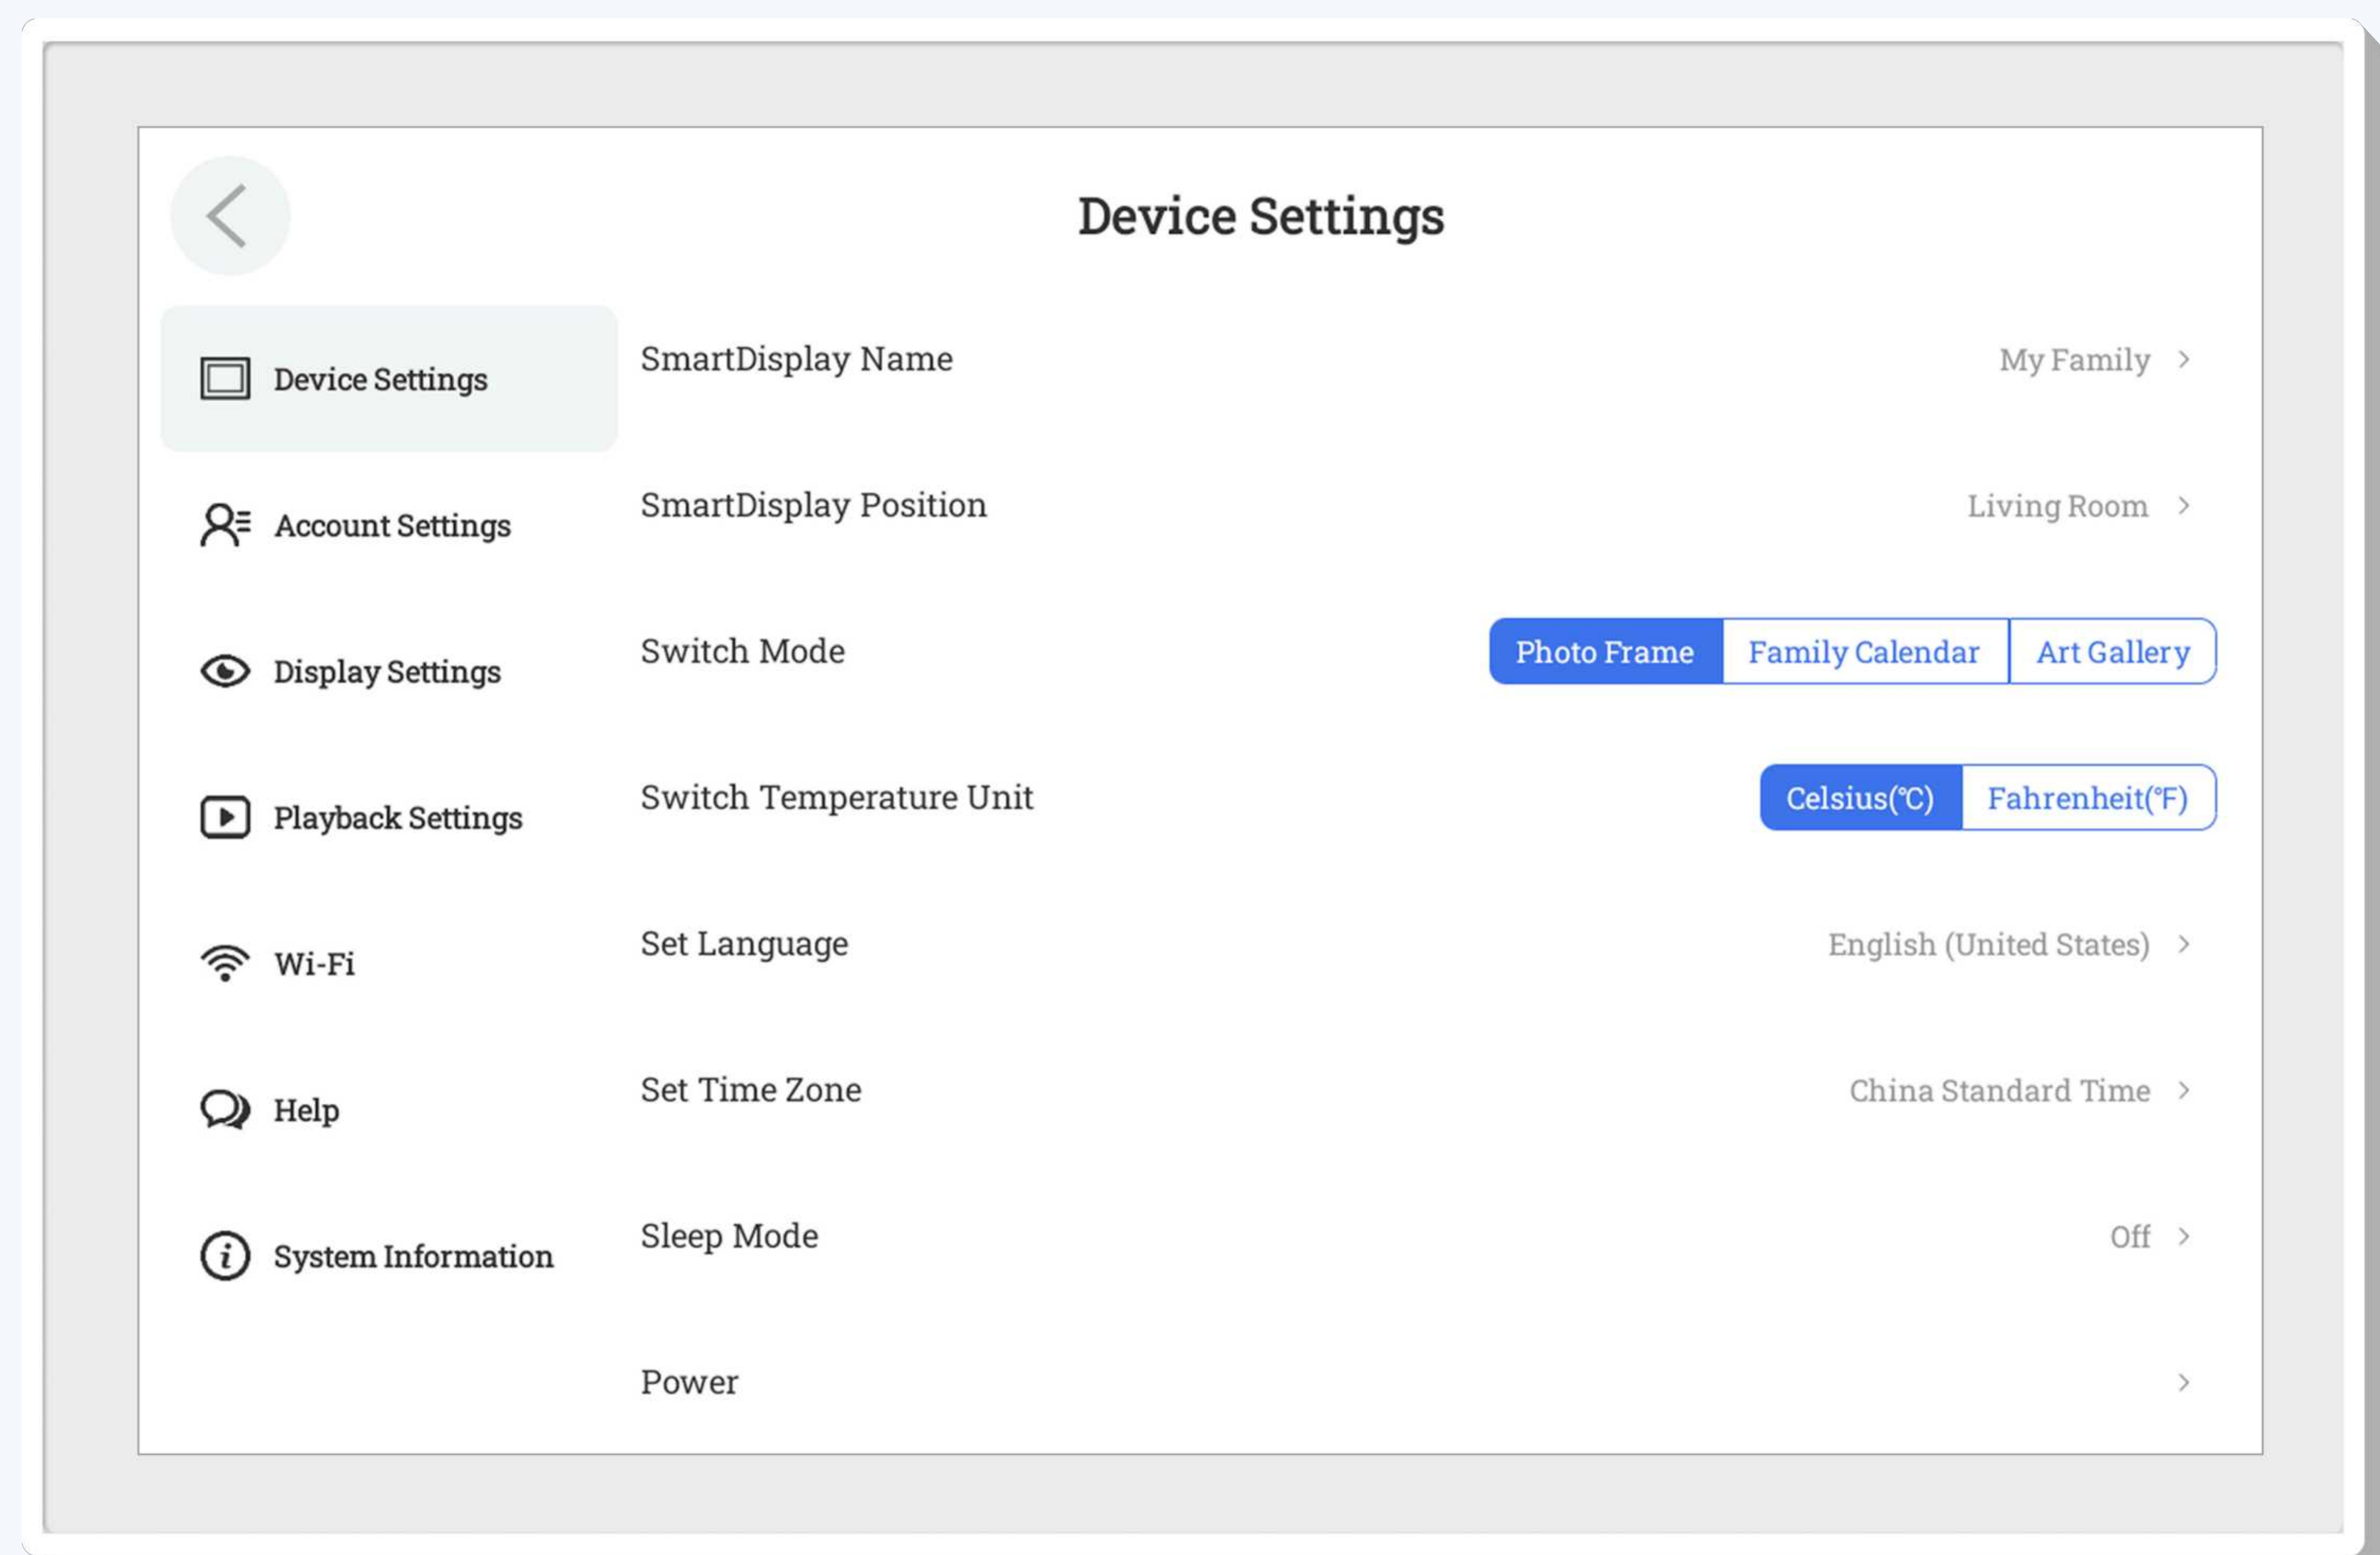

- **Smart Display Name**

Set or modify the device name. The modified name will be displayed in the family name of the Calendar, the connected devices, and the device list of the FotoCube APP.

- **Smart Display Position**

Set or modify the device location (e.g., Living Room, Bedroom) to distinguish between different devices.

- **Switch Mode**

Supports 3 modes: Photo Frame, Family Calendar, and Art Gallery. Click to switch to your favorite mode.

- **Switch Mode**

Switch Temperature Unit Toggle the weather display between Celsius (°C) and Fahrenheit (°F).

- **Set Language**

Select your favorite system language.

- **Set Time Zone**

Select the time zone for the device to display the accurate time and date (Tips: Select the corresponding daylight saving time or standard time zone).

- **Sleep Mode**


Choose whether to enable sleep mode according to your preference. After enabling sleep mode, the device enters a low-power and low-operation state during non-working hours, with the screen turning off after 10 seconds of inactivity, to achieve the purposes of energy saving and reducing interference.

- **Power**

To shut down, restart, or turn off the screen, use the Power options located in Settings, or press the power key on the top of the screen.

Note: If your phone and device are not syncing properly, try restarting the connection.

2.8.2 Account Settings

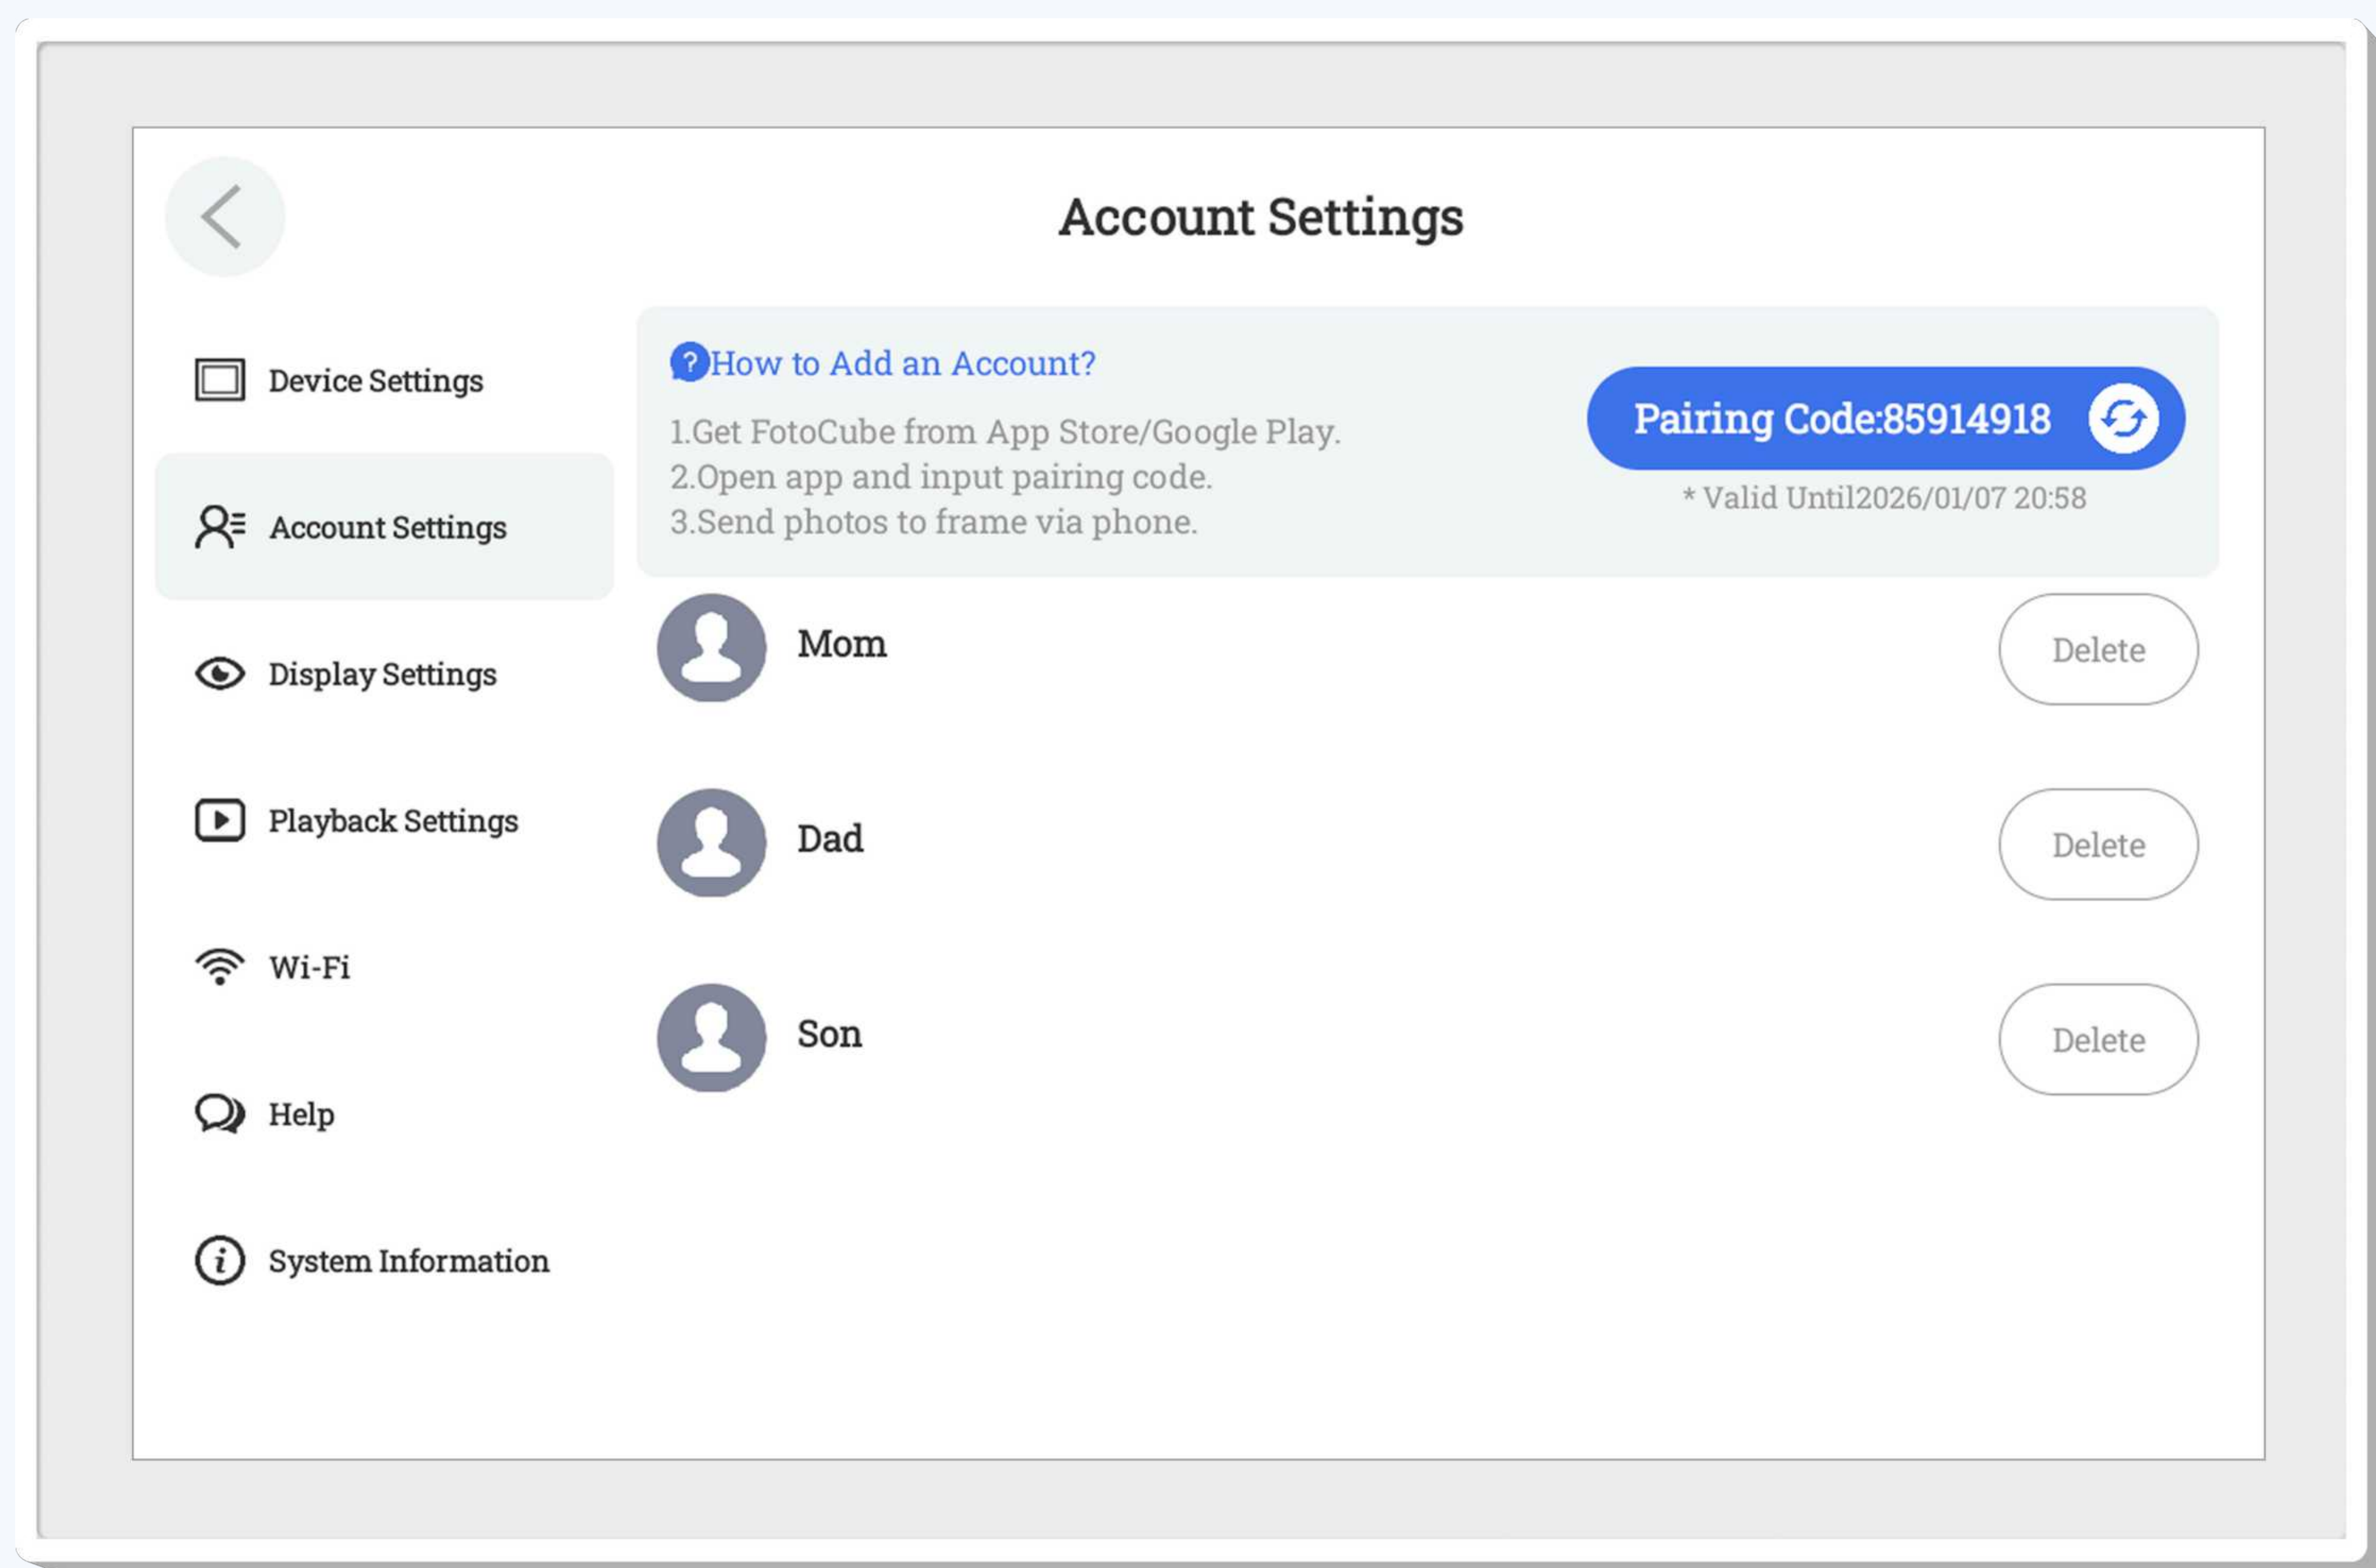


- **Add Account**

The page will display the current valid digital pairing code, and the binding operation can be performed through the FotoCube APP. For details, refer to the chapter [【2.2 How to Pair the Smart Display with the FotoCube APP】](#).

- **Unlink Account**

Displays a list of all members with bound accounts. The unbinding operation of the account can be performed by clicking the "Delete" button.

2.8.3 Display Settings

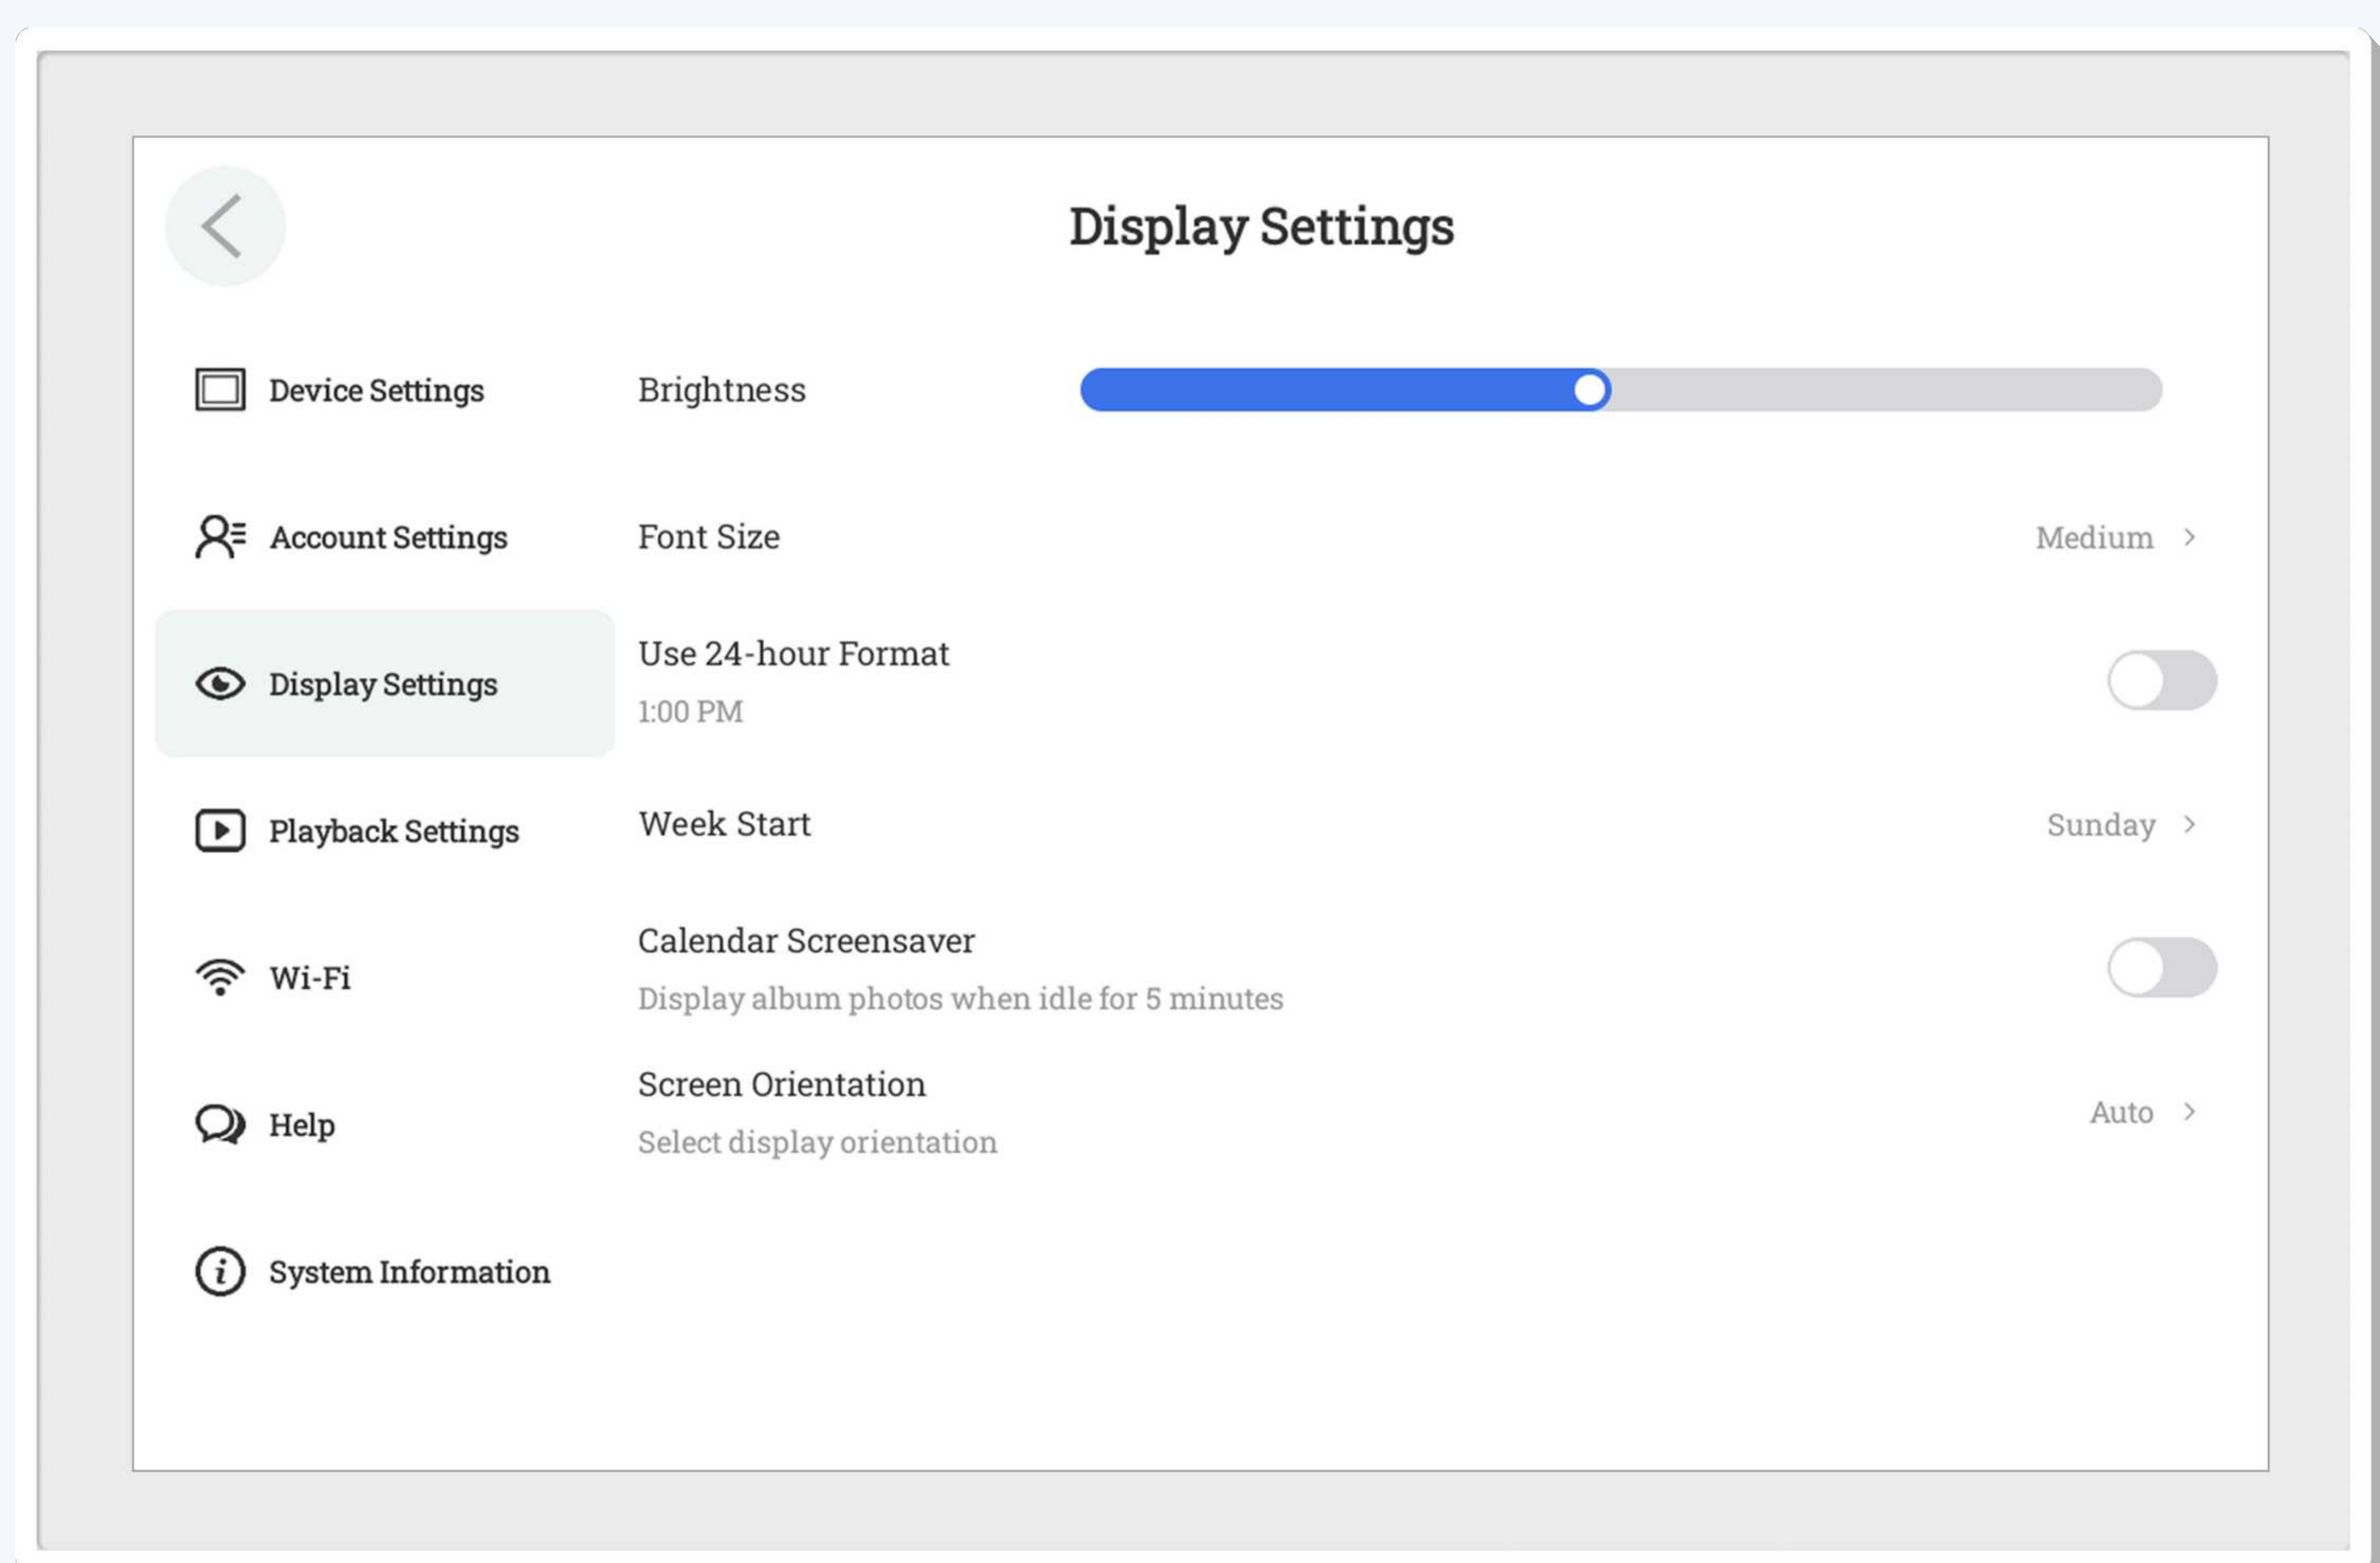

- **Brightness**

Adjust the screen brightness for a comfortable view. For automatic adjustment, enable Auto Brightness. The ambient light sensor at the top of the screen will then adjust the brightness based on your environment.

- **Font Size**

Set the font size of the system language.

- **Use 24-hour Format**

Switch the time display format between 12-hour (AM/PM) and 24-hour.

- **Week Start**

Set the starting day of the week (e.g., Sunday or Monday) for the calendar view.

- **Calendar Screensaver**


Automatically display album photos as a screensaver when the device is idle for 5 minutes.

- **Screen Orientation**

Adjust the screen display orientation to Landscape or Portrait mode.

2.8.4

Playback Settings

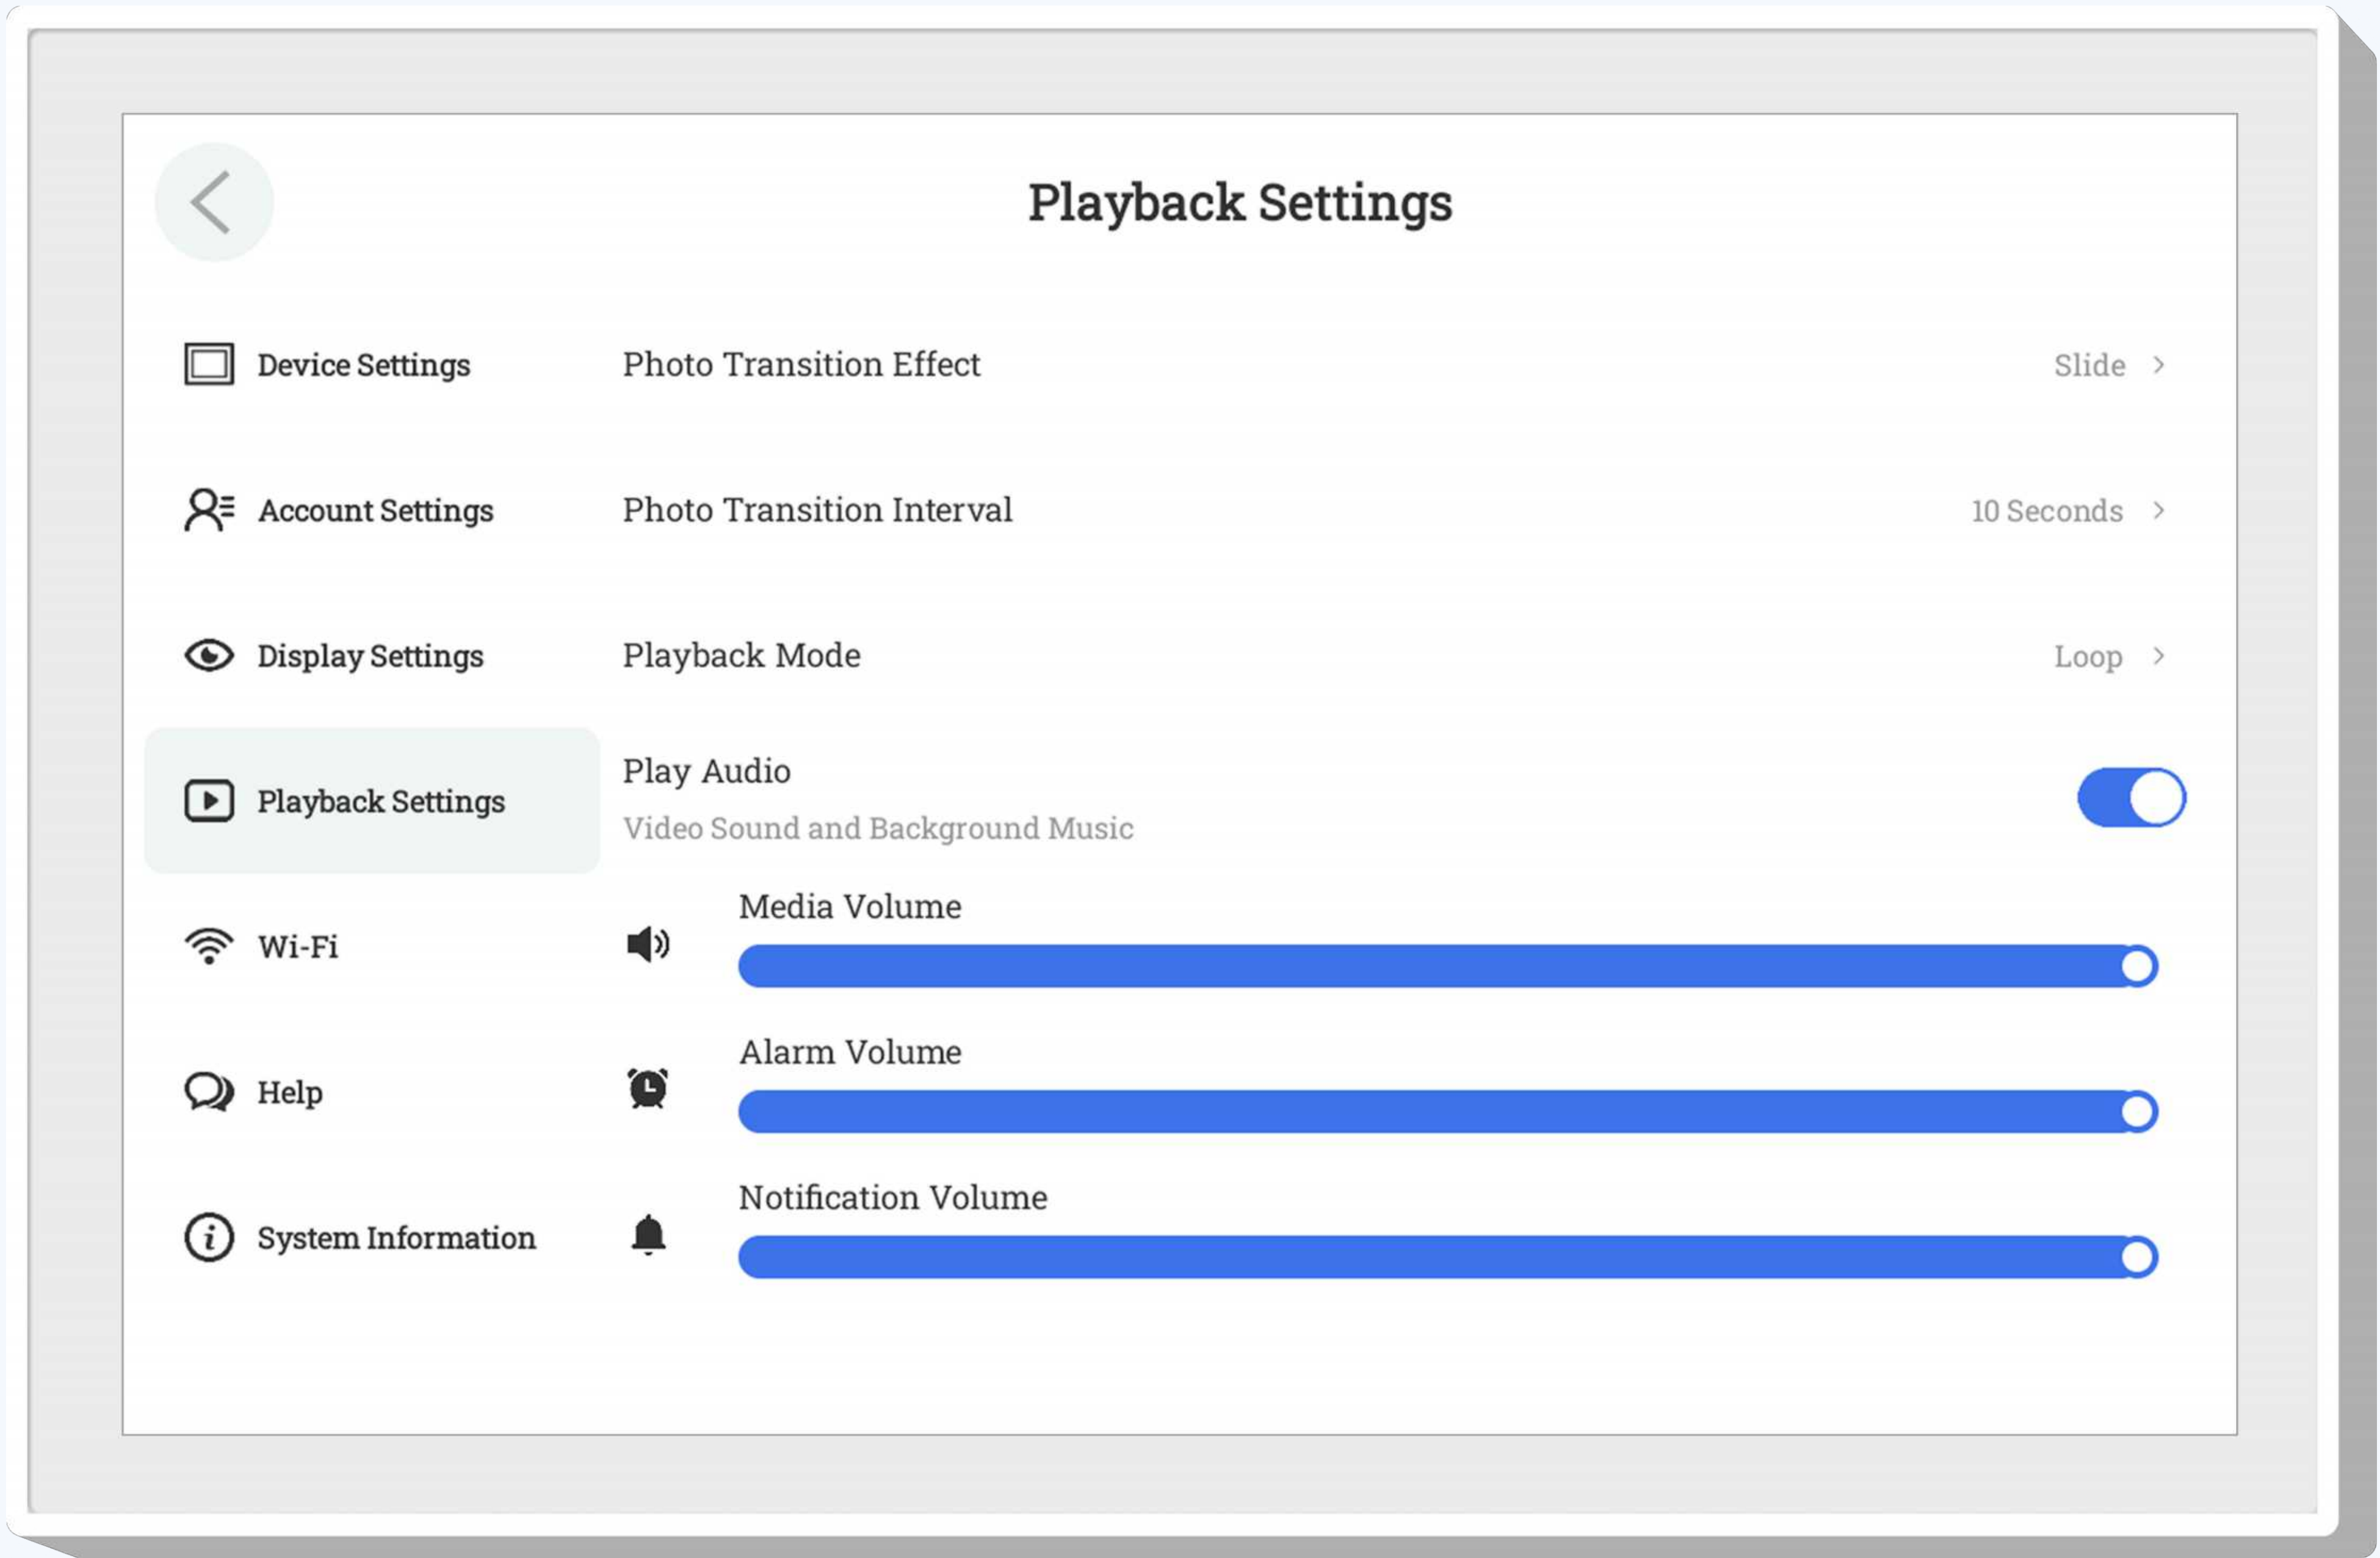

- **Photo Transition Effect**

Select your favorite transition effect.

- **Photo Transition Interval**

Select a suitable transition interval.

- **Playback Mode**


Select your favorite play mode.

- **Play Audio**

Toggle Video Sound and Background Music on or off, and independently adjust the volume levels for Media, Alarms, and Notifications.

2.8.5 Wi-Fi

Displays the current network connection status at the top. Quickly identifies connectivity issues between the Router, Internet, and Server to assist in troubleshooting.

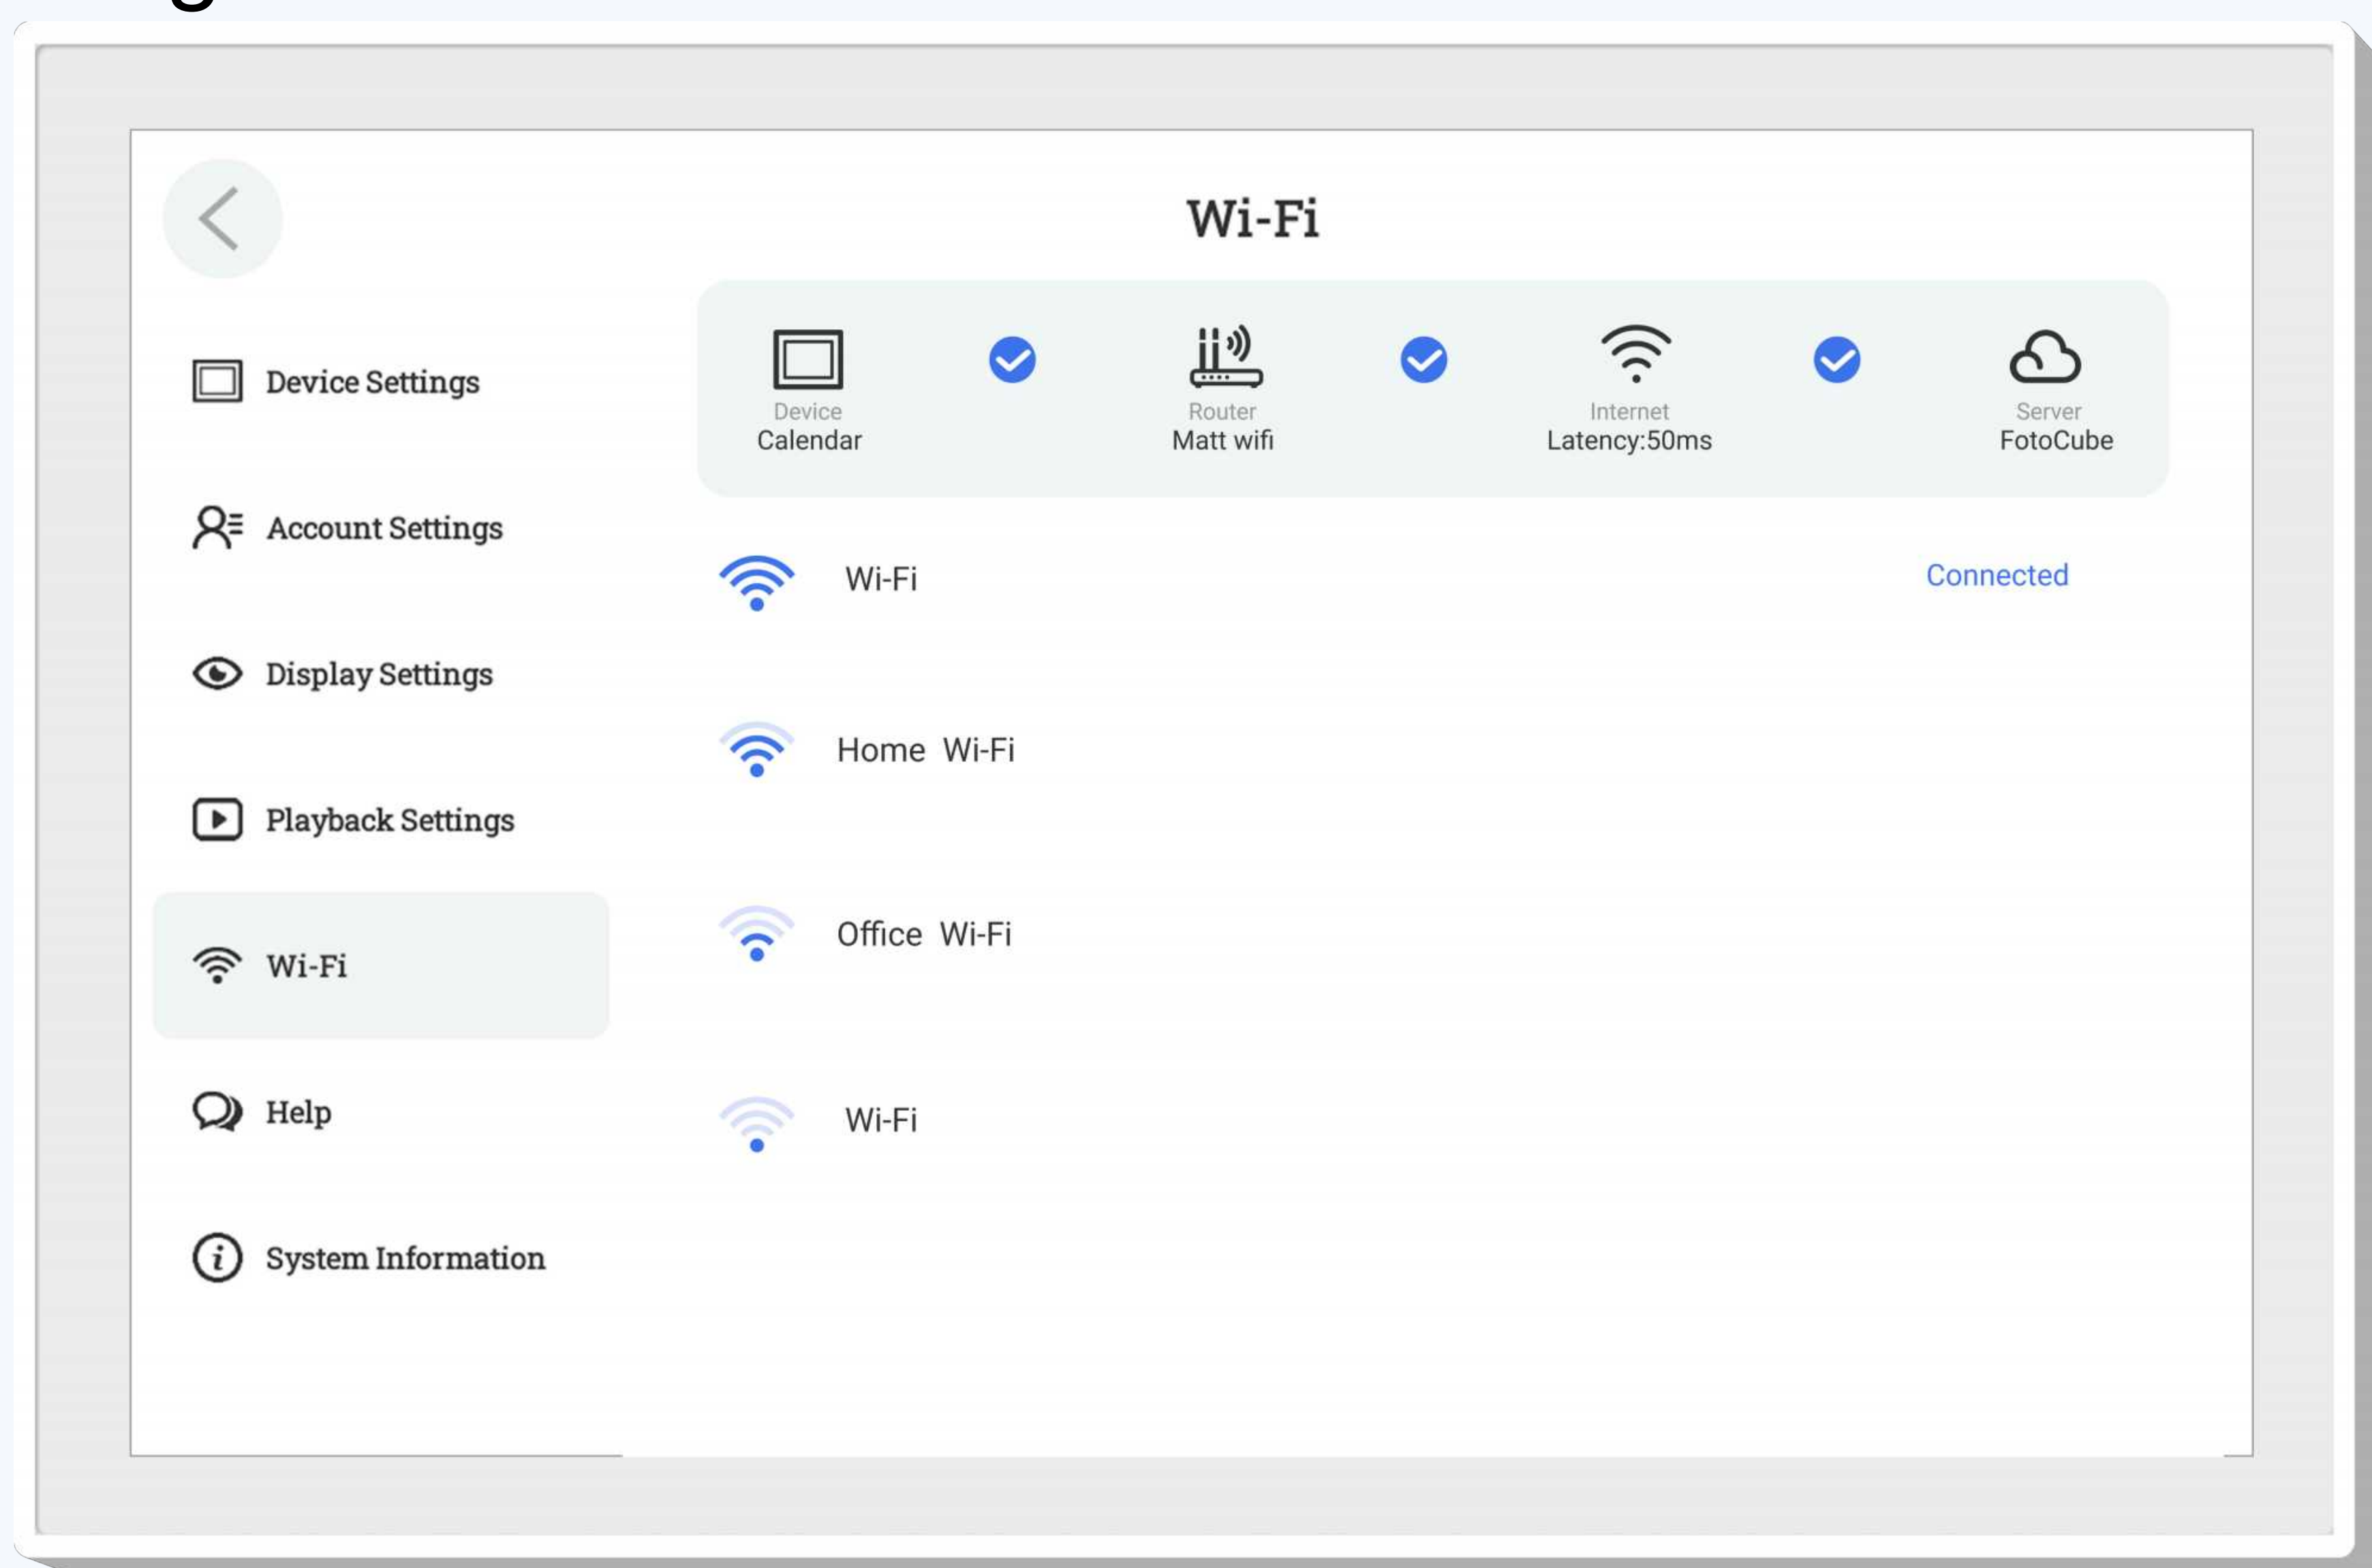


- **Connect to Wi-Fi**

Enter the password to connect to Wi-Fi

- **Reset Wi-Fi**

You need to go to "Settings" - "System Information" - "Restore Factory Settings", and Wi-Fi will also be restored to factory settings. Data cannot be recovered.

2.8.6 Help

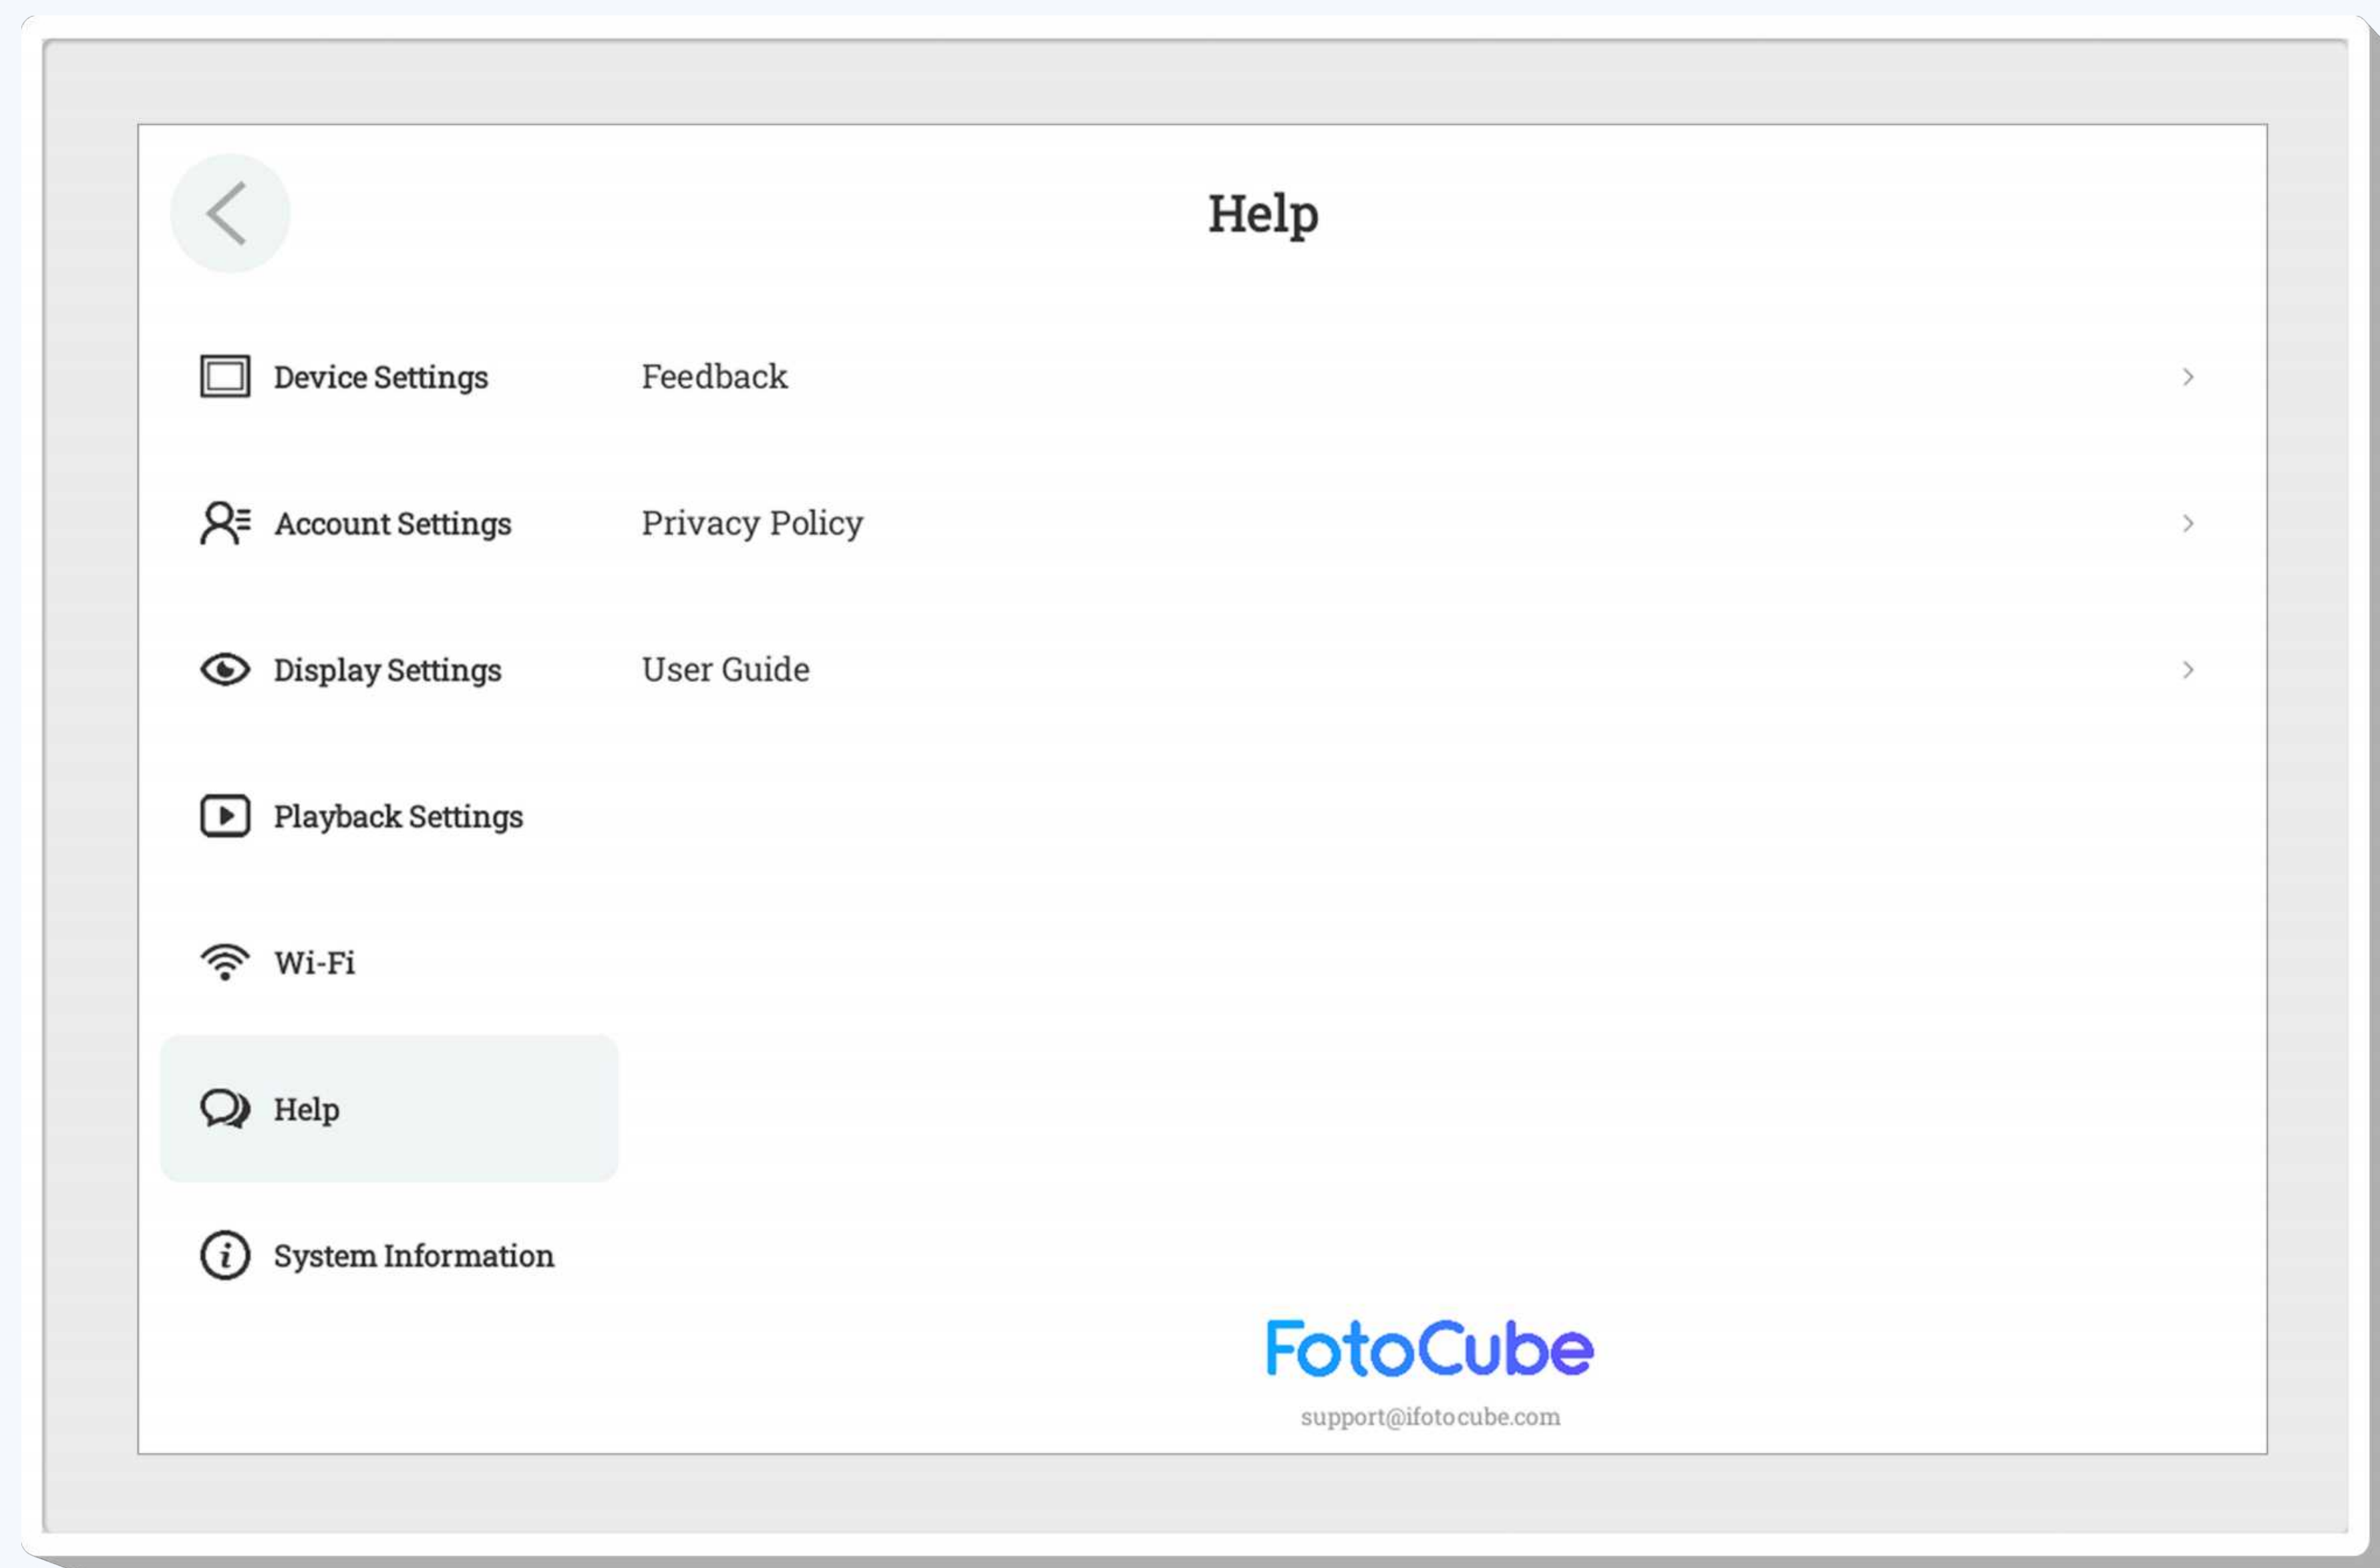

- **Feedback**

Please describe the specific problem you encountered, and we will handle and reply as soon as possible.


- **Privacy Agreement**

Display the content of the privacy agreement.

- **User Guide**

Display the content of the user guide.

2.8.7 System Information

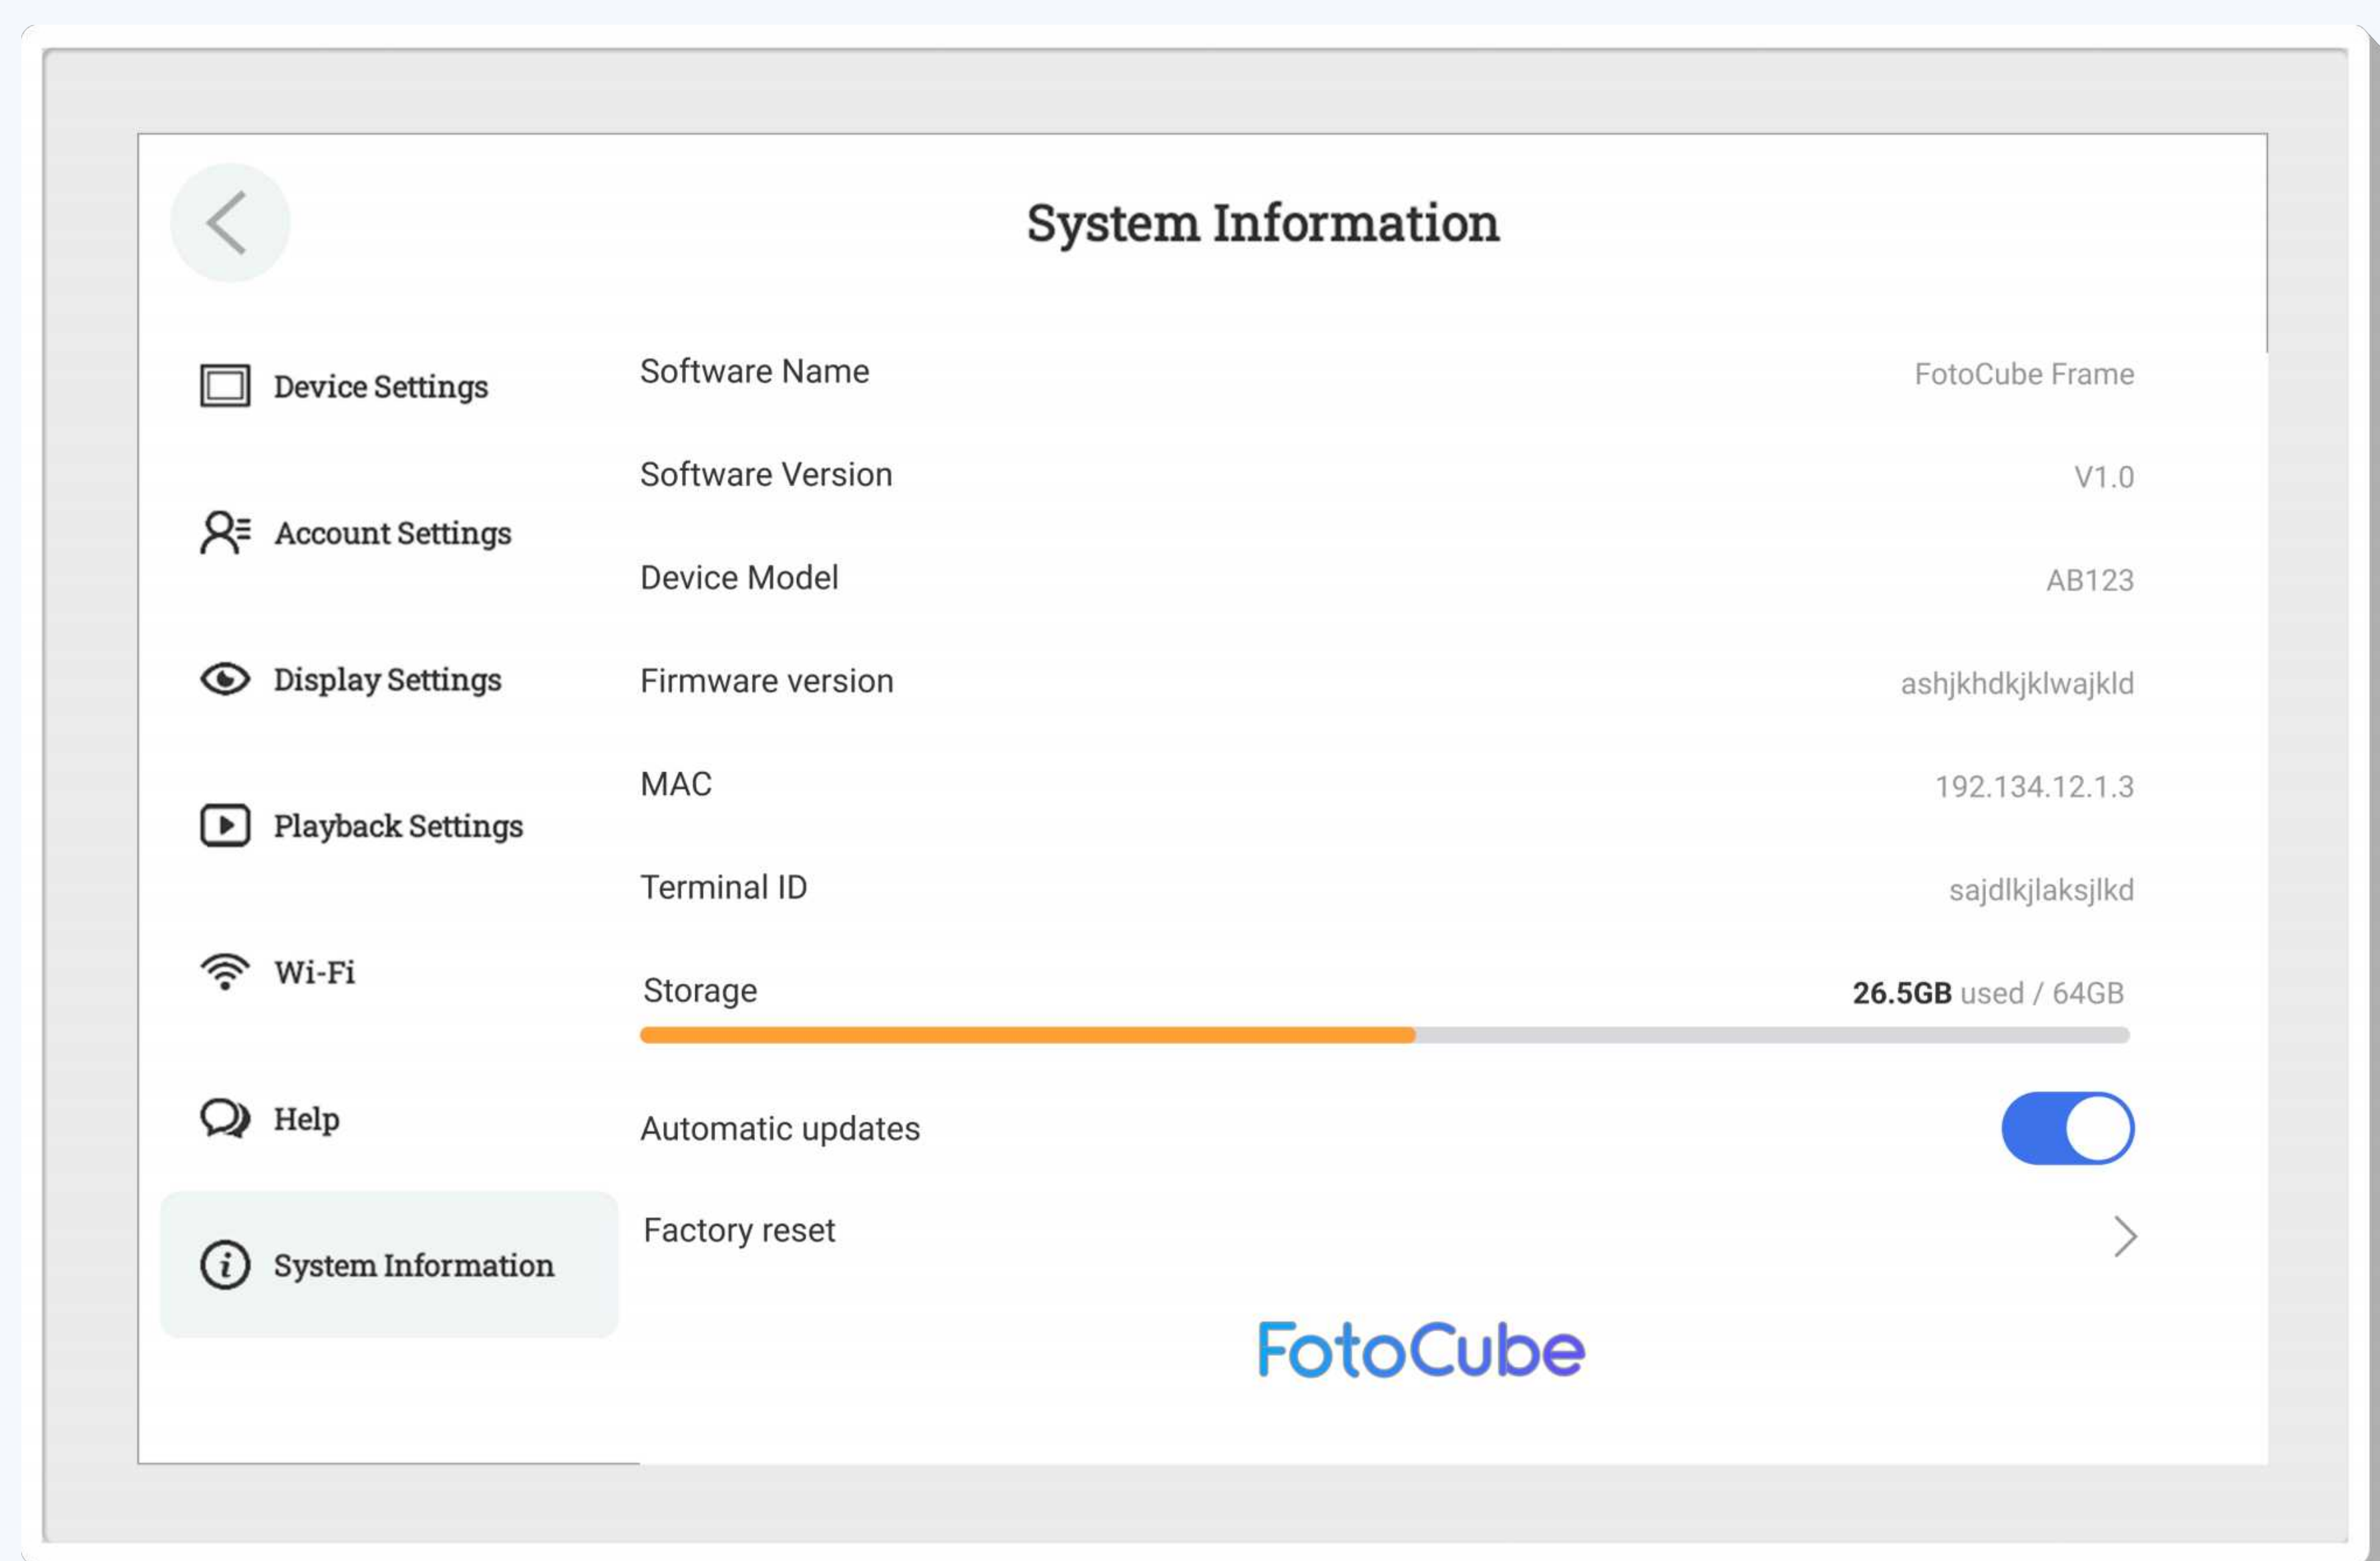

- **Software/Firmware Version**

Check for device software/firmware version updates.

- **MAC**

Displays the MAC address of the device.

- **Terminal ID**

Displays device ID information.

- **Storage**

Display the used space and remaining available storage on the device.

- **Auto-update**

It is recommended to enable. When enabled, the device will automatically install downloaded higher versions. If disabled, manual installation is required.

- **Restore Factory Settings**

Warning: Resetting the device will delete all photos and settings stored on the device. Please ensure that you have backed up all important data, as once reset, this data cannot be recovered.

3 FotoCube APP

3.1 Quick Setup


As an important management and connection device, the APP needs to be registered via email, and can be used only after login.

3.2 Register an Account


Register an APP account using an email address.

- **Tips:** Please enter a valid registered email address to prevent the code from failing to be sent. If you cannot find the code, please look for spam email or contact customer service.

When you first open the app, you can sign in with Apple, Google, or email. Tap “Email,” select “Register,” and enter your email address. A six-digit verification code will be sent to your inbox to complete registration.

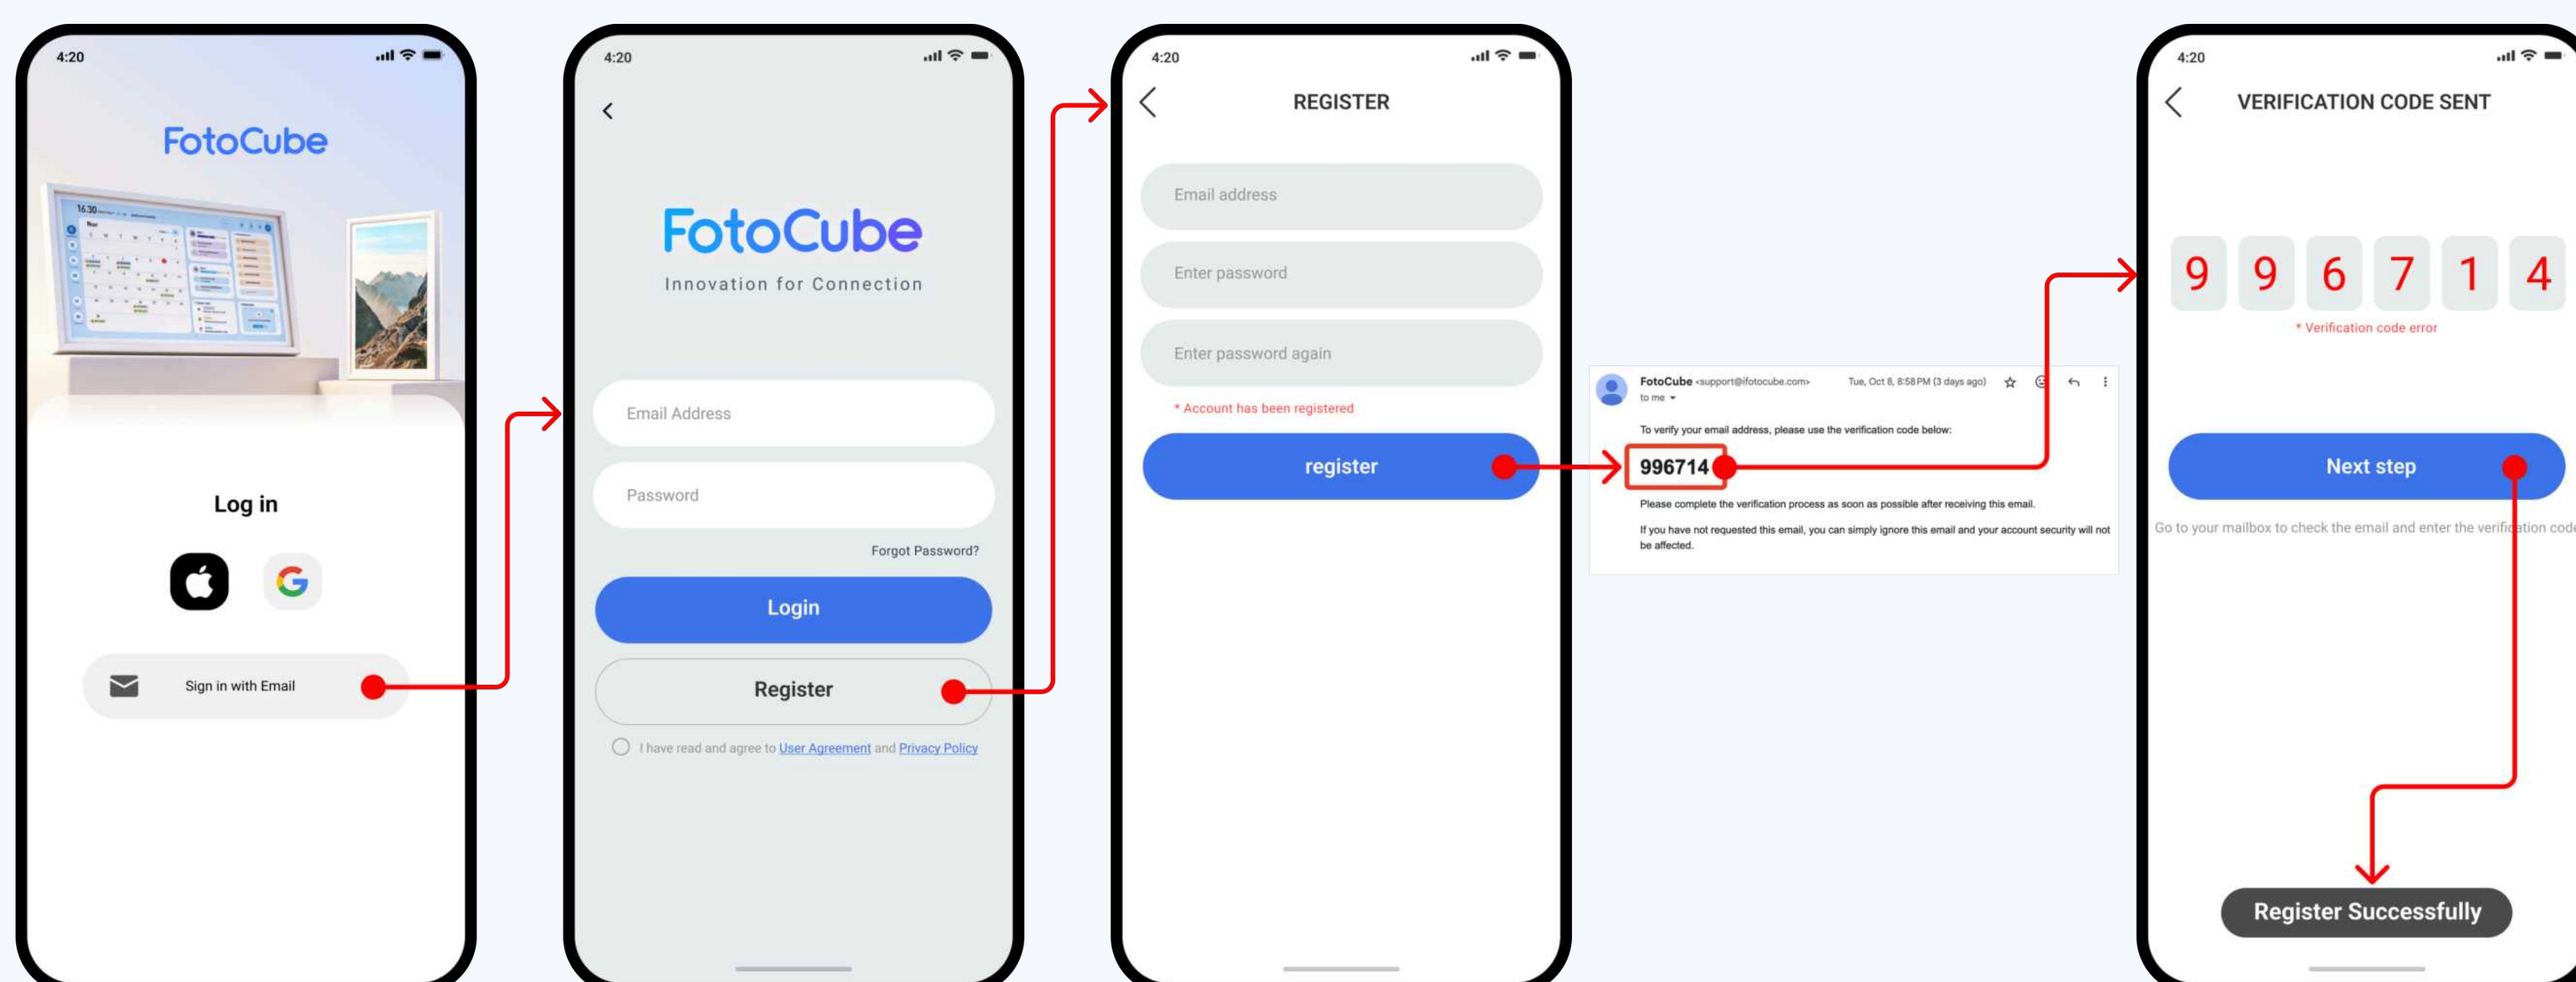

3.3 Send Photos or Videos

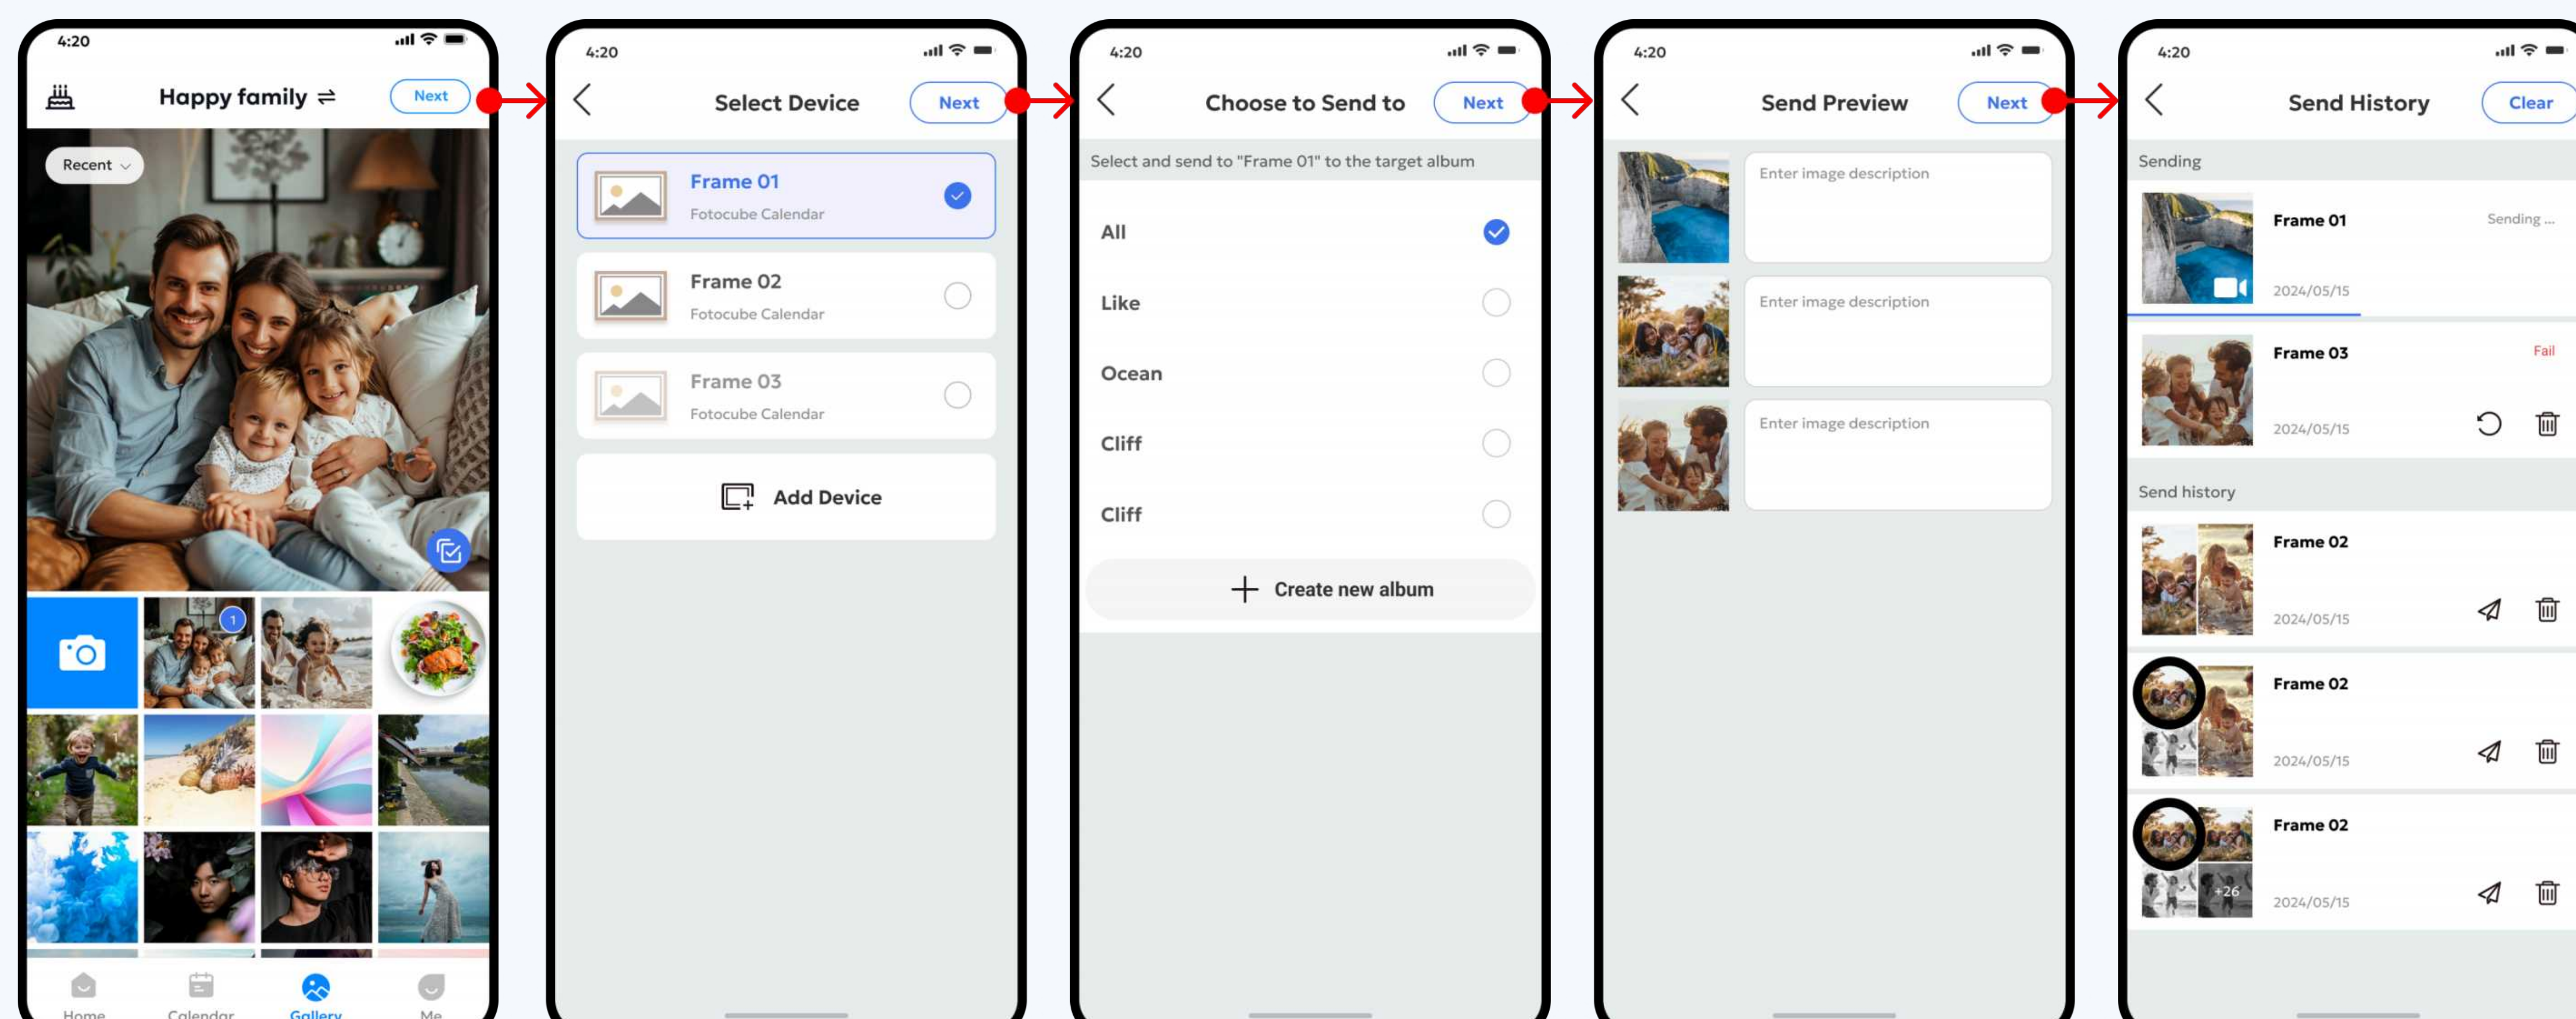

- **Send Photos**

(1) Select one or more photos; (2) Select a device; (3) Select the album to send; (4) Describe the photo; (5) Click "Send".

Note: If you have selected "Keep current selection" and need to add more photos from your phone's album, you must restart the FotoCube application. Otherwise, only the option to take a new photo will be available.

- **Send Videos**

(1) Select a video; (2) Select a device; (3) Select the album to send; (4) Describe the video; (5) Click "Send".

Note: If you have chosen "Keep current selection" and need to add more videos, you must restart the FotoCube application to start over.

- **Create a New Album**

You can create a new album and send photo or video content to the specified album. On the smart display, you can let the screen play the photos and videos of the specified album.

- **Sending History**

You can view the status of the photo sending task and perform re-sending and deleting record operations in the sending history list.


3.4 Manage the Family Calendar


3.4.1 Select the Smart Display to Manage

The top left corner of the calendar page of the mobile application shows the currently managed device. If the device is not bound, please bind the device first before performing calendar management operations. For details, refer to the [\[2.2 How to Pair The Smart Display with The FotoCube APP\]](#) chapter.

3.4.2 Create New Calendar Items

- Click the "+" button in the lower right corner and select Event, Alarm, or Task.

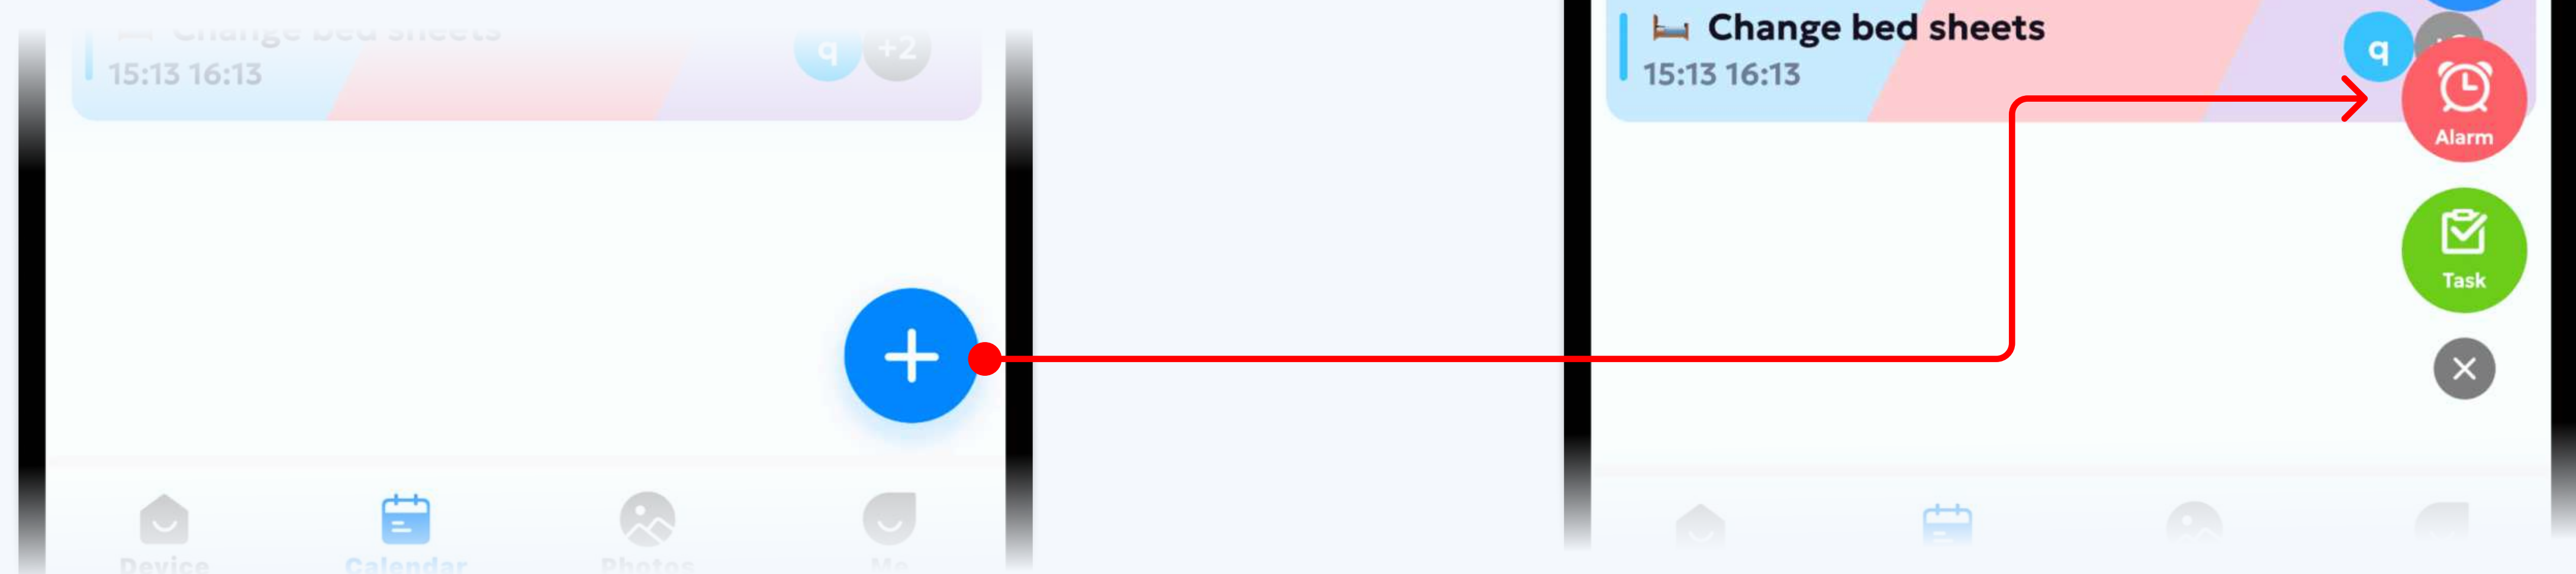


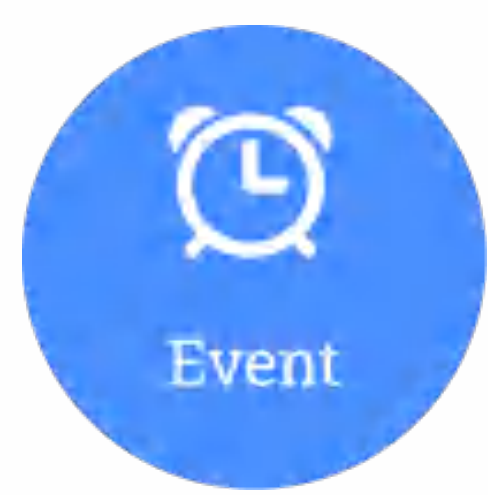




• **Event**



• **Alarm**

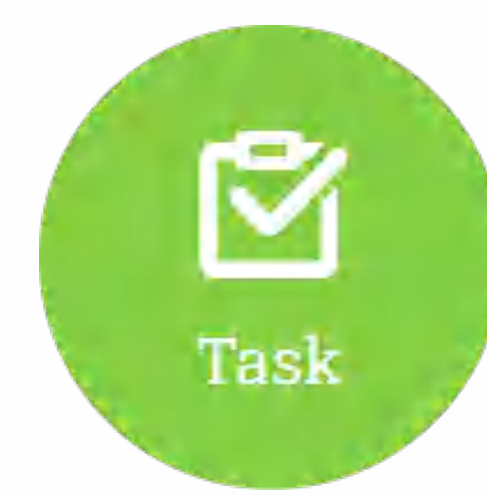


• **Task**

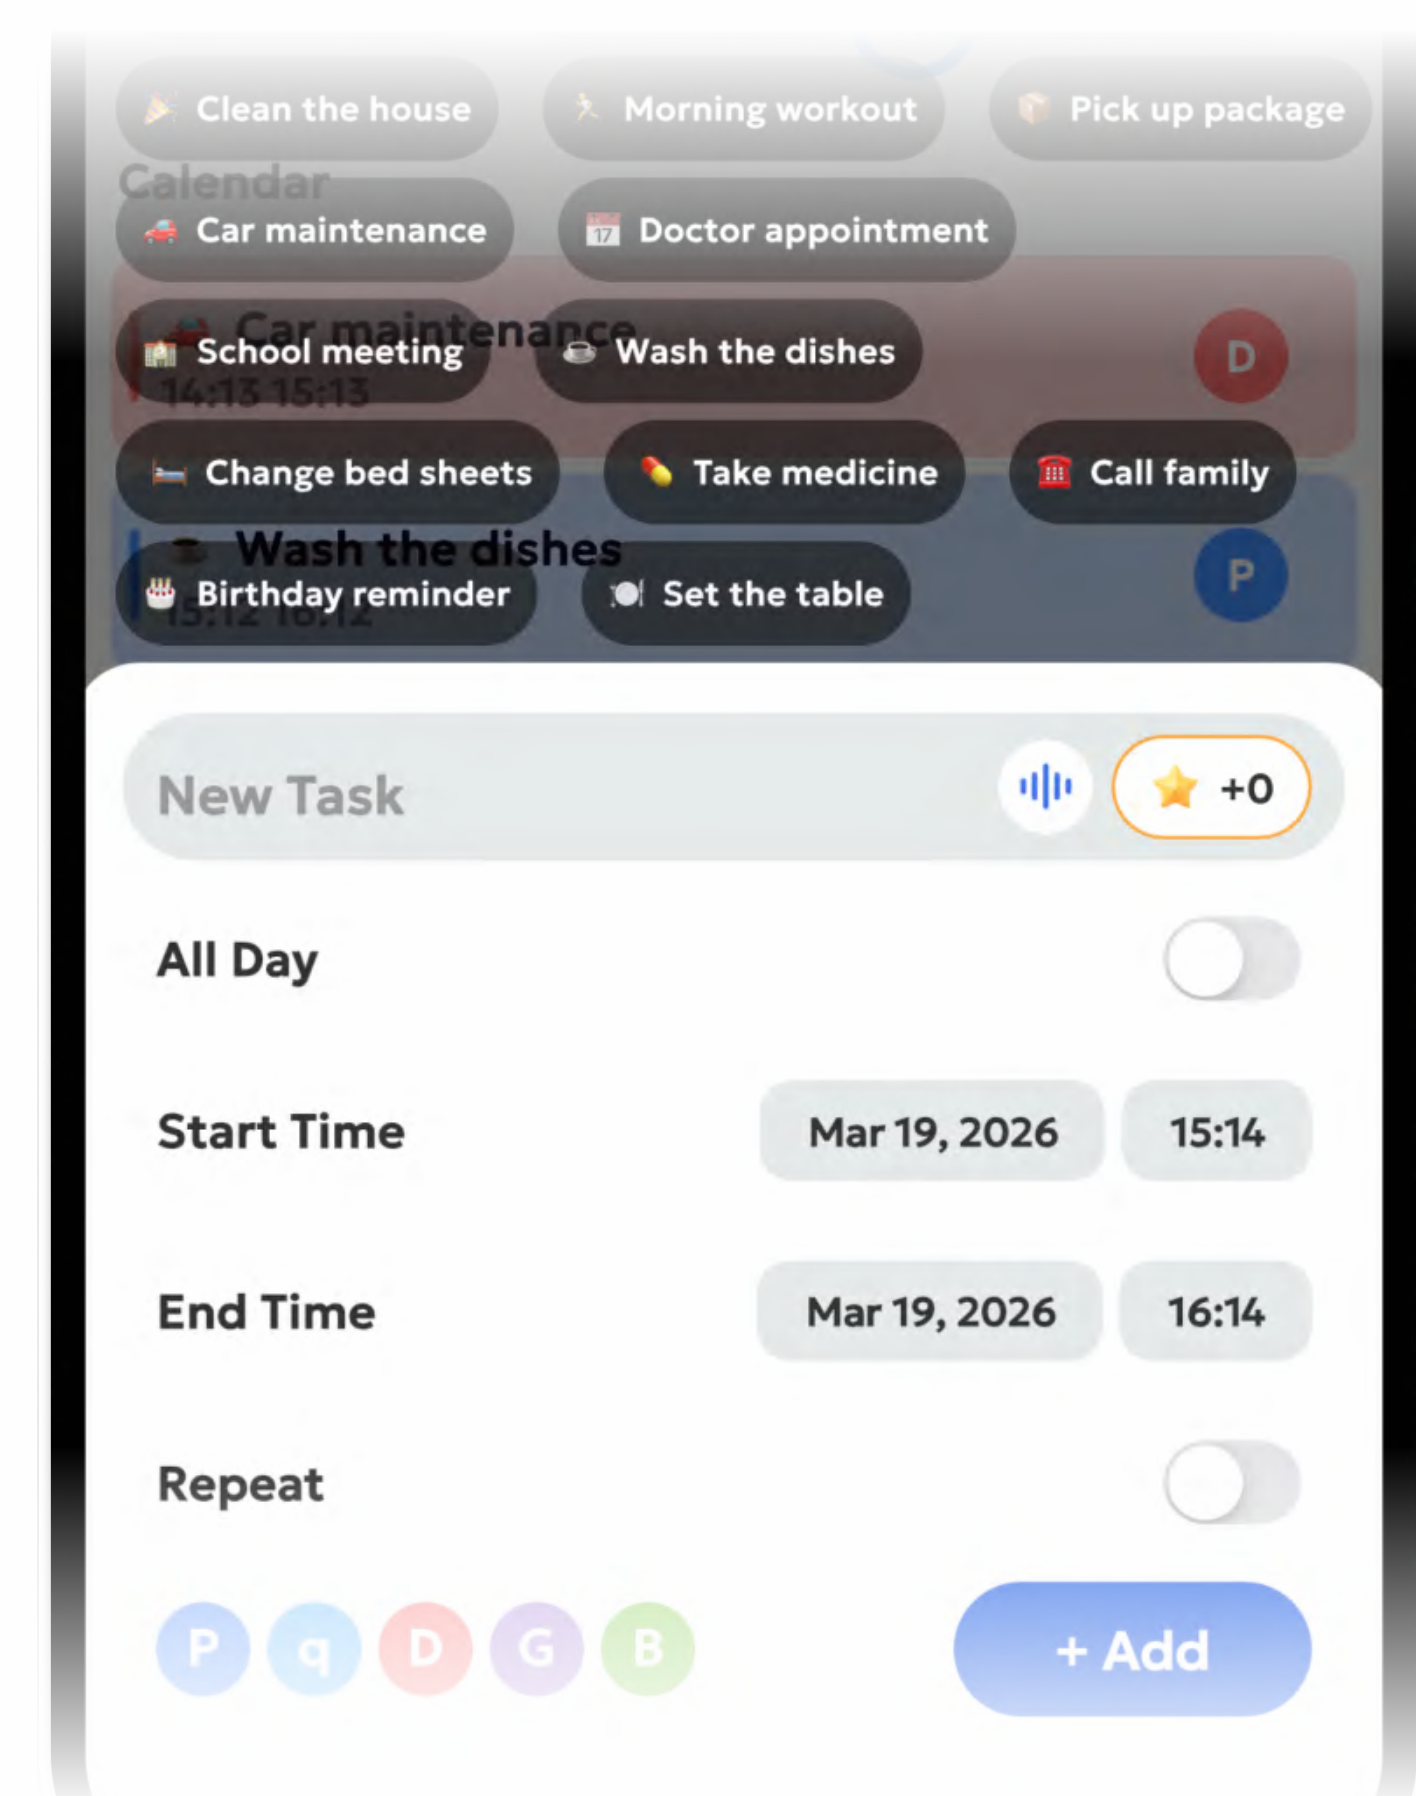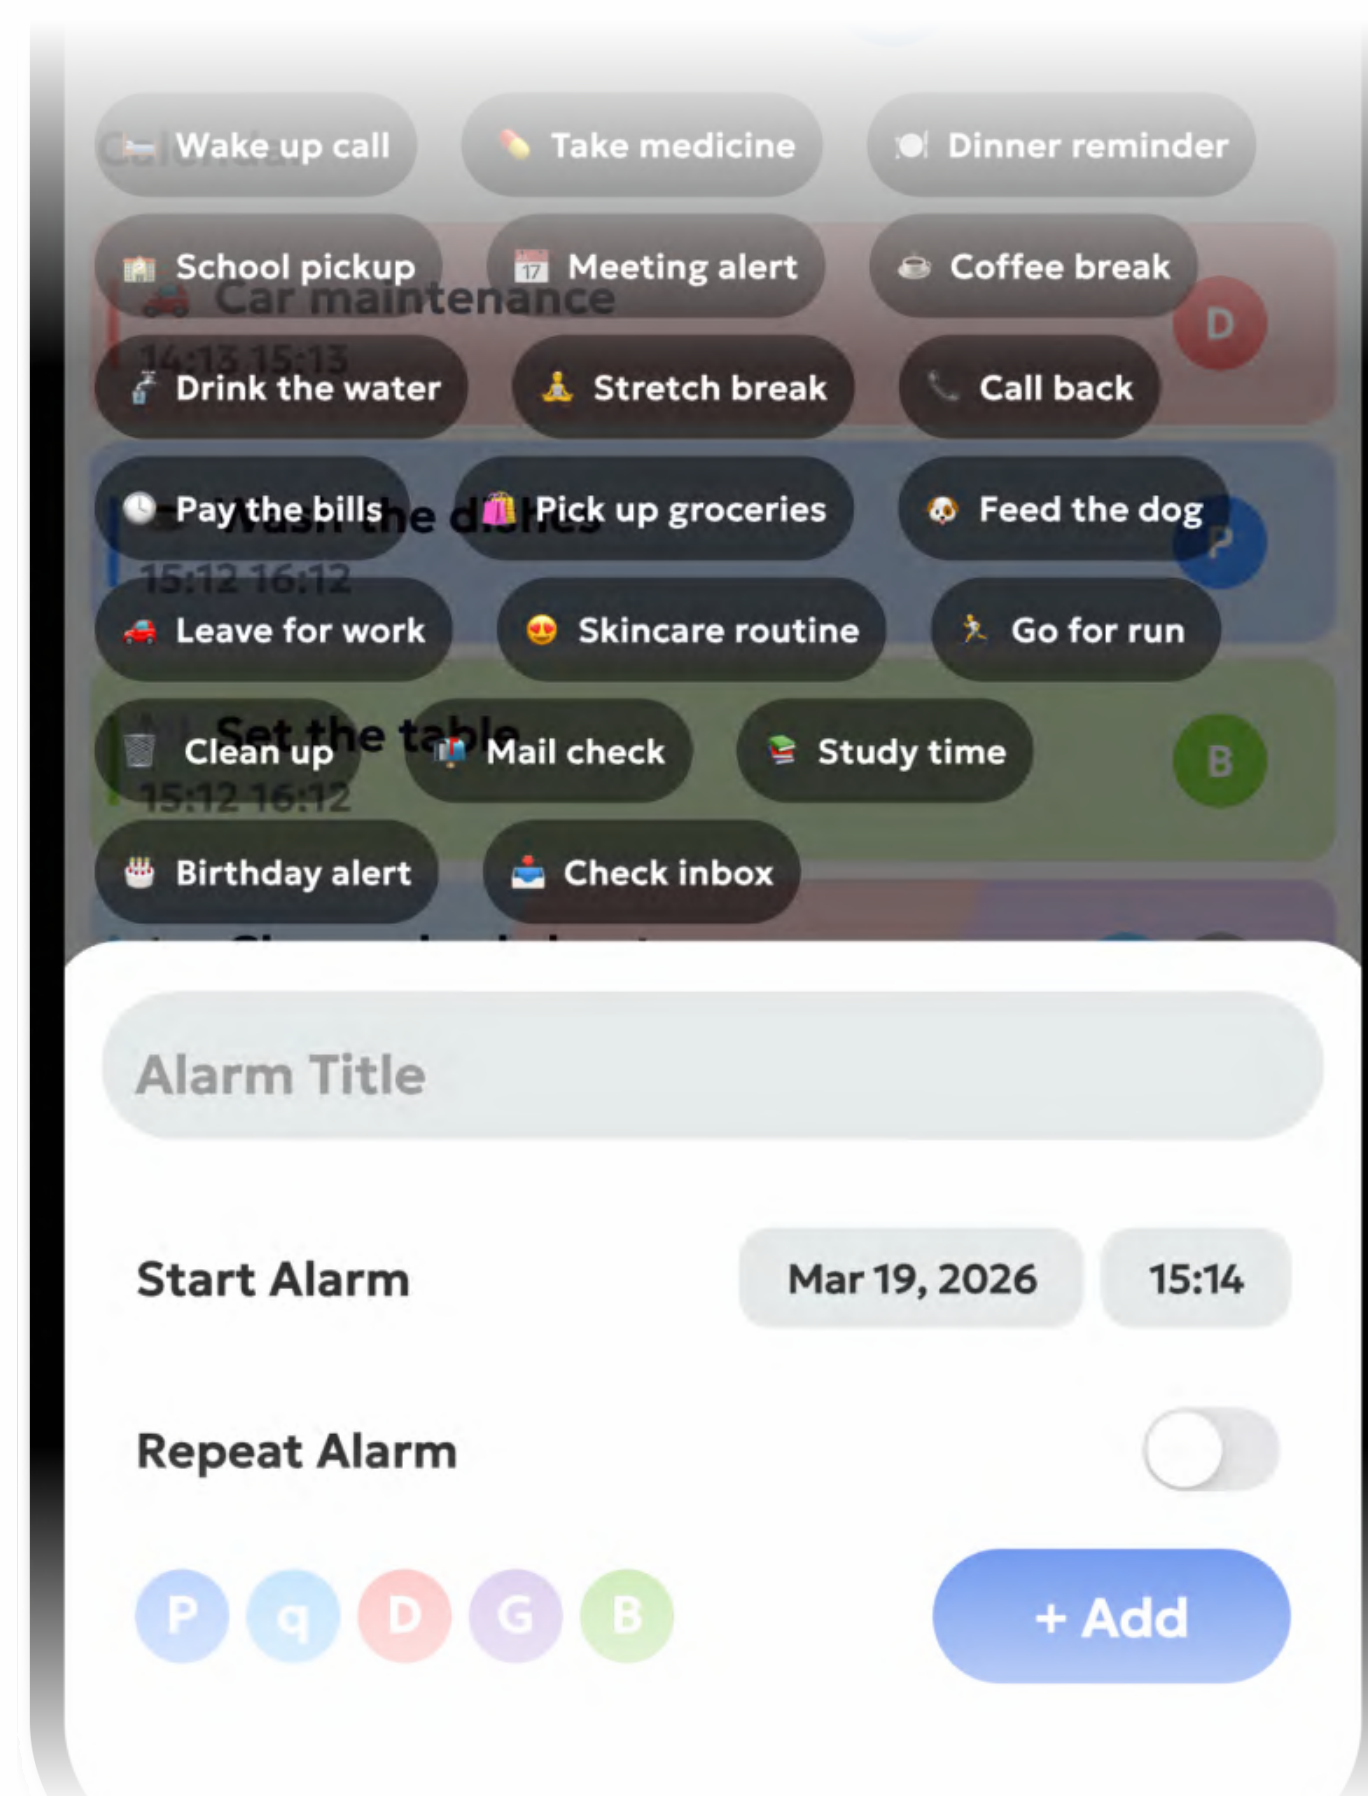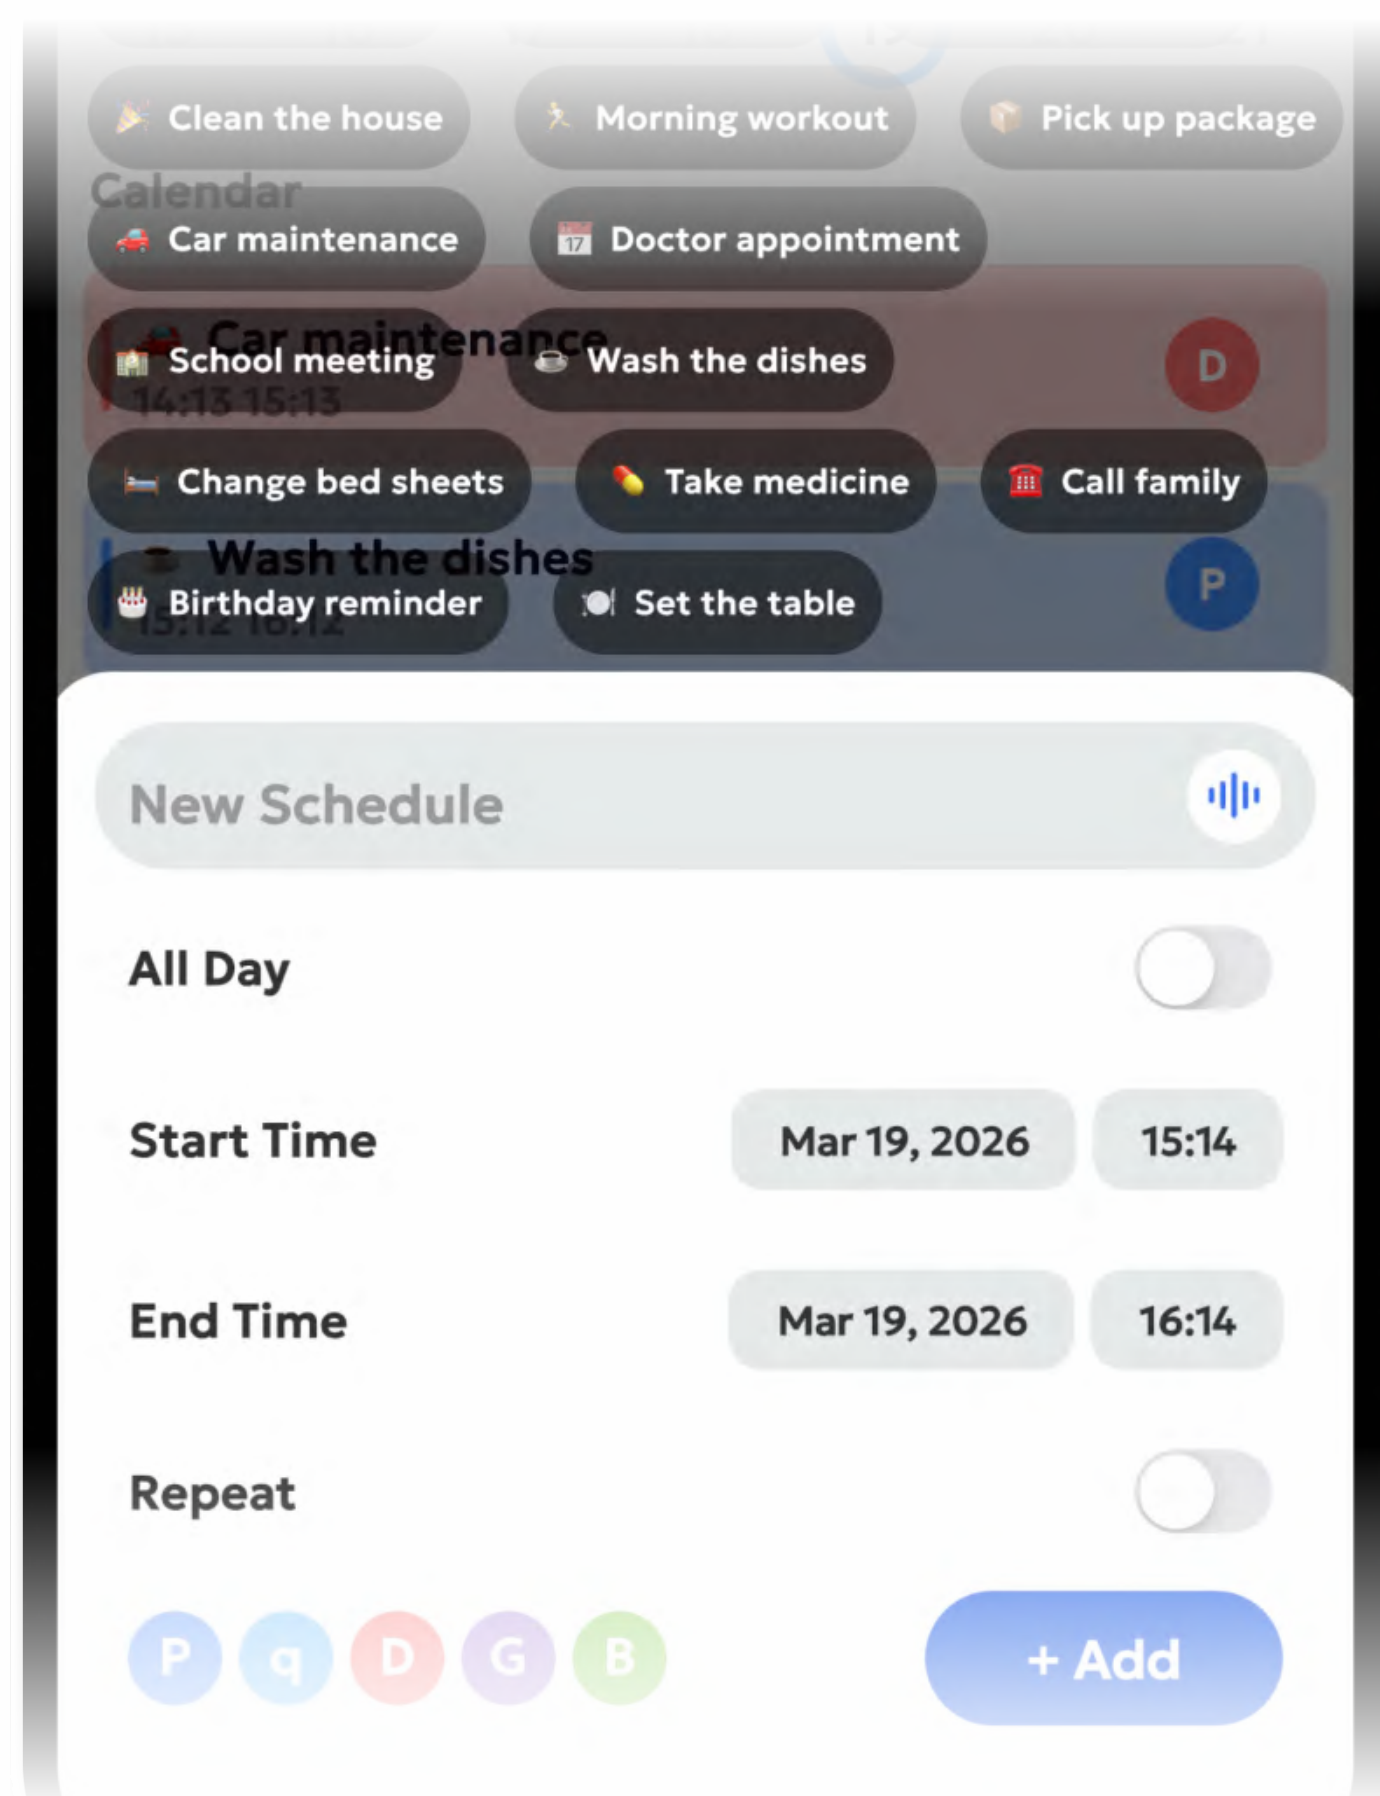

3.4.3 Add New Members

Click the "**Add Member**" button below the date on the Calendar page to add new members. You can set nicknames, email accounts, and exclusive background colors for new members.

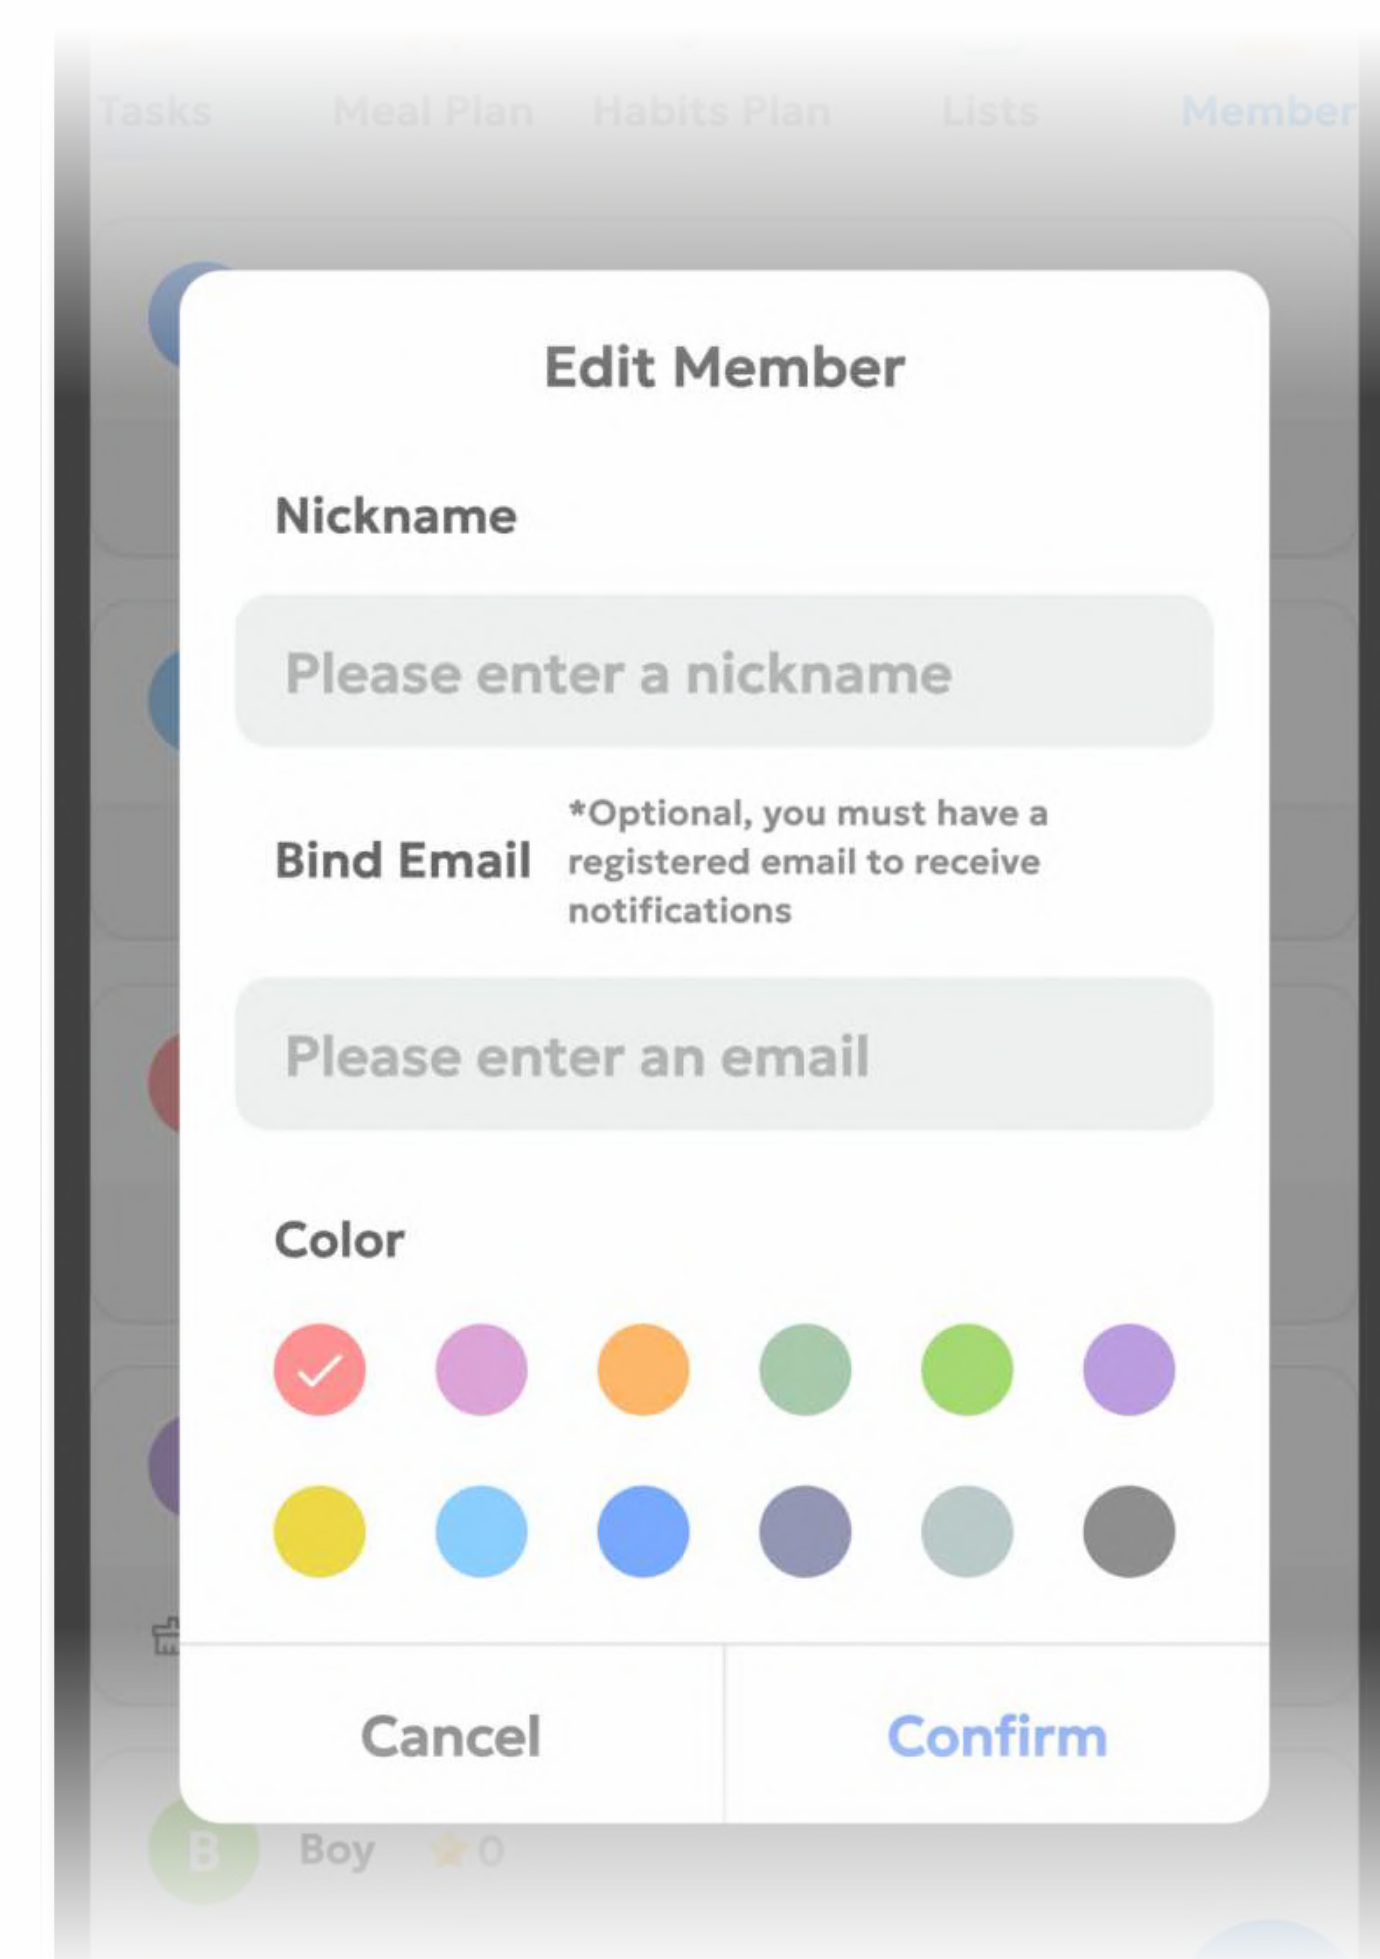

3.4.4 Edit or Delete Members

You can edit or delete the members on the current device in the member list of the APP.

3.4.5 Import Third-Party Calendars


Support importing local third-party calendar data on the mobile phone. Open the FotoCube APP "Home Page" - "Calendar" - "Import", and select the calendar types to be imported **[Refer to 2.5.3 Import Calendars]** .

3.4.6 Meal Plan

Supports users in creating personalized meal plans.

Open the app, go to Home > Calendar > Plan > Meal Plan, then select Breakfast, Lunch, or Dinner to create a corresponding meal plan.


Users can also add menu images and detailed descriptions to enrich their meal planning experience. This feature is exclusive to mobile devices.

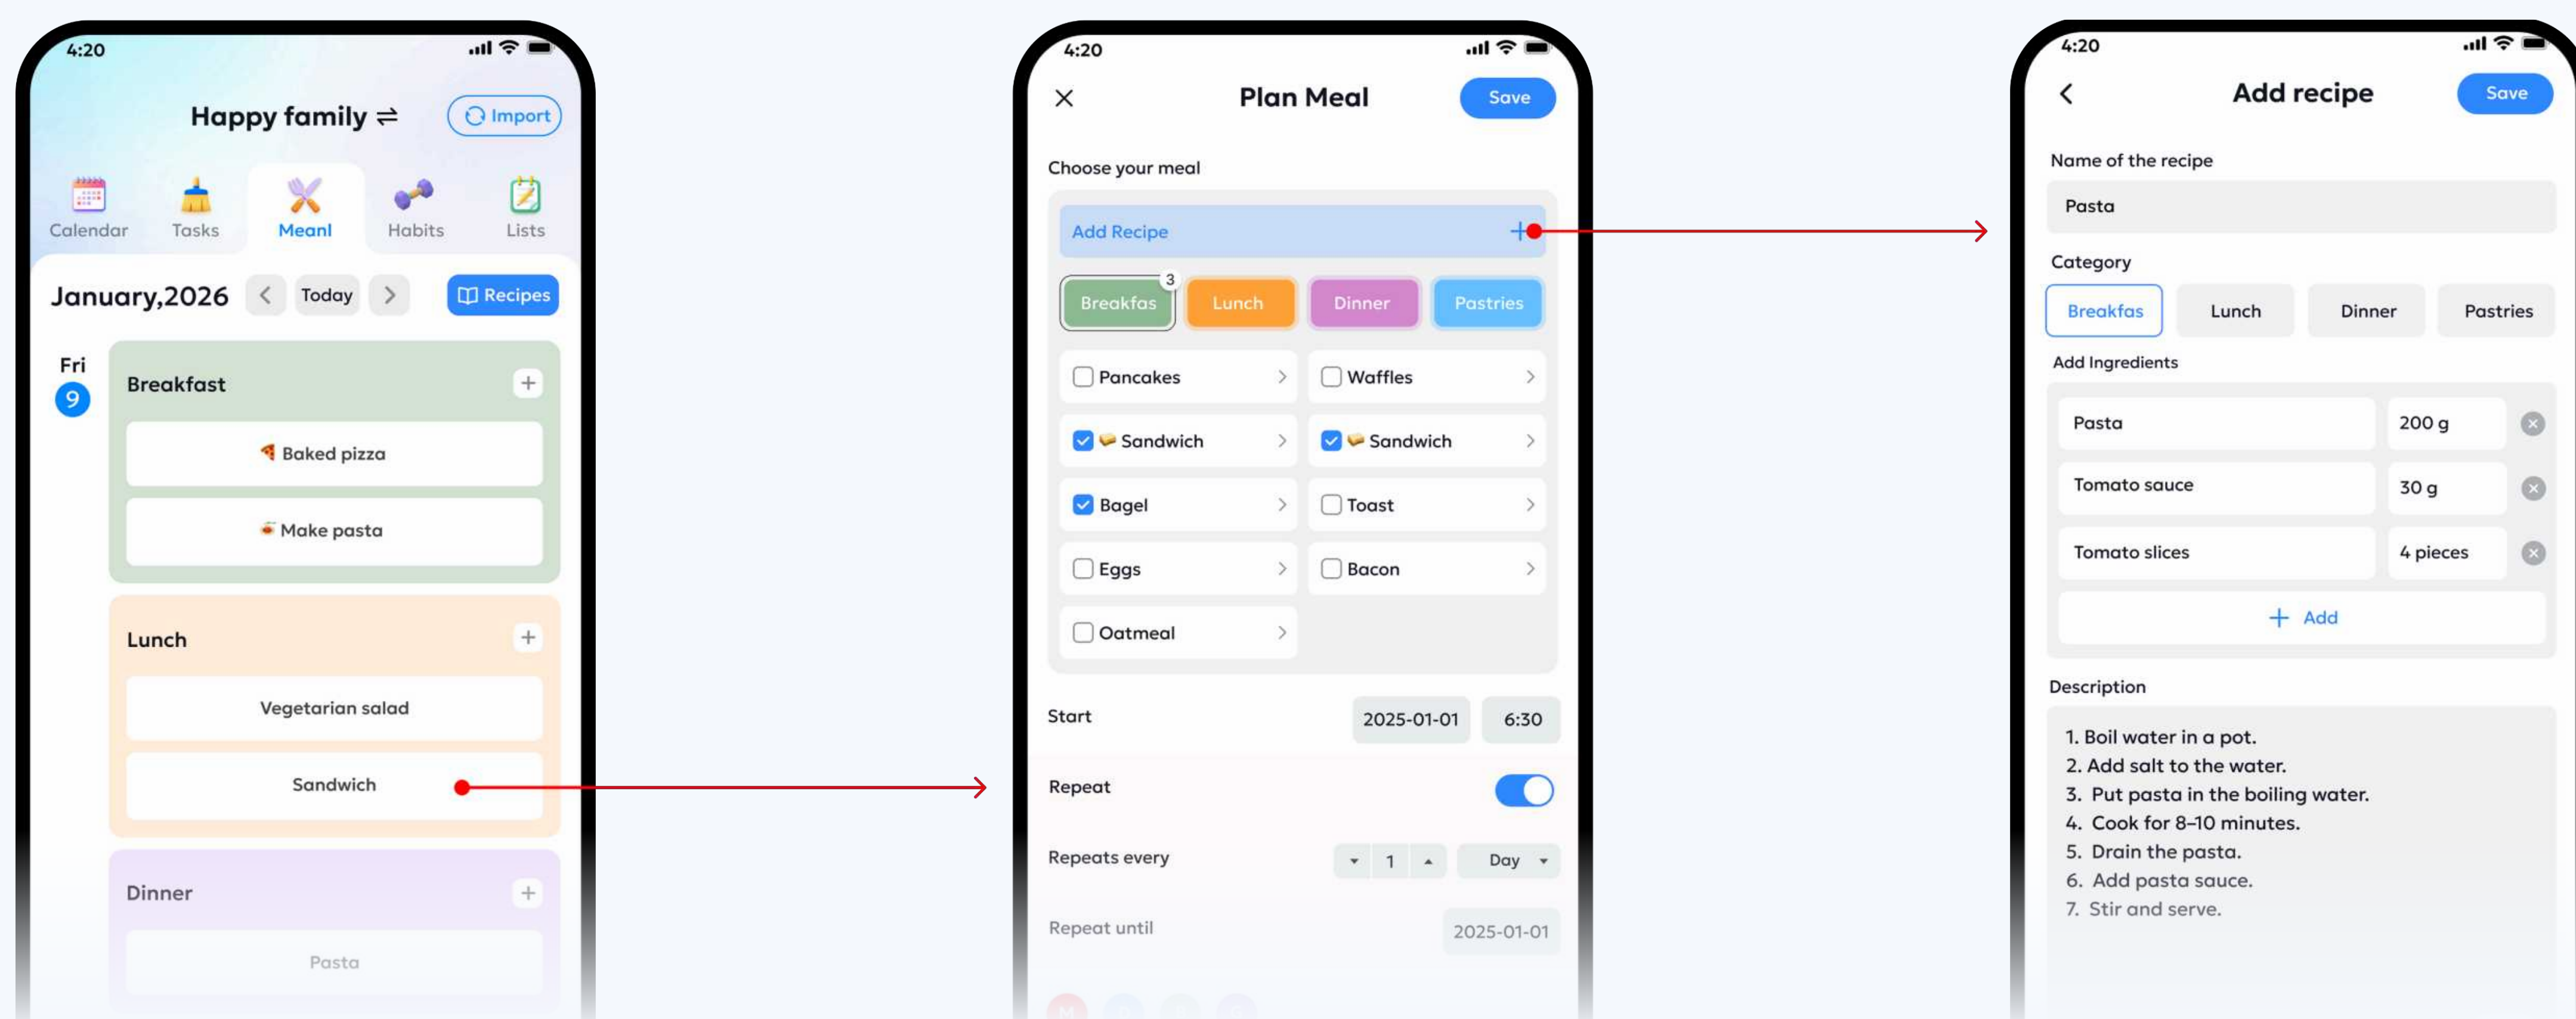

3.4.7 Habit Plan

Supports the creation of a 30-day habit-building plan. Users can navigate to Home > Calendar > Plan > Habit Plan, and click the "+ Add" button to create a new plan.


For plans that have already been created, users can click on the card to edit or adjust member information.

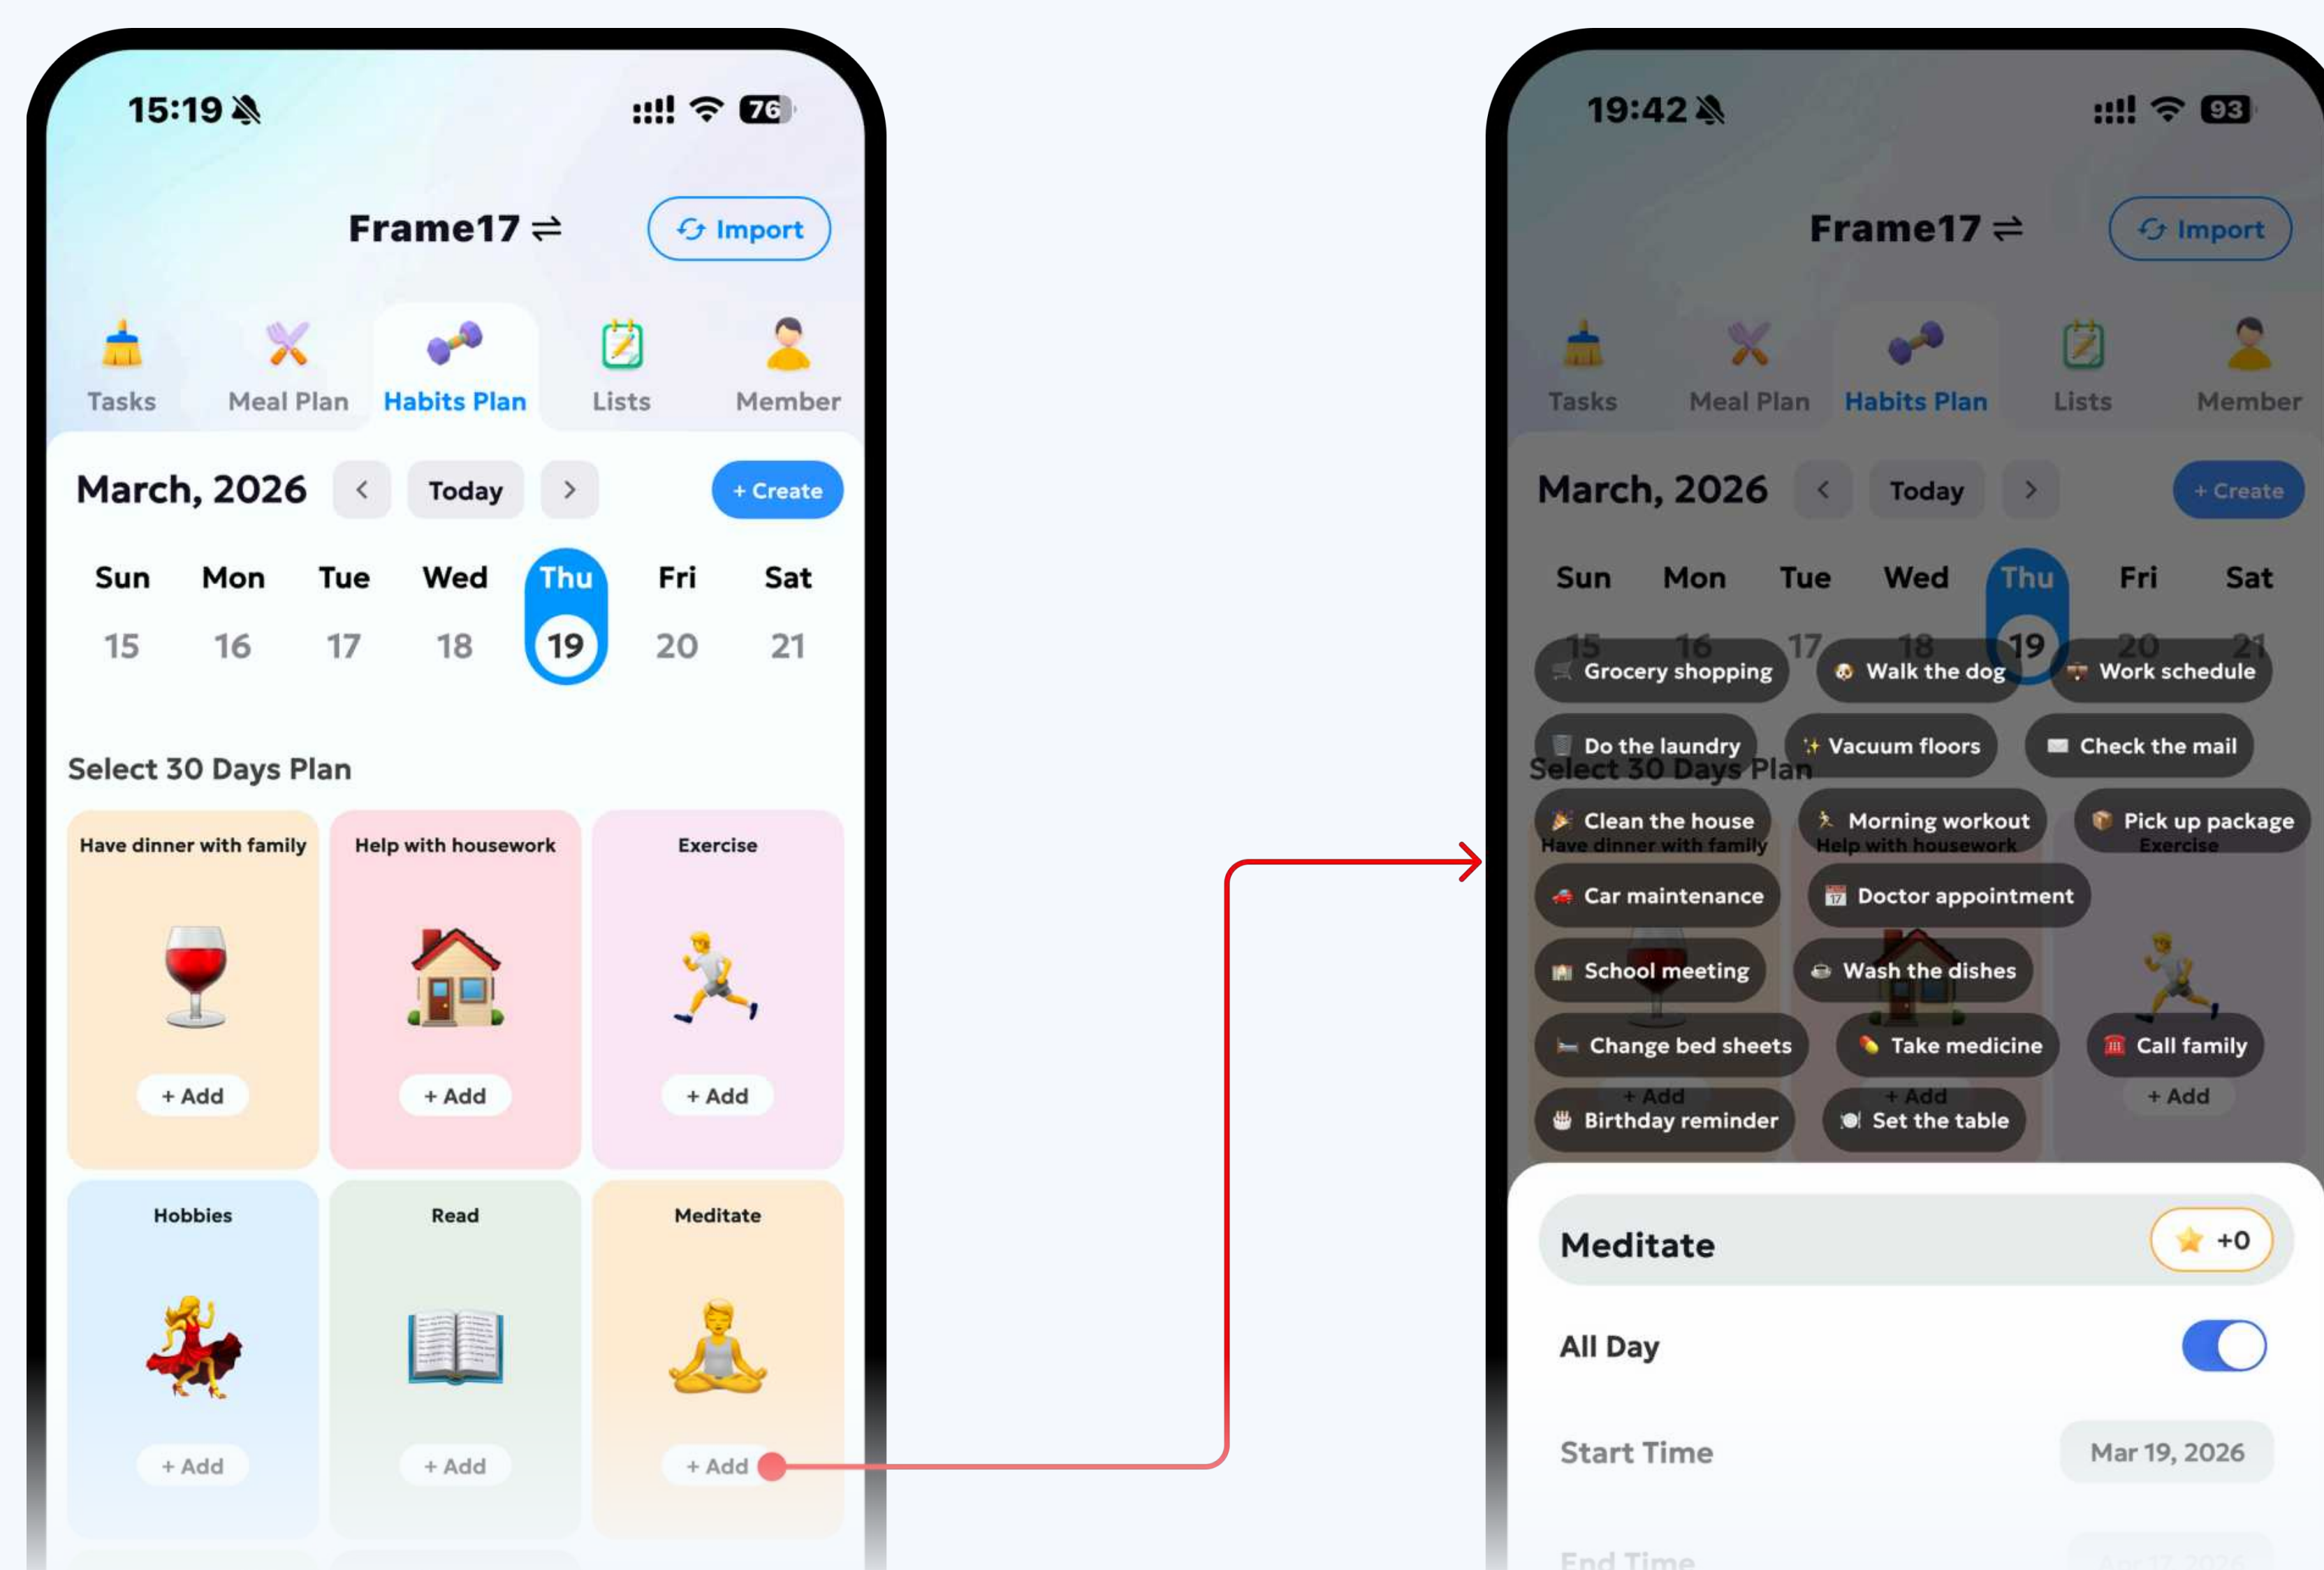

3.4.8 Star Points


- Add Star Points

Create general schedules, alarms, cooking events, and all other activities. Set up incentive points for children to encourage the development of good habits. Points will be accumulated once the child completes the assigned tasks.

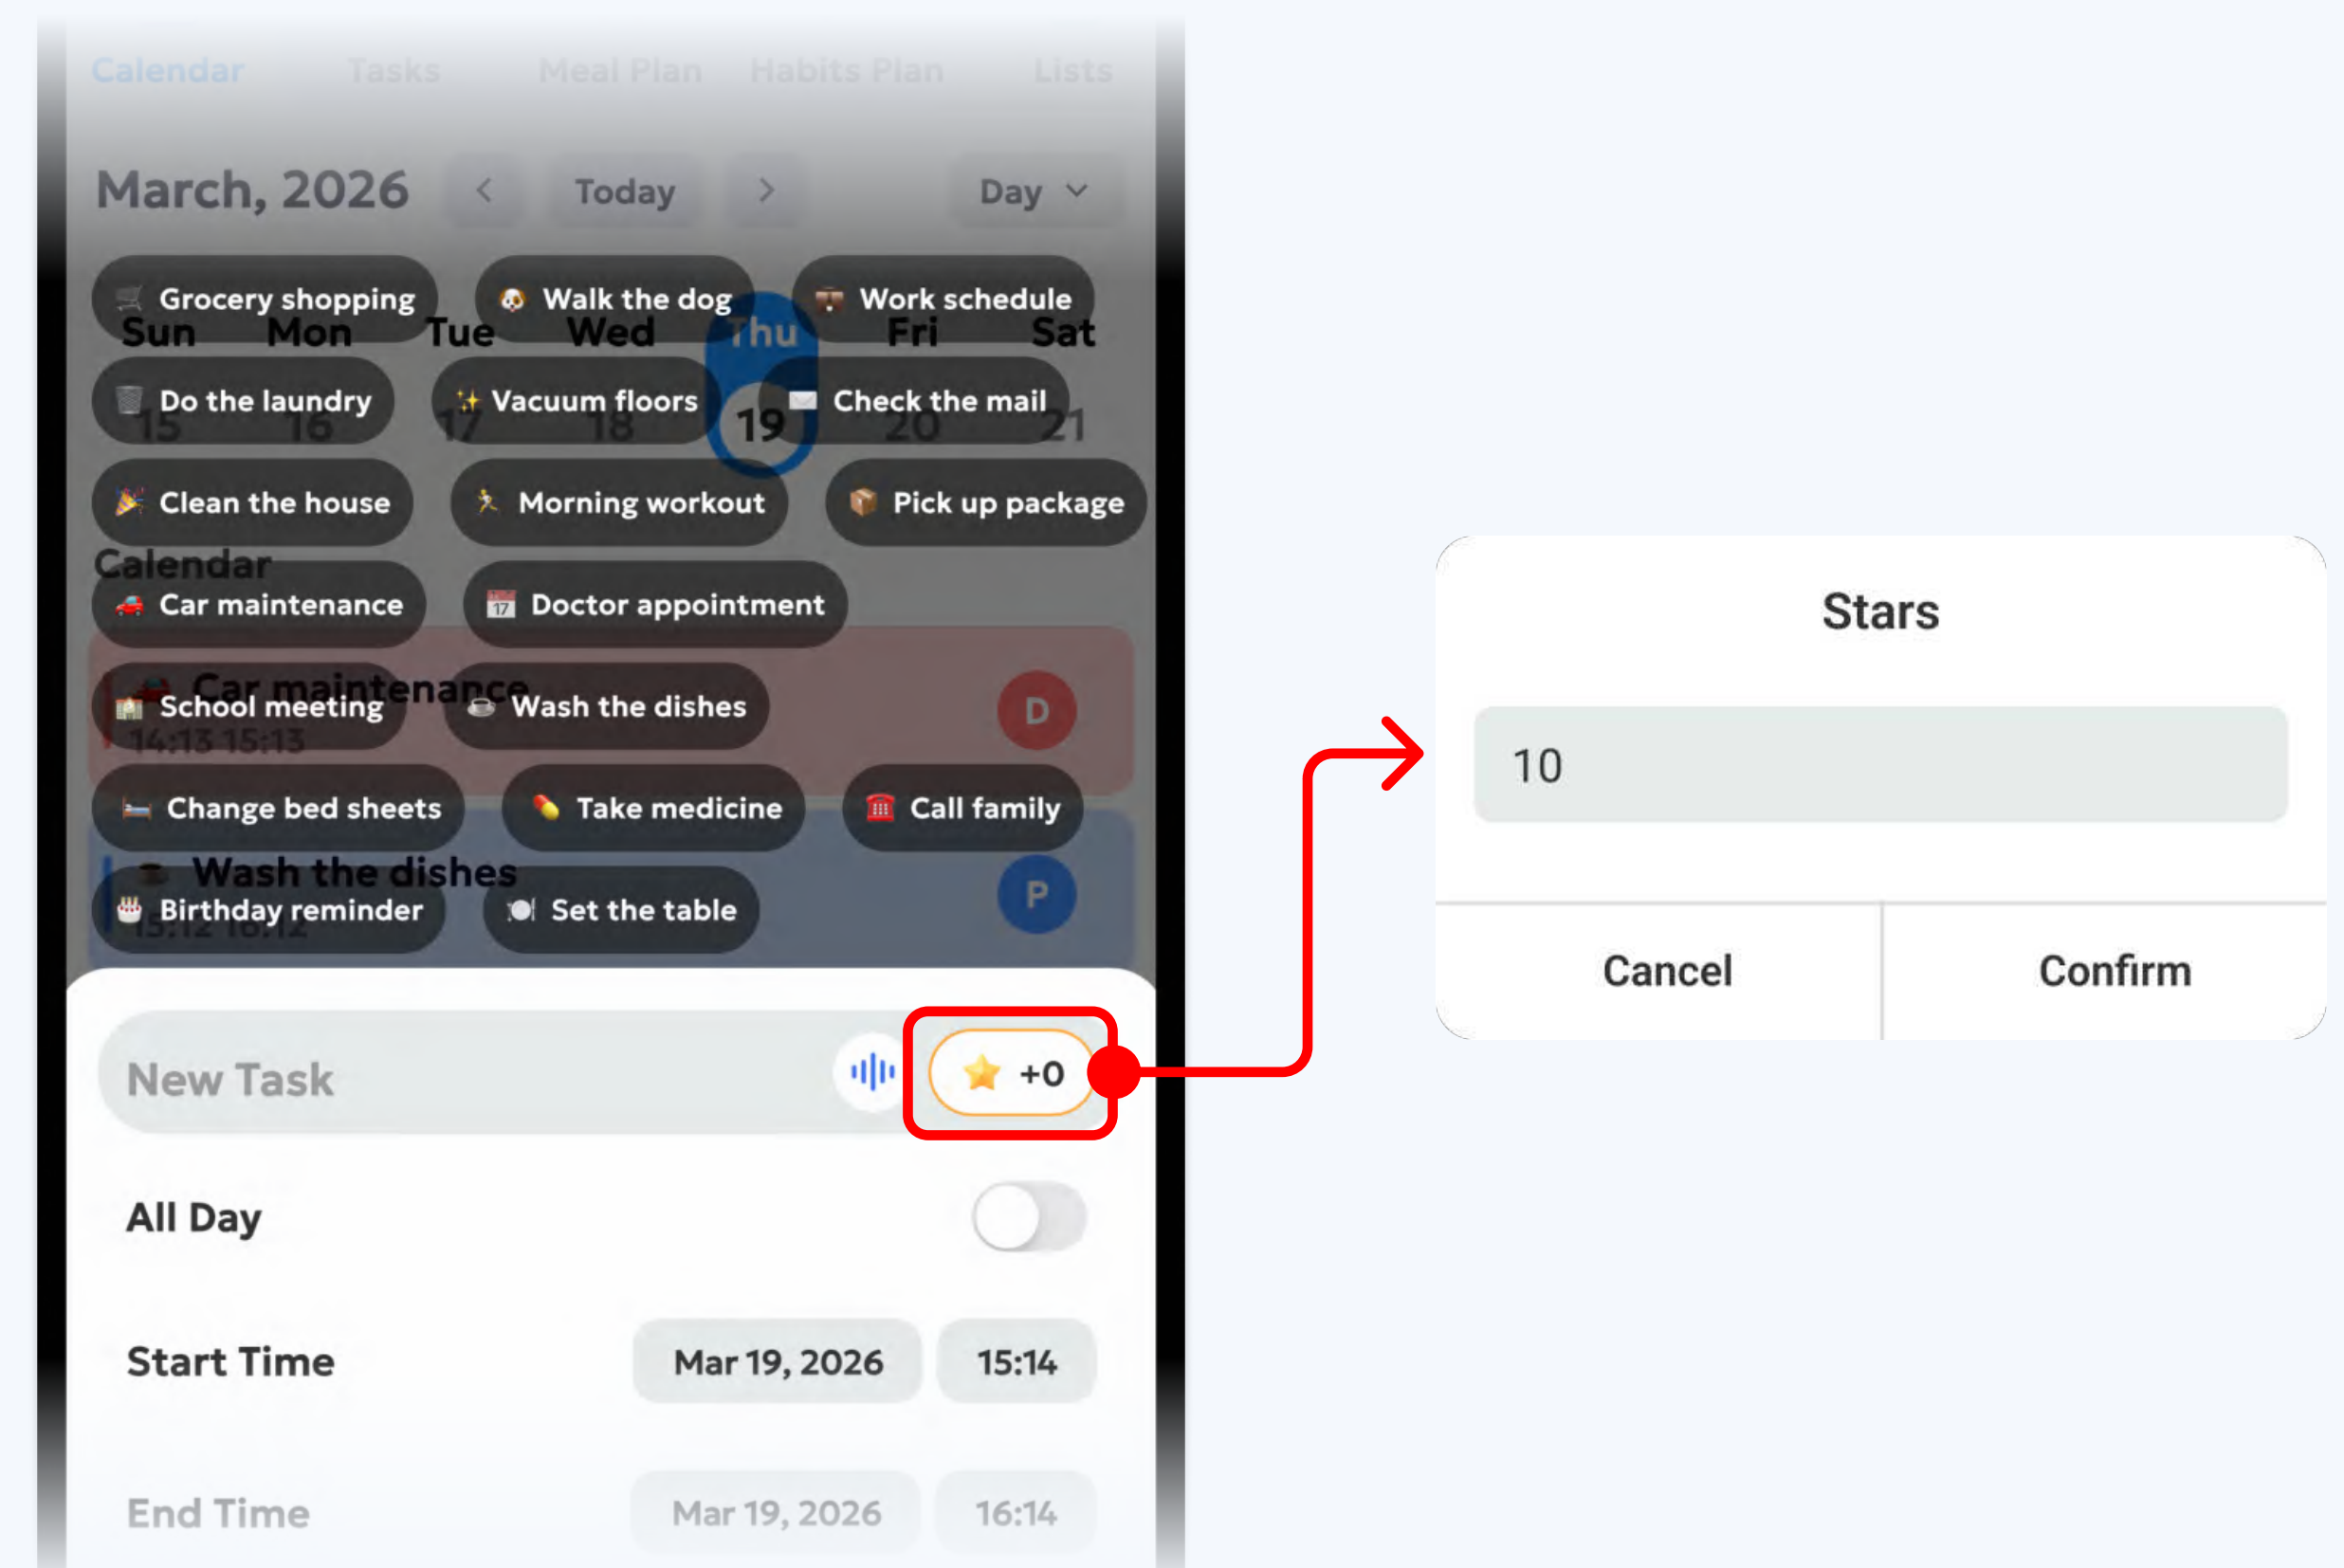


- Clear Stars

In member management, a "★Clear Stars" button needs to be supported, allowing administrators to clear all points for a user.

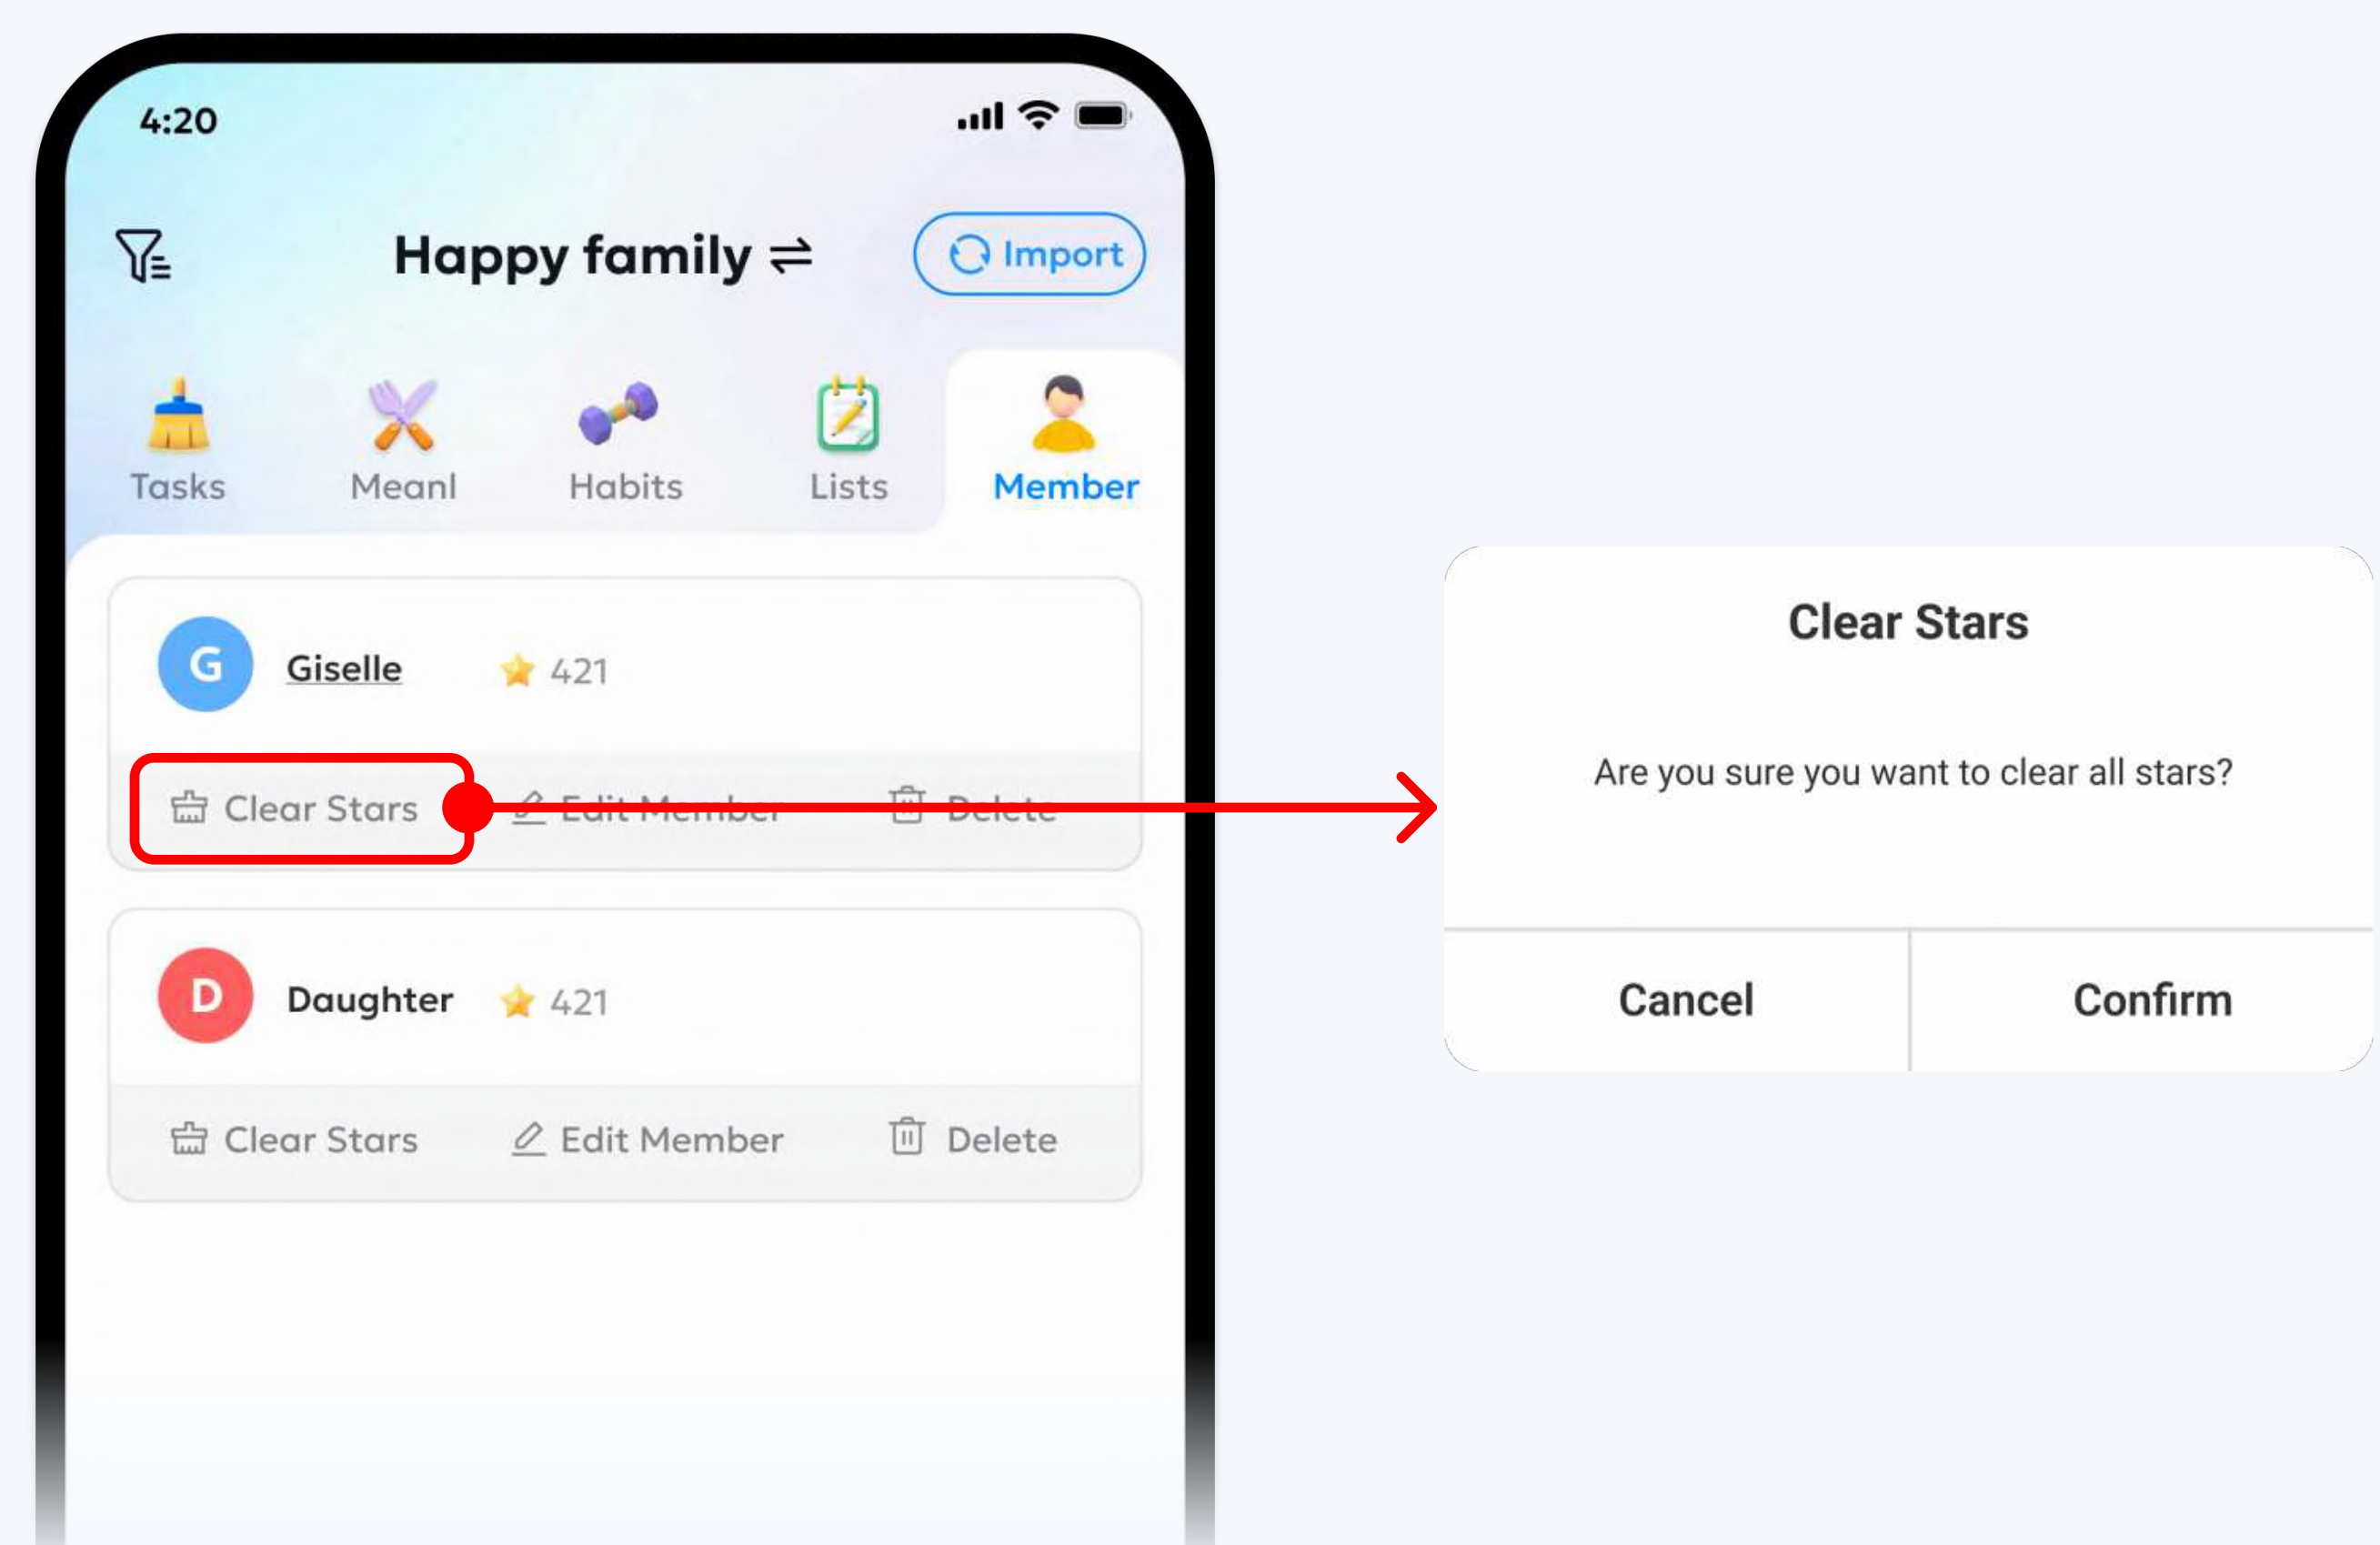

3.4.9 Title Templates

Click the title template bar on the top to quickly input commonly used function templates for schedule management, alarm settings, and cooking assistance.

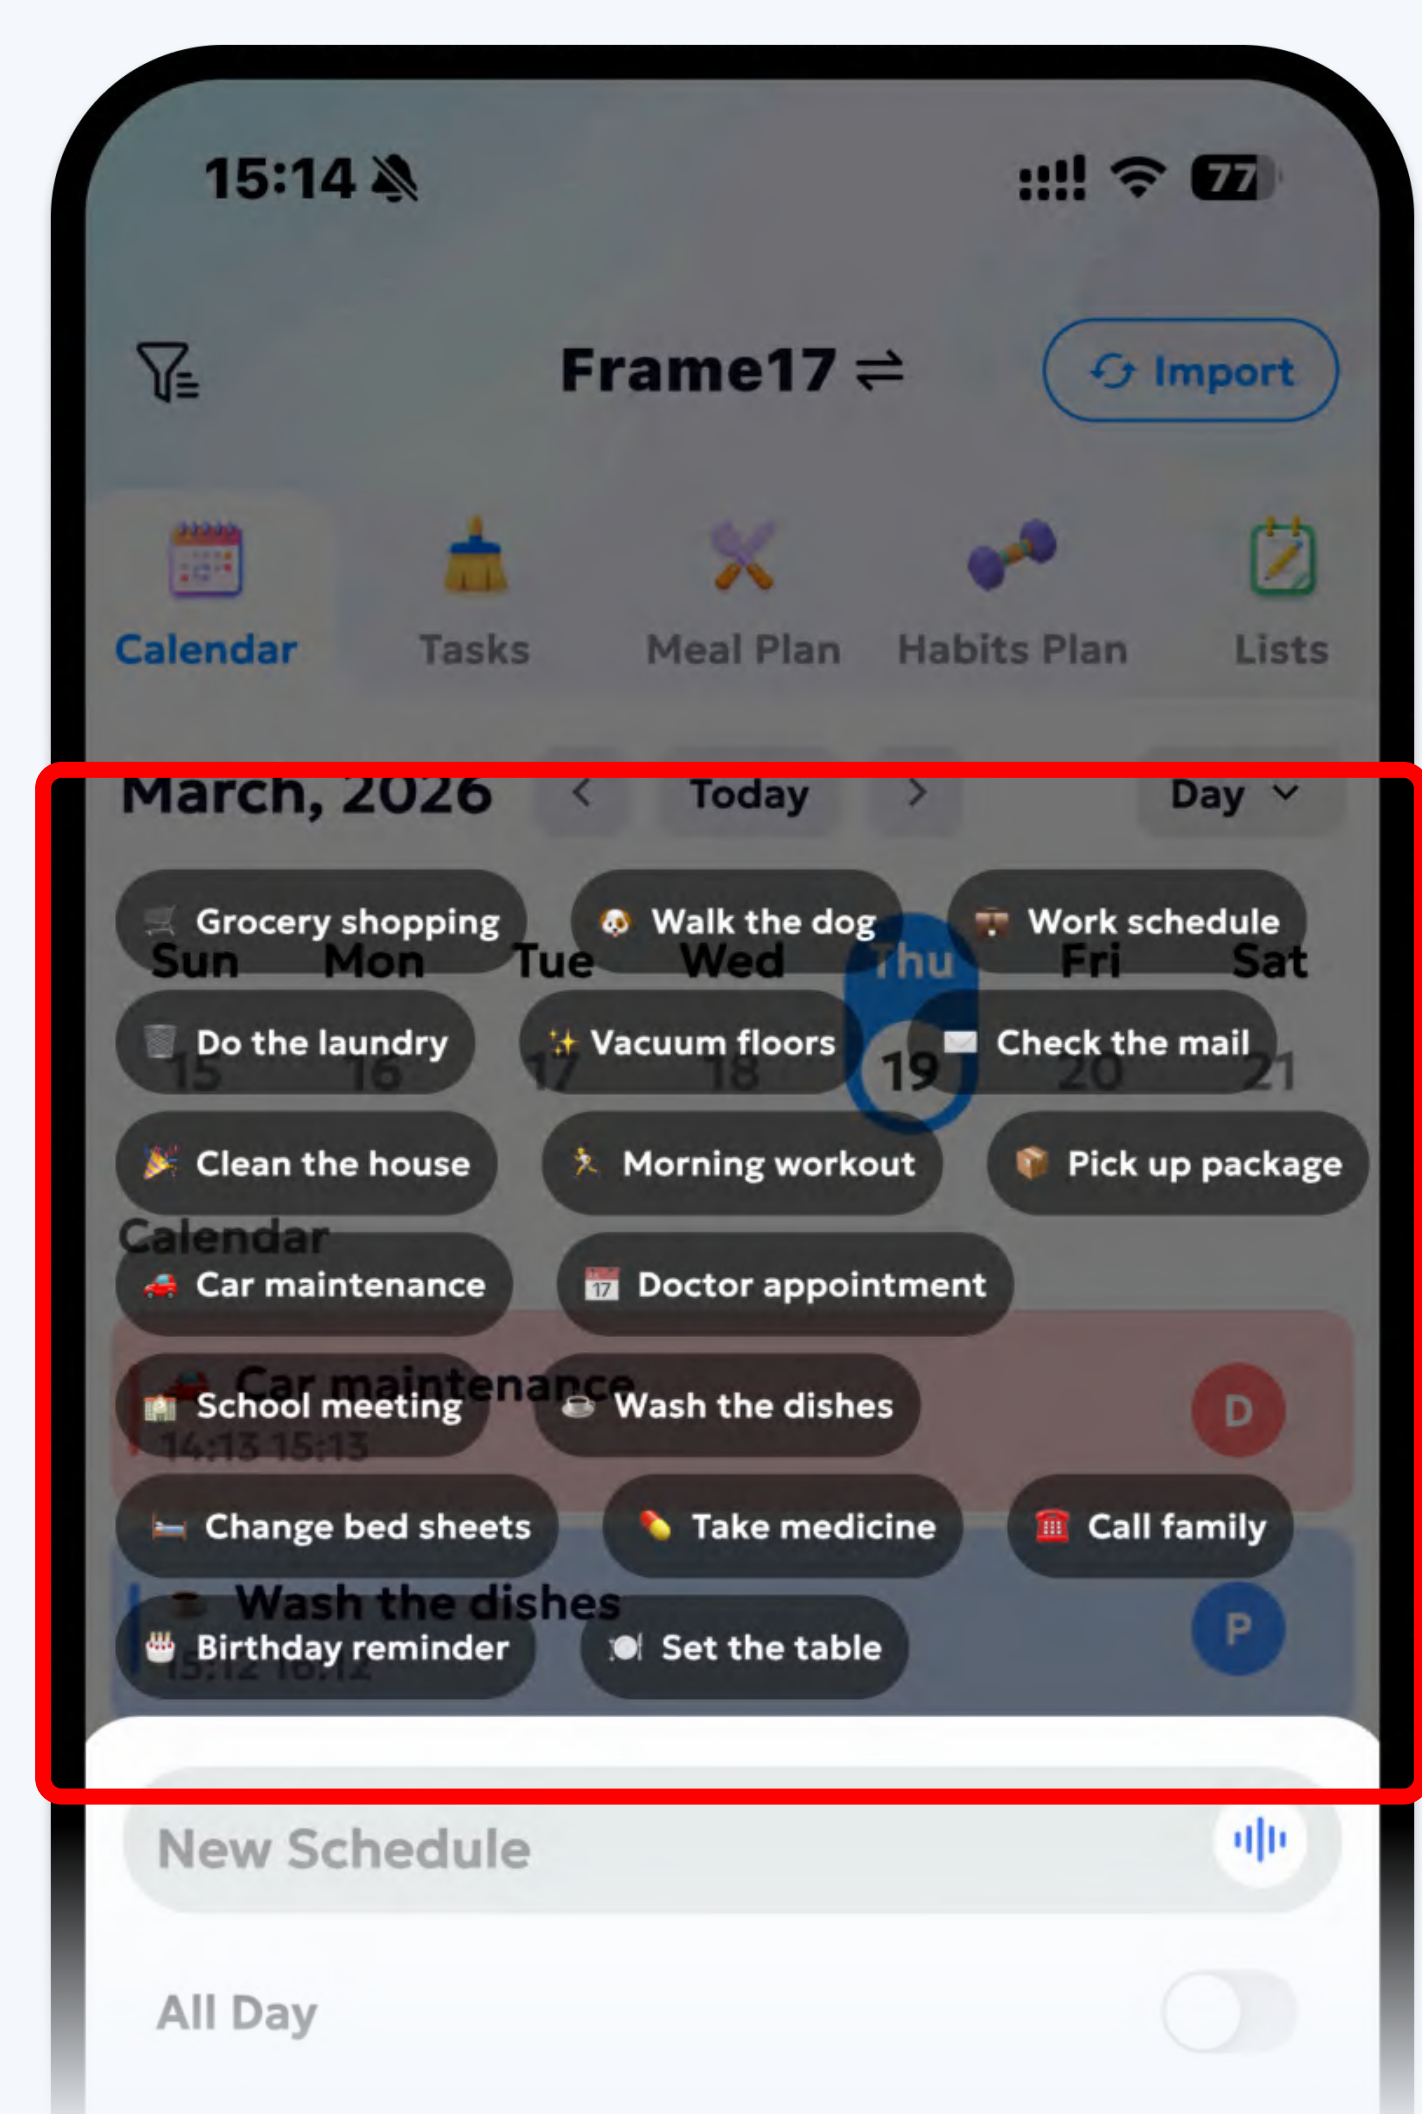

3.5 Send Blessings

Blessings can be sent to the specified device through the FotoCube APP on the mobile phone [【Refer to 2.7 How to Send Blessings】](#) .

3.6 Manage Devices

-  **Share the device pairing code**
Click to pop up the QR code and pairing code of the device. You can take a screenshot to share or copy the digital pairing code for sharing.
-  **Remote switch device mode**
Select your favorite mode for the specified device, such as Photo Frame, Family Calendar, or Art Gallery.
-  **Remote set device background music**
Send audio content to the specified device as the background music of the device.
-  **Delete the bound device**
Click to unbind the device.



4 Language Support

The FotoCube Smart Display supports multiple languages, including [English, French, German, Portuguese, Spanish, Italian, Russian, Japanese, Chinese, Polish, Romanian, Bulgarian, Hungarian, Czech, Dutch, Danish, Korean, Finnish, and Estonian](#).

The language options are regularly updated to enhance the user experience (availability may vary depending on the device's software version).

5 Warranty, Compliance, Technical Support, and Safety Information

For detailed information on warranty, hardware compliance, technical support, and safety, please refer to the information in the packaging.




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.

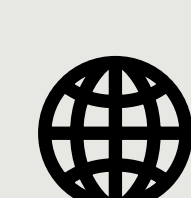 ifotocube.com

 fotocubeuserqa@gmail.com

 youtube.com/@FotoCubeFrame

