 




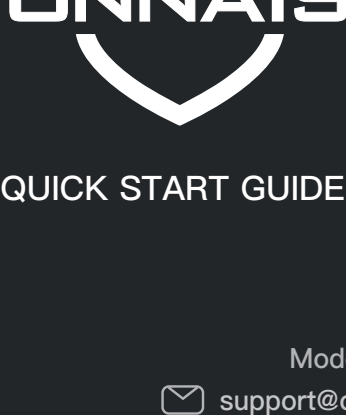


QUICK START GUIDE

Model No.: GL-001

support@onnaisafe.com

   QUICK START GUIDE

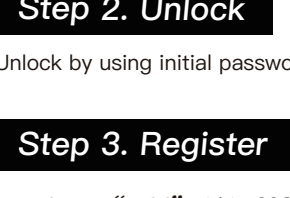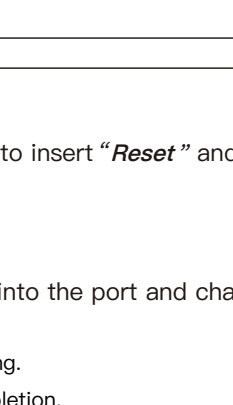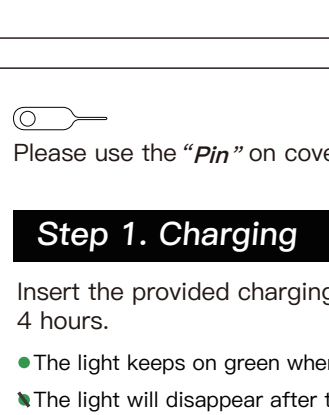

A	Key Lock
B	Fingerprint Scanner
C	Status Light
D	USB-C charging port
E	Reset Button
F	Add Button
G	Braille keyboard

1



Please use the “Pin” on cover page to insert “Reset” and “Add”.

Step 1. Charging

Insert the provided charging cable into the port and charge for 4 hours.

- The light keeps on green when charging.
- The light will disappear after the completion.
- Low battery warning: Red light flashing, beep 4 times continuously.

Step 2. Unlock

Unlock by using initial password “12341”.

Step 3. Register

- Insert “Add” within 60S after unlocking.

Note: The light will turn red, blue and green in sequence firstly. When the blue light keeps flashing, please enter the password.

2

Digital Password:

- 1.Set a new password (5–10 characters) and insert “Reset” to confirm for the first time.
- The green light with a BB sound indicates success.
- 2.Enter the same digits again and insert “Reset” to final confirm.
- The steady green light with two BB sounds indicates the password was set successfully.

Fingerprint:

- 1.Enter the newly set password to unlock again.
- 2.Insert “Add” and place your finger on the scanner 4 times during setup.
- The steady green light with two BB sounds indicates the fingerprint was set successfully.

Note: Please repeat Fingerprint 1&2 to add more fingerprints.

3

More Function Guide

Toggle silent mode:

- Using password/fingerprint to unlock, then long insert “Reset” for 3 seconds.
- The green light with a BB sound indicates success.

Restore factory settings:

- Using password/fingerprint to unlock, insert “Reset” 3 times within 60S to restore the factory settings.
- The green light with a BB sound indicates success.

Delete Fingerprints:

- 1.Using password/fingerprint to unlock, long insert “Add” for 3S.
- 2.Press your fingerprint that needs to be delete on the scanner. You can continuously delete within 60S until the automatic exit operation.
- The green light with a BB sound indicates success.

NOTE: ● Red Light ● Blue Light ● Green Light

4


Warm tips:

1.All setup operations require password/fingerprint to unlock. Please complete a single access operation within 60 seconds. If timeout, please unlock again.

2.Numeric password must be added before fingerprint.

Need more help?

Scan the QR code below for operation guiding.Contact us at support@onnaisafe.com to activate your warranty.

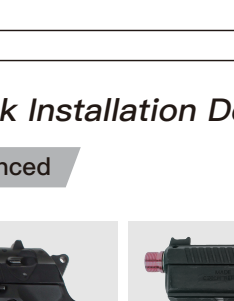

SCAN THE OPERATIONAL VIDEO

5

Questions & Answers

Have a question?

Find your answers here

Question 1: Why can't my fingerprints be recognized?

Answer: Before enrolling fingerprints, it is necessary to add password. Failure to add password will result in the inability to add fingerprints. Additionally, please ensure that your fingers are clean and free from dirt or water as it may affect fingerprint recognition. Please refer to “Add fingerprints” on Quick Start Guide (Step 3)

Question 2: What should I do if I accidentally entered the wrong number when adding a password?

Answer: Please add “Reset” and “Add” to end the operation, then begin re-adding your password from Step 2.

Question 3: Why can't I unlock it with password or fingerprint?

Answer: If this happens, please use the key to unlock the trigger lock first. Then check if the battery is dead. If it doesn't help, please contact us directly at support@onnaisafe.com for friendly service and assistance.

6

Questions & Answers

Have a question?

Find your answers here

Question 4: Can I turn off the sound?

Answer: Long press “Reset” for 3 seconds to mute. Repeat the same step to recover the operation sound.

Question 5: How long does the gun lock take for the battery to drain in standby mode?

Answer: It will take about 3-5 months in standby or 2000 unlocks to drain the battery. We recommend charging the battery every 2 months. Low battery warning: Red light flashing, beeping 4 times continuously. If the trigger lock emits this notification, please charge it!

Question 6: How should I contact seller regarding replacemhents/refunds or other technical issues?

Answer: We provide 365 days replacement warranty and lifetime technical support. Send email to support@onnaisafe.com with your order ID. We will strive to resolve your question within 24 hours.

7

Trigger Lock Installation Demonatation

Pistol Models Referenced



92FS



CZ75

MP9

P226

NOTE: ● Key Position ● Auxiliary Position

8

TP9

SP5K

AK102

MK18

9

 
M1014

M500

NOTE: “ONNAIS is compatible with most modern firearms, not limited to the ones mentioned above.”

10

QUICK START GUIDE VIDEO

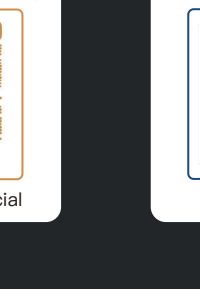

HTTPS://ONNAISAFE.COM/PAGES/INSTALLATION-GUIDE

Follow Onnais on Instagram & Facebook for faster help

@ONNAISOFFICIAL

@Onnaisofficial

@Onnais