

Calphalon®



INTELLICRISP 2&4 SLICE TOASTER



INSTRUCTION MANUAL

MODELS: TSCALTR2GM & TSCALTR4GM

© 2019 SUNBEAM PRODUCTS, INC.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3
POLARIZED PLUG	4
PRODUCT DIAGRAM	5
USAGE INSTRUCTIONS	
PREPARING YOUR INTELICRISP TOASTER	6
HOW TO USE YOUR INTELICRISP TOASTER	6
CLEANING & MAINTENANCE	7
WARRANTY	8




IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. This appliance generates heat during use. Do not touch hot surfaces. Use handles or knobs. Always protect your hands with non-slip oven mitts or similar.
3. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
4. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
5. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning. To disconnect, turn any control to OFF, then unplug power cord from outlet. Do not disconnect by pulling on cord. Always grasp the plug and pull to disconnect.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Do not attempt to replace or splice a damaged cord. Return appliance to the manufacturer (see warranty) for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors or for commercial purposes.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near wet surfaces, or heat sources such as a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance or removing a pan, containing hot oil or other hot liquids. Always protect your hands with non-slip oven mitts or similar.
13. Do not use appliance for other than intended use. Misuse can cause injuries. Intended for household countertop use only. Keep 6 inches (152 mm) clear from the wall and on all sides. Always use appliance on a dry, stable, level surface.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toasters are covered, touching or near flammable materials, including curtains, draperies, towels, walls, and the like, when in operation. Do not place any item on top of the appliance when in operation.
16. Do not attempt to dislodge food when toaster is plugged in.
17. Do not operate this toaster unattended.
18. When heating toaster pastries, follow the instructions in the manual for toaster pastries. If no instructions are provided specific to toaster pastries, always use the lightest toast color setting.
19. To reduce the risk of fire, empty the crumb tray after each use.

- 20. Do not use with a programmer, timer, wireless plug adapter or outlet that allows control remotely, or connect to a circuit that is regularly switched on and off by the utility.
- 21. Save these instructions.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

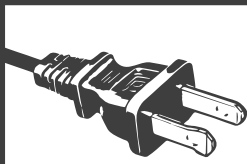

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

POWER CORD INSTRUCTIONS:

A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- b. The cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally; and


Do not pull, twist or otherwise abuse the power cord.

NOTICES

- 1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your toaster to prevent possible damage to the surface.
- 2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

PRODUCT DIAGRAM

- 1. Extra-Wide Bread Slots
- 2. Dual, Auto-Adjusting, Bread Guides
- 3. Bread Carriage Lever & Toast Lift
- 4. LED Indicator Lights - Toasting Progress
- 5. Lighter/Darker Knob - Lets you select the toast darkness.
- 6. Fully Removable Crumb Tray (Back of unit)
- 7. Bagel, Defrost & Cancel Buttons

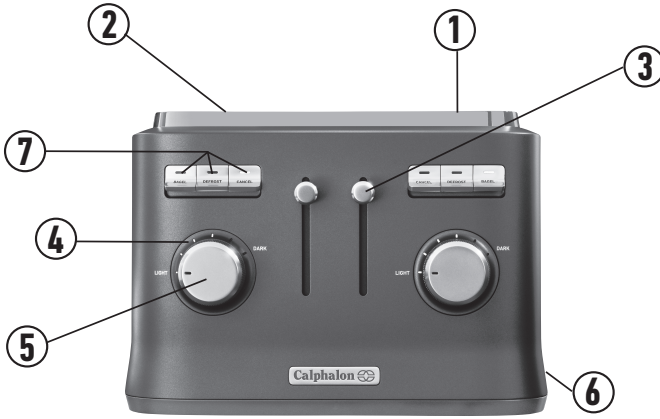

PREPARING YOUR INTELLICRISP TOASTER

- Carefully remove your toaster from its box. Remove all packaging from inside the toasting slots.
- Position your toaster on a stable, secure, dry and level work surface away from the edge. Bread may burn therefore do not use the appliance near or below combustible materials such as curtains. Never use the toaster below wall cupboards or shelves. Position toaster at least 6 inches away from wall or rear of counter.
- Plug the cord into a 120 volt, 60 Hz AC outlet. Connect the plug to a suitable power outlet and make sure that the power cord does not overhang the work surface.
- When you first use your toaster, there may be a slight odor as the heating elements warm up for the first time. This is quite normal and not a cause for concern. To remove the odor, simply operate your toaster for the first time without any bread in it.

HOW TO USE YOUR INTELLICRISP TOASTER

- Set the level of toasting using the browning control. Light/dark selector knob lets you select the toast darkness.
- Place the bread into the toasting slots.
- You can toast 2 slices of bread but only place a single slice in each slot. Press the toast lever down until it latches. The bread will be lowered into the toaster and toasting will begin. The toast lever will not latch if your toaster is not connected to a working outlet.
- The Bread Carriage Lever also allows you to check the progress of the toast without cancelling the toasting process. Just lift the Bread Carriage Lever up at any time during toasting and lower it again to resume toasting. If you find your toast is cooked to your preference, press the cancel button to stop further toasting.
- When toasting has finished, the Bread Carriage Lever will rise and the toasted bread can be removed. You can lift the Bread Carriage Lever upwards beyond its rest position to help you remove the toast.
- If the toast is not done enough it can be toasted again. Turn the browning control to a lower setting and keep a careful eye on the toast to ensure that it doesn't burn.
- Toasting can be stopped at any time by pressing the cancel button.

CAUTION: Never use a knife or any other utensil or implement to remove jammed bread. Never insert your fingers into the bread slots.

1. Switch the toaster off and unplug it.
2. Allow the toaster to completely cool down.
3. Carefully ease the bread out of the toaster being careful not to damage the heating element.

NOTE: For further details on product features and usage instructions, please visit www.calphalon.com

CLEANING & MAINTENANCE

CAUTION: DO NOT IMMERSE ANY PART OF THE TOASTER IN WATER OR ANY OTHER LIQUID.

- After use and before cleaning, unplug wall plug and wait for toaster to cool.
- Wipe the outside of toaster with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners.
- To avoid damage to toaster heating elements, do not use any pointed or sharp articles for cleaning the inside of the toaster.
- Wipe the surface on the top of the bread slots with a damp cloth and dry it with another cloth or paper towel.

CAUTION: Empty the crumb tray frequently. Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically. When the toaster has cooled down completely, tap the sides of the toaster lightly to dislodge any crumbs caught in the toaster chamber, remove the crumb tray and empty it. Wipe the tray clean with a damp cloth or place it in the top rack of your dishwasher for cleaning. Tap sides again to ensure proper disposal. Return crumb tray back into the toaster before using again.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

WARRANTY

3 YEAR LIMITED WARRANTY

Sunbeam Products, Inc. ("Calphalon") warrants that for a period of three year from the date of purchase, this product will be free from defects in material and workmanship. Calphalon, at its option, will repair or replace this product or any component of the product found to be defective during the guarantee period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive guarantee. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this guarantee. This guarantee is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain satisfaction guarantee performance. Calphalon dealers, service centers, or retail stores selling Calphalon, do not have the right to alter, modify or any way change the terms and conditions of this guarantee. This guarantee does not cover damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Calphalon or an authorized Calphalon service center. Further, the guarantee does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Calphalon's Liability? Calphalon shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory guarantee or condition. Except to the extent prohibited by applicable law, any implied guarantee or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above guarantee. Calphalon disclaims all other guarantees, conditions or representations, express, implied, statutory or otherwise. Calphalon shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party. Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied guarantee lasts, so the above limitations or exclusion may not apply to you. This guarantee gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

If you have any questions regarding the limited warranty, please call 1-800-809-7267.