

成品尺寸: 90×120mm
颜色: 黑色 C O M O Y O K 100

材质: 双胶纸
工艺: 骑马钉装, 单色双面印刷




Visit us
www.philips.com

There may be certain differences between the content of this manual and your product.
Please refer to the actual product. We reserve the right to update the product at any time without prior notice.

© 2025 AquaShield
All rights reserved
Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.
This product has been manufactured by and is sold under the responsibility of Hong Kong VerdantShield Health Technology Company Limited and Hong Kong VerdantShield Health Technology Company Limited is the warrantor in relation to this product.
Made in China

Rev A JAN 26

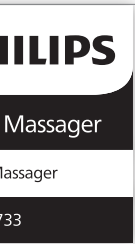

User Manual

Contents

1 Read me	1	7 Troubleshooting	12
Symbol Description	1	8 Warranty Service Guide	14
People Suitable to Use	1	Warranty and Service	14
Precautions for Use	3	Warranty Card	15

2 Product Features	4	9 Packing List	16
3 Components Overview	6		
4 How to Use	7		
Preparations Before Use	7		
Operation	8		
5 Maintenance	9		
Cleaning	9		
6 Specifications	11		

1 Read me

Please read this Manual carefully and store it properly before using the product.

Symbol Description

To avoid personal injury or property damage, please follow the instructions below.

- The following icons indicate the actions that should be followed.

People Suitable to Use

- The product should be used with caution by the following groups

People under treatment at a medical institution or in the following conditions should consult with a doctor or physical therapist before using the product.

- People with current or past foot pain.
- People prone to body numbness.
- People with respiratory disorders.
- People with osteoarthritis, arthritis, or gout.
- People with impaired skin sensation.
- People who have metal, silicone, or plastic implants in their body due to fractures or plastic surgery.

- People who have lumbar sequelae from traffic accidents or similar incidents.
 - People with implanted medical electronic instruments that are susceptible to electromagnetic interference such as cardiac pacemakers.
 - People who have been deemed to have lost the ability to sense temperature.
 - People with malignant tumors.
 - People with heart disease.
 - Women who are pregnant or breastfeeding.
 - People with sensory impairment caused by diabetes.
 - People whose lower-back injuries have not yet healed.
 - People who require quietness or are in poor health.
 - People with osteoporosis, severe fractures, sprains, muscle pain, or acute (head) pain.
 - People whose body temperature is above 38°C (degrees Celsius).
 - People experiencing acute inflammation, fatigue, chills, or blood pressure fluctuations.
 - People currently receiving treatment in medical institutions.

The following individuals/conditions are prohibited from using this product

Individuals who are medically advised against exercise or stretching activities.
Examples: thrombosis (including acute venous thrombosis), severe aneurysm, various types of dermatitis, or other skin infections. Use is prohibited as it may cause worsening of symptoms.
- Do not use the product in the following cases:
 - During periods of extreme fatigue
 - Within one hour before or after meals
 - After consuming alcohol

Precautions for Use


 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.
 - Before use, please check that the product is intact. If any damage is found, regardless of size, stop using it immediately.
 - Please clean dust off the adapter regularly. Dust accumulation on the plug may cause insulation failure due to moisture, which could eventually lead to fire.


- Do not overuse the massage function.
 - Before use, please ensure the switch is functioning properly.
 - If the product fails to work or feels abnormal, stop using it immediately and unplug the power cord.
 - The appliance is only to be used with the power supply unit provided with the appliance.
 - Unplug the power cord during power outages.
 - Always unplug the power cord when the product is not in use.
 - Immediately stop using, turn off the switch, and disconnect the power if the product emits abnormal noise, odor, excessive heat, or malfunctions.
 - Users shall not disassemble the appliance, modify internal wiring, components, or protective devices.
 - Disconnect the power supply when leaving the area.
 - Do not stand on the product itself or use it as a toy to avoid accidents.
 - Never disassemble, modify, or attempt to repair the product by yourself.
 - Do not pull the product forcefully, or pierce it with knives or sharp objects.
 - Do not use the product near flammable or explosive materials or in similar environments.
 - Unplug the power cord when the product is not going to be used for an extended period.
 - Do not drop the product or adapter, or strike them violently.
 - Do not apply excessive force to the product.
 - Do not splash water onto the product.
- Do not use the product in environments where the room temperature exceeds 35°C or under direct sunlight.
 - Do not use the product in bathrooms or high-humidity areas.
 - If the product has not been used for a long time, please check that the switch and other components are working properly before reuse.
 - All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

2 Product Features

This product relieves the soles of the feet, insteps, and ankles through air pressure massage, roller kneading, and warmth-sensing hot compress, making it suitable for various users for foot massage.

3 Components Overview

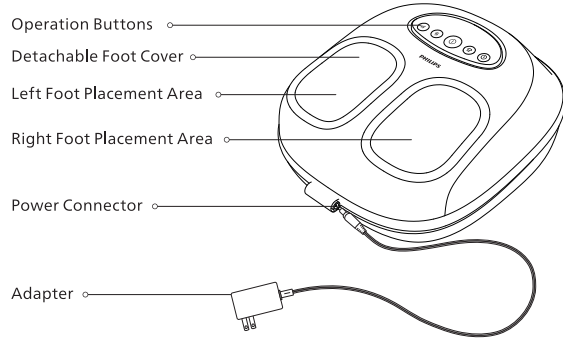

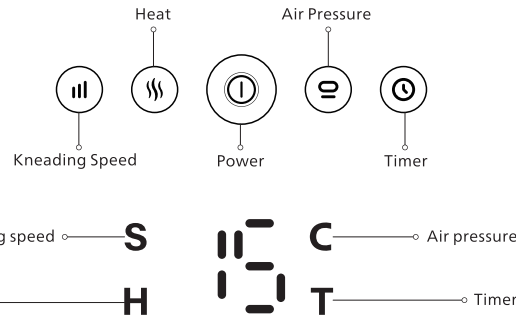

Kneading speed — S
Heat — H
Air Pressure — C
Power — I
Timer — T

4 How to Use

Preparations Before Use

- Check that the machine and all accessories are well-equipped.
- Please remove pendants and decorations before use to avoid affecting the massage area.
- Connect the product to the power adapter, plug the adapter into an electrical outlet.
- Sit comfortably and place your feet into the foot massager. Then turn on the power.

Operation

- Power** (I)
Short press the Power button to turn the product on or off.
When powered on, the indicator lights and icons turn on.
Default settings: low air pressure, low heat, low kneading speed, and a 15-minute timer.
The display shows "15" by default.
- Air Pressure** (C)
The product starts at Low Air Pressure.
Short press the Air Pressure button to cycle through: Low → High → Off.
The display shows "LO", "HI" or "OF".
- Heat** (H)
Heat starts at Low when the product is powered on.
Short press the Heat button to cycle through: Low → High → Off.
The display shows "LO", "HI" or "OF".
- Timer** (T)
Two timer options are available: 15 minutes and 30 minutes.
Short press the Timer button to switch between 15 and 30 minutes.
The selected time flashes briefly, then the display returns to the countdown.

5 Maintenance

Cleaning

⚠The product cover cannot be removed.

- Always unplug the device from the power outlet before cleaning or maintenance.
- Wipe surface dirt with a clean, dry cloth.
- For stubborn stains, use a cloth dampened with mild detergent and gently wipe the area.
- Do not allow water to enter the interior of the product.
- Allow the device to air-dry completely before next use.

6 Specifications

Product Name	Philips Foot Massager
Product Model	PPM6733
Rated Voltage	12V
Rated Power	30W
Power Adapter	Input: 100-240V~ 50/60Hz 0.8A Output: 12.0V 2.5A
Product Dimensions	380x350x180mm
Net Weight	2.55kg

6. Foot Fabric Cover Cleaning and Installation

Removal: Turn off the power, unplug the unit, and wait for it to cool down. Then fully open the zipper and remove the fabric cover.
Washing: Hand wash with mild detergent is recommended. For machine washing, place the cover in a laundry bag and use the delicate cycle.
Drying: Air dry in a cool, well-ventilated place. Do not expose to direct sunlight, tumble dry, or iron.
Installation: Once the fabric cover is completely dry, align it with the unit, smooth out the fabric, and close the zipper fully. Ensure it is flat and secure before use.

- Before maintenance, unplug the power plug from the socket or disconnect the power supply by other equivalent means, and wait for the appliance to cool down to room temperature.
- Do not store the product in direct sunlight or high-humidity areas. If not in use for an extended period, clean the device and cover it with a cloth to prevent dust buildup.
- Do not use alcohol, paint thinner, gasoline, or nail polish remover. These substances can cause cracking, discoloration, or damage to the components.
- Keep this product out of the reach of children.



7 Troubleshooting

This section lists the most common problems with this product. If you cannot find the answer to your problem, please contact the service hotline or your local authorized service center.

Fault	Causes	Solution
The product cannot work	Power button is not activated The device has just completed the massage cycle and automatically stopped	Press the power button briefly to turn on the device If you want to start another massage session, press the power button briefly again to activate the device
Heating function stops abruptly during operation	Check if the power adapter is loose The auto-timer has expired Overheat protection activated	Reinsert and secure the power plug tightly Turn the device on again to resume use Please turn off the device, unplug the power cord, and wait for it to cool down

Sound emanates from the product (rotational sound of the massage heads)	This sound is caused by the product's mechanical structure	No action required (Sound is normal)
The product emits smoke	Internal wire short circuit	Stop use immediately and contact service

After long periods of non-use, confirm the appliance functions properly before use.

Regular checks	Check for the following faults: <ul style="list-style-type: none">Whether the power adapter or the plug is hotWhether the power adapter is deeply scratched or deformed, or has a burnt smellWhether the product can work properly after being switched onWhether there are other abnormalities or faults	In the event of the above faults, stop using the device immediately and cut off the power supply to prevent accidents. Please send it to our maintenance center.
----------------	--	--

Attention:
If you can not troubleshoot or the product still does not operate normally, please contact the after-sales service personnel, do not disassemble or try to repair by yourself.

8 Warranty Service Guide

Warranty and Service

If you need information or have any questions, please visit www.philips.com/ support or contact consumer service center in your country/region. If there is no consumer service center in your country/region, please contact your local distributor.

Within two years from the date of purchase, you will receive free warranty service for any damage caused by manufacturing process problems, or any damage to components under normal use conditions confirmed by our maintenance service personnel.

Warranty service excludes frequently replaced consumables, auxiliary equipment, shipping cost and door-to-door service. Please show proof of purchase to service personnel when requesting service.

Country: The United States of America
Consumer Care: (888) 258-3660
Email: philips.massager.us@physishield-bp.com

Warranty Card

Product Model		User Name	
Sales Agency		Phone Number	
Date of Purchase		Serial Number	
Special Technical Service Center		User Address	
Item of Maintenance	Date	Service Personnel	

9 Packing List

Main Unit	1x	User Manual	1x
Power Adapter	1x	Quick Start Guide	1x

