

Lyreman

Mp3 Player

User Manual-M393



Preface

1.Thank you for purchasing this digital media player. Please read this manual thoroughly before use.

2.This manual is based on the latest product information available at the time of production. Any product modifications are subject to change without prior notice.

3.The power interface of this product is designed specifically for charging the built-in battery. Please charge the device using a USB port from a computer or a 5VDC/600mA power adapter that complies with national standards and is CCC certified. Please do not connect to other power supply equipment, otherwise it may cause irreversible consequences such as failure to charge or data and hardware damage, for which we do not assume any responsibility.

4.Do not attempt to repair or disassemble the product yourself.Unauthorized repairs will void any warranty or after-sales service.

Precautions

- 1.Keep the device away from electromagnetic environments, excessive humidity, and dusty conditions.
- 2.Do not submerge the device in water. Do not use corrosive or abrasive cleaners.
- 3.Avoid applying excessive pressure to the device.
- 4.Please do not vibrate or hit the product violently.
- 5.It is recommended to lower the volume before using headphones and gradually increase it to a comfortable level. To protect your hearing, avoid high volume (Prolonged use of high volume listening can damage the listener's hearing.If you experience tinnitus, reduce the volume or stop use) .
- 6.Keep the device out of reach of children to prevent accidents or falls.
- 7.Unplug the device after charging to avoid prolonged power connection.
- 8.Do not use headphones while driving, cycling, operating machinery, or when awareness of surrounding sounds is required.


9. Battery Charging Notes :

- ① This device uses a rechargeable polymer lithium battery.
- ② The battery must be replaced by professionals only. Improper battery replacement may result in explosion. Use only the same or equivalent battery type. Dispose of used batteries properly via professional recycling services.
- ③ Battery lifespan may vary based on usage and manufacturing date.
- ④ Do not expose the battery to direct sunlight, fire, or overheating environments.
- ⑤ Due to possible software updates, actual usage may differ slightly from this manual. Please refer to the actual product.

Main Features

1. 3.99 inch full-view IPS display
2. Full-screen touch control
3. Supports multiple audio formats, synchronized lyrics display, multiple sound effects for high-quality audio
4. Supports Audible, Gallery, Files, Calculator, Videos, Clock, Calendar, Play Store, Sound recorder, FM Radio, Apple Music, Spotify, Amazon Music, Chrome, AnTuTu Benchmark functions
5. Equipped with latest Bluetooth 5.0 module: low power consumption, high stability, long transmission distance (supports bidirectional Bluetooth)
6. Supports Wi-Fi (2.4GHz)
7. Supports various image formats and slideshow playback
8. Supports TF cards up to 128GB
9. Multi-language support
10. Built-in speaker

Button Descriptions

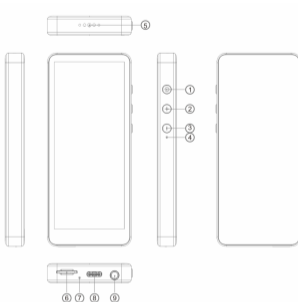

①	Volume Up	②	Volume Up
③	Volume Down	④	Reset Button
⑤	Speaker Jack	⑥	TF Card Slot
⑦	Recording Holes	⑧	USB Port
⑨	Headphone Jack		

Quick Guide

System Reset

If the device freezes, press the “RESET” button to force shutdown. Then press the power button to restart.

Navigation

- ① Tap the ◀ icon at the bottom to go back.
- ② Tap the “○” icon to return to the home screen.
- ③ Tap the “□” icon to view and close running applications.
- ④ Tap the “▽” icon to hide part of the menu.

Volume Adjustment

- ① Buttons: Press the “Volume +” or “Volume -” to adjust volume level.
- ② Touchscreen: Drag the slider on the volume bar to adjust the sound.

Notes on Battery Charging

1. Please use PC USB port or 5V/600mA power adapter to charge. Note: Different PCs have different current output capabilities of the USB interface, and the charging time will also be slightly different. It is recommended that when using the PC USB interface to charge, try to charge in the off state to speed up the charging speed. When charging, it is a normal phenomenon that the charger and the player have a certain temperature rise.
2. New battery needs to charge and discharge for several times to achieve optimum performance.
3. The player can be fully charged in about 3 hours normally. It is recommended to unplug it from the USB interface after charging, and please do not connect to the power supply for a long time.
4. The polymer lithium battery coming with can be recharged repeatedly.

5. The polymer lithium battery must be replaced by professionals, do not replace it by yourself. Note: if the battery is improperly replaced, there is a danger of explosion, and it can only be replaced with the same type or, equivalent type of battery. In order to protect the environment, give the waste battery to a professional organization for recycling.

6. Battery life may vary with usage conditions and production time.

Do not expose the battery to overheated environment such as sunlight or,fire.

Note:

-  When charging via a PC USB port, the charging time may vary slightly due to differences in current output capacity across USB ports on different PCs. For faster charging, it is recommended to charge the device while the PC is powered off.
-  Slight heating during charging is normal.

Accessories List

- Device x1
- Type-C USB Cable x1
- User Manual/Warranty Card x1
- Protective Case*1

(*Actual contents may vary based on package.)

Function Descriptions

Gallery

Tap the “Gallery” icon to view saved photos, screenshots, and media on the TF card.

FM Radio

Tap the “Radio” icon to access FM features. Tap “ < ” “ > ” to manually fine-tune the radio band to select a station. Tap “ ⏮ ” “ ⏭ ” to select the saved radio station quickly. “ ★ ” is the saved radio band. The upper right corner “ ≡ ” is the automatic search for radio bands. “ 🎧 ” can select headphones or speakers. “ ⋮ ” can record the sound of the radio band. Tap “ ⏮ ” “ ⏭ ” to play or pause the radio.

Sound Recording

Tap the “Record” icon to access:

1. Start Recording: Tap “●”
2. Pause/Resume: Tap “||” to pause the recording and click “●” again to resume recording
3. Save Recording: Tap “■”
4. File List: Tap the folder icon “≡” to view saved files

【Note】 Recording format: WAV

Calendar

In the main interface, Tap the “calendar” icon to enter. The upper left corner “▼” can choose: day/week/month/schedule corresponding to the format of the interface. Tap a date to add notes. “+” The menu offers: Create Event, Refresh, Search, Display Settings, Clear Events, Jump To Date, Settings.

File Manager

Browse internal or TF card files. Tap to open files or media, and switch to appropriate function. “” to Select, Share, Open with, Rename, Add to Favourites, Move to bin, Move to, Move to safe folder, Copy to Back up to Google Drive, File info

Bluetooth

Tap “Bluetooth” to toggle on. Tap to search and connect to available devices. Paired devices will auto-reconnect. The icon will change when connected. 

Settings:

Tap “Settings” to configure:

- 1.WLAN: Connect to Wi-Fi
- 2.Bluetooth: Connect to phones, headphones, speakers etc.
- 3.Memory: View internal storage status.

- 4.Apps & Notifications: View recent apps and permissions etc.
- 5.Battery: Check battery info and power saving options etc.
- 6.Storage : Manage internal and TF card storage
- 7.Sound and Vibration: Adjust media,alarm, and notification volume
- 8.Display:Adjust brightness ,wallpaper,sleep time,font,screen rotation etc.
- 9.Security :Set screen lock, data encryption
- 10.Google :Services and preferences
- 11.Auto Shutdown: Set timer (5/10/15/20 min ,or Never)
- 12.Schedule Power on/off : can set the automatic on/off time
- 13.System:a.Language & input; b.Gestures,c.Date & Time;d. sd card upgrade; e. Developer options,f.Reset options;
- 14.About Phone

Charging and Battery Management

1. Connect one end of the USB cable to a PC, the other to the device to charge.
2. Charging is complete when the battery icon stops flashing.

Notes:

1. New batteries require several cycles for optimal performance.
2. If unused for a long time, recharge monthly to prevent over-discharge damage.
3. Battery damage due to over-discharge or non-original chargers is not covered under warranty.

Using TF Card

1. Insert the card properly until you hear a “click.”
2. To remove, press the card inward and release to eject.

Cautions:

- 1.Insert card correctly into the slot.
- 2.Do not remove the card during operations to avoid data loss.
- 3.Avoid high temperatures or humidity.
- 4.Keep away from liquids and corrosive materials.

Product Specifications

Product Name	Mp3 Player
Model	M393
Dimensions	108*48*11mm
Display	3.99 inch 400*960
Battery	1950Ah
Charging Spec	5V/600mA input
Charging Time	Approx.3 hours
Bluetooth	V5.0

SNR	≥85dB
TF Card Support	Up to 128GB
Audio Formats	MP3、WAV、APE、FLAC、AAC
Video Formats	AVI、MKV、RMVB、MP4、MPG、MOV
Recording Format	WAV
Image Formats	JPG、BMP、GIF、PNG
Interface	Type-C
OS	Android 13
Languages	Simplified Chinese, Traditional Chinese, English (Multilingual)
Working Temp	0℃~45℃

Note: Audio specs are for reference only. Slight variation may occur due to electronic component differences. Please refer to the actual product.

FCC Notice

This device complies with part 15 of the FCC Rules.

Operation is subject to the

following two conditions: (1) This device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class

B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CE Compliance Statement

This product bears the CE mark in accordance with relevant European Directives. The CE marking serves as the manufacturer's declaration that the product satisfies the requirements of applicable EC directives.

RoHS Compliance Statement

This product complies with the Restriction of Hazardous Substances (RoHS) Directive. It has passed testing to meet all standards and specifications stipulated under RoHS regulations, with no restricted hazardous substances utilized in its manufacturing.

These certifications verify that the product complies with EU safety, health and environmental protection requirements (CE) and complies with restrictions on

specified hazardous substances (RoHS). Please properly retain all supporting compliance documents and certification certificates.

WARRANTY

Your satisfaction is our highest priority. All products are backed by a full 1-year limited warranty.

Warranty Coverage

We provide replacement service for units suffering manufacturing defects, defective raw materials or workmanship faults within the warranty period.

Warranty Exclusions

This warranty does not cover damage caused by improper use, rough handling, unauthorized alteration, normal wear and tear, or external incidents including accidental impact and natural disasters.

 
Warranty Claim Process

Send an email to support@lyreman.cn with your order number or purchase receipt. Please describe the malfunction in detail and attach related photos/videos as supporting evidence.

Manufacturer: ShenZhen Leyueye Technology Co.,Ltd

Inquire: support@lyreman.com

Address: Room 410, 4th Floor, Building A, Yaxiang Baonianjia Tower
Bantian Subdistrict, Longgang District, Shenzhen, Guangdong Province

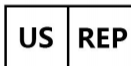

US Operations LLC
30 N Gould St Ste N, Sheridan, WY 82801, United States
usoperationsllc@outlook.com



GET RICH
8 bis rue Abel 75012 Paris, France
getrichsas@outlook.com