

SENCOR®

SSI 9400BK



EN ■ Digital steam iron

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.

General warnings

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- The iron may be used only on a stable, even surface. This also applies for putting down the iron. When putting the iron down on to the stand, check that the surface on which the stand is located is stable.
- The water tank lid must not be open when ironing.
- The iron must not be used if it has fallen on the floor, exhibits visible signs of damage or if it is leaking.
- The iron must not be left within the reach of children younger than 8 years of age, when it is connected to mains electricity or while it is cooling down.
- The iron must not be left without supervision when connected to a power socket.
- Always disconnect the iron from the power socket when leaving it without supervision, when filling up or emptying the water tank and when you have finished using it.

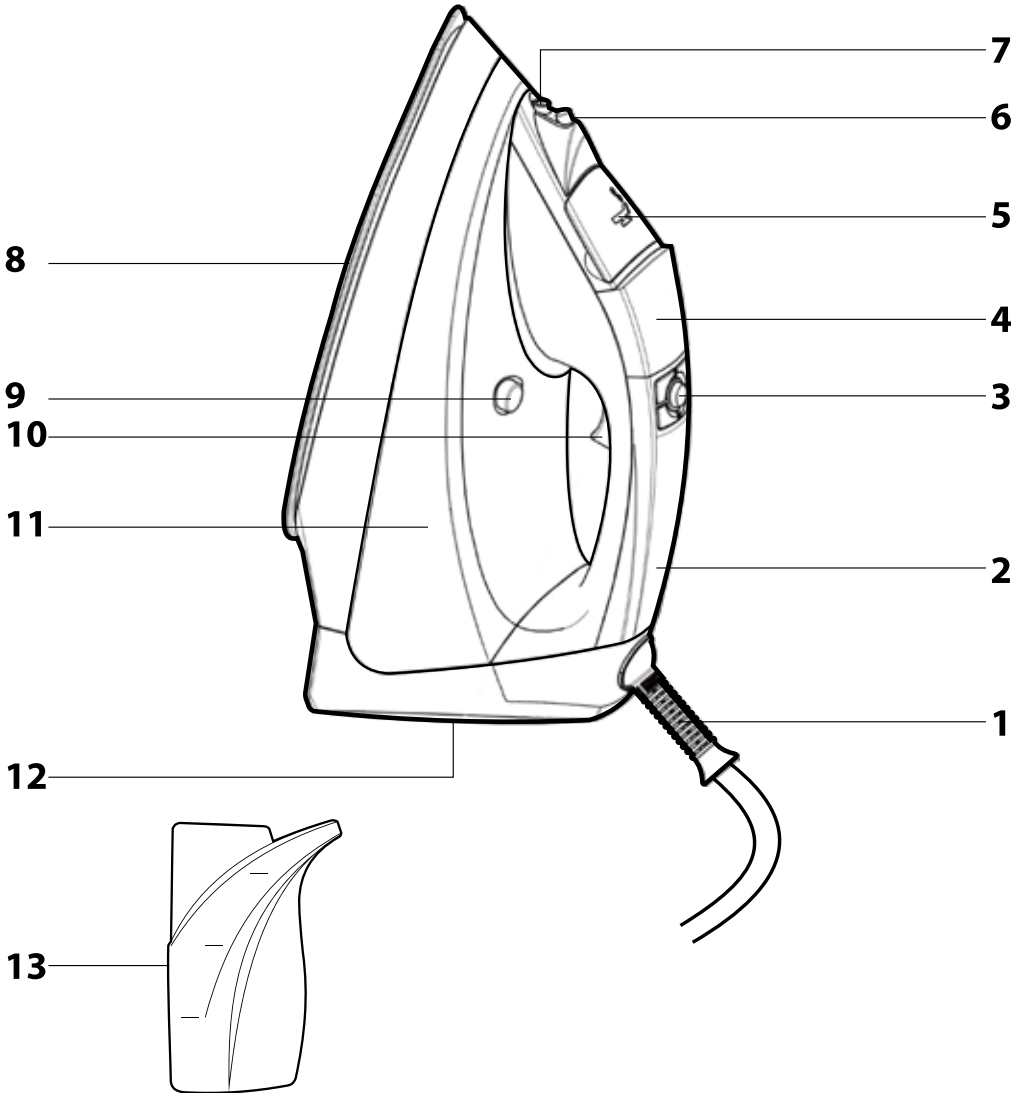 
Electrical safety

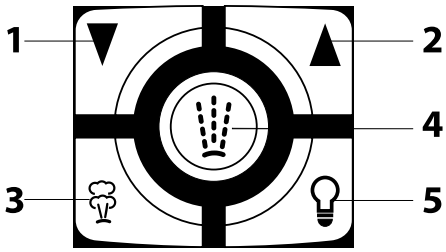 
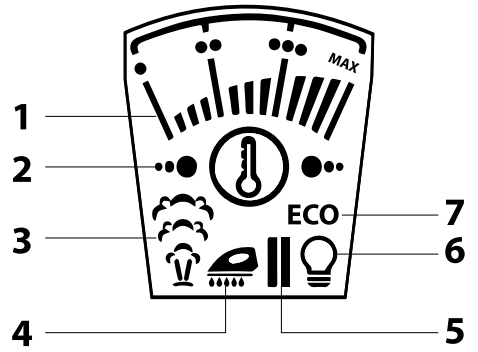 
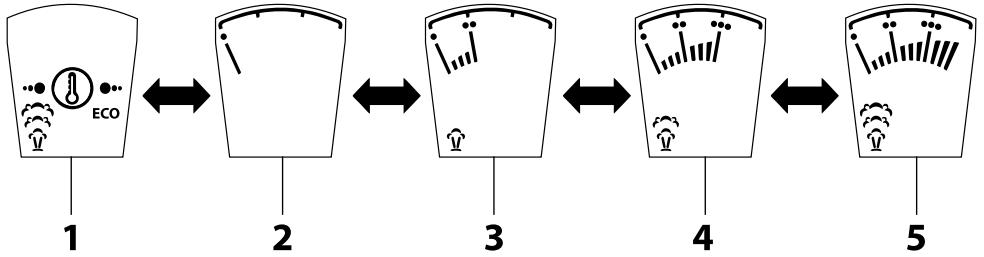 
- Before connecting this iron to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
- Connect the iron only to a properly grounded socket. Do not use an extension cord.
- Do not touch the iron with wet or damp hands when it is connected to a power socket.
- Prior to disconnecting the iron from the power socket, always turn off the iron using the appropriate button.
- To avoid potential injury by electrical shock, do not clean the iron under running water, do not spray it with water and do not submerge it in water or any other liquid.

- Ensure that the power cord does not come into contact with water, moisture or a hot surface.
- Do not place heavy items on the power cord. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface or sharp objects.
- Disconnect the iron from the power socket by gently pulling the plug of the power cord, and not the power cord itself. Otherwise, this could damage the power cord or the socket.
- Do not pull or carry the iron by the power cord.
- To avoid the danger of injury by electrical shock, do not repair the iron yourself or make any adjustments to it. Have all repairs or adjustments performed at an authorised service centre. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- Always turn off the iron and disconnect it from the power socket when you have finished using it.

Safety during use

- This iron is designed for home use. Do not use it in industrial surroundings or outdoors.
- Do not place the iron on or near an electric or gas stove or other sources of heat.
- Never iron clothing on a body.
- Do not touch the hot ironing surfaces. Otherwise, this could cause burns.
- Never fill the water tank directly underneath a water tap. Always use the supplied container for filling the water tank. Never add vinegar, descaling agents or other additives to the water tank.
- Prior to cleaning or any other handling of the iron that you have disconnected from the power socket, allow the soleplate to cool down.
- Do not wind the power cord around the iron until the soleplate has cooled down.



B**C****D**

- | | |
|---|---|
| <p>A1 Swivel power cord end
Limits twisting and tangling of the power cord.</p> <p>A2 Handle</p> <p>A3 Control panel</p> <p>A4 Digital display
High-contrast digital display ensures maximum visibility at all angles</p> <p>A5 Water tank cap</p> <p>A6 Illuminating diode
Shows all uneven areas of the fabric.</p> <p>A7 Water spraying nozzle</p> <p>A8 Anodized ironing surface</p> <p>A9 Self-Clean button for removing limescale deposits</p> <p>A10 Steam impulse button</p> <p>A11 Transparent easy-to-fill water tank (capacity 350 ml)</p> <p>A12 Stand</p> <p>A13 Water tank filling container (capacity 300 ml)</p> <p>B1 Decrease temperature button</p> <p>B2 Increase temperature button</p> | <p>B3 Steam button
Enables regulation of released steam.</p> <p>B4 Illumination</p> <p>B5 Water spraying button</p> <p>C1 Set temperature indicator</p> <p>C2 Perfect temperature mode indicator</p> <p>C3 Steam level indicator</p> <p>C4 Cleaning-required indicator</p> <p>C5 Automatic shut-off indicator</p> <p>C6 Illumination indicator</p> <p>C7 ECO mode indicator</p> <p>D1 Perfect temperature mode
Patented P-Temp technology ensures automatic temperature settings for any type of fabric</p> <p>D2 Low-temperature ironing mode, no steaming</p> <p>D3 Medium-temperature ironing mode, low steaming intensity</p> <p>D4 High-temperature ironing mode, medium steaming intensity</p> <p>D5 Maximum-temperature ironing mode, high steaming intensity</p> |
|---|---|

BEFORE FIRST USE

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use. In the event that you hand this appliance over to somebody else, make sure to also include this user's manual.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.
- Before first use, remove all packaging materials including promotion stickers and labels from the iron. Wipe the soleplate **A8** with a lightly dampened cloth before first use and then wipe dry.

PREPARATION BEFORE IRONING

- Sort the laundry according to international symbols shown on the textiles or according to the fabric types.

SYMBOL	FABRIC TYPE	SETTING THE TEMPERATURE
	Synthetics (acrylic, acetate, polyester, viscose, etc.)	• Low temperature
	Cotton with addition of other types of fibres; silk, wool, wool with addition of other types of fibres, etc.	•• Medium temperature
	Corduroy, cotton, denim and linen	••• Maximum temperature
	Fabrics, that should not be ironed	

USING THE IRON

FILLING THE WATER TANK

- Before filling the water tank **A11**, check that the iron is disconnected from the power socket.
- Fill the included container **A13** with water. The iron is intended for use with tap water. Limescale deposits may quickly form, if you live in an area with hard or very hard water. We, therefore, recommend to use distilled water to extended the lifetime of the iron.



Attention:

Never add water softeners, vinegar, starch, descaling agents, perfumes or other additives to the water.

- Place the iron into the upright position. Flip open the water tank cap **A5**. Use one hand to hold the handle **A2** and tilt the iron so that the soleplate **A8** is at an angle of approximately 45° relative to the surface on which the iron is located. Then carefully pour the water from the container **A13** through the filling opening into the water tank **A11**. When filling in this position, the water level must not exceed the maximum mark on the water tank **A11**.

- After filling the water tank **A11**, close the water tank cap **A5** and put the iron in the upright position.

TURNING ON

- Connect the power cord to a power socket. The light **A6** will be lit for a moment and a sound signal will be made.
- Press the button **B1**. A sound signal will be made and the digital display **A4** will be lit. The indicator **C2** will start flashing indicating that the iron is heating up. Once the iron's internal thermostat reaches the correct temperature, the indicator **C2** will remain permanently lit. The iron is now ready for use.

GUIDE TO SOUND SIGNALS

- 1x beep – iron is turned on, activity mode selection
- 2x beeps – the iron is heated to the temperature corresponding to the selected activity mode, iron is started off.

PERFECT TEMPERATURE FUNCTION

- The iron is equipped with Perfect temperature technology (P-Temp), which maintains the correct temperature for all types of fabrics with no settings required. The mode is shown by indicator **C2** and the iron enters this mode whenever it is turned on. Use this mode whenever you are unsure of the fabric type.
- If you wish to select this mode while ironing in another mode, select it by repeatedly pressing button **B1**. Wait until indicator **C2** is permanently lit.

IRONING WITHOUT STEAMING

- This function enables the iron to be used with or without water in the tank **A11**.
- Use button **B1** or **B2** to select mode **D2** and wait for the mode indicator **D2** is lit permanently.



Note:

When used for the first time, the iron may emit smoke, which is non-toxic. This is normal. After a short time, the iron will stop emitting smoke.

IRONING WITH STEAM



Attention:

In order to iron with steam, the water tank **A11** must be filled with water.

- If you wish to iron with steam, use button **B1** or **B2** to select mode **D3**, **D4** or **D5**. The indicator of the selected mode will start flashing, indicating that the iron is heating up. Once the iron's internal thermostat reaches the correct temperature, the indicator of the selected mode will turn off.
- Pressing button **B3** will start the continuous release of steam during ironing. Indicator **C3** on the digital display **A4** will start flashing.
- If you wish to turn off the continuous release of steam, press button **B3** again.
- We recommend to select mode **D3** or **D4** for all standard ironing tasks. Only when ironing linen fabrics, strong silk or similar fabrics is it recommended to select mode **D5**.



Note:

The iron releases steam only when you hold it in a horizontal position. You can stop the release of steam by standing the iron upright.

STEAM IMPULSE FUNCTION

- Use this function when ironing with steam is insufficient. Press the steam impulse button **A10** to generate a strong flow of steam, which can straighten out even very crumpled up textiles.
- Wait at least 3 seconds before pressing button **A10** again.
- The steam impulse function can also be used when ironing hanging textiles (e.g. curtains, garments hanging on coat hangers, etc.). Use one hand to gently tension the fabric and vertically move the iron from bottom up.
- To achieve vertical steam boosts, move the iron approximately 2 cm away from the textile and press the steam impulse button **A10**. Do not hold the steam impulse button **A10** continuously and do not consecutively use it more than 3 times.



Attention:

Do not use the steam function for silk and synthetics so as not to damage the fabric.

WATER SPRAYING FUNCTION

- The water spraying function can be used with any ironing method. It serves to moisten the fabric and effectively helps with ironing heavily crumpled textiles.
- Make sure that there is water in the water tank **A11**. To spray textiles with water using the nozzle **A7**, press button **B5**. When using the water spraying function for the first time or when you have not used the iron for a long time, it will be necessary to press button **B5** several times before the nozzle **A7** starts working correctly.

DRIP-STOP SYSTEM

- The iron is equipped with the Drip-Stop system, which automatically stops water supply when the set temperature is insufficient for generating steam and thereby prevents potential dripping of hot water out of the steam outlets.

ILLUMINATION OF IRONING SURFACE FUNCTION

- The illumination of ironing surface function can be used at any time while ironing. To turn on the illumination function, press button **B4**. The illumination symbol **C6** will be shown on the digital display **A4**. To turn off the illumination function, press button **B4** again.

**Note:**

The illumination function will automatically turn off when the iron is placed in the upright position.

ANTI-SCALE SYSTEM

- This iron is equipped with a permanent Anti-Scale filter, which limits the formation of limescale deposits inside the iron. This filter cannot be deactivated. The effectiveness of the filter depends on the hardness of the water used.

AUTOMATIC SHUT-OFF FUNCTION

- The iron will shut off automatically when left 8 minutes without movement in the upright position, or after 30 seconds without movement in the horizontal position or tilted over on to one of its sides. In all cases, the automatic shut off indicator **C5** will start flashing on the digital display **A4** and all the other symbols will turn off.
- To put the iron back into an operating state, put it into the horizontal position or press any button on the control panel **A4**.

**Attention:**

Despite the iron being equipped with an automatic shut-off function, for safety reasons, never leave it without supervision when it is connected to a mains power socket.

TURNING OFF

- When you have finished using the iron, stand it upright. Hold down button **B1** for more than 2 seconds. Disconnect the power cord from the power socket and allow the soleplate **A8** to cool down. After the soleplate **A8** has cooled down, clean the iron according to the instructions in chapter Cleaning and maintenance.

TIPS FOR QUALITY IRONING

- Do not fill the washing machine drum with too much laundry, otherwise it will be overly crumpled up. You can also avoid overly crumpled laundry by setting a lower spin drying speed.
- If you are ironing fabrics from blended materials (e.g. 40 % wool and 60 % synthetic material), set the temperature according to the material which is ironed at a lower temperature.
- If you do not know the composition of the fabric, identify the suitable temperature setting by ironing a piece of the fabric from the underside. Start by setting a low temperature and gradually increase it until the ideal temperature is achieved.
- Never iron over places that have sweat marks or other stains. The high temperature fixes the stain in place, making it difficult to remove.
- To avoid silk, wool and synthetic fabrics from being shiny after ironing, iron them from the underside.
- Some materials are easier to iron when they are lightly damp.
- Spray fine fabrics before ironing them or iron them under a lightly dampened wiping cloth.

CLEANING AND MAINTENANCE**CLEANING AFTER EVERY USE**

- Before cleaning, turn off the iron according to the instructions in chapter Using the iron. The iron must be disconnected from the power socket and cooled down. Open the water tank cap **A5** and then empty the remaining contents of the water tank **A11** over a sink. Close the cap **A5** again.
- In the event that the soleplate **A8** or the surface of the iron is dirty, wipe with a lightly dampened cloth and then wipe dry.
- For cleaning, do not use steel wool, solvents or cleaning products with an abrasive effect, etc. to prevent damaging the surface being cleaned. Do not submerge the iron in water when cleaning it.

REMOVING LIMESCALE DEPOSITS

- For the removal of limescale deposits from the inner part of the soleplate **A8**, the iron is equipped with a Self-Clean function. Despite the fact that the iron will self determine the need to remove limescale deposits, which is indicated by symbol **C4** on the control panel **A4**, use this function regularly at least once every 14 days.
- Make sure that the iron is turned off using button **B1** and that it is disconnected from the power socket. Fill the water tank **A11** with clean water up to the maximum water mark. Connect the iron to a power socket and using button **B2**, select mode **D5**. Wait until indicator light **D5** stops flashing and is permanently lit.
- Disconnect the iron from the power socket and hold it in a horizontal position at least 15 cm above a sink. Press the Self-Clean button **A9** and hold it down. Steam and hot water will start to be released from the soleplate **A8**. At the same time also limescale deposits from the inner parts of the soleplate **A8** will be removed. Tilt the iron from side to side several times until the water tank **A11** is completely empty. After emptying it out, release button **A9**. You may repeat this process once more if necessary.
- In order to dry out the soleplate **A8**, connect the iron to a power socket and allow it to heat up once more to the maximum temperature by selecting mode **D5**. Iron over a piece of unneeded fabric to remove water stains that formed on the soleplate **A8** during the cleaning process. Use button **B1** to turn off the iron, disconnect it from the power socket and allow it to cool down.

STORAGE

After you have finished ironing, pour out any unused water from the water tank **A11** (careful, it may be hot), or allow it to evaporate if necessary and allow the iron to cool down. Turn off the iron using button **B1**. Wind the power cord around the stand **A12**, making sure that the power cord is not touching the soleplate **A8** and stand the iron on the stand **A12**.

TECHNICAL SPECIFICATIONS

Rated voltage	220–240 V
Rated frequency	50–60 Hz
Rated power input	2 600–3 100 W
Continuous steam output	up to 50 g/min
Length of the power cord	3 m
Dimensions (length × width × height)	310 × 118 × 135 mm
Weight (without water)	approx. 1.3 kg

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.