

Wall Mounted Remote Control



Safety Information

⚠ Warning!

- **ONLY** permit children to use this device under close and constant supervision.
- **DO NOT** pair any button of this device with more than one gate opener circuit board.
- **ONLY** use this remote control when the gate can be clearly seen and there are no obstructions to its path of travel.
- Cease use **IMMEDIATELY** if any irregularity occurs during use. Recalibrate, repair, or replace problematic parts before further use.

Specifications

Dimensions	3.9×1.5×0.8 in.	10×3.8×2 cm
Battery Type	1 × CR2032 Lithium	
Signal Freq.	433.92 MHz	
Signal Range	98 ft.	30 m
Net Weight	1.3 oz.	36 g

Package List

- 1 × Wall-Mount Remote Control
- 4 × Screws
- 2 × Wall Plugs

Installation

1. Remove the cover of the remote. Insert a CR2302 battery (not included) and replace the cover.
2. Choose a suitable location for the remote control unit, make sure it's within (98 ft.) 30 m of the gate opener. You can either measure and mark the position for the mounting screw and drill a pilot hole or apply M3 glue (not included) to the back of the unit and attach it to your preferred location.
3. If you will be using screws to attach the remote control unit to the wall, insert a wall plug into the prepared hole.
4. Place the remote control unit on top of the wall plug, aligning the ring on top of the unit with the plug. Secure the remote by screwing one of the provided screws through the ring and into the wall plug.

Pairing

For most CO-Z gate openers:

1. Access the gate opener circuit board.
2. Press the button labeled **AN** on the board.
3. Press any unpaired button on this remote control twice.
4. The light labeled **LEARN** should flash to indicate the button pairing was successful.

To pair additional buttons, repeat the process above. Never pair a single button to more than one device at the same time.

For use with other gate openers, see their separate manuals for details on remote pairing.

Operation

Normally, the buttons cycle through the four commands OPEN→STOP→CLOSE→STOP.

1. Press once to begin opening the gate.
2. Press a second time to stop the gate.
3. Press a third time to close the gate.
4. Press a fourth time to stop the gate.

At a gate's magnetic limits, STOP commands will be skipped. Instead, a closed gate will begin opening immediately. An open gate will begin closing.

On some models, the fourth button may activate its pedestrian mode, which only partially opens the gate to allow foot traffic.

Resetting

For most CO-Z gate openers:

1. Access the gate opener circuit board.
2. Hold the button labeled **AN**.
3. The light labeled **LEARN** should come on and then go out to indicate that all paired buttons have been deleted from memory.

When using other gate openers, see their separate manuals for details on resetting system memory.

Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at contact@b2csupportpro.com and we'll resolve your issue ASAP!

For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.

