


INSTRUCTION MANUAL

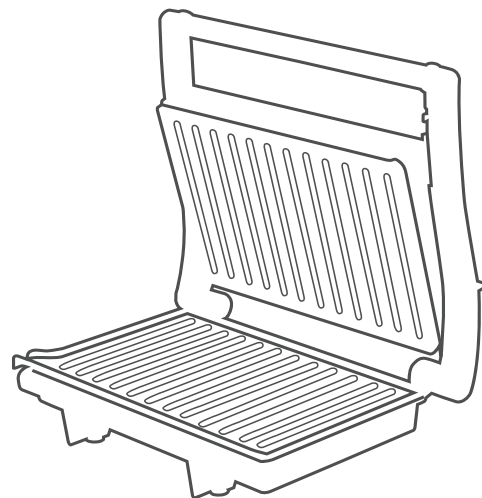

PANINI PRESS

SL-106

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

- **READ ALL INSTRUCTIONS**
- Use only on AC 120Volt, 60 Hz. Use only for household.
- Do not touch hot surfaces. Use handles.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- This appliance may be used by children of the age of 8 years or more and by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they are being supervised or have been instructed with regard to the safe use of the appliance and have understood the potential risks.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Electric Grill yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the Electric Grill is used.
- The use of accessory attachments not recommended by the manufac turer may result in fire, electrical shock, or risk of injury to persons.
- Do not use outdoors or for commercial purposes.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Unplug the unit when finished using.
- Do not intend to operate by means of an external timer or separate remote-control system.
- Extreme caution must be exercised when moving an appliance.

Provide a stable location for the appliance.

RISK OF ELECTRIC SHOCK!

- The appliance should only be connected to correctly installed and earthed mains power sockets. Ensure that the rating for your local power supply corresponds with the details on the rating plate of the appliance.
- Arrange for customer service to repair or replace connecting cables and/or appliances that are not functioning properly or have been damaged.
- Do not expose the appliance to rain, and never use it in a humid or wet environment.
- Ensure that the power cable never becomes wet or moist during use.
- NEVER immerse the appliance in water or other liquids! This would bring about the risk of a potentially fatal electric shock upon the next use of the appliance should moisture be present in the voltage conducting elements.
- Always take hold of the plug when handling the power cable. Do not pull on the cable itself and never touch the power cable with wet hands, this could result in either a short circuit or an electric shoc.
- Do not place the appliance itself, furniture items or similar objects on the power cable, and take steps to ensure it cannot become jammed or trapped in any way.
- Do not open the appliance housing or attempt to repair or modify the appliance. If the housing is opened or improper modifications are made, you run the risk of receiving a potentially fatal electric shock and the warranty will be void.
- Protect the appliance from drips or splashes of water. Thus, do not place any vessels containing liquid (e.g. flower vases) on or near the appliance.
- Always pull the plug out of the power socket during each interruption, as well as after use and before any cleaning.

RISK OF BURNS!

Caution! Hot surface!

- The surfaces of the appliance become extremely hot during use. Touch the appliance using only the handle.


CAUTION! MATERIAL DAMAGE!

- Do not use an external timer switch or a separate remote control system to operate the appliance.
- Never leave the appliance unattended during operation.
- Ensure that the appliance, the power cable and the plug do not come into contact with heat sources such as hotplates or naked flames.
- Do not use charcoal or similar fuels to operate the appliance!
- To protect the non-stick coating, do not use metallic tools such as knives, forks, etc. Should the non-stick coating become damaged, stop using the appliance.
- Only operate the appliance with the original accessories supplied.

TIPS AND TRICKS

- To make meat more tender and speed up the grilling process, you can marinate it beforehand. An ideal basis for this can be sour cream, red wine, vinegar, buttermilk or fresh papaya or pineapple juice, for example. Add herbs and spices according to taste. Do not add salt as this can draw water out of the meat and make it dry. Place the meat in the marinade so that it is completely covered and close the container. Ideally, leave it overnight.
- The hotplates have a nonstick coating, therefore extra fat is not necessary. If you still wish to use fat, please ensure that the fat/oil is suitable for grill-roasting, e.g. rapeseed oil.
- If you are not sure whether the grilled food is cooked all the way through, you can use a commercially available meat thermometer.

PARTS IDENTIFICATION

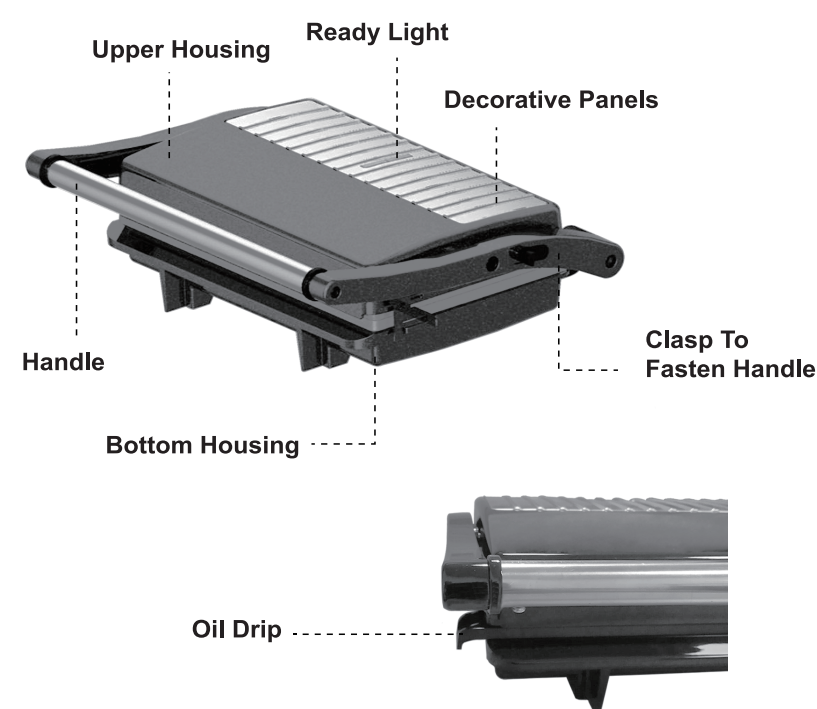

PRODUCT SPECIFICATION

- Voltage: AC 120V
- Frequency: 60Hz
- Power: 1000W

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean the Cooking Plates by wiping a sponge or cloth dampened in warm water.
- **DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONT THE COOKING SURFACES.**
- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

NOTICE: When your Electric Grill is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

- Prepare a saucer and put it under the Oil Drip to collect waste oilbefore use.
- Close the Electric Grill and plug it into the wall outlet, you will notice that the ready light will come on, indicating that the Electric Grill has begun preheating.
- It will take approximately 3 minutes to reach baking temperature, the ready light will goes off.
- Open the Electric Grill, put the sandwich, meat or other foods on the bottom cooking plate.
- Close the Electric Grill. The ready light will go on again.
- Cook for about 3 to 8 minutes, the ready light goes off again, or until golden brown, adjusting the time to suit your own individual taste.
- When the foods is cooked use the handle to open the lid. Remove the food with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
- Once you are finished cooking, disconnect the plug from the wall outlet and leave unit open to cool.

CLEANING AND CARE

- Always unplug the Electric Grill and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble Electric Grill for cleaning. Never immerse the Electric Grill in water or place in dishwasher.
- Wipe cooking plates with a soft to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive plastic scouring pad or place wet kitchen paper over the grill to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Do not use metal utensils to remove your foods, they can damage the non-stick surface.
- Wipe the outside of the Electric Grill with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.
- Rinse and dry thoroughly with a clean, soft cloth and replace.

STORAGE

- Always unplug the Electric Grill before storage.
- Always make sure the Electric Grill is cool and dry before string.
- Store the cleaned appliance in a dry place.
- The power cord can be wrapped around the bottom of base for storing.



To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these marked with

crossed out items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

If you need assistance with the product, please contact us immediately and we will resolve your issues to your satisfaction.
Sales company : SUSTEAS
E-mail : shipengmaoyi@outlook.com