 


Model : HBTF1045R3

USE AND CARE GUIDE

Remote Control

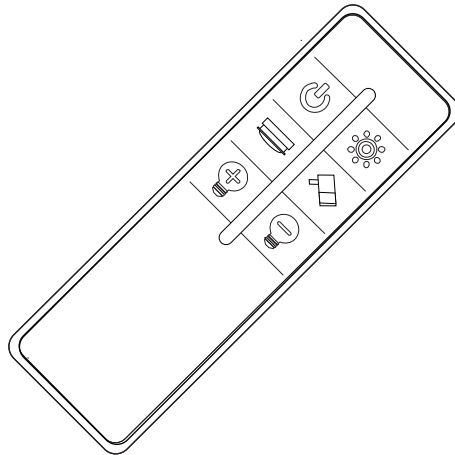


Installation (continued)

Securing the remote wall mount

OPTION 1

 - ☐ Place the remote mount (B) on the desired location of your wall and mark the mounting holes with a pencil.
- ☐ Use a 0.25 inch drill bit to drill the two holes into your wall.
- ☐ Tap in a wall anchor (DD) into each hole.
- ☐ Align the remote mount (B) over the holes and secure the remote mount (B) in place using the anchor screws (EE).

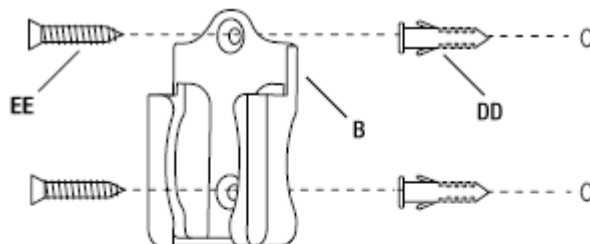


OPTION 2



NOTE: Make sure the wall is clean when before you adhere the remote mount (B).

 - ☐ Use double-sided adhesive (BB) and stick the remote mount (B) at the desired location.

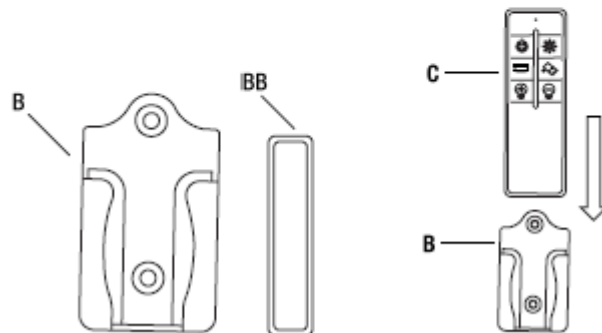

Operation



NOTE: The fixture has with an internal dimmer. Do not connect the fixture to an external dimmer. Doing so may prevent the fixture from operating as intended.



NOTE: The light switch must be on in order to control the light fixture with the remote control.

- ☐ Turn on power at the circuit breaker or fuse box.
- ☐ Turn the light switch on to activate the fixture.

Remote Control



NOTE: The light switch must be on in order to control the light fixture with the remote control.



NOTE: Requires two AAA batteries (not included).



NOTE: The remote control can pair 1 to 4 lights, but each fixture needs to be paired individually (power the fixture on, pair it, disconnect it, and repeat for each additional fixture).

BUTTON FUNCTIONS



Power ON/OFF.

OFF: Turns off all the lights.

Other remote buttons cannot be used in the off state.

ON: Turns the lights on and returns it to the last setting used.



Turn the flush mount and track heads on at the same time at 100% brightness.



Turn only the flush mount on (100% brightness).



 
Turn only the track heads on (100% brightness).



Dim the light up (brighten).



Dim the light down.

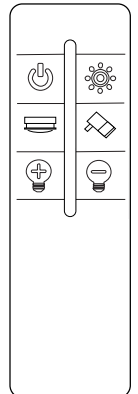

Pairing Method

PAIRING (If the buttons do not respond, try re-pairing):

If the fixture is not paired with the remote out of the box, follow these steps:

1. Turn the switch off 2 seconds then turn the light switch back on.
2. Press and hold the  on the remote for 5 seconds.
3. The fixture will flash three times.
4. The fixture is now paired with the remote.

UNPAIRING (Will disconnect remote with the light):

1. Turn the switch off 2 seconds then turn the light switch back on.
2. Press and hold the  &  on the remote for 10 seconds.
3. The fixture will flash six times.
4. The fixture is now unpaired from the remote

OPERATING DISTANCE:

- ☐ The remote can function effectively up to 6-9 meters (20-30 feet) without any obstacles between the remote and the fixture.

If you lose the remote, you can still use the light at its default settings.

1. Turn off the switch connected to the fixture.
2. Keep the fixture off for 90 seconds.
3. Turn the light switch back on.
4. Both track and flush mount lights will come on together.
5. Now can now used the light switch to control the fixture until you find the remote.

Care and Cleaning

EXTERIOR MAINTENANCE

- ☐ Use a dry or slightly dampened clean cloth and wipe the surface of the fixture



NOTE: Do not use any cleaners with chemicals, solvents, or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

INTERIOR MAINTENANCE

- ☐ Disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.
- ☐ Use a dry or slightly dampened clean cloth to wipe the interior surface of the fixture.

FCC Notice



WARNING: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC responsible party: Cordelia Lighting
Address: 20101 S. Santa Fe Avenue
East Rancho Dominguez, CA 90221
Phone: (800) 345-0542

NOTICE: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference can be determined by turning the equipment off and on, the user is encouraged to try to correct the interface by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the device and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Troubleshooting

Problem	Solution
☐ The remote control is not responding.	☐ Change the batteries with new batteries.
	☐ Try re-pairing the remote (instructions on page 2)

Battery Instructions

Battery Installation

- ☐ Open the battery compartment on the back of your remote.
- ☐ Insert the AAA batteries. Make sure to place the positive ends and the negative ends correctly.
- ☐ Place the cover back on the battery compartment.

Battery Disposal

- ☐ Recycle old batteries with battery recyclers or check with your local or state solid waste authority.

Battery Warning

- ☐ Do not mix old and new batteries.
- ☐ Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.