

20W rechargeable megaphone



visit our website



SCAN ME
serenelifehome.com

Unique Elements:

- 400-Yard Long-Range Audio Projection
- Weather-Resistant for Indoor & Outdoor Use

Features:

- 20W Loudspeaker Power
- Compact and Portable Design
- Built-in Mic, Siren and Music Modes for Crowd Control
- Adjustable Volume Control
- USB-C Rechargeable for Fast Charging
- Lightweight, Ergonomic Handheld Design
- Power Saving OFF Switch
- Fixed Shoulder/Hand Strap
- Ideal for Outdoor Use and Public Speaking
- Suitable for School Events, Rallies and Crowd Control

What's in the Box

- Rechargeable Megaphone
- USB-C Charging Cable

Technical Specs

- Construction Materials: Durable ABS
- Power / Wattage: 20W
- Voltage: 3.7V (Battery-operated)
- Battery Type: Built-in 18650 Li-ion, 1800mAh
- Charging Time: 3-4 hours
- Charging Voltage: DC 5V 1A
- Service Time: 5-6 hours continuous
- Charging Type: USB-C
- Multiple Modes: Voice, Siren, Music
- Max Sound Output: 95-105 dB
- Response: 200-15,000 Hz
- Range: Up to 400 Yards
- Item Weight: 1.0 lbs
- Product Dimensions (L x W x H): 8.66 x 5.43 x 5.43 Inches

CALIFORNIA PROP 65 WARNING

WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov



questions? comments?

We are here to help!

Phone: 1.718.535.1800

serenelifehome.com/contact-us

IMPORTANT SAFETY WARNING

Do not point the megaphone horn directly at human or animal ears during operation.
Exposure to high sound levels may cause hearing damage.

OPERATING INSTRUCTIONS

How to Use the Megaphone

Press the ON/OFF button to turn on the megaphone. Speak clearly into the sound pickup port located on the top of the megaphone to amplify your voice.

How to Activate the Siren

After turning on the megaphone, press the ALARM button to activate the siren. Adjust the volume as needed.

How to Play Music

After turning on the megaphone, press the MUSIC button to play music. Adjust the volume as needed.

How to Adjust the Volume

Use the volume slider to adjust the sound level. Slide the control to the right to increase the volume and to the left to decrease the volume.

CLEANING, MAINTENANCE, AND STORAGE

Before cleaning, turn the unit OFF. Wipe the exterior with a soft, dry cloth.
Do not use water, solvents, or abrasive cleaners.

To maintain optimal performance, recharge the battery regularly and inspect the charging cable and charging port for damage before use. Do not attempt to disassemble the unit.

When not in use, store the megaphone in a cool, dry place away from direct sunlight and excessive heat. Keep the unit clean and dry during storage.

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

