



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

HEATFLUX

2kW Upright Fan Heater with Remote Control



Model No.

**825200
825201**

User Manual

Please read and keep these instructions for future use.
This product is only suitable for well insulated spaces or occasional use.



HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING:** Disconnect from the mains supply before carrying out any routine maintenance.
- **WARNING:** Misuse of the appliance could cause personal injury.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.



HEALTH AND SAFETY

- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance near or below combustible material such as curtains.
- This appliance is not intended to be operated on an extension cable or by means of an external timer or separate remote control system.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- **WARNING:** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



HEALTH AND SAFETY

MAINS CABLE

- Do not let the mains cable run across an open space e.g. between a low socket and a table.
- Do not place the extension cord in a position where it can be pulled by children or animals or tripped over.
- The mains cable should reach from the socket to the product without straining the connections.

OTHER SAFETY CONSIDERATIONS

- Only use for its intended purpose.
- It is strictly forbidden to insert foreign objects such as wooden and metal sticks into the air inlet and outlet.
- Do not spray insecticides or flammable sprays around the product.

PERSONAL SAFETY

- Do watch your appliance during use.
- Do not touch the mains cable or plug with wet hands.
- Do not pull the mains cable when unplugging.
- Keep hands, hair and clothing away from the appliance while in operation, to prevent personal injury and/or damage to the appliance.
- In the unlikely event technical

problems develop, stop using the product immediately and seek advice from the manufacturer.

- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- It is strictly forbidden to insert foreign objects such as wooden and metal sticks into the air inlet and outlet.
- Do not spray insecticides or flammable sprays around the product.
- **WARNING:** Do not touch hot parts during or after use, use the handle.
- **WARNING:** Do not wrap the cable around the main body of the appliance during or after use.

LOCATION

- To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the appliance.
- Do not cover or place any objects on the heater.
- The heater must not be located directly below a socket outlet.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.



HEALTH AND SAFETY



**CAUTION!
HOT
SURFACE!**

**PLEASE BE AWARE OF HOT SURFACES.
HANDLE WITH CARE.**

Treating scalds

- Run cold water over the affected area immediately.
- Do not stop to remove clothing.
- Seek medical advice quickly.





ELECTRICAL DETAILS

 
- Make sure that the power voltage used is consistent with the voltage specified on the rating plate of the device.
- Should the fuse in the mains plug require changing, replace it with one of the same rating as originally fitted.
- **WARNING: This appliance must be earthed.**

Item	Symbol	0.00	Unit
Heat output			
Nominal heat output	P _{nom}	1.800–2.000	kW
Minimum heat output (indicative)	P _{min}	1.000	kW
Maximum continuous heat output	P _{max,c}	2.000	kW
Power consumption			
In off mode	P _o	0.00	W
In standby mode	P _{sm}	0.25	W
In idle mode	P _{idle}	0.00	W
In network standby	P _{nsm}	0.00	W
Standby mode with display information or status		No	
Seasonal space heating energy efficiency in active mode	n _{S,on}	91.5	%

Item	Unit
Type of heat output/room temperature control (select one)	
Single stage heat output and no room temperature control	No
Two or more manual stages, no room temperature control	No
With mechanic thermostat room temperature control	No
With with electronic room temperature control	Yes
Electronic room temperature control plus day timer	No
Electronic room temperature control plus week timer	No
Other control options (multiple selections possible)	
Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
Distance control option	No
Adaptive start control	No
Working time limitation	Yes
Black bulb sensor	No
Self-learning functionality	No
Control accuracy	No





PRODUCT OVERVIEW

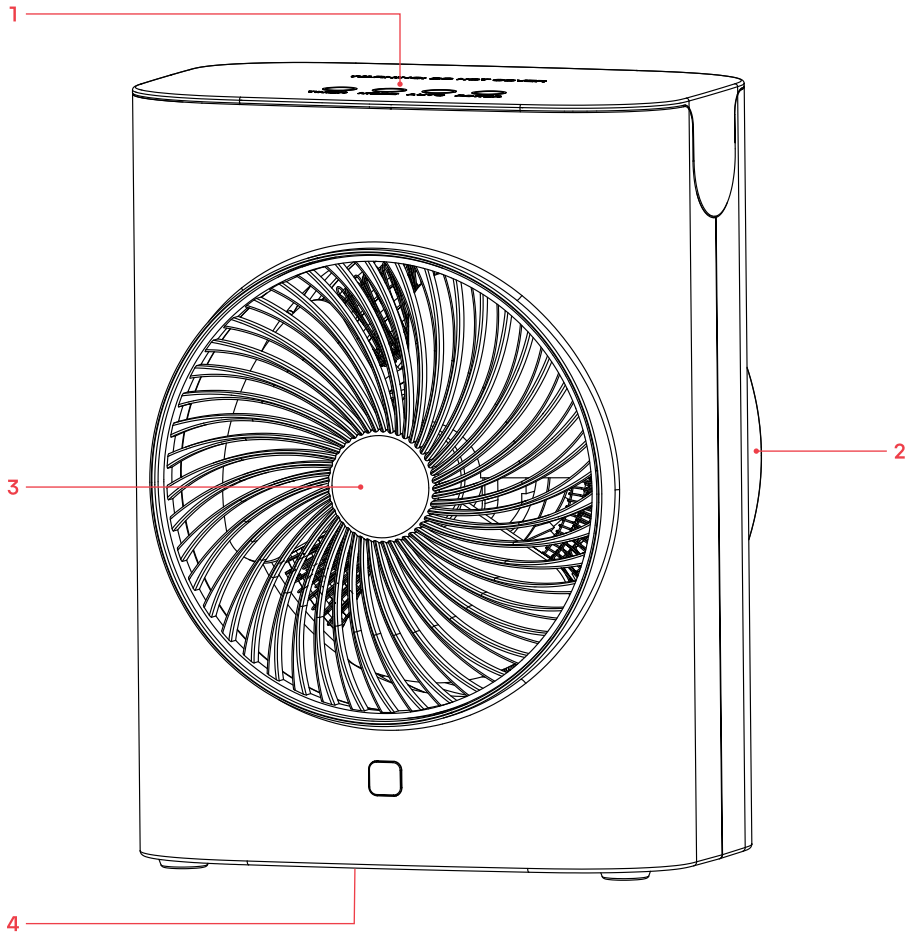

1. Control Panel and Display
2. Air Inlet
3. Heat Outlet
4. Overturn Protection Switch (underneath heater)



  PRODUCT OVERVIEW

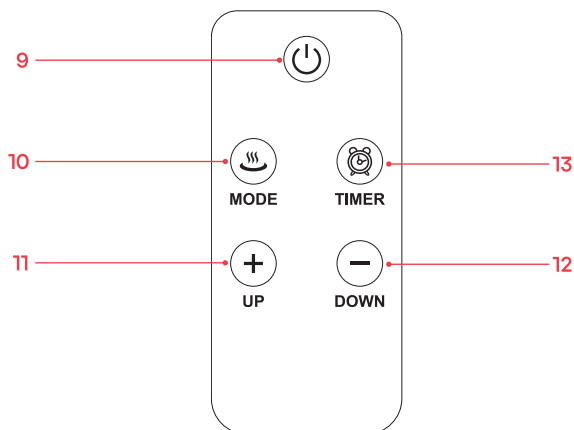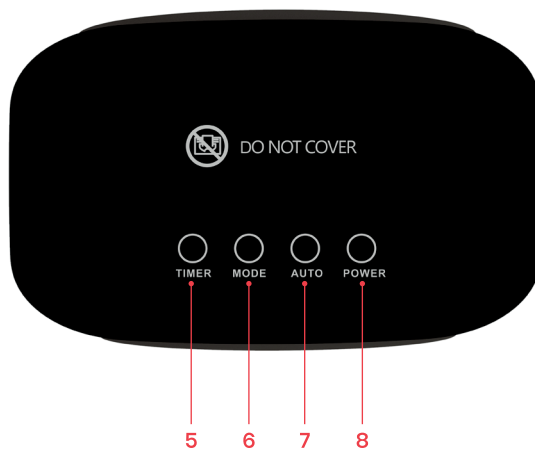

- | | |
|---|---|
| 5. Timer Button and Light | 10. Remote Control Heat Mode Button and Display |
| 6. Heat Mode Button and Light | 11. Remote Control Increase Button |
| 7. Auto Mode Button and Light | 12. Remote Control Decrease Button |
| 8. Power (On/Off) Button and Light | 13. Remote Control Timer Button |
| 9. Remote Control Power (On/Off) Button | |



 


BEFORE FIRST USE

- Remove all packaging and stand the heater on a firm, level surface.
- Ensure that textiles, curtains, or any other flammable material is a minimum distance of 1 metre from the heater.

USING THE REMOTE CONTROL

- The remote control works with 1 button cell battery CR2025, 3 volts. Used batteries should be disposed of safely.
- Open the battery cover at the bottom of the remote control,
- Check the polarity of the battery and install it into the battery cover.
- Refit the battery cover on to the remote control.

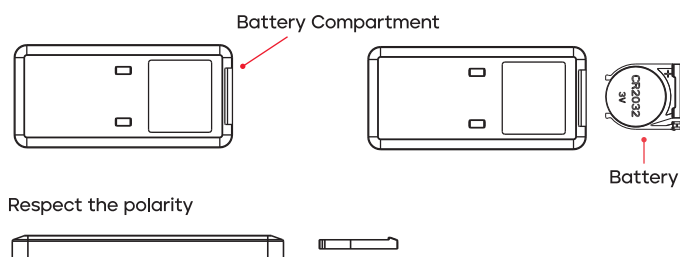

BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN
Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.





USING YOUR HEATER

WARNING: Do not cover or place any objects on the heater. Keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the appliance.

Note: As with all new electric heating elements, your heater will emit a 'new' smell when it is first switched on. This is quite normal and not a cause for concern. It will dissipate with use.

- The appliance must be in an upright position, on a firm and level surface to depress the overturn protection switch and activate power to the heater.
- Turn the heater ON by pressing the Power button on the remote control (9) or the POWER button on the control panel (8) the heater will blow cold air and the POWER light illuminates blue, the room temperature will show in the display on the control panel.
- Press the Mode button on the remote control (10) or MODE on the control panel (6), the heater will blow warm air and the MODE light illuminates red.
- Pressing the Mode button again on the remote control or MODE on the control panel, the heater will blow hot air, the MODE light remains red.
- Pressing the Mode button three times on remote control, or MODE on the control panel the heater will blow the cold air and the MODE will go out.
- To turn the heater off press the Power button on the remote control or the POWER button on the control panel, the heater will blow the cold air and turn off after 5 seconds.

TEMPERATURE ADJUSTMENT

- To adjust temperature, press the increase button or decrease button until the desired temperature is reached. The temperature range is 10°C to 49°C.

24 HOUR TIMER FUNCTION

- Switch on the heater to your required mode. Then press either the TIMER button on the control panel (5) or the TIMER button on the remote control (13).



USING YOUR HEATER

- Keep pressing the TIMER button on the control panel or remote control until your required timer period is reached.
- When the timer period is complete, the heater will switch off automatically. The timer range is 1 – 24 hours.

AUTO MODE

- To turn on the Auto Mode, press the AUTO button on the control panel (7) the heater will turn on at the default temperature of 25°C.
- When the room temperature drops 2 degrees below the default temperature, the heater will start heating at 1000W. If the room temperature drops 4 degrees below the default temperature, the heater will start heating at 2000W.

Note: If the air temperature is warmer than the set temperature of the heater, it will blow cold air.

OVERTURN PROTECTION

The heater has a switch underneath it, which depresses when upright allowing the heater to operate. If the heater overturns, power to the heater is cut off. When returned to upright, it enters standby.

OVERHEAT PROTECTION

- The heater is protected with an overheat protection that switches off the appliance automatically in case of overheating.
- If the overheat protection activates, unplug the appliance, wait about 30 minutes for it to cool thoroughly before switching it back on.
- The appliance should now operate normally.



CARE AND CLEANING

- Before cleaning, repairing and maintaining, the heater **MUST** be switched off and the plug disconnected from the mains outlet
- Use a soft damp cloth and a mild detergent. Do not use an abrasive cloth which could affect the appearance of the appliance. Regularly check the hot air outlet and the air inlet are free of dust and dirt.

STORAGE

- Ensure the heater has completely cooled before storing.
- Do not wrap the mains cable around the heater, as this will cause damage.
- Store the heater in a cool, dry place.



TROUBLESHOOTING

Problem	Solution
No power or not switching on.	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
Burning smell.	Check the heater is free from dust etc. Turn off the heater and allow to cool thoroughly . Follow the instructions in the Care and Cleaning section to clean the heater and filters.
	Ensure textiles, curtains, or any other flammable material is a minimum distance of 1 metre from the heater.
Heat flow is reduced.	Turn off the heater and allow to cool thoroughly . Check there are no obstructions to the air inlet.
Not turning on.	Check that the heater is standing upright on a firm, level surface to depress the overturn protection switch at the bottom of the heater.
Remote Control not working.	Change the battery. Type CR2025.
Tripping Electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the heater.

SPARE PARTS

Part Number	Description	Qty per Product	Key Number
33035	Remote Control	1	N/A



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www: www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.



NOTES

[illegible]



NOTES

[illegible]



NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



AT825200MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

