



morphy richards

**3 Year
Guarantee***

*Upon registering your product
at morphyrichards.co.uk

MRXCYLINDERFLEX PowerSphere Cylinder Vacuum



Model No.
700010

User Manual

Please read and keep these instructions for future use





HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

Please read these instructions carefully before using the product.

- **WARNING:** Whenever the cleaner is in use, due to the risk of entrapment in rotating parts, keep loose clothing, hair, fingers etc. away from the brush bar, nozzle and any hand-held accessories.
- **WARNING:** Disconnect from the mains supply before carrying out any routine maintenance, such as cleaning any blockages, changing any filters or accessing the floor nozzle.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.



HEALTH AND SAFETY

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be undertaken by children without supervision.
- This appliance is intended for household use only. It is not suitable for use in staff kitchen areas in shops, offices and other commercial environments.
- The appliance is not intended to be operated on an extension cable or by means of an external timer or separate remote control.



HEALTH AND SAFETY

PERSONAL SAFETY

- **WARNING:** Only lift the product by the carry handle.
- Always disconnect the appliance from the mains supply after use.
- Never use in the presence of explosive liquid or vapours.
- Never pick up inflammable or poisonous liquids such as petrol, copier toner or other volatile substances. Never pick up acids, asbestos or asbestos dust.
- Never touch the plug or cable with wet hands.
- Do not immerse cord, plug or cleaner in water or other liquid.
- The appliance must never be left running unsupervised.

LOCATION

- Do not use or keep this product outside.
- Do not store the appliance near hot surfaces e.g. ovens or heating appliances.

MAINS CABLE

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified person to avoid a hazard.
- Do not allow the mains lead to become strained or run this appliance over it.

PRODUCT SAFETY

- Never use the appliance without the filters being installed.
- Never use the appliance to vacuum hot ashes, broken glass, sharp objects or liquids.
- Use only Morphy Richards spare parts and accessories.
- Never modify the cleaner in any way.
- Repairs to electrical appliances are only to be undertaken by trained professionals. Unprofessional repairs can be dangerous for users.


ELECTRICAL REQUIREMENTS

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).
- Should the fuse in the mains plug require changing, replace it with a fuse of the same rating as originally fitted.





PRODUCT OVERVIEW

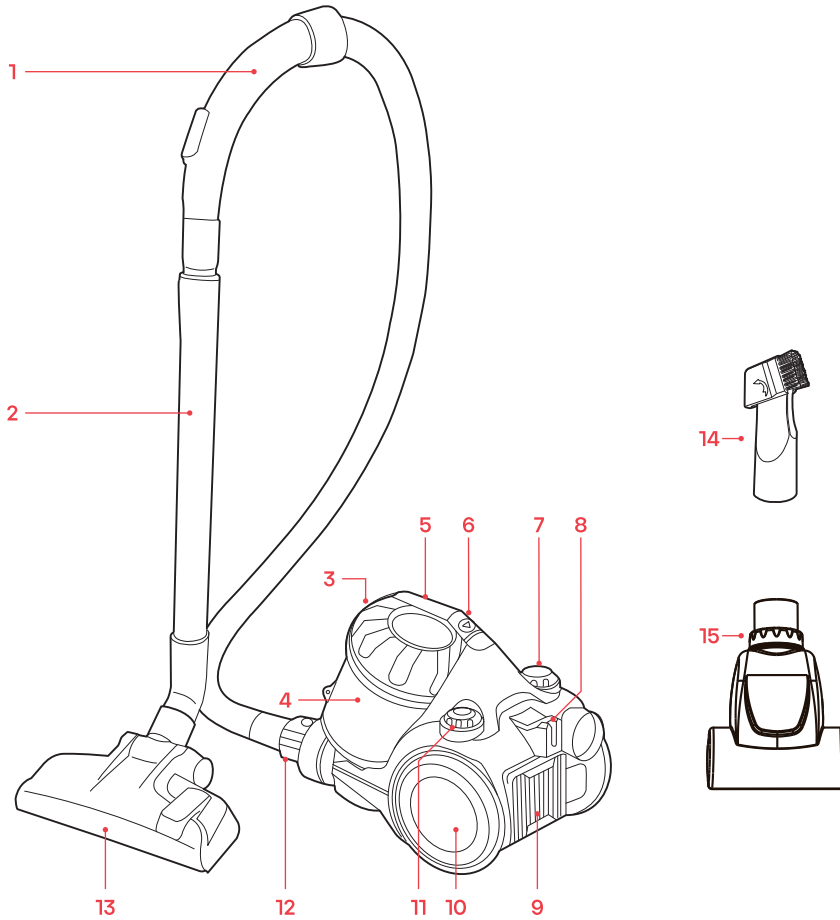


- | | |
|------------------------------------|-----------------------------|
| 1. Flexible Hose & Handle | 8. Storage for Floor Nozzle |
| 2. Metal Telescopic Extension Tube | 9. HEPA Filter |
| 3. Top Lid Lock | 10. Wheel |
| 4. Dust Canister | 11. On/off Button |
| 5. Handle | 12. Hose Inlet |
| 6. Dust Canister Release Button | 13. Floor Nozzle |
| 7. Cable Rewind Button | 14. 2 in 1 Crevice Tool |
| | 15. Turbo Brush |




ASSEMBLY

THE APPLIANCE SHOULD NOT BE SWITCHED ON OR PLUGGED INTO A POWER SUPPLY WHILST IT IS BEING ASSEMBLED.


Insert the flexible hose (1) into the hose inlet (13) at the front of the appliance, push until it clicks.

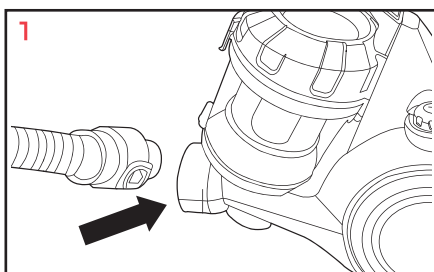

Extend the telescopic metal extension tubes (2) together and insert the handle of the flexible hose (1) into the extension tube.

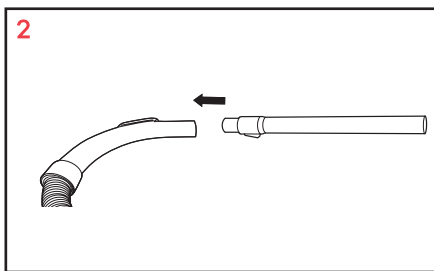

Attach the floor nozzle or other accessory (as appropriate) to the extension tube.

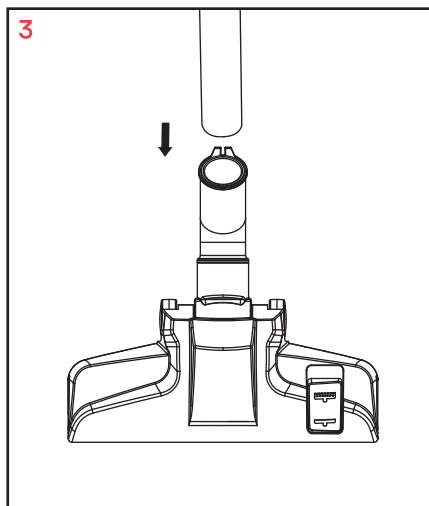


Note: The accessories can be attached directly to the flexible hose.






USING THE CYLINDER VACUUM


Pull out the power cable (9) to the yellow marking on the cable. Pulling further than this may cause damage to the cable. Plug into mains socket.

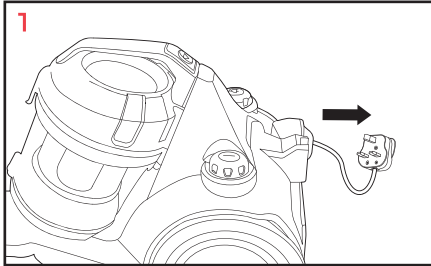


Press the on/off button to turn off the appliance. Unplug at the mains socket and press the cable rewind button (7) to rewind the power cable.

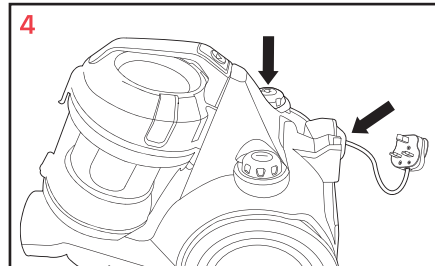

Press the on/off button (12) to switch on the vacuum cleaner.

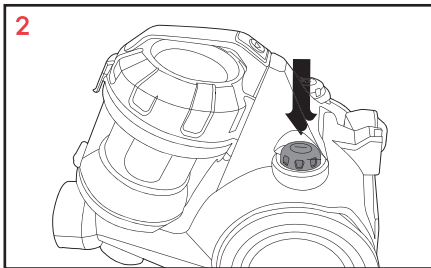


Use the suction power control on the flexible hose handle to increase/decrease suction power.

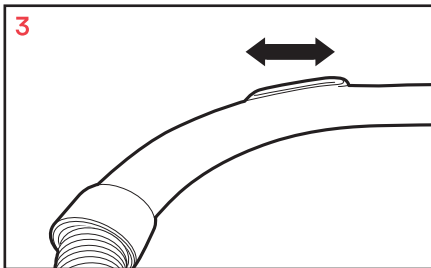

After use, the floor nozzle can be re-attached to the back of the appliance (8).


Note: Hold the power cable with one hand and slowly guide it while it winds back into storage.

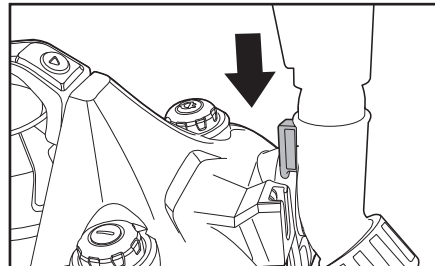




USING THE CYLINDER VACUUM

FLOOR NOZZLE ADJUSTMENT

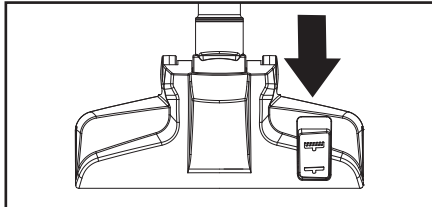

Use the Carpet/Hard Floor Selector Lever to choose carpet or hard floor mode as required.

USING THE TURBO BRUSH

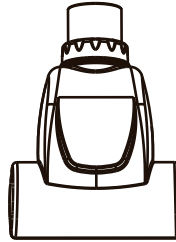

Use the Turbo brush to remove pet hair from stairs, carpet and upholstery.

USING THE 2 IN 1 CREVICE TOOL



Crevice tool – for skirting boards, corners, dryer vents and tight spaces.



Dusting brush – for furniture, blinds, drawers and vents.




MAINTENANCE

WARNING: Always switch off and disconnect from the mains outlet before cleaning or maintaining your vacuum cleaner.


EMPTYING THE DUST CANISTER

Note: Empty the dust canister after every use.


Remove the flexible hose (1) from the hose inlet (13) by pressing the release button and pulling the hose out.

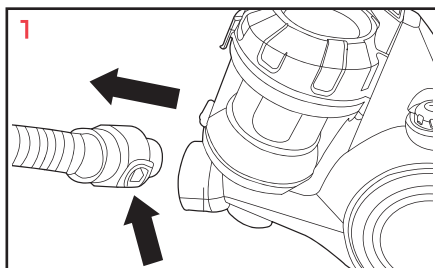

Hold the dust container (4) by its handle and press the release button (6) to unlock it. Pull the canister away from the appliance.

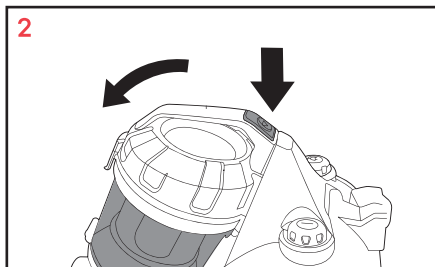

To empty the dust canister, hold over a dustbin, press the lever at the base of the canister to release the bottom flap. When emptied close the bottom flap until it clicks.

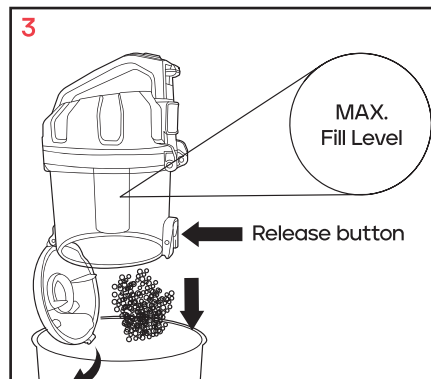

Clean the main unit of the vacuum cleaner and accessories with a damp cloth. Do not allow any liquid to enter the appliance.

Dry the appliance and accessories thoroughly before using.

Note: Do not use detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the appliance or accessories.






MAINTENANCE

CLEANING THE FILTERS

- Remove the dust canister and open the top lid by pulling the catch upwards.
- Remove the filter assembly.
- Disassemble the filter assembly by rotating counter-clockwise and clean under a running tap.
- Clean the dust canister with a damp cloth or under running water.
- Remove the sponge filter and holder from the lid by simply pulling it out.
- Remove the sponge from the holder and tap it to remove dust.
- Wash the filter and holder under a running tap.
- Remove the motor filter, tap it to remove dust and rinse under a running tap.

Note: All filters and the dust canister should be THOROUGHLY dried before re-fitting.

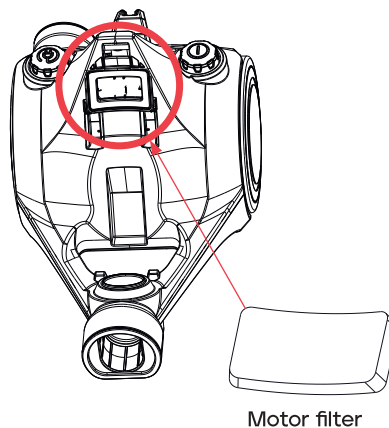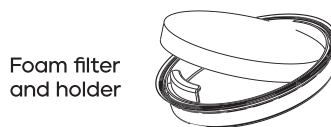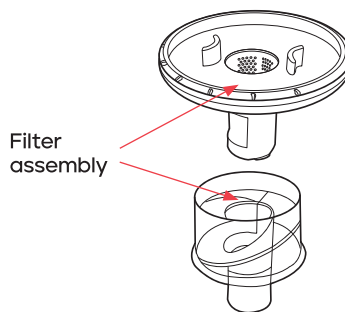




MAINTENANCE

HEPA FILTER

Note: To maintain efficiency of the vacuum cleaner we recommend cleaning the HEPA filter regularly with a soft brush and replace every 6 months.

- The filter is installed behind the exhaust outlet cover at the back of the appliance. Push the grid lock to the left and pull out exhaust cover at the same time.
- Lightly press down the lock on the top side of the filter frame and pull out the filter.
- Clean as above.
- Refit the filter and ensure the exhaust filter cover is clicked securely into place.

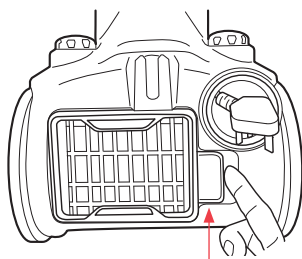

Filter cover






- **Note:** Never use the appliance without the filters installed.



MAINTENANCE

MAINTAINING THE TURBO BRUSH

- Holding the collar and twist anticlockwise to unlock the cover. Lift up and remove the cover
- Use fingers or small brush to clear an accumulated pet hair/ dirt from the roller bristles.
- Replace the cover and twist the collar to lock.

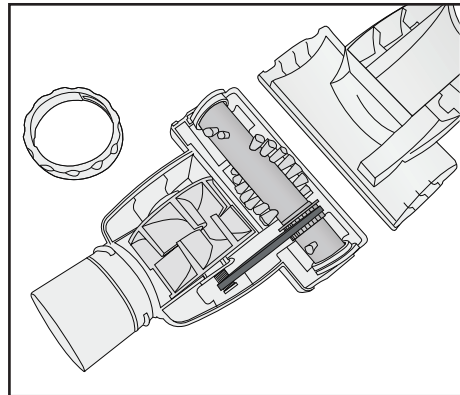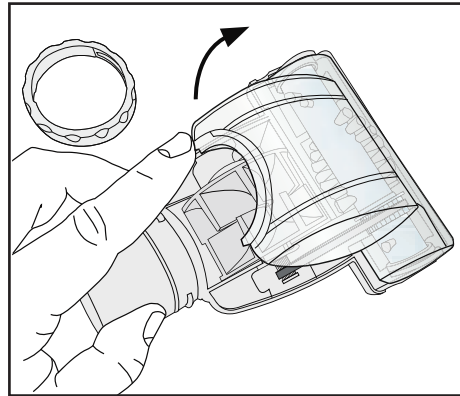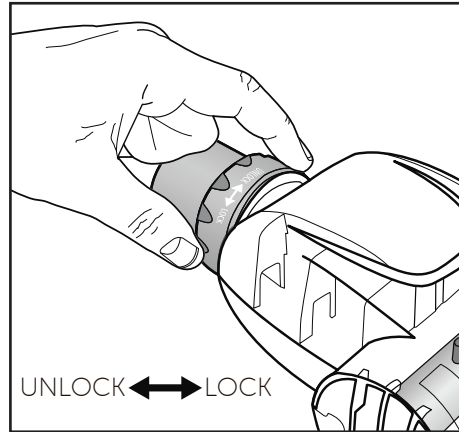



ENERGY CONSUMPTION

Information for power consumption and maximum time to reach applicable low power condition:

Off mode	<0.3 W
The maximum time needed to reach the applicable low power condition	At once after power switch was turned to OFF.

TROUBLESHOOTING

Problem	Solution
No power or not switching on.	Check the fuse and try a new fuse with the same rating.
	Try a different appliance in the socket as it may be the socket that is at fault.
No suction/not picking up dust/dirt.	Empty dust canister and clean filters regularly.
	Check the vacuum height is at the correct setting, adjust as needed.
	Remove blockages from the hose and/or extension tubes.
	Check the floor nozzle for blockages.
Cutting out.	Check for blockages, full dust canister and dirty filters. Maintain as necessary. Leave the vacuum to cool down for 30 mins before using again.
Burning smell.	Empty dust canister and clean filters regularly.
Vacuum cleaner is hard to push.	Check the floor nozzle is at the correct setting and adjust as required.
Tripping electrics.	Try using a different socket.
	Ensure there are no other appliances being used on the same set of sockets as the vacuum.



SPARE PARTS

Part Number	Description	Qty per Product	Key Number
07079	Hose with handle and suction control	1	1
07090	Telescopic extension tube (stainless steel)	1	2
07081	Floor nozzle including brush adjustment switch	1	15
07082	2 in 1 crevice tool/dusting brush	1	14
07091	Dust canister (grey) including release clips	1	3 & 4
07092	Filter assembly (red)	1	N/A
07085	Circular sponge filter holder	1	N/A
07086	Circular sponge filter	1	N/A
07087	HEPA filter (pleated)	10	N/A
07088	Exhaust filter cover	1	N/A
07089	Motor filter	1	N/A
07101	Turbo brush	1	N/A



CONTACT US

If you are having a problem with your appliance, please contact our Helpline, as we are more likely to be able to help than the store you purchased the item from. Please have the product name, model number and serial number to hand when you contact us to help us deal with your enquiry quicker.

email: hello@morphyrichards.co.uk

www.morphyrichards.co.uk

PRODUCT RECYCLING



For electrical products sold within the European Community, at the end of the electrical products useful life, it should not be disposed of with household waste.

 
Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.





NOTES





REGISTERING YOUR 3 YEAR GUARANTEE

Your standard 2 year guarantee is extended for an additional 1 year when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 2 years.



**To validate your 3 year guarantee,
scan the QR code or register online
at www.morphyrichards.co.uk**

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please note that the 2 year guarantee is only available in the UK. Please refer to the 2 year guarantee for more information.

YOUR 2 YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to the back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out on the next page (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 2 year



REGISTERING YOUR 3 YEAR GUARANTEE

guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied.

The appliance is intended for domestic use only. Misuse or use for commercial or any other purpose will render the guarantee invalid.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. The appliance has been used for hire purposes or non domestic use.
5. The appliance is second hand or refurbished.
6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.





VC700010MUK Rev1

morphy richards



@morphyrichardsuk #loveyourmorphy

[morphyrichards.co.uk](https://www.morphyrichards.co.uk)

Morphy Richards

9 Cabot Lane, Poole, Dorset, BH17 7BY, UK

