

 PORTRONICS SOUND SLICK X1 5.1.2 CH Wireless Soundbar with Wired Subwoofer & Dolby Atmos USER MANUAL	QUICK START 1. Place the soundbar centered below your TV. Put the subwoofer near a wall or corner. Position the wireless surround satellites behind your seating, roughly ear-height and facing inward. 2. Connect to TV (Recommended): Use an HDMI cable from TV HDMI (ARC/eARC) to soundbar HDMI (ARC/eARC). 3. Power ON the soundbar, subwoofer, and surround satellites. Set your TV audio output to HDMI ARC/eARC, Bitstream/Passthrough, and Dolby Atmos (Auto/On) if available. WHAT'S INCLUDED (TYPICAL) • Soundbar (5.1.2CH) • Subwoofer • 2 x Surround Satellites Speaker • Remote Control	• Power cords • User Manual • 1 x Receiver INPUTS & FEATURES • HDMI (ARC/eARC) – Best for TV, Dolby Atmos • Optical – TV (PCM/Dolby Digital) • AUX IN (3.5 mm) – Phones/Laptops (analog) • USB – Music playback from USB drive • Bluetooth – Stream from phone/tablet/PC • LED Display – Shows source, volume, status • Remote Control – Volume, input, playback, sound modes • Dolby Atmos – Immersive 3D audio on supported content via HDMI ARC/eARC	BUTTON & INDICATOR BASICS • Soundbar: Power, Input, Volume • Surround Satellites: PAIR button + LED • LED meanings (surround satellites): ◦ Blue – Fast flash: searching/pairing ◦ Blue – Solid: connected ◦ Blue – Slow flash: not linked / ready to re-pair ◦ Red – Solid: standby WIRELESS SURROUND: AUTO PAIRING & CONTROL Automatic pairing (first use): 1. Power ON the soundbar and the wireless surround satellites. 2. Satellite LED blue fast-flashes while searching. 3. When connected, LED turns solid blue.	MANUALLY DISCONNECT & RE-CONNECT: • To disconnect the wireless link: Press & hold PAIR (3s) on the satellite → blue slow flash. • To re-pair: Press & hold PAIR (3s) again → blue fast flash, then connects and becomes solid blue. STANDBY BEHAVIOR: • If the soundbar enters standby, the satellites follow into sync standby (satellite red LED on). • Wake the system with the remote or soundbar power; satellites re-link automatically. Tip: Keep satellites within line-of-sight of the soundbar. Avoid placing them inside cabinets or behind thick obstacles. CONNECTING TO YOUR TV & DEVICES HDMI (ARC/eARC) – Best Quality + Atmos	1. Connect TV HDMI (ARC/eARC) → soundbar HDMI (ARC/eARC). 2. On TV: Audio Output = HDMI ARC/eARC; Digital Output = Bitstream/Passthrough; Dolby Atmos = Auto/On (if available). 3. Select HDMI on the soundbar (remote/Input button). Enjoy Atmos content from supported apps. Optical 1. Connect TV Optical Out → soundbar Optical In. 2. TV audio format = PCM or Dolby Digital (no Atmos over optical). 3. Select OPTICAL on the soundbar. AUX IN (3.5 MM) • Plug your phone/laptop headphone out soundbar AUX IN. • Select AUX on the soundbar. USB Playback • Insert a FAT32 USB drive with supported audio files.
• Select USB; use remote to Play/Pause/Next/Prev. Bluetooth 1. Select Bluetooth on the soundbar to enter pairing (display/voice prompt may indicate). 2. On your phone, enable Bluetooth and select the soundbar from the device list. 3. To connect next time, just enable Bluetooth; it will reconnect automatically to the last paired device. PLACEMENT TIPS (FOR BETTER IMMERSION) • Soundbar: Centered under TV, front grille unobstructed. • Up-firing/Atmos : Keep the top of the bar unobstructed; avoid deep shelves; flat ceiling helps height effects. • Subwoofer: Near a wall/corner for stronger bass; move slightly if bass feels boomy.	• Surround Satellites: Slightly behind and to the sides of seating; ear height if possible; angle toward listening position. BASIC OPERATION • Power: Use remote or soundbar power button. • Input: Cycle BT/ OPT/ HDMI /AUX /USB. • Volume: Adjust on remote; keep TV speakers Off or volume low to avoid echo. • Playback (USB/BT): Play/Pause/Next/Previous via remote. DOLBY ATMOS NOTES • Requires Atmos-capable TV/app/source and HDMI ARC/eARC (prefer eARC). • In TV settings, choose Bitstream/Passthrough, Dolby Atmos Auto. • Some TVs require enabling CEC/eARC in settings.	TROUBLESHOOTING No sound (HDMI ARC/eARC) • Ensure HDMI cable is in the ARC/eARC ports on both TV and soundbar. • TV audio output: HDMI ARC/eARC; Digital Out: Bitstream/Passthrough. • Power-cycle TV and soundbar; enable CEC/eARC in TV settings. Surround satellites not linking • Check power to satellites. • Press & hold PAIR (3s) to re-pair (blue fast flash →solid blue). • Reduce distance/obstacles between satellites and soundbar. Low/boomy bass • Reposition subwoofer away from corners for tighter bass; nearer corner for more bass.	No Bluetooth connection • Clear old pairing on your phone and re-pair. • Make sure the soundbar is in Bluetooth source mode. Optical no audio • TV Digital Out = PCM (or Dolby Digital if supported). • Remove plastic dust caps; seat the optical plug fully. SPECIFICATIONS • Channel Configuration: 5.1.2CH Soundbar Home Theatre • Total Output Power: 600W • Product Dimensions: ◦ Subwoofer: L250 × W250 × H379 mm ◦ Soundbar: L950 × D100 × H78 mm ◦ Surround Satellites: L165 × W78 × D88.5 mm	• Inputs: HDMI (ARC/eARC), Optical, AUX IN, USB, Bluetooth • Display/Control: LED Display, Remote Control • Audio: Dolby Atmos (via HDMI ARC/eARC) CARE & SAFETY • Keep away from moisture/heat; do not cover ventilation. • Use only the supplied/compatible power accessories. • Do not open the enclosures; no user-serviceable parts inside. • Unplug during lightning storms or long periods of disuse. WARRANTY & SUPPORT Keep your purchase invoice. For help, contact your retailer or the brand's official support channel.	 www.portronics.com For Support Visit : www.portronics.com Email : help@portronics.com Contact No. : +91 9555245245, 011-42413131 (Working Hrs. : Monday - Saturday 10:00am - 6:00pm)  E-Waste Management E: info@3rrecycler.com For E-Waste & ROHS compliance refer to www.portronics.com/ewaste