 


# Fanttik

*Cruise V11 APEX / Ultra*

Cordless Handheld  
Vacuum Cleaner

## User Manual

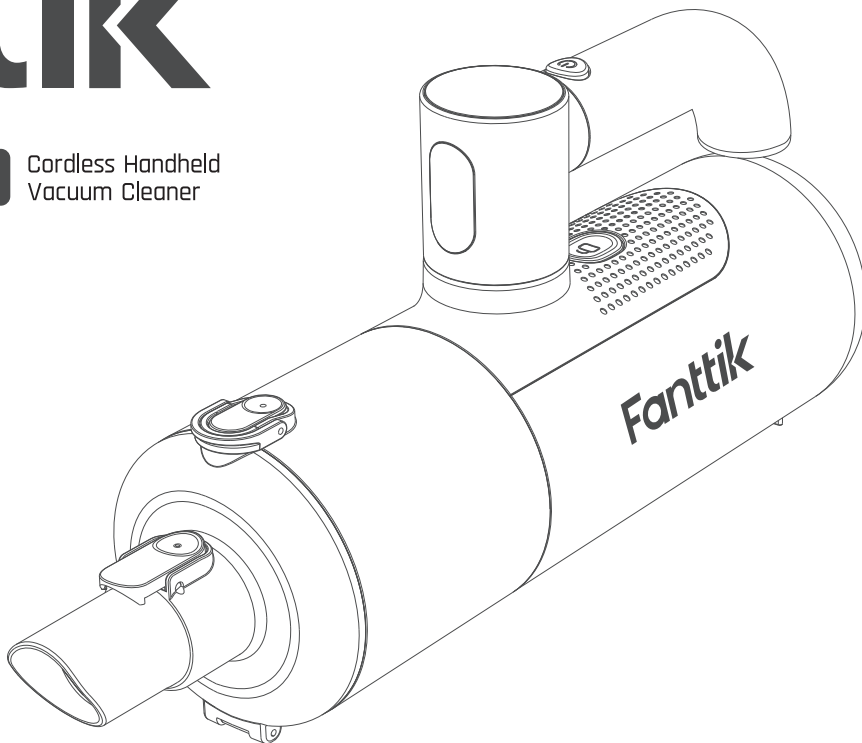 


Please read this instruction manual carefully before use and keep it for future reference.


# Quick Start Guide

## How to assemble


### Suction Mode

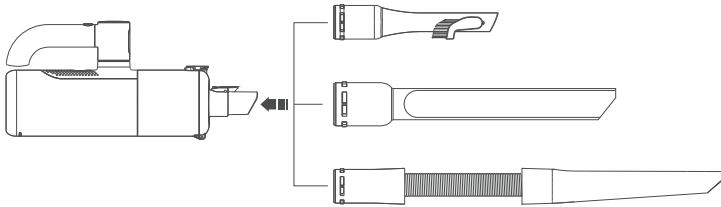


### Blow Mode

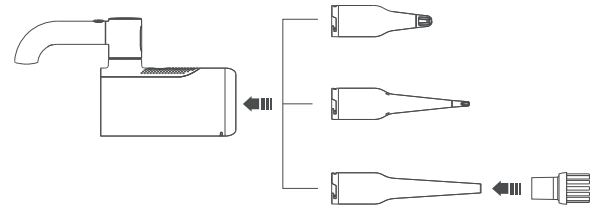 

### Vacuum Mode

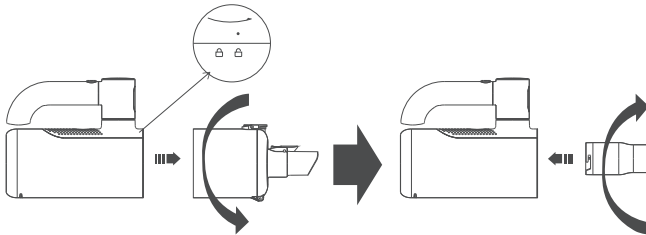 


### Cleaning

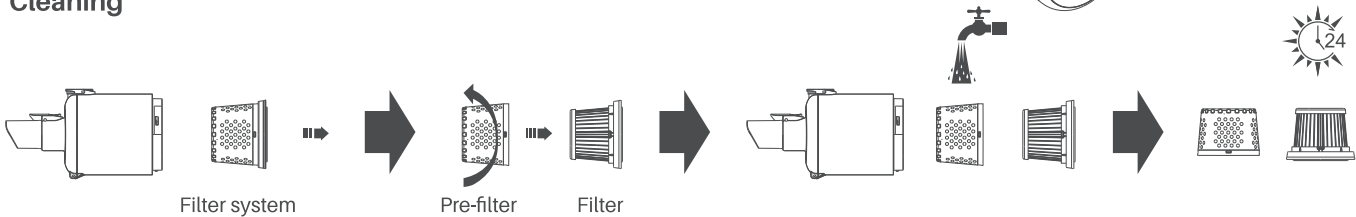 

5V=3A / 9V=2A / 12V=1.5A /  
15V=1.33A / 20V=1A(PD20W)

### Charge

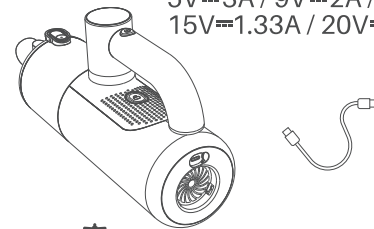 

# Thank you for choosing Fanttik

Thank you for purchasing Fanttik vacuum cleaner. It is a cordless handheld vacuum cleaner with strong suction multi-functional brush and nozzle.

## CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS.....	03
2. PRODUCT OVERVIEW .....	05
3. PACKAGE CONTENTS.....	06
4. HOW TO USE .....	07
5. CLEAN AND MAINTENANCE.....	10
6. SCREEN DISPLAY .....	11
7. TOXIC AND HAZARDOUS SUBSTANCES.....	12
8. TROUBLESHOOTING.....	13
9. SPECIFICATIONS.....	14

# 1. IMPORTANT SAFETY INSTRUCTIONS

## WARNING

**To reduce the risk of fire or injury:**

**All the safety and operating instructions should be read before use and should be followed to avoid injury, fire, electric shock, property loss, and other risks.**

 
1. This product is intended for household and car use only.
2. This product contains an internal battery. To prevent overheating, fire, or explosion, do not expose the device to fire or excessive heat. Do not charge, use, or store the device in high-temperature environments, including inside a car.
3. It is recommended to charge, use, or store the device at temperatures between 32°F and 104°F (0°C and 40°C).
4. For safety, do not use this device if you have reduced physical, sensory, or mental capabilities.
5. Children must not use, clean, or play with the device.
6. Do not operate the device with wet hands to avoid injury.
7. Do not use this device to vacuum up any liquid such as water and cola.
8. Do not vacuum burning or smoking materials, such as cigarette butts, matches, or hot ashes.
9. Do not vacuum hard or sharp objects, as they can cause injury during dustbin cleaning.
10. Do not use scented products on this device, as they may contain flammable chemicals that could cause a fire.
11. Do not attempt to modify or repair the internal battery.
12. Do not use the device in heated or humid places, such as near heaters or in bathrooms.
13. When this device reaches the end of its service life, dispose of it at a recycling location, as the internal battery cannot be removed.
14. If the power cord is damaged, stop using it immediately.
15. If the device will not be used for an extended period, unplug the power cord after a full charge and store it in a cool, dry place. Recharge the battery at least once every three months to prevent performance loss.
16. When transporting the device, use the original packaging and ensure it is turned off.
17. Always unplug the device from the power outlet when not in use and before performing any maintenance.
18. Keep the device and its cord away from children. Adult supervision is necessary when the device is used near children.

19. Use the device only as described in this manual and only with attachments recommended by the manufacturer.
20. If the appliance malfunctions, or if it has been dropped, damaged, left outdoors, or exposed to water, return it to a service center for inspection.
21. Do not pull or carry the device by its power cord, use the cord as a handle, pinch the cord in a door, or pull it around sharp edges or corners.
22. Keep the cord away from heated surfaces.
23. Never insert any object into openings or use the device if any opening is blocked.
24. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
25. Use extra care when cleaning on stairs. Do not use the device to blow or in the presence of flammable or combustible liquids, such as gasoline.
26. Do not use without the dust bag and/or filters in place.
27. Prevent unintentional starting. Ensure the switch is in the off-position before picking up or carrying the appliance. Accidents can occur if the device is carried with your finger on the switch or plugged in while the switch is on.
28. Recharge only with the charger specified by the manufacturer.
29. If the battery is damaged and leaks liquid, avoid contact. If contact occurs, flush with water immediately. If battery liquid gets into the eyes, seek medical attention in addition to flushing. The liquid can cause irritation or chemical burns.
30. Do not use a battery that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
31. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
32. Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
33. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
34. Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
35. Use only with Listed/Certified Information Technology (Computer) Equipment, or a Listed/Certified ITE Power Supply, or a Listed Class 2 Power Unit.
36. This appliance contains batteries that are non-replaceable.


## SAVE THESE INSTRUCTIONS

Please save the safety and operating instructions. We assume no responsibility for your property loss caused by improper use.

## 2.PRODUCT OVERVIEW

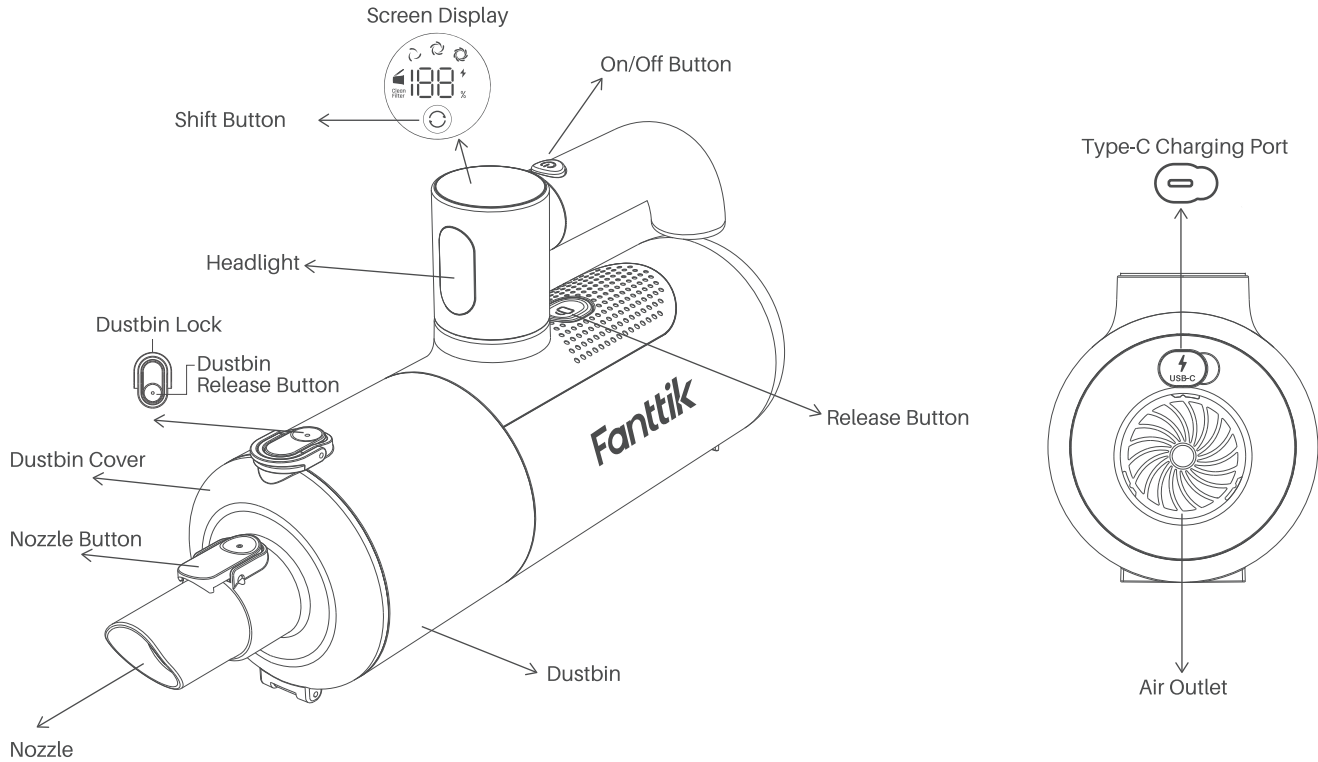

### 3. PACKAGE CONTENTS

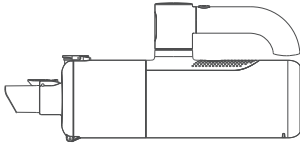 

Vacuum cleaner Body X 1



 
Multi-function Air Blower X1




Inflate Nozzle X1



Long Blow Nozzle X1



Long Blow Nozzle Brush X1

 


Flexible Hose X1




Crevice Nozzle X1



 2 in 1 Wide Nozzle X1




Vacuum Nozzle X 1

 


Type-C Charging Cable X 1



 Cleaning Brush X1

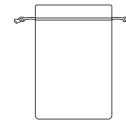

Storage Bag X 1

 


User Manual X 1

Carefully check the package contents, if anything is missing or damaged, please contact our online customer service for support.


## 4. HOW TO USE
 
### ● How to assemble

#### Suction Mode:

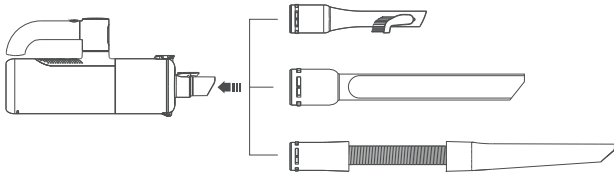


 1. Select the attachment according to your needs and install it to the nozzle to use.

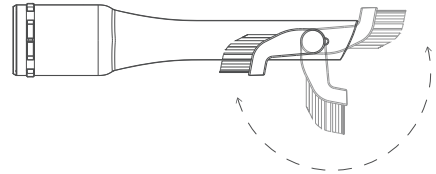


2. The wide nozzle comes with a brush. It can be used or stored in the direction shown in the picture.


#### Blow Mode:

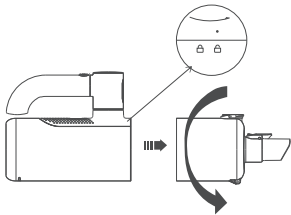 

 1. Rotate the dustbin along the direction shown on the unit and pull it out.

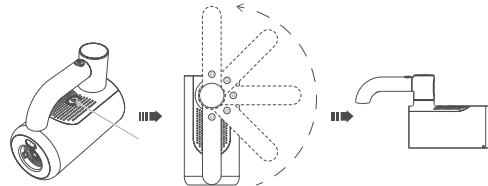

 
2. Press and hold the Release Button firmly. Rotate the handle by 180 degrees.

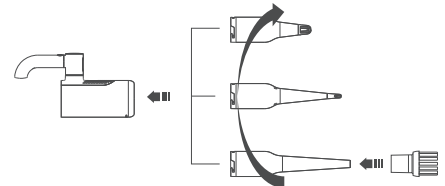


3. Select the blow nozzle according to your needs and install it to the correspond to use.

## ● How to assemble
 
### Vacuum Mode:

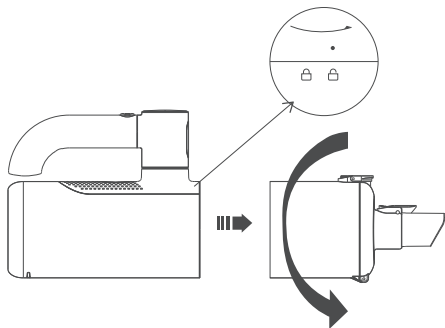

 1.Rotate the dustbin along the direction shown on the unit and pull it out.

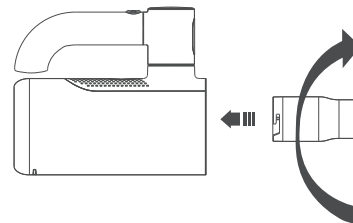

2.Rotate the Vacuum Nozzle along the direction shown and install it.


## ● How to use
 
### On/Off Button:

Long press the On/Off button to turn on the device, and Long press it again to turn it off.

### Speed mode Adjustment :


- 1.The speed shift buttons is located on the display screen and will only be displayed after the device is turn on.
- 2.Default to eco mode when turning on the device.
- 3.After the device is turn on, touch the shift button to switch to medium mode; touch again to switch to max mode; touch once more to return to eco mode. Subsequent touches will cycle repeatedly.
- 4.Long press the shift button can turn on/off the headlight.

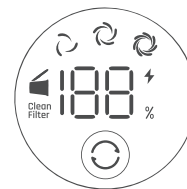


Shift Button

## ● How to charge

 
1. Open the silicone cap on the rear housing.
2. Please use a 5V $\equiv$ 3A / 9V $\equiv$ 2A / 12V $\equiv$ 1.5A / 15V $\equiv$ 1.33A / 20V $\equiv$ 1A(PD20W) adapter (package-excluded) and the type-C charging cable(included) to charge. The type-C charging cable can only be used for charging.
3. It takes approximately 2.5-3.5 hours to fully charge the device(Cruise V11 Ultra takes about 3 - 4 hours to fully charge).
4. The lithium-ion battery must be FULLY charged before first use and after long-term storage.
5. If not used for a long time,it is recommended to recharge the device every three months.

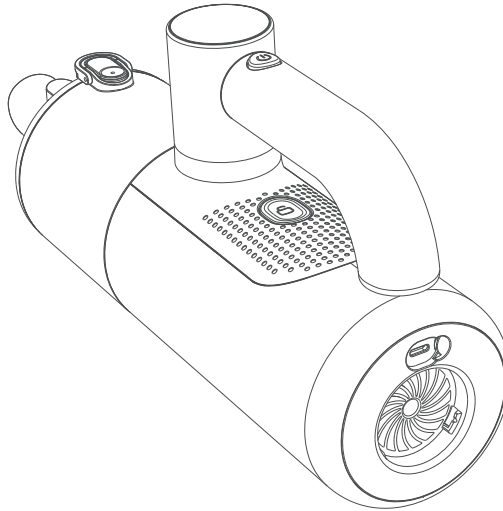

 
5V $\equiv$ 3A / 9V $\equiv$ 2A / 12V $\equiv$ 1.5A /  
15V $\equiv$ 1.33A / 20V $\equiv$ 1A(PD20W)

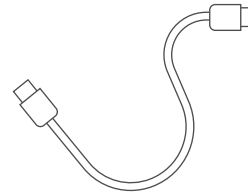


## 5. CLEAN AND MAINTENANCE

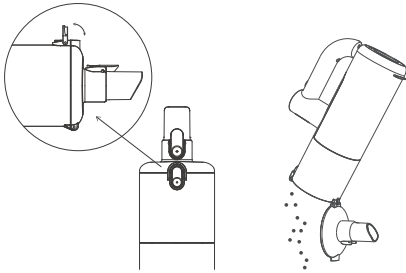 

 
1. Push the dustbin lock upward, and press the dustbin release button to empty the dirt inside.

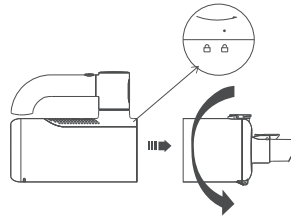

 
2. Rotate the dustbin along the direction shown on the unit and pull it out.



 
3. Pull out the filter system from the bottom of the dustbin.

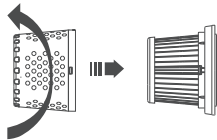

 4. Rotate the prefilter and pull filter out. Clean the prefilter and filter with cleaning brush.

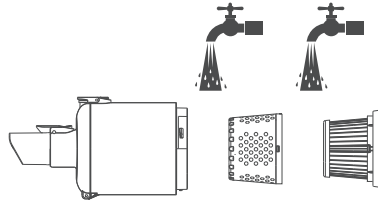

 5. Wash the dustbin, prefilter and filter with clean water.

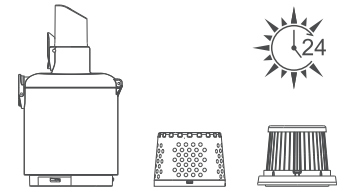

6. Waiting for the filter system and dustbin to dry completely before putting them back.

## 6. SCREEN DISPLAY

Vacuum Cleaner	Status	Indicator
In working	Eco mode	Blue and green light ring and Eco mode icon
	Medium mode	Blue and green light ring and Medium mode icon
	Max mode	Blue and purple light ring and Max mode icon
	The battery level is less 10%	The lighting icon flashing red
	Power off	The battery show 0% and flashes five times then goes off
	Filter sensor	The "Clean Filter" icon bright.
	Full sealed	The "Clean Filter" icon and E3 flashes three times then goes off
	Botton stuck more than 1 minute	E4 flashes three times then goes off
	Battery hot or cold	E5 flashes three times then goes off
	Motor fault or overload current	E6 flashes three times then goes off
In charging	In charging(<10%)	The red lighting icon and orange light ring breath flash
	In charging(11%-25%)	The green lighting icon and orange light ring breath flash
	In charging(26%-50%)	The green lighting icon and yellow light ring breath flash
	In charging(51%-75%)	The green lighting icon and blue light ring breath flash
	In charging(76%-100%)	The green lighting icon and green light ring breath flash
	Full battery	"100%"and the green lighting icon and light ring steady on for 1min and then goes off
	Battery hot or cold	E2 flashes three times then goes off

## 7. TOXIC AND HAZARDOUS SUBSTANCES

PRODUCT	HAZARDOUS CHEMICALS					
Handheld Vacuum Cleaner	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
	O	O	O	O	O	O

O Indicates all homogeneous materials' hazardous substances content are below the limit specified in the Standard 2011/65/EU.

X Indicates that the hazardous substances content in at least one homogeneous material of the component exceed the limit specified in the Standard 2011/65/EU.

X Indicates that the replacement of non-environmental protection substances cannot be achieved currently due to the global technology limitations, which will be gradually improved with the technical improvement.

## 8. TROUBLESHOOTING

If the following operations can not solve your problems, please stop using the device and contact customer service

Problem	Possible Reason	Solution
The battery icon flashes 0% then the device goes off while working	Under Voltage	Please charge the device
The "Clean Filter" icon bright	Filter sensor	Clean or replace the Filter
The battery icon flashes 0% and fails to power on after pressing Power Button	Under Voltage	Please charge the device
No display when charging	The charging cable is loose	Plug in charging cable
	Fully charged	Unplug the charging cable
E1 flashes three times then goes off	The adapter is incompatible with the device	Please use a 5V=3A / 9V=2A / 12V=1.5A / 15V=1.33A / 20V=1A (PD20W) adapter to charge
The device stops working, E3 and the "Clean Filter" icon flashes three times then goes off	Full sealed	Clean the Filter and air vent before turning on the device

## 9. Technical Data

Items	Parameter	
Model	Cruise V11 APEX	Cruise V11 Ultra
Rated voltage	14.8V	18.5V
Noise	80dB	81dB
Weight	921g	967g
Battery capacity	4*2500mAh	5*2500mAh
Rated power	145W	180W
Runtime	Eco mode≈35min Medium mode ≈20min Max mode≈15min	Eco mode≈45min Medium mode ≈24min Max mode≈15min
Size	346.5*163*91mm	
Charging voltage	5V/9V/12V/15V/20V DC(PD20W)	
Dustbin capacity	300mL	



## WARRANTY

- This product is covered by a 12-month warranty for manufacturing defects.

929-693-6066 MON-FRI 9AM-5PM (ET)

[www.fanttik.com](http://www.fanttik.com)

[support@fanttik.com](mailto:support@fanttik.com)

METASEE LLC

12 GREENWAY PLZ STE 1161A HOUSTON, TX 77046-1203

**Made in China**

CAN ICES (B)/NMB (B)

