 


GROOVZ LINK SPEAKER

Enjoy music anywhere anytime

GROOVZ®

MODEL: GRZ-LINK

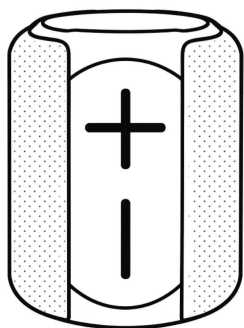


INSTRUCTION MANUAL

SPECIFICATION

Wireless Version: 5.2
BT protocol: Support L2CAP / A2DP(AVCTP / AVDTP / AVRCP)
Wireless transmission distance: > 10M
Audio noise ratio: > 95dB
Battery Capacity: 1200 mAh
Built-in voltage: 3.7V
Play Time: 4-6 hours (depending on volume and usage)
Horn size: 52mm
Horn Power: 4Q / 6W
Frequency response range: 120Hz-18KHz
Product size: 115*86*86mm
Speaker net weight : 415g
Charging Input: 5V, 500mA (use included Type-C cable)

FUNCTION

1. Wireless Bluetooth connection
2. Built-in microphone for hands-free calling
3. USB, MicroSD card playback
4. High-fidelity speakers for rich, detailed sound
5. Waterproof rating: IPX5
6. Resume playback memory function
7. TWS pairing (1+1 sync)
8. Supports MP3 / WAV formats

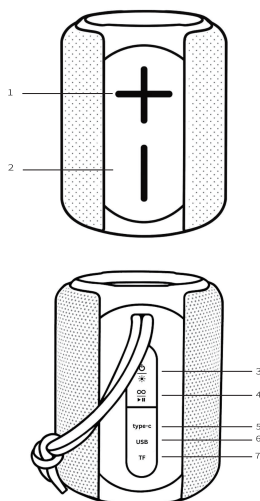

1. Next Track / Volume Up
2. Previous Track / Volume Down
3. Power On / Off / Light Button
4. TWS / Play / Pause / Mode Button
5. Type-C (DC 5V IN)
6. USB
7. Micro SD (TF) Card


VOLUME +/-

Press and hold + or - to gradually adjust volume.

- Long press + to increase the volume.
- Long press - to decrease the volume.

NEXT TRACK / PREVIOUS TRACK

- Short press + to skip to the next song.
- Short press - to return to the previous song.

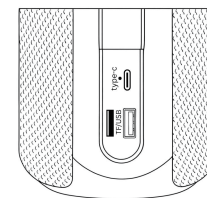

INPUTS

Type-C port: For charging only (DC 5V).

USB & MicroSD card ports: For music playback from MP3 or WAV files.

1. Insert your USB drive or MicroSD card into the speaker's corresponding port on the speaker
2. The speaker will automatically detect and switch to USB/MicroSD mode.
3. Music files (MP3/WAV) will begin playing automatically.
4. Use the buttons to skip, pause, or adjust volume as needed.


△Note: Make sure your files are properly saved on the drive before inserting.

POWER ON / OFF

- Power ON: Press and hold the button "⏻" to turn on the speaker.
- Power OFF: Press and hold the button "⏻" to turn off the speaker.

WIRELESS CONNECTION


1. Press and hold the Power button "⏻" for 3 seconds. You'll hear "Bluetooth mode, the Bluetooth device is ready to pair"
 2. Open Bluetooth settings on your phone or device.
 3. Tap "GROOVZ Speaker" to connect.
 4. Once paired, you'll hear "The Bluetooth device is paired."
- You're now ready to stream music wirelessly!

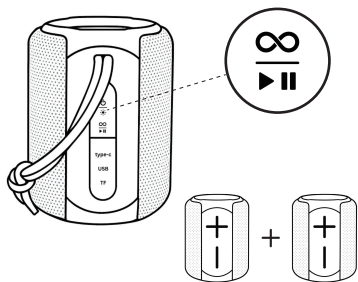

TWS STEREO MODE (Pair 2 Speakers Wirelessly)

1. Power on both Groovz Link speakers.
2. On either speaker, double-press the "⏻" on one speaker to enter pairing mode. Do not connect both speakers to your device — only connect to one. You'll hear "The Bluetooth device is paired" Once the speakers connect to each other.
3. On your phone or other device, open Bluetooth settings and connect to "GROOVZ Speaker".
4. You only need to connect to one speaker — audio will automatically play through both in perfect sync.
5. If the speakers don't pair on the first attempt, repeat Step 2 on the second speaker until you hear the confirmation sound.

△Note: TWS pairing works only with two Groovz Link speakers. Once paired, they'll remember each other for next time.

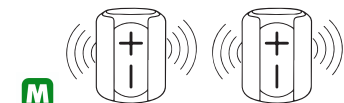

LED LIGHTS

Once speaker is ON, short press the LED light button. For every short press, you should get a different LED mode:

- Ambient — slow fade between colors
- Flashing — fast color transitions
- Stable Mode — single solid color
- Motion — reactive/dynamic lighting
- Off Mode — turns lights off

CHARGING

1. Please use a DC 5V charger and USB-A to USB-C cable to charge the device. Battery life varies depending on the volume level and environment during use.
2. A "Low power" voice alert will sound when the battery is running low. Recharge immediately to avoid automatic shutdown.
3. The power indicator light turns red when charging, and turns off when fully charged.
4. If the device is not used for an extended period, ensure to charge it at least twice a month to protect the battery and extend its lifespan.

SAFETY PRECAUTION

- The speaker supports IPX5 waterproof, it's safe for splashes/rain, but not submersion.
- Do not subject the device or battery to strong impacts or vibrations to prevent damage or malfunction.
- Avoid placing the speaker or battery in areas with excessively high or low temperatures, as this may cause malfunction.
- Do not hit, throw, puncture, or expose the product to impacts, drops, compression, or bending.
- Do not disassemble the device on your own, as it will void the warranty provided by our company.
- To ensure smooth connection, it is recommended that the distance between the mobile phone and the speakers be within 10 meters.

TROUBLESHOOTING

1. Bluetooth keeps disconnecting

- Keep the speaker within 10 meters (33 feet) of your device.
- Avoid obstacles like walls or metal objects.
- Restart your phone/tablet and the speaker.

2. Speakers can't pair with each other (TWS mode)

- Restart the speakers.
- Ensure both speakers are fully charged.
- Move away from other electronic devices to avoid interference.
- Do not connect both speakers to your device — only connect to one.

3. Sound is distorted or crackling

- Reduce volume on your device and speaker (high volume may cause clipping).
- Ensure the speaker isn't near Wi-Fi routers or microwaves.

4. Speakers can't turn on

- Charge for at least 30 minutes before use (a fully drained battery may need time to activate).
- Try a different cable/power adapter.

VOLUME CAUTION

- To prevent hearing damage, do not listen at high volume levels for extended periods. Use the 60/60 rule: Do not exceed 60% volume for more than 60 minutes at a time.
- Keep the volume at a moderate level in environments where awareness of surroundings is required.
- Children should use this device under adult supervision.
- Avoid maximum volume settings for extended periods, as this may overheat components or damage speakers.

WARRANTY INFORMATION

Groovz Link speakers come with a 1-Year Limited Warranty from the date of purchase. The warranty covers defects in materials and workmanship. It does not cover accidental damage, misuse, or unauthorized repairs. Should your product become defective during the warranty period, we will repair or replace (at our option) your product.

To register your warranty or report any defects, please contact customer support at support@groovzaudio.com



GROOVZ is a registered trademark of JTB Products LLC, West Chester, PA. Designed and Engineered in the USA.

Made in China
Imported by QVC, London, UK, W4 5XU

NEED HELP?

Visit <https://groovzaudio.com/pages/user-manuals> or email us at support@groovzaudio.com.

www.groovzaudio.com
West Chester, PA

GROOVZ