



TyreIQ S3

User's Guide



VAPON Technology Co. Ltd

WebSite : www.vapontech.com
E-mail : support@vapontech.com
Service Number : (925) 344-6360



VAPON Technology Co. Ltd

© 2026 VAPON Tech. All Rights Reserved

Trademarks

VAPON is a trademark of VAPON Technology Co., Ltd.

All other marks are trademarks or registered trademarks of their respective holders.

Copyright Information

© 2026 VAPON Technology Co., Ltd.

All rights reserved.

Disclaimer

The information, specifications and illustrations in this manual are based on the latest information available at the time of printing.

VAPON reserves the right to make changes at anytime without notice.

Visit our website:

www.vapontech.com

For Technical Assistance, send us an email at:

support@vapontech.com

One-Year Limited Warranty

Subject to the conditions of this limited warranty, VAPON Technology Co., Ltd (“VAPON”) warrants to its customers that this product is free of defects in materials and workmanship at the time of its original purchase for a subsequent period of one (1) year.

If the product fails to operate under normal use during the warranty period due to defects in materials or workmanship, VAPON will, at its sole option, either repair or replace the product in accordance with the terms and conditions herein.

Terms and Conditions

1 If VAPON repairs or replaces the product, the repaired or replaced product shall be warranted for the remaining time of the original warranty period. No charge will be made to the customer for replacement parts or labor charges incurred by VAPON in repairing or replacing the defective parts.

2 The customer shall have no coverage or benefits under this limited warranty if any of the following conditions are applicable:

a) The product has been subjected to abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of VAPON, including damage caused by shipping.

b) The product has been damaged by external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake or damage from exposure to weather conditions, Act of God, or battery leakage, theft, blown fuse, improper use of any electrical source, or the product was used in combination or connection with other products, attachments, supplies or consumables not manufactured or distributed by VAPON.

3 The customer shall bear the cost of shipping the product to VAPON. VAPON shall bear the cost of shipping the product back to the customer after the completion of service under this limited warranty.

4 VAPON does not warrant uninterrupted or error-free operation of the product. If a problem develops during the limited warranty period, the consumer shall take the following step-by-step procedure:

a) The customer shall return the product to the place of purchase for repair or replacement, or contact your local VAPON distributor or visit our website www.vapontech.com for further information.

b) The customer shall include a return address, daytime phone number and/or fax number, a complete description of the problem and original invoice specifying date of purchase and serial number.

c) The customer will be billed for any parts or labor charges not covered by this limited warranty.

d) VAPON will repair the product under the limited warranty within 30 days after receipt of the product. If VAPON cannot perform repairs covered under this limited warranty within 30 days, or after a reasonable number of attempts to repair the same defect, VAPON, at its option, will provide a replacement product or refund the purchase price of the product less a reasonable amount for usage.

e) If the product is returned during the limited warranty period, but the problem with the product is not covered under the terms and conditions of this limited warranty, the customer will be notified and given an estimate of the charges the customer must pay to have the product repaired, with all shipping charges billed to the customer. If the estimate is refused, the product will be returned freight collect. If the product is returned after the expiration of the limited warranty period, VAPON's normal service policies shall apply and the customer will be responsible for all shipping charges.

5. Any implied warranty of merchantability, or fitness for a particular purpose or use, shall be limited to the duration of the foregoing limited written warranty. Otherwise, the foregoing limited warranty is the consumer's sole and exclusive remedy and is in lieu of all other warranties, express or implied. Vapon shall not be liable for special, incidental, punitive or consequential damages, including but not limited to loss of anticipated benefits or profits, loss of savings or revenue, loss of data, punitive damages, loss of use of the product or any associated equipment, cost of capital, cost of any substitute equipment or facilities, downtime, the claims of any third parties, including customers, and injury to property, resulting from the purchase or use of the product or arising from breach of the warranty, breach of contract, negligence, strict tort, or any other legal or equitable theory, even if Vapon knew of the likelihood of such damages. Vapon shall not be liable for delay in rendering service under the limited warranty, or loss of use during the period that the product is being repaired.

6 Some states do not allow limitation of how long an implied warranty lasts, so the one-year warranty limitation may not apply to you (the Consumer). Some states do not allow the exclusion or limitation of incidental or consequential damages, so certain of the above limitations or exclusions may not apply to you (the Consumer). This limited warranty gives the Consumer specific legal rights and the Consumer may also have other rights which vary from state to state.

Safety Information

For your own safety and the safety of others, and to prevent damage to the equipment and vehicles, read this manual thoroughly before operating your tool. The safety messages presented below and throughout this user's manual are reminders to the operator to exercise extreme care when using this device. Always refer to and follow safety messages and test procedures provided by the vehicle manufacturer. Read, understand and follow all safety messages and instructions in this manual.

Safety Message Conventions Used

We provide safety messages to help prevent personal injury and equipment damage. Below are the signal words we used to indicate the hazard level in a condition.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury to the operator or to bystanders.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury to the operator or to bystanders.

Important Safety Instructions

Always use your tool as described in the user's manual, and follow all safety messages.

WARNING

- Do not route the test cable in a manner that would interfere with driving controls.
- Do not exceed voltage limits between inputs specified in this user's manual.
- Always wear ANSI approved goggles to protect your eyes from propelled objects as well as hot or caustic liquids.
- Fuel, oil vapors, hot steam, hot toxic exhaust gases, acid, refrigerant and other debris produced by a malfunctioning engine can cause serious injury or death. Do not use the tool in areas where explosive vapor may collect, such as in below-ground pits, confined areas, or areas that are

less than 18 inches (45 cm) above the floor.

- Do not smoke, strike a match, or cause a spark near the vehicle while testing and keep all sparks, heated items and open flames away from the battery and fuel / fuel vapors as they are highly flammable.
- Keep a dry chemical fire extinguisher suitable for gasoline, chemical and electrical fires in the work area.
- Always be aware of rotating parts that move at high speed when an engine is running and keep a safe distance from these parts as well as other potentially moving objects to avoid serious injury.
- Do not touch engine components that get very hot when an engine is running to avoid severe burns.
- Block drive wheels before testing with engine running. Put the transmission in park (for automatic transmission) or neutral (for manual transmission). And never leave a running engine unattended.
- Do not wear jewelry or loose-fitting clothing when working on an engine.
- Do not connect or disconnect the equipment while the ignition is on or the engine is running.

Table of Contents

One-Year Limited Warranty	2
Safety Information	4
Safety Message Conventions Used	4
Important Safety Instructions	4
Table of Contents	6
1 Using This Manual	8
1.1 Bold Text	8
1.2 Symbols and Icons	8
1.2.1 Solid Spot	8
1.2.2 Arrow Icon	8
1.2.3 Note and Important Message	8
2 Introduction	9
About TyreIQ S3	9
2.1 Descriptions	9
2.2 Accessories	9
2.3 Technical Specifications	10
3 Getting Started	10
3.1 Power on/off the TPMS Service Tool	10
3.2 Charging the TPMS Service Tool	10
3.2.1 Charging via Wall Plug	10
3.2.2 Charging via Personal Computer with USB Cable	11
3.3 Application Overview	11
3.4 Tool Symbols and Icons	11
4 OBD II	12
5 TPMS Operations	12
5.1 TPMS Sensor Activate	13
5.2 TPMS Diagnose	15
5.2.1 Read Sensor ID	15
5.2.2 Read Version Information	16
5.2.3 Read Codes	17
5.2.4 Erase Codes	17

5.2.5 Live Data	18
5.2.6 OBD Learning	19
5.2.7 Service Function	20
5.3 TPMS Sensor Programming	21
5.3.1 Manual Create	21
5.3.2 Clone By Activation	22
5.3.3 Automatic Create (1-16 sensors)	23
5.3.4 Clone By OBD	25
5.4 Study Help	26
6 RKE & RF Monitor	27
7 Latest Test	28
8 Settings	28
8.1 Sales region change	29
8.2 Language	29
8.3 Pressure Unit	30
8.4 Temperature Unit	30
8.5 Unit	31
8.6 Beep Set	31
8.7 Automatic Power-off	31
8.8 Uninstall	32
8.9 Display Test	32
8.10 Keypad Test	32
8.11 WIFI	33
8.12 Bluetooth	33
8.13 About	33
9 Update	33

1 Using This Manual

We provide tool usage instructions in this manual. Below are the conventions we used in the manual.

1.1 Bold Text

Bold text is used to highlight selectable items such as buttons and menu options.

Example:

Press the **ENTER** button to select.

1.2 Symbols and Icons

1.2.1 Solid Spot

Operation tips and lists that apply to specific tool are introduced by a solid spot ●.

Example:

When System Setup is selected, a menu that lists all available options displays. Menu options include:

- Languages
- Unit
- Beep
- Keypad Test
- LCD Test

1.2.2 Arrow Icon



An arrow icon indicates a procedure.

Example



To change menu language:

1. Scroll with the arrow keys to highlight **Language** on the menu.
2. Press the **Yes** button to select.

1.2.3 Note and Important Message

Note

A NOTE provides helpful information such as additional explanations, tips, and comments.

Example:

NOTE

Test results do not necessarily indicate a faulty component or system.

Important

IMPORTANT indicates a situation which, if not avoided, may result in damage to the test equipment or vehicle.

Example:

IMPORTANT

Do not soak keypad as water might find its way into the TPMS Service Tool.

2 Introduction

About TyreIQ S3

TyreIQ S3 is a professional TPMS diagnostic and maintenance tool which is capable of activating and decoding universal TPMS Sensors, programming TPMS sensors and diagnosing the original car tire pressure monitoring system. It can provide a complete solution for the TPMS service segment of the automotive aftermarket.

2.1 Descriptions

This section illustrates external features, ports and connectors of the tool.

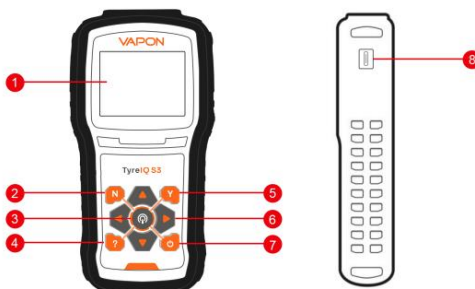


Figure 2-1 Front View

- 1 **LCD Display** - Shows menus, test results and operation tips.
- 2 **No Key** - Cancels a selection (or action) from a menu or generally returns to previous screen.
- 3 **Trigger Key** - Executes sensor trigger function.
- 4 **HELP Key** - Displays help information.
- 5 **Yes Key** - Confirms a selection (or action) from a menu.
- 6 **Direction Keys** - select an option or scroll through a screen of data or text.
- 7 **Power Switch** - Turns on/off the TPMS Service Tool and press and hold for 5 seconds for emergency reboots.
- 8 **USB Port** - Provides a USB connection between the TPMS Service Tool and PC / laptop.

IMPORTANT

Do not use solvents such as alcohol to clean keypad or display. Use a mild nonabrasive detergent and a soft cotton cloth.

2.2 Accessories

This section lists the accessories that go with the TPMS Service Tool. If you find any of the following items missing from your package, contact your local dealer for assistance.

- 1 **USB Cable** - provides connection between the TPMS Service Tool and a computer to upgrade the tool and charges the built-in battery.
- 2 **Buletooth VCI** - connecting with the vehicle to test OBDII function and TPMS system.
- 3 **Battery Charger** - charges built-in battery via wall plug.
- 4 **Warranty Card** - A warranty card is required if you need any repair or replacement from us.

5 **Quick Start Guide** - provides brief operation instructions for the usage of the scanner.

6 **User Manual** - comprehensively introduces the scanner including function, performance, method of use, etc.

2.3 Technical Specifications

Display: Backlight, 240*320 TFT color display

Working Temperature: 0 to 55 °C (32 to 140°F)

Storage Temperature: -20 to 70°C (-4 to 158°F)

Power Supply: 3.7V/3000mAH Li-polymer battery, 3.3V USB power

Dimensions (L*W*H): 200*100*38mm

Gross Weight: 1.3kg

Radio reception: 315 MHz and 433MHz

Radio emission: 125MHz,315 MHz and 433MHz

LF module of TyrelQ S3 module: The module is generated by MCU 125khz PWM as a starting signal, excited by LC oscillation circuit, and radiated 125khz electromagnetic signal, which is used for TPMS sensor to wake up from low power mode.

3 Getting Started

This section describes how to provide power to the TPMS Service Tool. It provides a brief introduction of applications loaded on the TPMS Service Tool, an introduction of symbol and icons displayed on the screen and how to power on/off and charge the tool.

3.1 Power on/off the TPMS Service Tool

The TyrelQ S3 is powered on/off by pressing the power switch.



To power on/off the tool

1. Press the power switch to power on the tool, and the unit will display the Main Menu.
2. Hold the power switch for one 1 seconds and the release to power down the TyrelQ S3. The tool powers down automatically after a period of inactivity. Please refer to 8.6 Auto Power-off Interval for details.

3.2 Charging the TPMS Service Tool

The TyrelQ S3 is shipped with fully charged battery, but due to self-drain it may require charging, it is recommended to charge the tool over 3 hours before first use.

The unit charges on any of the following sources

- 12-volt wall plug
- USB connection to personal computer

IMPORTANT

Use the battery charger or USB cable included in the TyrelQ S3 tool kit ONLY. The use of un-approved power supplies may damage the tool and will void the tool warranty.

3.2.1 Charging via Wall Plug



To charge via wall plug

1. Find the power port at left side of the tool.

2. Connect the tool to power source with the battery charger provided.

3.2.2 Charging via Personal Computer with USB Cable

The TPMS Service Tool can also be charged through the USB port.



To charge via USB cable

1. Insert the small end of the USB cable to the USB port at the right side of the TPMS Service Tool and the large end to a computer.

3.3 Application Overview

When the TPMS Service Tool boots up, the Main Menu displays. This screen shows all applications loaded on the unit.

The following applications are preloaded into the TPMS Service Tool

- **TPMS** – leads to screens for TPM sensor activation, programming, TPMS Diagnose and sensor learning process.
- **OE** - enters vehicle selection by selecting "sensor brand" and part number (OE number) at one time.
- **OBDII** – leads to OBDII screens for all 9 generic OBD system tests.
- **Latest Test** – leads to screens for access the last tested sensor data.
- **KEY&RF** – leads to screens for checking RF Remote Keyless Entry (key FOB).
- **Settings** – leads to screens for adjusting default settings to meet your own preference.
- **Data Manager** – leads to screens for access to data records.
- **Update** – leads to screen for updating the scanner.



Figure 3-1 Sample Home Screen

3.4 Tool Symbols and Icons

This section provides a brief introduction of symbols and icons of tool display.

No.	Indicator	Description
1		Indicates internal battery volume.
2		Indicates the VCI is connecting.
3		Indicates battery charging.
4		Wifi connected successfully.

Table 3-1

4 OBD II

OBD II menu lets you access all OBD service modes. According to ISO 9141-2, ISO 14230-4, and SAE J1850 standards, the OBD application is divided into several sub programs, called 'Service \$xx'. Below is a list of OBD diagnostic services:

- **Service \$01** - request current powertrain diagnostic data
- **Service \$02** - request powertrain freeze frame data
- **Service \$03** - request emission-related diagnostic trouble codes
- **Service \$04** - clear/reset emission-related diagnostic information
- **Service \$05** - request oxygen sensor monitoring test results
- **Service \$06** - request on-board monitoring test results for specific monitored systems
- **Service \$07** - request emission-related diagnostic trouble codes detected during current or last completed driving cycle
- **Service \$08** - request control of on-board system, test or component
- **Service \$09** - request Vehicle Information
- **Service \$0A** - permanent diagnostic trouble codes(DTCs)(cleared DTCs)

When OBD II application is selected from Home screen, the scanner starts to detect the communication protocol automatically. Once the connection has established, a menu that lists all of the tests available on the identified vehicle displays. Menu options typically include:

- System Status
- Read Codes
- Freeze Frame Data
- Clear Codes
- Live Data
- I/M Readiness
- O2 Sensor Test
- On-board Monitor Test
- Component Test
- Vehicle Information
- Modules Present
- Code Lookup

NOTE

Not all function options listed above are applicable to all vehicles. Available options may vary by the year, model, and make of the test vehicle. A "Not supported the mode!" message displays if the option is not applicable to the vehicle under test.

5 TPMS Operations

This section illustrates how to use the TPMS Service Tool including how to activate & decode TPM sensor data, how to do TPMS diagnosis and how to program OEM sensors etc.



To test the TPMS:

1. Choose **Settings--Area** from the Main Menu and select the area you work.
2. Highlight **TPMS** from the Main Menu and press the **YES** key to start.



Figure 5-1 Sample Application Menu

3. On each screen that appears, select the correct option and then press the **YES** key. Do this until the complete vehicle information is entered.

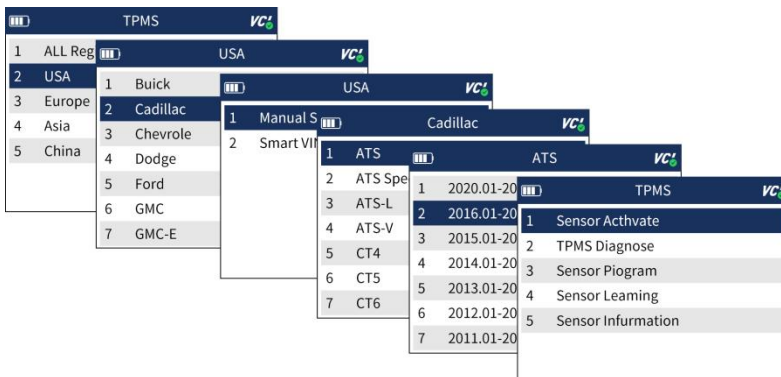


Figure 5-2 Sample Vehicle Selection Menu

NOTE

The selected vehicle is remembered by the tool when a test is started. It is very convenient for workshops to trigger TPM sensors of the same vehicle.

5.1 TPMS Sensor Activate

It enters all wheel mode which provides a vehicle icon on the screen to give user prompts for each wheel. In this mode, each TPM has wheel locations of LF (Left Front), RF (Right Front), RR (Right Rear), LR (Left Rear) and spare (if the car has a spare tire).

1. In all wheel mode, the solid spot flashes at the wheel to be tested. Depending on the sensor type, place the tool to the correct position to insure sensor activation and decode. Below is a chart illustrating how to correctly place the tool.

No.	Sensor Type	Illustration	Description
1	LF Activated Sensors		The tool should be placed alongside the valve stem.
	Ford branded LF Activated Sensors		The tool should be held 180° away from the valve stem.
2	Magnet Activated Sensors		If the TPM requires a magnet, place the magnet over the stem and then place the tool alongside the stem
3	Delta P activated sensors		If the sensor requires tire deflation (of the order of 10PSI), the icon P↓ will appear on screen. Please deflate the tire and place the tool alongside the stem

Table 5-1

2. Press Activate to test the TPM. If test passes, TPM data is briefly displayed for 3 seconds and then the solid spot on the vehicle icon moves around to prompt that the next wheel should be tested. Or manually move around vehicle using **UP/DOWN** arrow keys.

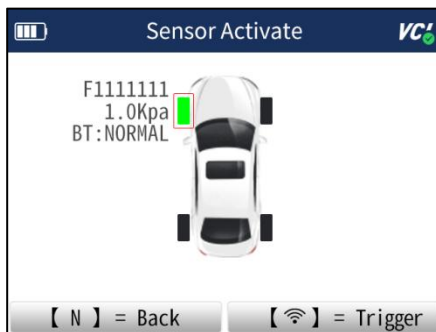


Figure 5-3 Sample All Wheel Test Data Screen

3. TPM data is stored and can be accessed by selecting a wheel location and press the **YES** key.
4. Depending on test results, one of the following possible scenarios may display.

No.	Sensor Type	Illustration	Description
1	Successful Sensor Read		TPMS sensor was successfully activated and decoded. The TyreIQ S3 emits a series of tones and displays pressure at wheel location.
2	Failed Sensor Read		The search period expires without reading a TPM. The TyreIQ S3 emits a single audible beep and displays "No sensor detected." Repeat the test process to verify.
3	Duplicate ID		A sensor with a duplicate ID has been read. The TyreIQ S3 emits three audible beep and displays "Sensor ID duplicate." Clear data and re-read sensors.

Table 5-2

NOTE

Operator can press the **NO** key to abort the sensor activation and return to previous menu at any time.

5.2 TPMS Diagnose

The TPMS Diagnose function lets users retrieve/clear TPMS DTCs, read live data and perform special functions, helping technicians to quickly find out faulty TPMS and turn off MILs.

5.2.1 Read Sensor ID



To Read Sensor ID

1. Select **TPMS--Diagnose** from the available Menu.
2. Choose **Read ID** after the tool communicate with the car successfully.


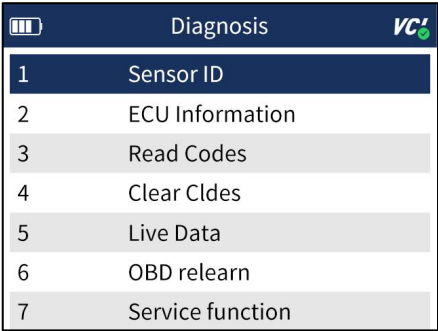


Figure 5-4 Sample Sensor ID Menu

3. The sensor ID information will be displayed. Press **Y** button to save the sensor ID or **N** button to exit.



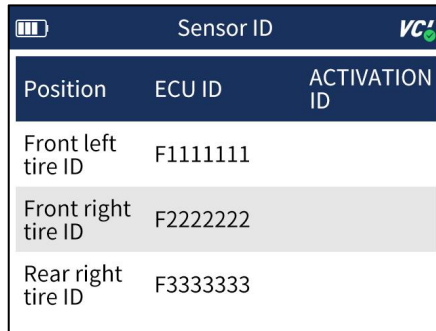


Position	ECU ID	ACTIVATION ID
Front left tire ID	F1111111	
Front right tire ID	F2222222	
Rear right tire ID	F3333333	

Figure 5-5 Sample Sensor ID Screen

5.2.2 Read Version Information


- ▶ To Read Version Information
1. Select **TPMS--Diagnose** from the available Menu.
 2. Choose **Read Version Information** after the tool communicate with car successfully.

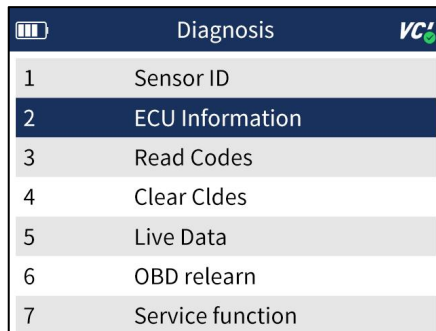

	Diagnosis
1	Sensor ID
2	ECU Information
3	Read Codes
4	Clear Cldes
5	Live Data
6	OBD relearn
7	Service function

Figure 5-6 Sample ECU Information Menu

3. The version information will be displayed. Press **Y** button to save the version information or **Y** or **N** button to exit.

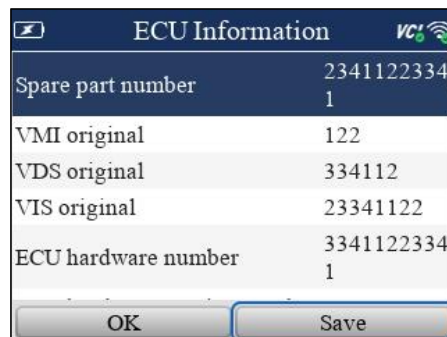

ECU Information	
Spare part number	23411223341
VMI original	122
VDS original	334112
VIS original	23341122
ECU hardware number	33411223341

OK Save

Figure 5-7 Sample ECU Information Screen

5.2.3 Read Codes



To Read Codes

1. Select **TPMS--Diagnose** from the available Menu.
2. Choose **Read Codes** after the tool communicate with the car successfully.

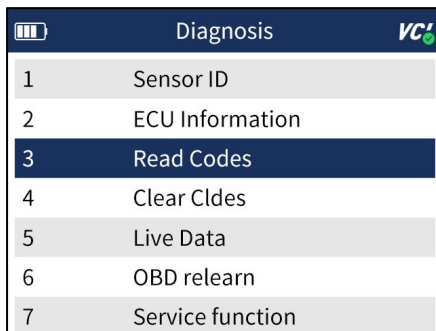


Figure 5-8 Sample Read Codes Menu

3. The fault codes will be displayed if have. Press **Y** button to save the fault codes or **N** button to exit.

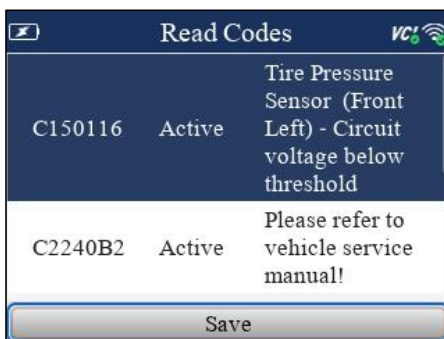


Figure 5-9 Sample Read Codes Screen

5.2.4 Erase Codes



To Erase Codes

1. Select **TPMS--Diagnose** from the available Menu.
2. Choose **Erase Codes** after the tool communicate with the car successfully.

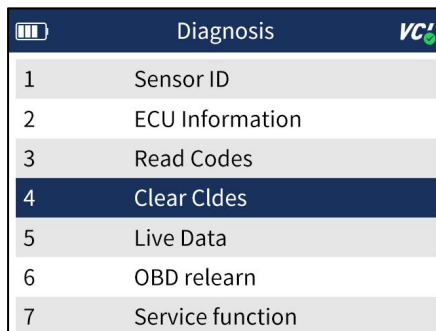


Figure 5-10 Sample Clear Codes Menu

3. There will be a notice displayed. Press **Y** button to continue the operation or **N** button to exit.

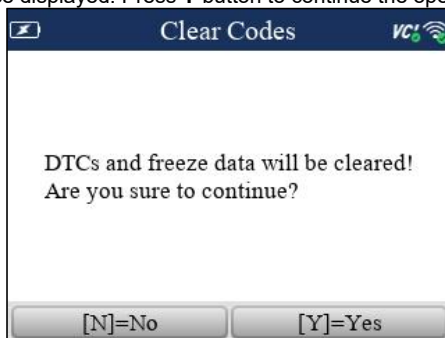


Figure 5-11 Sample Clear Codes Screen

5.2.5 Live Data



To check Live Data

1. Select **TPMS--Diagnose** from the available menu.
2. Choose **Live Data** after the tool communicate with the car successfully.

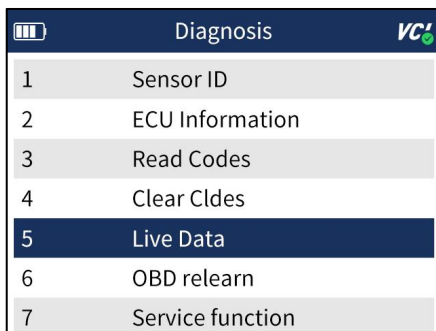


Figure 5-12 Sample Live Data Menu

3. The live data will be displayed. Press **Y** button to Pause, **Y** button to enter graph screen, **Y** button to Save or **N** button to exit.

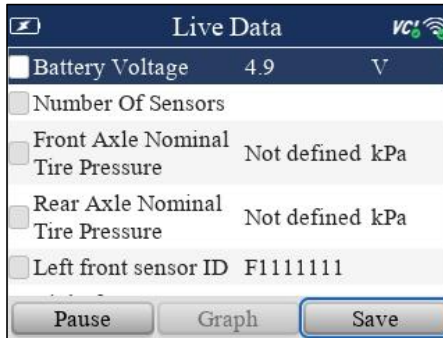


Figure 5-13 Sample Live Data Screen

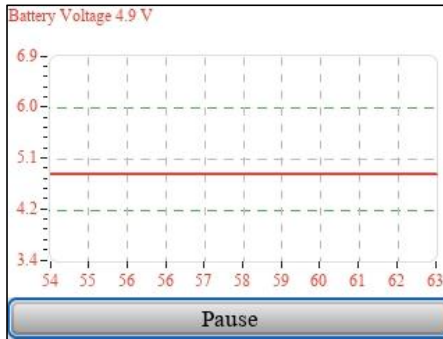


Figure 5-14 Sample Single Graph Screen

5.2.6 OBD Learning



To enter OBD Learning

1. Select **TPMS--Diagnose** from the available Menu.
2. Choose **OBD Learning** after the tool communicate with the car successfully.

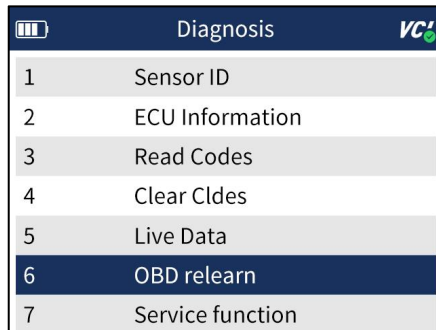


Figure 5-15 Sample OBD Relearn Menu

3. The screen will show as Figure 4 if all sensors are activated. If not, you need to input sensor ID manually and press Y button to continue the operation.

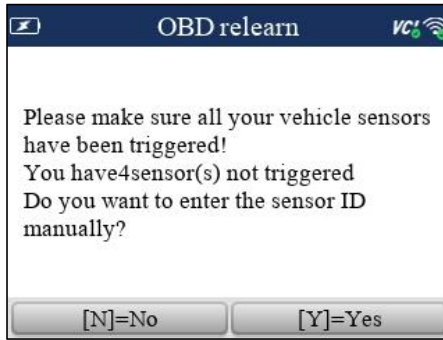


Figure 5-16 Sample OBD Relearn Screen

4. If learning successfully, please re-activate the sensors and sensor pressure information will be displayed on the cluster. If failed, the cluster will not display the sensor pressure information and the TPMS MILs will turn on.

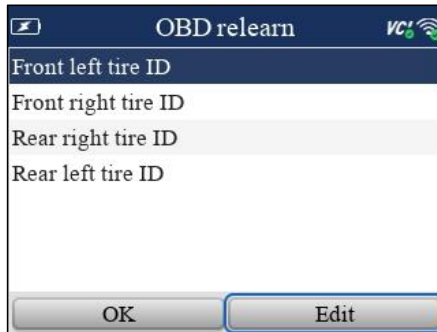


Figure 5-17 Sample OBD Relearn Screen

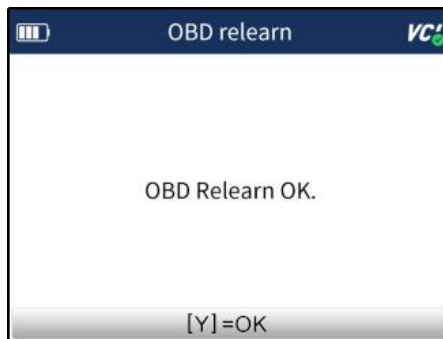


Figure 5-18 Sample OBD Relearn Screen

5.2.7 Service Function



To enter Service Function

1. Select **TPMS--Diagnose** from the available Menu.
2. Choose **Service Function** after the tool communicate with the car successfully.

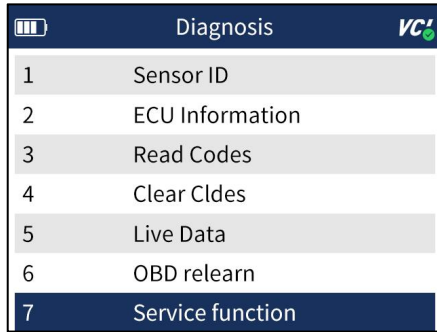


Figure 5-19 Sample Service Function Screen

3. Choose the available function and follow the instructions on the tool to continue the operation.

5.3 TPMS Sensor Programming

The TPMS Programming function lets users to program the sensor data to the VAPON sensors and replace faulty sensor. There are following four options available when doing programming.

- Manual Create
- Copy By Activation
- Automatic Create
- Copy By OBD

5.3.1 Manual Create

The Manual Create function lets users to input the sensor ID manually.



To create sensor ID manually:

1. Highlight **TPMS** from the Main Menu and select the vehicle model as need.
2. Select **Programming--Manual Create** from the available menu.

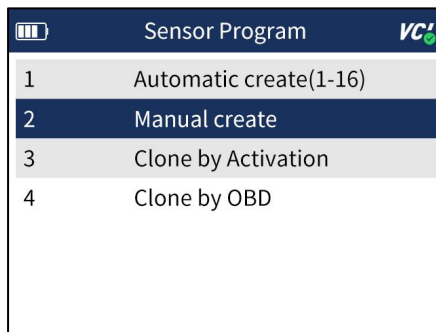


Figure 5-20 Sample Programming Menu

3. Input the sensor ID in the dialog box and press **Y** to continue.

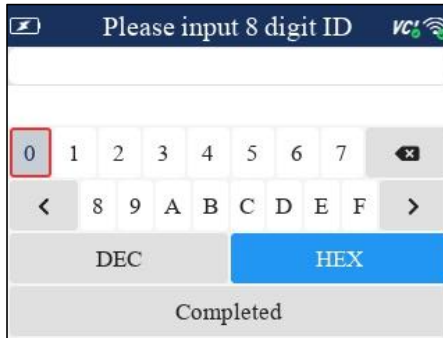


Figure 5-21 Sample Manual Create Screen

4. Place a new VAPON sensor near the TPMS tool (around 0-20 cm).

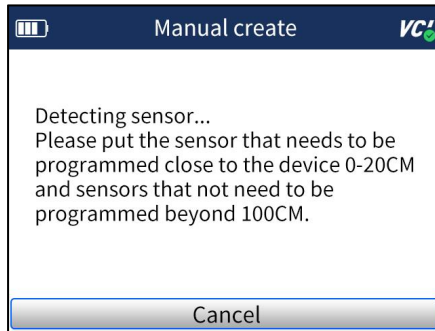


Figure 5-22 Sample Manual Create Screen

5. Press **Y** to start the programming when the tool detect the sensor.
6. Press **Y** to exit after the programming successfully.

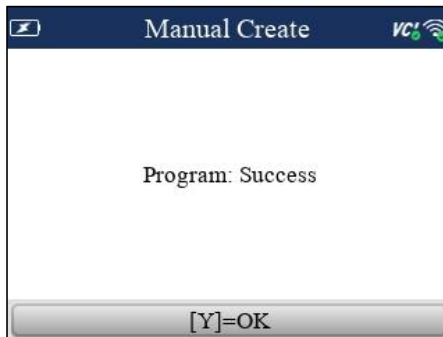


Figure 5-23 Sample Programming Screen

5.3.2 Clone By Activation

The Clone By Activation function lets users automatically write in the retrieved original sensor data to the VAPON Sensor which is used after the original sensor is triggered.



To Clone by activation:

1. Highlight **TPMS** from the Main Menu and select the vehicle model as need.

2. Select **Programming--Clone by Activation** from the available menu.
3. Place the tool near the original sensor to be copied and press **Activate** to continue.
4. After trigger successfully, press **Y** to continue.

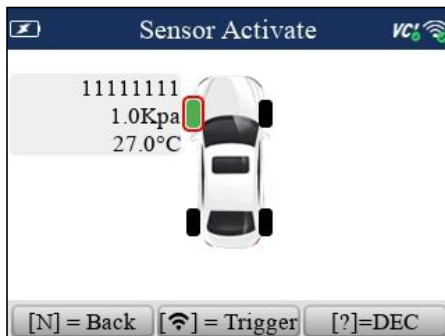


Figure 5-24 Sample Activation Screen

5. Place a new VAPON sensor near the TPMS tool (around 0-20 cm).

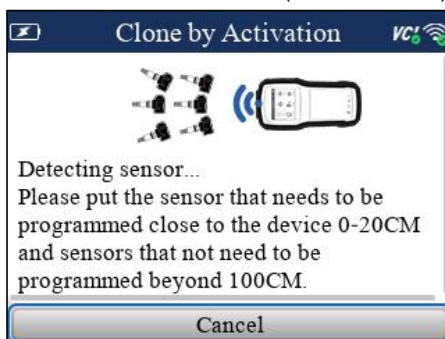


Figure 5-25 Sample Activation Screen

6. Press **Y** to start the programming when the tool detect the sensor.
7. Press **Y** to exit after the programming successfully.

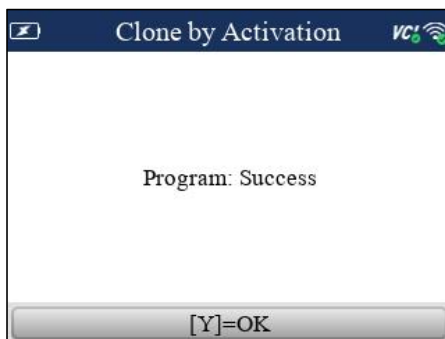


Figure 5-26 Sample Activation Screen

5.3.3 Automatic Create (1-16 sensors)

The Automatic Create function is to program VAPON sensors by applying random IDs created according to the test vehicle when it is unable to obtain the original sensor ID.



To create sensor ID automatically:

1. Highlight **TPMS** from the Main Menu and select the vehicle model as need.
2. Select **Programming--Automatic Create** from the available menu.

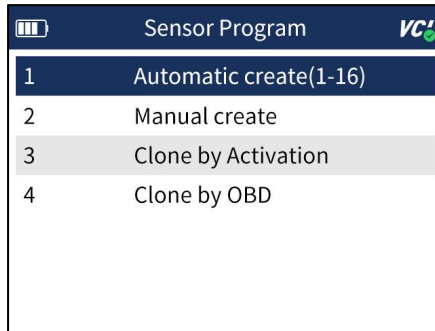


Figure 5-27 Sample Automatic Create Menu

3. Place new VAPON sensors(1-16) near the TPMS tool (around 0-20 cm).

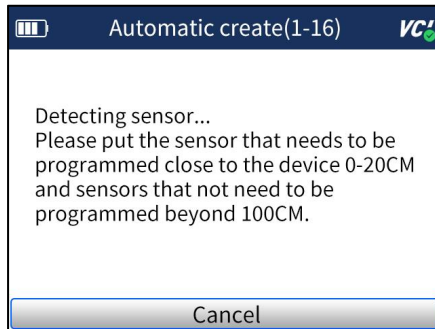


Figure 5-28 Sample Automatic Create Screen

4. Press **Y** to start the programming when the tool detect the sensor.

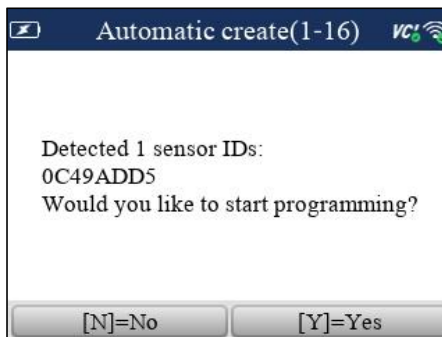


Figure 5-29 Sample Sensor Detection Screen

8. Press **Y** to exit after the programming successfully.

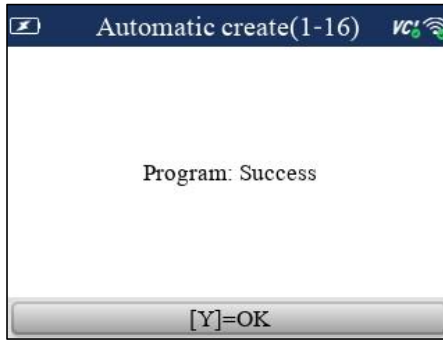


Figure 5-30 Sample Programming Success Screen

5.3.4 Clone By OBD

This function lets users to write in the saved sensor information to VAPON sensors after performing Read IDs from Vehicle in Learning function.



To create sensor ID manually:

- 1.Highlight **TPMS** from the Main Menu and select the vehicle model as need.
- 2.Select **Programming--Clone by OBD** from the available menu.

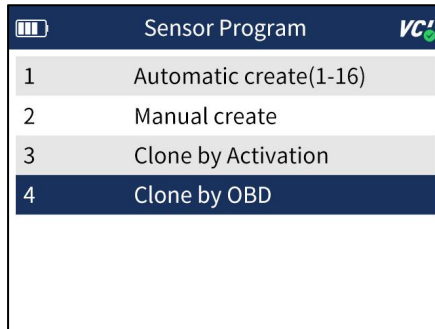


Figure 5-31 Sample Clone by OBD Menu

3. Connect the TPMS tool with the vehicle via OBDII cable and turn the ignition on.
4. Select the sensor ID to be copied after reading ID information successfully and press Y to continue.

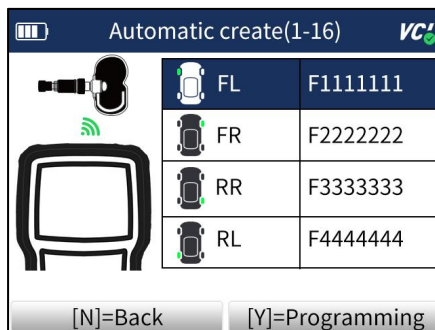


Figure 5-32 Sample ID Copy Screen

5. Place a new VAPON sensor near the TPMS tool (around 0-20 cm).

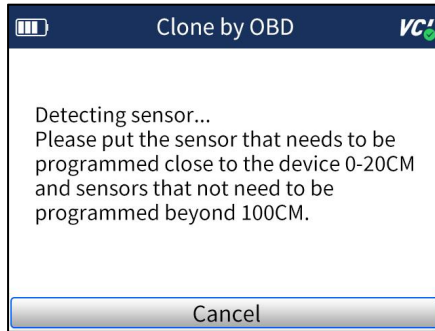


Figure 5-33 Sample Programming Screen

6. Press **Y** to start the programming when the tool detect the sensor.
7. Press **Y** to exit after the programming successfully.

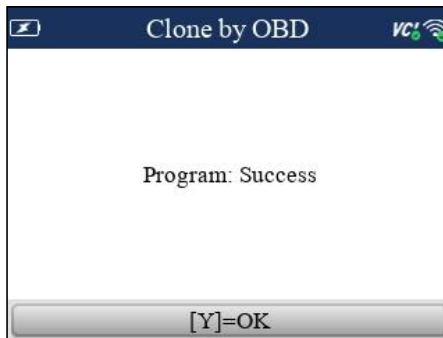


Figure 5-34 Sample Programming Success Screen

5.4 Study Help

This part introduces the relevant information of the sensor, such as manufacturer, sensor frequency, OE number, learning type, learning method and learning steps etc.



To check Sensor Learning Process:

1. Scroll with the UP/DOWN arrow keys to highlight **TPMS** from the Main Menu and press the **YES** key to start.
2. On each screen that appears, select the correct option and then press the **YES** key. Do this until the complete vehicle information is entered.
3. Scroll with the UP/DOWN arrow keys to highlight Sensor Learning Process and press the **YES** key to confirm.
4. The detailed process information will be displayed.

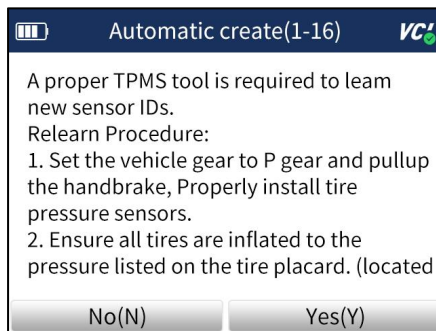


Figure 5-35 Sample Sensor Learning Process Screen

6 RKE & RF Monitor

This section illustrates how to check RF Remote Keyless Entry (key FOB) with the trigger tool. The TyreIQ S3 tests 315MHz and 433MHz key fobs only, and checks only for a signal present.



To test the check RF Remote Keyless Entry:

1. Scroll with the UP/DOWN arrow keys to highlight RKE & RF Monitor from the Main Menu and press the **YES** key to start.

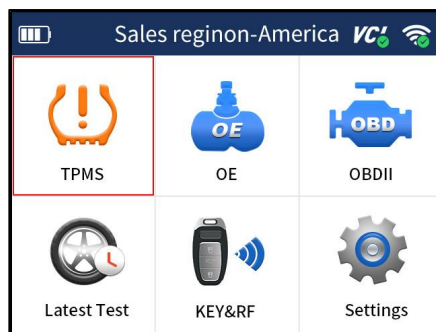


Figure 6-1 Sample Application Menu

2. Hold the Key Fob close to the tool, and press the function buttons on the FOB. If the button works and the FOB is sending a signal, the tool will beep and the following screen displays.

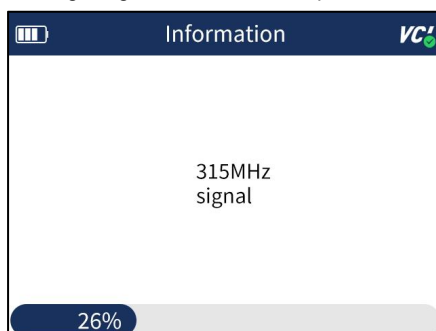


Figure 6-2 Sample RKE& RF Monitor Screen

3. Press the **NO** key to exit.

7 Latest Test

Latest Test leads to screens for historic test records and can save 25 records at most.



To test the TPM sensors:

1. Scroll with the **UP/DOWN** arrow keys to highlight **Latest Test** from the Main Menu and press the **YES** key to start.



Figure 7-1 Sample Latest Test Screen

2. Scroll with the **UP/DOWN** arrow keys to choose one test record from the history diagnostic records and press the **YES** key to start.

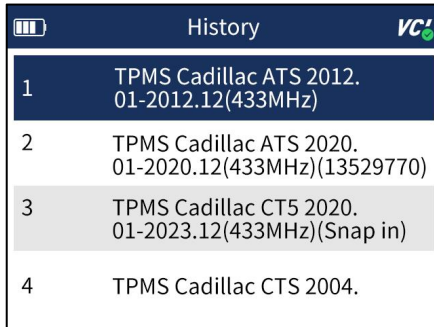


Figure 7-2 Sample Vehicle Record Screen

3. Choose the function you need to start the operation.

8 Settings

This section illustrates how to program the TPMS Service Tool to meet your specific needs.

When Setup application is selected, a menu with available service options displays. Menu options typically include

- Sales region change
- Language
- Pressure Unit
- Temperature Unit

- Unit
- Beep Set
- Automatic Power-off
- Uninstall
- Display Test
- Keypad Test
- WIFI
- Bluetooth
- About

8.1 Sales region change

Selecting **Sales region change** opens a screen that allows you to select the area you work in.



To configure sales region

1. Scroll with the **UP/DOWN** arrow keys to highlight Region from Settings menu and press the **YES** key.
2. Highlight the region you work in before starting the test. And the tool will load the new database for the selected area.



Figure 8-1 Sample Sales Region Selection Screen

8.2 Language

Selecting Language opens a screen that allows you to choose system language. The TPMS Service Tool is set to display English menus by default.



To configure system language

1. Scroll with the **UP/DOWN** arrow keys to highlight **Language** from Setup menu and press the **YES** key.

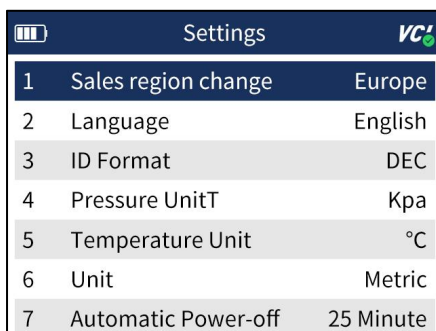


Figure 8-2 Sample Language Setup Screen

2. Press the **UP/DOWN** arrow key select a language and press the **YES** key to confirm and return.



Figure 8-3 Sample Language Selection Screen

8.3 Pressure Unit

Selecting Pressure Unit opens a screen that allows you to set the pressure unit in kPa, PSI or bar.



To configure pressure unit

1. Scroll with the **UP/DOWN** arrow keys to highlight **Pressure Unit** from Setup menu and press the **YES** key.
2. Press the **UP/DOWN** arrow key select an item and press the **YES** key to save and return.

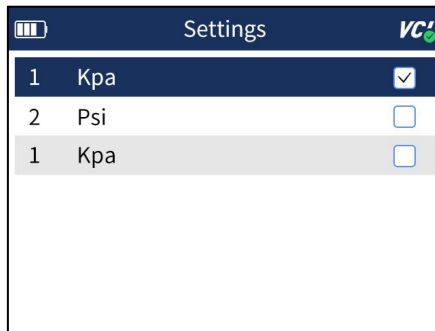


Figure 8-4 Sample Pressure Unit Selection Screen

8.4 Temperature Unit

Selecting Temperature Unit opens a screen that allows you to set the temperature unit Celsius or Fahrenheit degrees.



To configure temperature unit

1. Scroll with the **UP/DOWN** arrow keys to highlight **Temperature Unit** from Setup menu and press the **YES** key.
2. Press the **UP/DOWN** arrow key select an item and press the **YES** key to save and return.

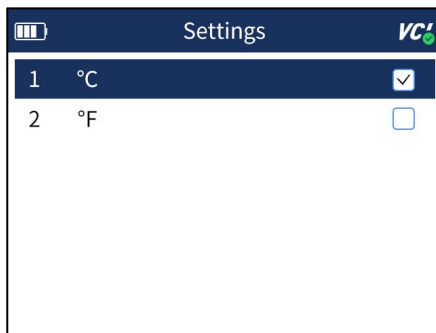


Figure 8-5 Sample Temperature Unit Selection Screen

8.5 Unit

Selecting **Unit** opens a dialog box that allows you to choose between Imperial customary or metric units of measure.

▶ To change the unit setup:

1. Press **Settings** from home screen of the TyreIQ S3 diagnostic application.
2. Press **Unit** and available unit system display.
3. Select a unit system.

8.6 Beep Set

Selecting Beep Set opens a dialog box that allows you to turn on/off the beeper.

- ▶ To turn on/off the beeper
1. Scroll with the UP/DOWN arrow keys to highlight **Beep Set** from Settings menu and press the **YES** key.
 2. Press the **UP/DOWN** arrow key select an item and press the **YES** key to save and return.

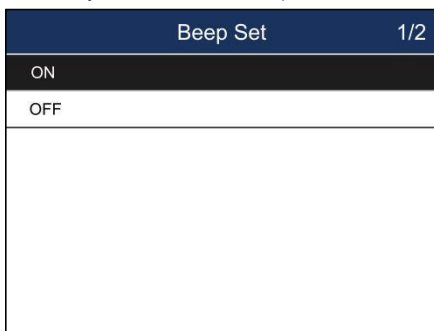


Figure 8-6 Sample Beeper On/Off Selection Screen

8.7 Automatic Power-off

Selecting Auto Power-off opens a dialog box that allows you to set automatic power-off interval of the trigger tool to save battery life. Auto power off is not operational when charging. The maximum interval is 20 minutes and the minimal is 1 minute.

- ▶ To change auto power off interval:
1. Use the **UP/DOWN** arrow key to select **Auto Power-Off** from Settings screen and press the **YES** key to confirm.
 2. Use the UP/DOWN key to increase or decrease time, and press the YES key to save and return.

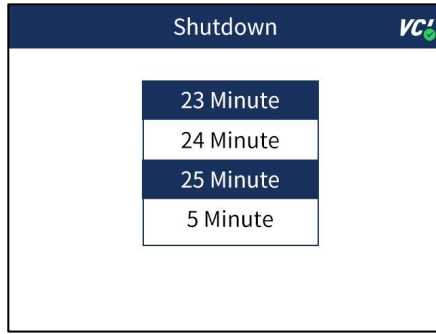


Figure 8-7 Sample Auto Power-off Interval Screen

8.8 Uninstall

This option allows you to uninstall the vehicle software installed in the scanner.

- ▶ To uninstall a vehicle software:
 1. Tap **Settings** application on home screen of TyreIQ S3.
 2. Tap the **Uninstall Vehicle Software** option on the option list.
 3. Choose the vehicle software you want to delete or choose **Select All**.
 4. Press **Back** to quit or and press **OK** to uninstall.

8.9 Display Test

Selecting **Display Test** option opens a screen that allows you to check the functionality of the display.

- ▶ To test the display:
 1. Scroll with the arrow keys to highlight **Display Test** from Settings menu and press the **ENTER** key to start test. Check if there are any missing spots in the LCD screen.

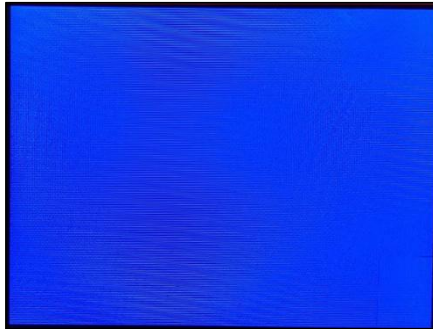


Figure 8-8 Sample LCD Test Screen

2. To quit the test, press the **Back** key.

8.10 Keypad Test

Selecting **Keypad Test** option opens a screen that allows you to check the functionality of the keypad.

- ▶ To test the keypad:
 1. Scroll with the arrow keys to highlight **Keypad Test** from Settings menu and press **ENTER** key.

2. Press any key to start test. The virtue key corresponding with the key you pressed will be highlighted on the screen if it works correctly.

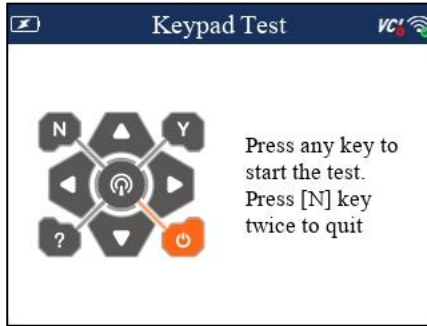


Figure 8-9 Sample Keypad Test Screen

3. To quit the test, press **N** key twice.

8.11 WIFI

Selecting **WIFI** option opens a screen that shows all available wifi for your scan tool. Please note only 2.4G wifi can be supported.

8.12 Bluetooth

Selecting **Bluetooth** option opens a screen that shows all available bluetooth for your scan tool.

8.13 About

Selecting **About** option opens a screen that shows information about your scan tool, such as serial number, which may be required for product registration.



To view information of your scan tool:

1. Scroll with the arrow keys to highlight **About** from Settings menu and press the **ENTER** key.
2. A screen with detailed information of the scanner displays.



Figure 8-10 Sample Tool Information Screen

3. Press the **Back** key to exit.

9 Update

The scanner can be updated to keep you stay current with the latest development of diagnosis. This section illustrates how to register and update your scan tool.

You are also allowed to register and create a VAPON ID by scanning QR code.



To register by scanning QR code:

1. Enter **Update** and connect WIFI, then scan the QR code to register.



Figure 9-1 Sample Registration Screen

2. Scan the QR code and enter Register webpage. Enter your own email address and click “Send code” to find the verification code in your mailbox . Create a unique password, confirm password and then click “Free registration” to complete.

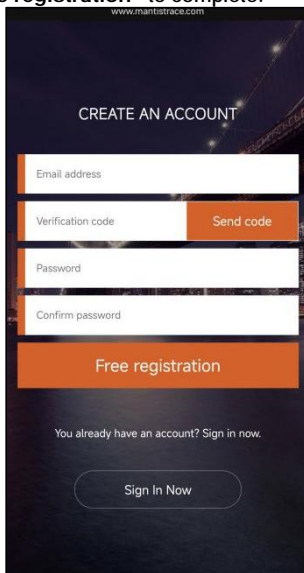


Figure 9-2 Sample Register Screen

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure StatementThe device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.