 


Item #1013900000  
Model #VK-8306A

# USER AND CARE GUIDE

---

## HUMIDIFIER

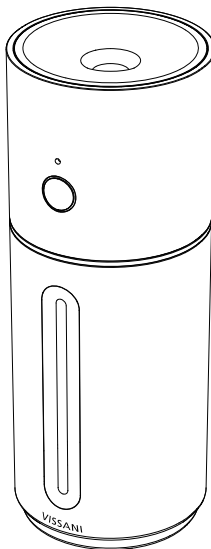 


## Pre-Installation

### SPECIFICATIONS

Power Supply	5V 2A max
Battery capacity	2000mAh (7.4Wh, 3.7V), charging time: 2-3hrs
Water Tank Capacity	10.15oz/300mL
Max Runtime	Up to 10 hours on low mist setting Note: The humidifier may run for a longer or shorter time depending on the environmental temperature and humidity.
Noise Level	≤28dB
COVERAGE	150 ft <sup>2</sup> /14 m <sup>2</sup>
Dimensions	2.75in W x 2.75in D x 7.16in H/ 6.99cm AN x 6.99cm PR x 18.19cm AL
Weight	0.478 lbs/0.217kg


### PACKAGE CONTENTS



Part	Item	Quantity
A	Humidifier	1
B	Wick	4
C	USB-C Cable	1

## Pre-Installation (continued)
 
### PARTS DESCRIPTION

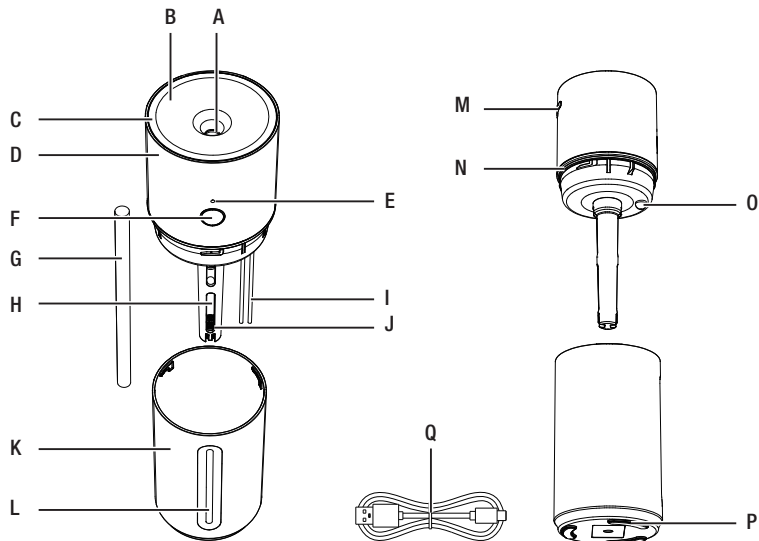

Part	Item	Part	Item
A	Mist Nozzle	J	Spring
B	Top Cover	K	Water Tank
C	Accent Light	L	Water Level Window
D	Humidifier Top	M	USB-C Connector
E	Indicator	N	Sealing Ring
F	Control Button	O	Water Tank Light
G	Wick	P	Anti-Slip Gasket
H	Wick Bracket	Q	USB-C Cable
I	Probe		


## Operation
 
### 1 Function

- When the humidifier is on, the indicator (A) is steady on green light. When the humidifier is off, the indicator (A) is off.
- When the battery is low, the indicator (A) is blinking red light.
- When charging, the indicator (A) is blinking green light. When the battery is full, the indicator (A) is steady on green light.
- When the humidifier is low water, the indicator (A) is steady on red light.


### 2 Power Button

- Tap to turn the humidifier on / low mist level / high mist level / off.
- Press power button (B) for 2s to turn the accent light and water tank light on/off.

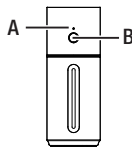


### 3 To open

 - Rotate the top of humidifier anticlockwise and remove from the water tank.

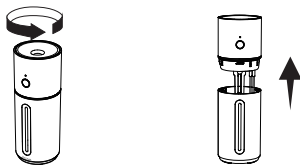

### 4 Clean the water tank before first use.

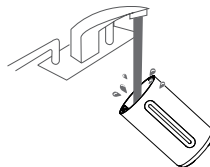 


### 5 Fill the tank.

- Recommend using purified or distilled water. Do not fill with hot water.



### 6 Choose a flat location

 - Choose a hard, flat surface for the humidifier at least 12 inches / 30 cm away from any walls. The surface must be water-resistant.

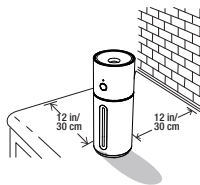


## Operation (continued)

### CHANGING THE WICK

#### 1 Turning off

 - Turn off the humidifier, remove the humidifier top from the tank.

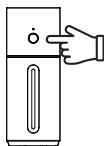


#### 2 Take off the wick bracket

- Rotate the wick bracket anticlockwise, take off the wick bracket.



#### 3 Change a new wick

 - Remove the wick from the filter bracket, change a new wick.

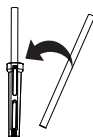


#### 4 Put it back

- Place the wick bracket and rotate it clockwise.



### DO NOT ADD FOREIGN OBJECTS

 - 1 □ Do not add essential oils or pour water at the mist nozzle. If there is standing water in the mist nozzle, please dry it with a clean tissue or cloth.

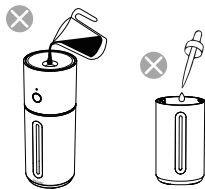

**NOTE:** We recommend using purified or distilled water to fill the tank.



**NOTE:** Do not fill past the tank's max waterline.



**NOTE:** Do not add water directly through mist nozzle.



**NOTE:** Do not add essential oils into the water tank.



**NOTE:** Do not use water treatment liquids in this humidifier.


## Care & Maintenance
 
### CLEANING

Please clean water tank and mist nozzle every 3 days before storing it.


#### 1 Turning off

- Unplug the humidifier, remove the humidifier top and wick bracket from the water tank.

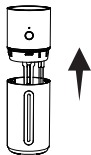


#### 2 Clean the water tank

 - Rinse the water tank, then pour out any water from the tank.

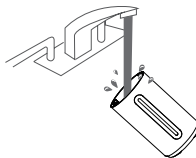

#### 3 To descale the humidifier

 - Fill the tank with 1/3 of a cup/ 70 mL of distilled white vinegar.
- Assemble the humidifier top on the tank, and swish the vinegar around the tank, soak for 15-20 minutes.
- Rinse all parts until any vinegar smell is completely gone.
- Clean the mist nozzle with a 50/50 mix of white vinegar and water by a cotton swab. Wipe off with a wet cotton swab. Dry all parts with a cloth. Make sure all parts are completely dry before reassembling or storing.

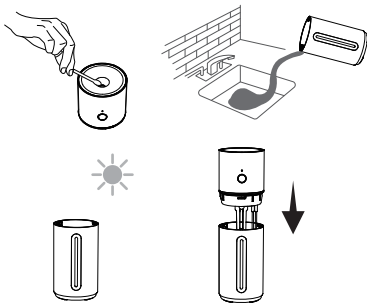

**NOTE:** Cleaning on a water-resistant surface, such as a kitchen counter.



**NOTE:** Change the water in 3 days to avoid bacteria growth.



**NOTE:** Use a tissue or cloth to clean the mist nozzle regularly.



**NOTE:** If not using the humidifier for 3 days or longer, remove water, clean and dry.



**NOTE:** Never immerse the top of humidifier in water or liquid. Do not place any part of the humidifier in dishwasher.



**NOTE:** Do not use detergents or additives to clean the humidifier.

## Safety Information

### READ AND SAVE THESE INSTRUCTIONS

- Only use the humidifier as described in this manual.
- Place the humidifier and USB-C Cable properly so that it will not be knocked over.
- Do not place humidifier near to large pieces of furniture or in high-traffic areas.
- Turn off humidifier if do not use it. And disconnect from power by removing the USB-C Cable from the outlet.
- Do not use the humidifier in wet environments.
- Keep the humidifier away from children.
- Always unplug your humidifier from the power outlet before cleaning your humidifier or detaching the humidifier top from water tank.
- Always make sure to place the humidifier on a flat area before operation.
- Only fill the water tank with clean water. Never fill the water tank with any other liquids.
- Do not place the humidifier near to heat source, such as stovetops, ovens or radiators.
- Do not use other items as replacement parts for this product.
- Do not cover the mist nozzle while the humidifier is working, otherwise it may damage the humidifier.
- Do not immerse the humidifier top, power cord or plug in water.
- If the humidifier is damaged or is not functioning properly, stop using it and contact Customer Service immediately.
- This humidifier should not to be used by persons (including children) with reduced physical, sensory or mental capacities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for the safety.
- The product shall be charged by class 2 power unit only.

### BATTERY & CHARGING CORD

- This product has an internal, non-replaceable lithium battery. This battery is not user-serviceable. Please dispose in accordance with local, state, province, and country regulations.
- Do not grab the USB-C Cable with wet hands. Keep the USB-C Cable away from liquids.

## Troubleshooting

Problem	Possible Cause	Solution
No power	<input type="checkbox"/> Unit is not plugged in	<input type="checkbox"/> Plug unit in
	<input type="checkbox"/> Unit is not charged	<input type="checkbox"/> Charge unit per the Operation section
No mist	<input type="checkbox"/> Low water level	<input type="checkbox"/> Fill tank with water
	<input type="checkbox"/> Wick needs soaking	<input type="checkbox"/> Remove and soak wick for 5 minutes; reinstall wick
	<input type="checkbox"/> Wick needs replacing	<input type="checkbox"/> Replace wick per the Replacing the wick instructions
	<input type="checkbox"/> Wick missing	<input type="checkbox"/> Install a new wick
Water puddling	<input type="checkbox"/> Mist nozzle needs cleaning	<input type="checkbox"/> Follow the Cleaning the mist nozzle instructions in the Cleaning & Care
	<input type="checkbox"/> Spring missing	<input type="checkbox"/> Insert spring at bottom of wick bracket.

## Troubleshooting (continued)

Problem	Possible Cause	Solution
Water puddling or no mist	<input type="checkbox"/> Spring missing	<input type="checkbox"/> Order replacement spring if lost
Peculiar odor	<input type="checkbox"/> Unit is new	<input type="checkbox"/> Remove the tank and let it air out in a cool, dry place for 12 hours.
	<input type="checkbox"/> Dirty tank or old tank water	<input type="checkbox"/> Empty the old water, clean the tank, and fill with clean water

## Warranty

### WHAT IS COVERED

This product is warranted for one year from the date of purchase (12 months, 365 days). The warranty is limited to defects in the materials of the product and manufacturing defects.

### WHAT IS NOT COVERED

- This product has exceeded the "12-month warranty".
- Failure to provide valid purchase receipts; or altered valid purchase receipts without authorization; or the model and serial numbers of the product in receipt do not match the actual product.
- The label or serial number of the product is damaged or has been tampered, or the identity of this product cannot be proved effectively.
- Unexpected factors, improper use or other human factors (including water ingress, moisture, fall down, user operation errors, transportation, bumps, etc.) caused a defect or damage; failure or damage caused by natural disasters and force majeure and so on (such as earthquakes, fires, etc.)
- Disassembled, refitted or repaired by user or an unauthorized third party.
- Not following the instructions in this manual, or damage caused by not using the original parts of the product.
- The purchaser has clearly been informed that the product is a disposed product, or samples that serve as commercial listings, or products that have been subjected to performance overload tests.
- Wear of any part, or damage to plastics and other accessories.
- All air freight and transportation costs are not covered by the warranty and must be borne by the customer.
- In any case, the company or its authorized distributors will not grant any guarantee on time if it is beyond the control, or any special or indirect damage occurs, the company or its authorized distributors will not be responsible for it.
- In addition to the above-mentioned clear warranty provisions, the company is not required to assume other forms of warranty responsibilities.
- Contact the Customer Service Team at 1-855-VISSANI (1-855-847-7264) or visit [www.homedepot.com](http://www.homedepot.com).

## FCC SUPPLIER'S DECLARATION OF CONFORMITY

<b>Product information</b>	
<b>Product Name:</b>	Humidifier
<b>Model No.:</b>	VK-8306A
<b>Trade Mark:</b>	VISSANI
<b>Applicable standards:</b>	FCC CFR Title 47 part 18 Subpart B
The following responsible party designated in FCC §2.909 is responsible for this declaration:	
<b>Company Name:</b>	HOME DEPOT
<b>Address:</b>	2455 PACES FERRY ROAD ATLANTA, GA 30339
<b>Telephone Number:</b>	1 -855-VISSANI (1-855-847-7264)

### **This device complies with part 18 of the FCC Rules.**

#### **Information to the user:**

Information on the following matters shall be provided to the user in the instruction manual or on the packaging if an instruction manual is not provided for any type of ISM equipment:

- (a) The interference potential of the device or system.
- (b) Maintenance of the system.
- (c) Simple measures that can be taken by the user to correct interference.
- (d) Manufacturers of RF lighting devices must provide an advisory statement , either on the product packaging or with other user documentation , similar to the following: This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0. 45-30MHz. Variations of this language are permitted provided all the points of the statement are addressed and may be presented in any legible font or text style.

# VISSANI™

Questions, problems, missing parts? Before returning to the store,  
call Vissani Customer Service

9 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-VISSANI (1-855-847-7264)**

**HOMEDEPOT.COM**

Retain this manual for future use.