




MT710

目录


Content

CN	-----	01
EN	-----	11

前视：

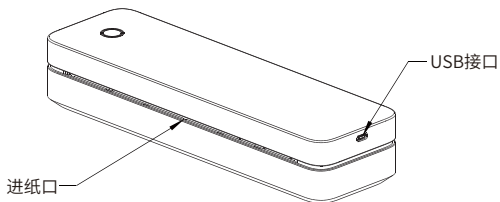

后视：

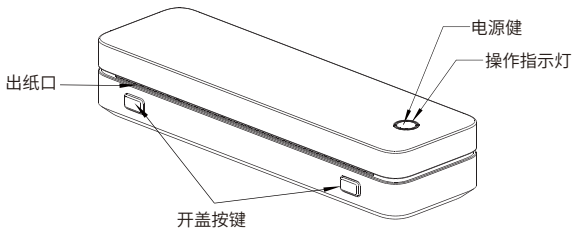


⚠ 注意：1、箱内实际出货内容以实际清单为准；2、铭牌在打印机的底部。

安装打印纸


01 打开上盖

同时按压开盖按键，打开上盖。

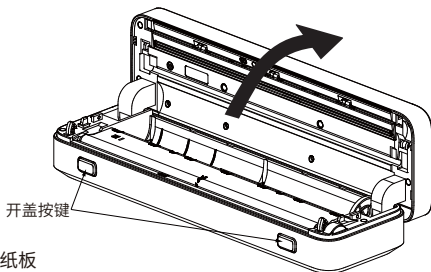

02 调整隔纸板

拨动隔纸板，请根据纸宽调整隔纸板。

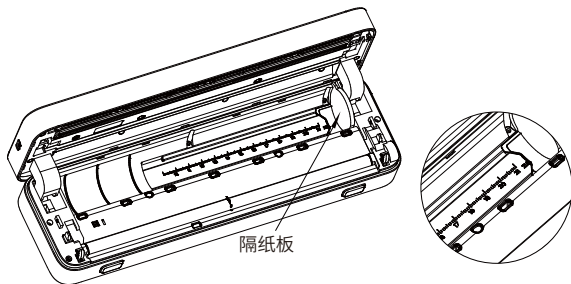


安装打印纸


03 放入打印纸

① 放入纸卷

第一步:将纸卷打印面朝上,放入已调好的纸宽位置。

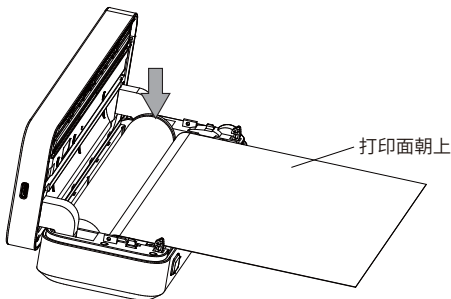


第二步:拉出部分纸卷,闭合上盖,确保盖到位。

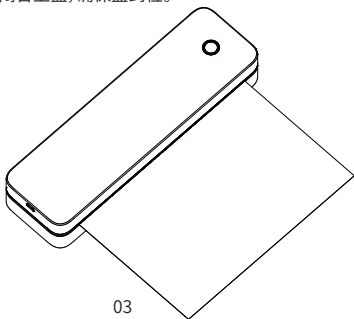


安装打印纸

② 放入热敏打印纸

第一步：合上上盖，确保合盖到位。

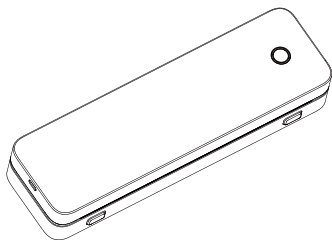

第二步：将热敏纸打印面朝上，塞入进纸口，纸张会自动进纸。

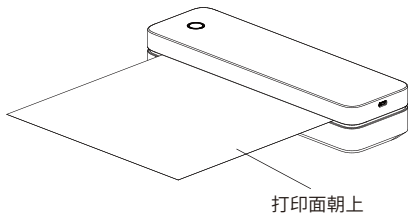


⚠ 注意：请购买使用汉印官方热敏打印纸。

开机启动

01 开机


长按电源键3秒,开启打印机。

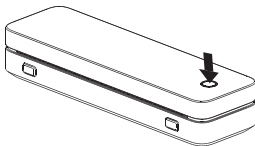

⚠ 注意: 开机状态下, 长按电源键3秒可关机。

与Windows电脑连接打印

- 1 USB数据线一端连接电脑, 另一端连接打印机侧面USB接口;
- 2 请将打印机开机;
- 3 在汉印官网下载本打印机驱动程序, 安装到电脑中;
- 4 在电脑端添加打印机, 建立通讯连接后, 即可通过电脑进行文档打印。

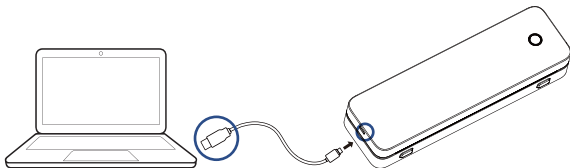

通过手机无线打印

01 下载客户端

扫描二维码, 或在应用商店搜索, 下载“汉小印”App。



02 连接打印机

- 1 打开“汉小印”APP, 点击首页右上角“+”添加设备。
- 2 选择“MT710-XXXX”(XXXX为蓝牙地址后四位), 点击连接。
- 3 将手机靠近打印机等待连接完成。


03 打印

- 1 在“汉小印”App首页上选择文档打印。
- 2 根据需要在打印预览里进行设置, 完成后点击打印即可。

 注意: App操作请以最新版本为准。

电池充电

当电池电量低时,指示灯会闪烁(红灯快闪),请使用配套USB线及时进行充电。
如果继续打印,打印机可能会自动关机。

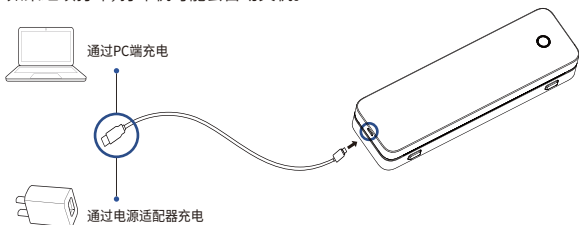

⚠ 注意: 可以用电源适配器或电脑USB供电,出货时不配适配器。消费者若使用电源适配器充电,则应购买使用获得CCC认证且满足标准要求的电源适配器。如果换用不正确的型号的电池组会有爆炸的危险;
请不要将电池投入火中或加热炉中,请勿对电池进行机械挤压或切割进行处置;
请不要将电池放置在可能导致电池爆炸或泄漏可燃液体或气体的极高温环境中;
请不要将电池放置在可能导致电池爆炸或泄漏可燃液体和气体的极低气压中。

注意事项

- 1 打印机最佳工作温度为 0°C~40°C,如环境温度过低或过高,可能影响打印质量。
- 2 请勿使用非官方纸卷,以保证打印质量。
- 3 打印过程中打印头会加热,切勿触摸打印头避免烫伤。
- 4 切勿在打印过程中强行拉出纸张,以免损坏打印机。
- 5 在居住环境中,运行此设备可能会造成无线电干扰。

指示灯定义

1 异常状态

状态	指示灯
电压/电量过低	红灯快闪
打印头温度过高	红灯快闪
打印缺纸/卡纸/装纸异常	红灯慢闪
打印机未合盖	红灯常亮

2 打印机状态

状态	指示灯
打印中	白灯慢闪
固件升级	红绿蓝灯交替闪烁

3 连接状态

状态	指示灯
蓝牙连接状态	白灯常亮
蓝牙数据接收中	白灯快闪
USB连接状态	绿灯常亮
USB数据接收中	绿灯快闪
当前无任何连接	蓝灯常亮

4 充电状态

状态	指示灯
电池充电中(开机/关机)	绿灯慢闪
电池充电中(打印)	白灯慢闪
开机状态下充满电	根据连接状态显示
关机状态下充满电	熄灭

产品参数

产品名称: 便携打印机

产品型号: HCD-8DT26A

电池参数: 7.4V, 1800mAh

产品尺寸: 265*79.5*48.5mm

产品净重: 约650g (裸机)

工作温度: 0°C~40°C

提示: 说明书中的产品、配件、用户界面等插图均为示意图, 仅供参考。

由于产品的更新与升级, 产品实物与示意图可能略有差异, 请以实物为准。

如果需要与产品有关的进一步信息, 可与汉印官方客服联系。

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑料件	0	0	0	0	0	0
五金件	0	0	0	0	0	0
锂电池	0	0	0	0	0	0
马达	X	0	0	0	0	0
线材	0	0	0	0	0	0
电路板组件	X	0	0	0	0	0
打印头组件	X	0	0	0	0	0

注:本表依据S/J 11364 的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572标准规定的限值要求以下。

X: 表示该有害物质在该部件某一均质材料中的含量超出GB/T 26572标准规定的限量要求,但都符合有害物质限制要求。



如左图所示的电子信息技术污染控制标志适用于在中华人民共和国境内销售的电子信息产品,标志中的数字代表环保使用期限的年数。



警告:热零部件! 触摸该零部件时会烫伤手指,关闭电源等待半小时才能触摸零部件。产品不适用于儿童。



警告:撕纸刀有尖锐边缘,不要接触。




警告:运动零部件,身体部位远离动作路径。

本产品已取得工业和信息化部无线电发射设备型号核准,核准代码:CMIIT ID:26J3594ZM017,设备射频参数符合国家无线电管理规定。


Product Introduction

EN

Front View:

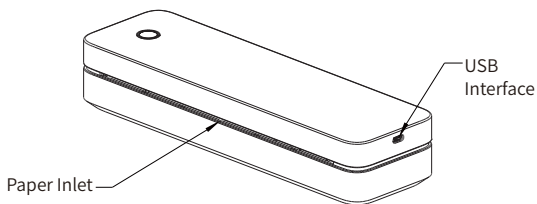


Rear View:

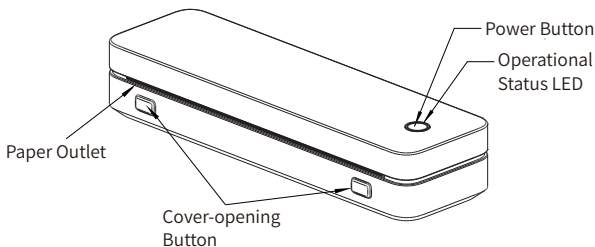

Install the Print Paper


01 Open the top cover

Press the cover-opening button simultaneously to open the top cover.

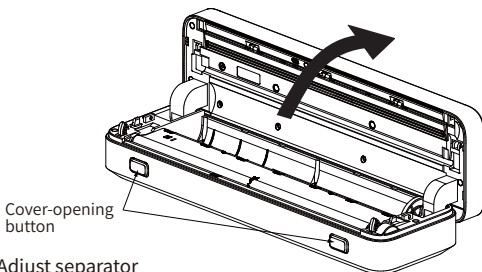

02 Adjust separator

Pull the Separator, please adjust the separator according to the paper width.

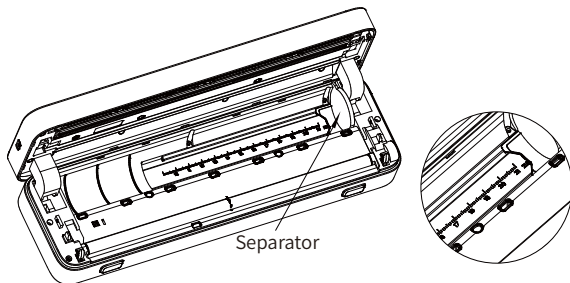


Install the Print Paper


03 Put in the printing paper

① Put in the paper roll

Step 1: Put the paper roll print side up into the adjusted paper width slot.

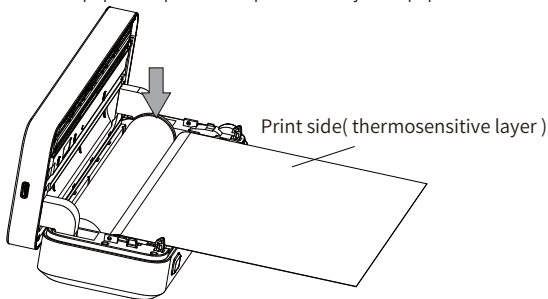


Step 2: Pull some extra paper and close the cover, make sure the top cover is closed in place.

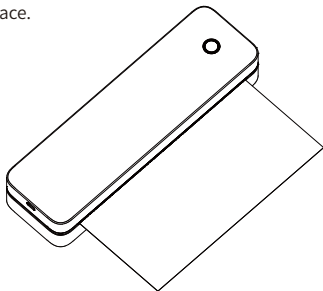


Install the Print Paper

2 Put in the thermal paper

Step 1: Make sure the top cover is closed in place.

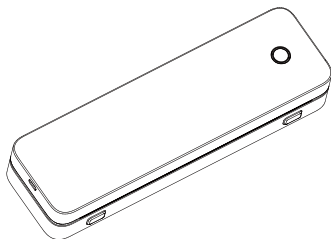

Step 2: Put the thermal paper print side up into the paper inlet, and the paper will enter the paper automatically.

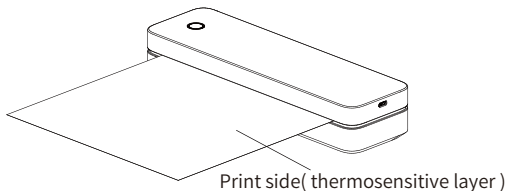


⚠ Please use official thermal paper for a better printing experience.

Power On

01 Power on

Hold down the power button for 3 seconds to start the printer.

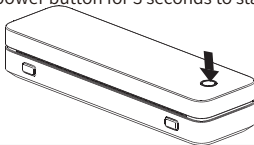

⚠ To turn off the printer, also hold down the power button for 3 seconds.

Printing from PC

Tip:


In order for the driver to recognize the printer, please make sure that the USB is connected and the printer is turned on before installing the driver.

- 1 Turn on the printer.
- 2 Connect the USB cable between the PC and the printer.
- 3 Find the printer model name on the bottom of the printer. Then, visit the website:
<https://www.hpvt.com/>



to download the correct driver for your model. After downloading, install the driver on your PC.

- 4 Choose the document you want to print and select "MT710-XXXX" from the list based on your printer model.

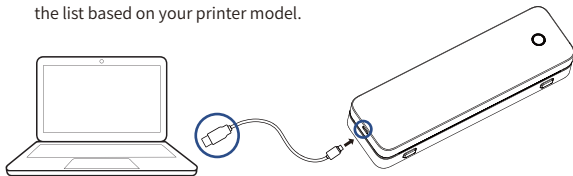

Printing Wirelessly from Mobile Phone

01 Download App

Scan the QR code below to download App.



02 Connect with the printer

Turn on your phone's Bluetooth, open the app, tap "Connect Printer," and select "MT710-XXXX" from the list based on your printer model. You can find the model on the bottom of the printer.


03 Print

- 1 Open the document you want to print, and copy/share it to App.
(Or select document printing on the App home page).
- 2 Adjust it in the print preview, and click the print icon on the top right corner to print.

 Note: App operation shall be subject to the latest version.

Battery Charging

When the battery is low, the operational status LED will flash (red light flashes quickly). Please use the matching USB cable to charge in time. If you continue printing, the printer may shut down automatically.

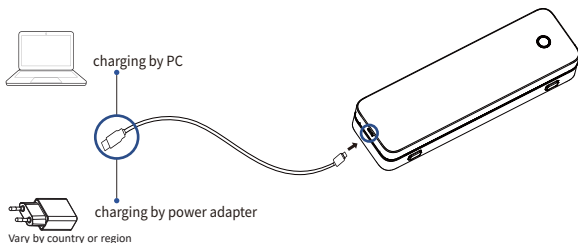

Precautions

- 1 The best operating temperature is 0°C~40°C, if the environmental temperature is too low or too high, the print quality may be affected.
- 2 Please do not use the unofficial paper roll to ensure the print quality.
- 3 During printing, the printer head will heat up, do not touch it to avoid burns.
- 4 Do not pull out the paper by force during printing, or else it may damage the printer.

LED Indicator Definitions

1 Error Status

Status	LED Indicator
Voltage/battery is too low	Red LED flashes rapidly
Print head temperature is too high	Red LED flashes rapidly
Out of paper/paper jam/ abnormal paper loading	Red LED flashes slowly
Printer cover is not closed	Red LED is lighting

2 Printer Status

Status	LED Indicator
Printing	White LED flashes slowly
Firmware is updating	Alternating red, green and blue lights indicator is flashing

3 Connection status

Status	LED Indicator
In bluetooth connection	White LED is lighting
Bluetooth data receiving	White LED flashes rapidly
In USB connection	Green LED is lighting
USB data receiving	Green LED flashes rapidly
No connection currently	Blue LED is lighting

4 Charging status

Status	LED Indicator
Battery charging (on/off)	Green LED flashes slowly
Battery charging (printing)	White LED flashes slowly
Full charge on boot	Display based on connection status
Full charge on shutdown	Light off

Product Parameters

Product Name: Mobile Printer

Product Model: HCD-8DT26A

Battery Parameter: 7.4V, 1800mAh

Dimensions: 265*79.5*48.5mm

Weight: Bare Printer 650g

Operating Temperature: 0°C~40°C

element 1a:  , IEC 60417-6043(2011-01)

element 2: "Sharp edges" or equivalent text

element 3: "Do not touch" or equivalent text

Note: The illustrations of products, accessories, and user interface in the manual are for reference only. Due to product innovation and upgrade, the actual product may differ slightly from the illustrations, please refer to the actual product.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- replacement of a battery with an incorrect type that can defeat a safeguard (for example in the case of some lithium battery types);
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion ;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC ID:2AUTE-8DT26A



Please Scan QR Code to Get 24h After-sales Technical Support Service



Search “HPRT Official ” on YouTube to Get Instruction Videos



HPRT YouTube Website

Search “HPRT Official ” on Facebook to Get Extra Consumables of Printer



HPRT Facebook Website

Manufacturer: Xiamen Hanin Co.,Ltd.
Factory Address: No.96, RongYuan Road, Tong'an District,
Xiamen City, Fujian Province, P.R. China
E-mail: support@hpert.com
Web: www.hpert.com