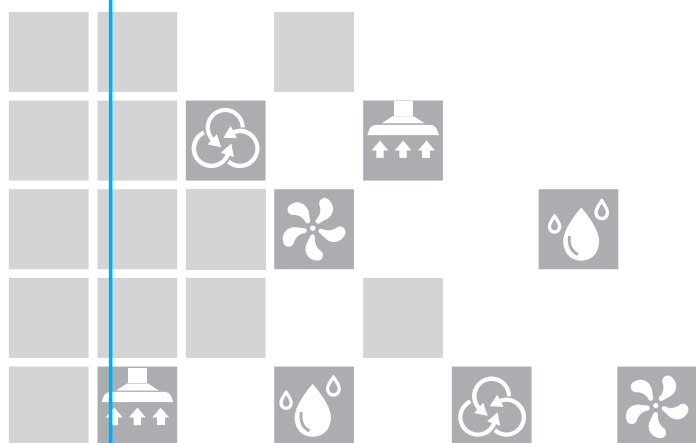 
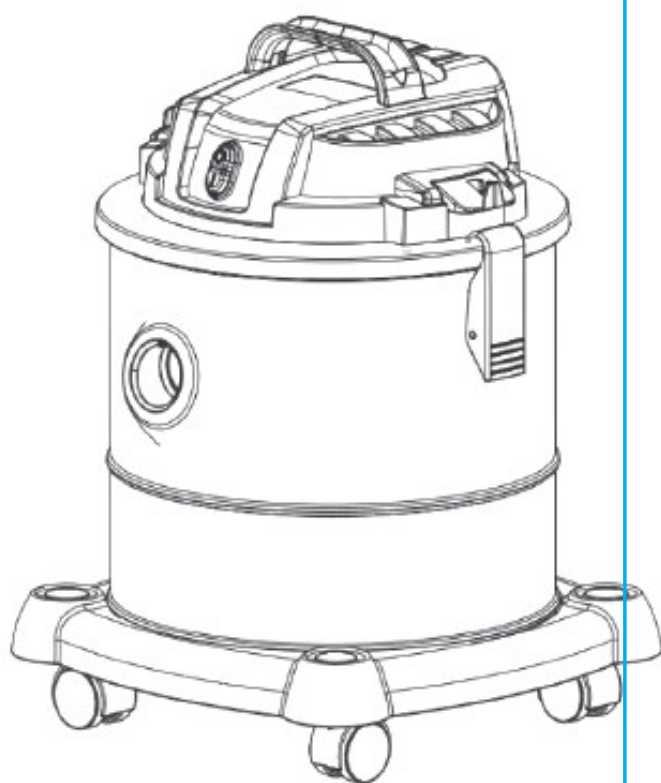 


3-in-1 Vacuum Cleaner EVWDV01

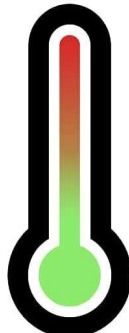 
Surprise from the box



Over-heat Protection

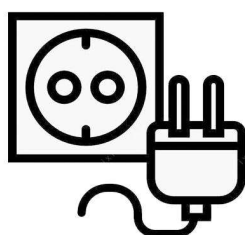 
Temperature protection function

When the inside motor temperature higher than 105°C, The overheat protection feature turns off the vacuum automatically, reducing the risk of causing permanent motor damage



Suggestion: The best working time is 30-40 min

Attention: When over-heat protection is activated, Power off and place 1-2 hours



Please read this operating instruction attentively, before you take the appliance in operation. It gives important notes for security, the use and maintenance of the appliance. If you have further questions, please contact our customer service.

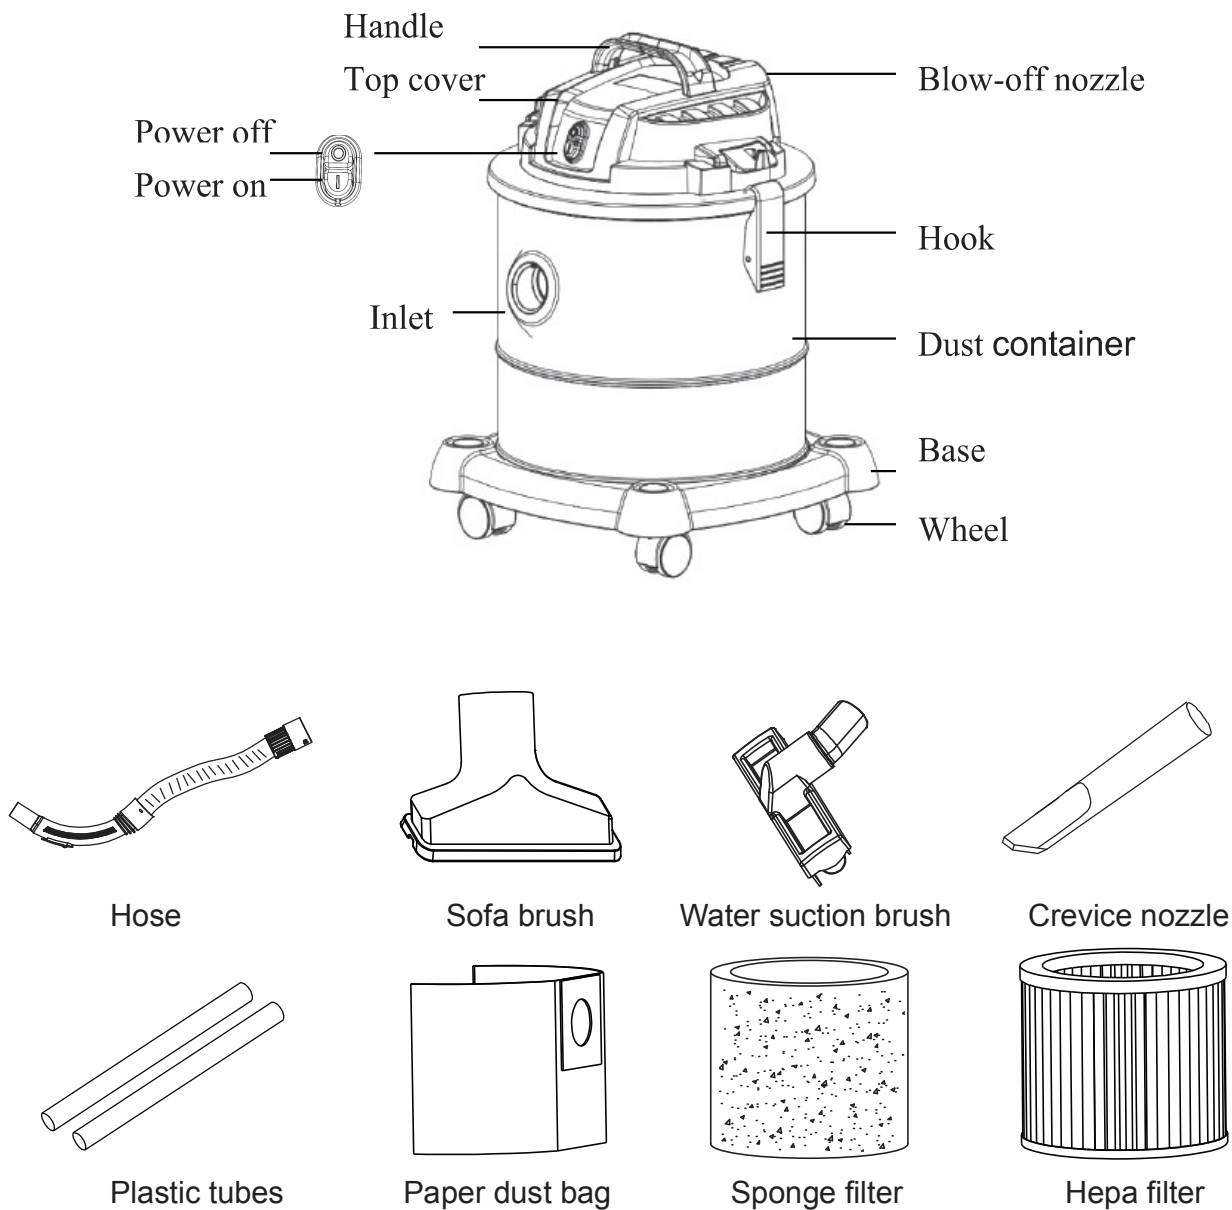 
Contents:

- Description of the appliance
- Appliance figure
- Important safety instructions
- Assembly
- Operation
- Cleaning and maintenance
- Error detection
- Technical data
- Circuit illustration

Description of the appliance:

- Powerful and compact.
- Wet & Dry
- Multiple air filter system guarantees a hygienic cleaning.
- With special air-blowing function.
- Special parking position for easy use and space saving.
- Airflow control on handle.
- Rotary wheels facilitate moving and running.
- Divers accessories.
- User-friendly design.

Appliance figure:



Important safety instructions:

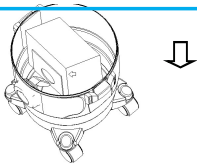 
 
 
If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

 
 
⊘	Do not vacuum any sharp-edged, hot or incandescent materials.	
⊘	The appliance should not be exposed to heat.	

⊘	Unplug the appliance from the mains supply socket after use and before every cleaning. Pull the plug, not the mains cable, in order to disconnect the appliance from the mains.	
⊘	Do not put any object into openings. Do not use with any opening blocked. Keep from dust, lint, hair etc.	
⊘	Do not use the vacuum cleaner without dust container or dust filter in place.	
⊘	Do not vacuum any flour, cement etc, in order to avoid the overloads.	
⊘	The appliance should only be cleaned with a dry or damp cloth; it should never immersed in water. Do not use any solvents for cleaning.	
⊘	This appliance is intended for domestic use only and not for commercial applications.	
⊘	Avoid the nozzle or brush touching the surface of the furniture.	
⊘	Do not use the mains wire to carry the appliance. Do not pull the mains wire over sharp edges.	

Assembly:

Dust filter: Put the filter in the dust container carefully.	
Dust container: Attach the dust container to the hand vacuum cleaner.	
Flexible hose (optional): To use the flexible hose, insert the end of the hose into the suction hole. Make sure, that it is snapped in the position.	
Accessories: Choose your desired accessory (brush or nozzle) and attach it to the suction hole.	

 
 
Operation:

	Before you start the appliance, make sure that the filter is in the position.
	Before you start the appliance, make sure that the hose assembly is in the position. or else the appliance had mangled.
	Unwind the power cord.
	Plug the appliance and switch on.
	Unplug the appliance after use

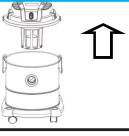 
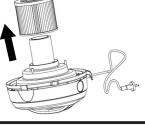 
Attach the desired accessories to the vacuum cleaner.

Cleaning and maintenance:

Paper bag:

	Open the dust container.
	Take out the paper bag.
	Discard the paper bag.
	Put the new paper bag.
	Assemble the vacuum cleaner.

HEPA:

	Open the dust container.
	Take out the hepa filter.
	Clean the hepa Filter by knocking off the ash.
	Empty the dust container.
	In necessity, wash off the dust filter with cleaning water.
	Dry up the hepa filter.
	Assemble the vacuum cleaner.

Error detection:

Before you contact our service center, please check the following:

Problem	Possible reason	Advice
Motor does not start	-Power cord not firmly plugged into outlet. -Outlet damaged. -Cleaner not switched on.	-Plug unit firmly. -Check the Outlet. -Switch on the appliance
Suction power is weaker	-Unit clogged -Paper filter needs replace	-Remove the blockage. -Replace the paper filter.

Guarantee:

This product is guaranteed for a period of one year from the date of purchase. During this period we will remedy all defects free of charge, which can be demonstrably attributed to material or manufacturing defects, by repair or exchange.

This guarantee is only valid if the appliance has been used in accordance with the instructions and provided that it has not been modified, repaired or interfered with, by any unauthorized person, or damaged through misuse.

Technical data:

Rated voltage:110V

Rated frequency:60Hz

Rated power:1200W

Operating pressure: $\geq 16\text{kPa}$



**3-in-1 Vacuum Cleaner
EVWDV01**

Manufacturer
EASTVOLT
Made in China



8425511900199

