

Hisense

Model: S5120Q

5.1.2CH Soundbar with Wireless Subwoofer

TUNED BY DEVIALET



USER MANUAL



Before using the soundbar, please read this manual thoroughly and retain it for future reference.

Contents

1. Important Safety Instructions	3
1.1 Safety	3
1.2 Caution	4
1.3 Warning	4
2. What's in the Box	5
3. Identifying the Parts	6
3.1 Soundbar	6
3.2 Wireless Subwoofer	7
3.3 Remote Control	7
3.4 Prepare the Remote Control	7
3.5 Replace the Remote Control Battery	7
4. Placement and Mounting	8
4.1 Placement	8
4.2 Wall Mounting the Soundbar	8
5. Connections	9
5.1 Use the HDMI Socket	9
5.2 Use the AUX Socket	11
5.3 Connect Power	11
6. Pair up with the Subwoofer	12
7. Control Via ConnectLife	12
8. Connect to Wi-Fi	12
8.1 Works with Apple AirPlay	12
8.2 Multi-room audio	12
9. Basic Operation	12
9.1 Standby/ON	12
9.2 Auto-Standby / Auto-Wake Feature	13
9.3 Select Modes	13
9.4 Adjust the Volume	13
9.5 Select Surround Sound Mode	13
9.6 Adjust the Bass/Treble	13
9.7 Select Equalizer (EQ) Effect	13
9.8 Select a sound mode	13
9.9 Level (LVL) control	13
9.10 Set the Audio Delay	13
9.11 Setup Menu	14
10. AUX / HDMI Operation	14
11. USB Operation	14
12. Bluetooth® Operation	15
13. Troubleshooting	16
14. Specifications	17
15. Trademarks	18

1. Important Safety Instructions



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1.1 Safety

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and usage instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12.  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
15.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
16. The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
17. Minimum distance around the apparatus for sufficient ventilation is 5cm.
18. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
19. No naked flame sources, such as lighted candles, should be placed on the apparatus.
20. Batteries should be recycled or disposed of as per state and local guidelines.
21. The use of apparatus in moderate or tropical climates.

1.2 Caution

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1.3 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

Battery usage CAUTION

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

Remove batteries when the unit is not used for a long time.

WARNING:

- Replacement of a battery with an incorrect type may defeat a safeguard;
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, may result in an explosion;
- Leaving a battery in an extremely high temperature surrounding environment, such as sunshine, fire, or hot surface may result in an explosion or the leakage of flammable liquid or gas;
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

CAUTION: Risk of fire or explosion if the battery is replaced by an incorrect type!



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Hereby, XinYang (Hong Kong) Co., Ltd. Declares that the radio equipment type is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017 of UK. Please enter the model name at the following internet address to read the full text of the declaration of conformity: <https://global.hisense.com/support/certificatedownload/>.

Authorized EU Representative:

Name: Gorenje gospodinjiski aparati, d.o.o.

Address: Par tizanska cesta 12, 3320Velenje, Slovenija

Email: info@gorenje.com


Please refer to the rating label for Soundbar or Party Speakers model name and find Bluetooth remote control model name on the remote control label or inside the remote control cover.




2. What's in the Box




Soundbar

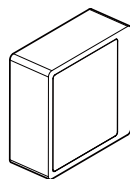


Wireless Subwoofer

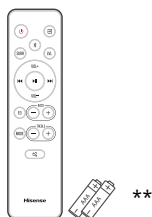


Remote Control /
AAA Batteries x 2

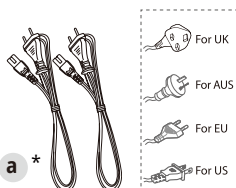


AC Power Cord x 2

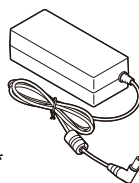


Power Adapter x 1

 

HDMI Cable

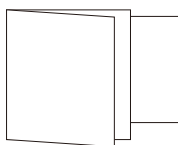

Warranty card / Quick start guide

 


Wall mount kit

- Power cord quantity and plug type vary by regions. **The accessories may be different from the list above due to different models, countries/ regions, please refer to the actual accessory bag.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

3. Identifying the Parts

3.1 Soundbar

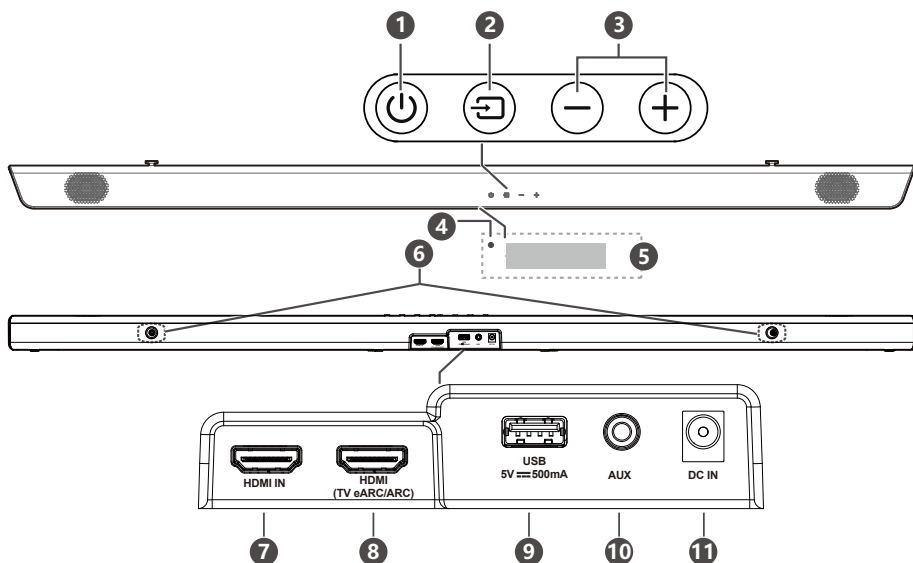

- 1** (ON/OFF) button
Switch the soundbar between ON and Standby mode.
- 2** (SOURCE) button
Select the input source.
- 3** +/- (VOL) buttons
Increase/decrease the volume level.
- 4** **Remote Control Sensor**
Receive signal from the remote control.
- 5** **Display Window**
Show the current status.
- 6** **Wall bracket screws**
- 7** **HDMI IN Socket**
Connect to the HDMI source devices, such as a DVD player, Blu-ray Disc™ player, or gaming console.
- 8** **HDMI (TV eARC/ARC) Socket**
The port for connecting a TV. The port supports the eARC/ARC HDMI feature, which allows the soundbar to play audio that originates on the connected TV.
- 9** **USB Socket**
Insert the USB device to play music.
- 10** **AUX Socket**
Audio input from, for example, an MP3 player (3.5mm jack).
- 11** **DC IN Socket**
Connect to power supply.

3.2 Wireless Subwoofer

1 Pairing Indicator


Light stops blinking once the subwoofer is paired with the soundbar.

2 PAIR button

Press activate the pairing function between the soundbar and the subwoofer.

3 AC IN~ Socket

Connect an AC power cord.

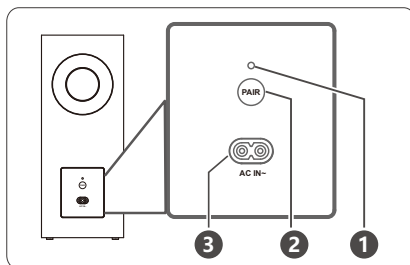

3.3 Remote Control

1 ⏻

Switch the soundbar between ON and STANDBY mode.

2 SURR

Switch the surround PURE/PRO/OFF.

3 VOL + /VOL -

Increase/decrease the volume level.

4 EQ

Select Equalizer (EQ) Effect. (MOVIE, NEWS, MUSIC, GAME, SPORT)

5 MODE

Select a sound mode. (SOUND MODE OFF, VOICE, NIGHT, AI)

6 [SOURCE] button

Select the input source.

7 [Bluetooth] icon

Select the Bluetooth mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.

8 LVL

Level (LVL) control.

9 [Previous/Next] buttons

Skip to previous/next track in Bluetooth/USB mode.

10 [Play/Pause] button

Play/pause/resume playback in Bluetooth/USB mode. Press and hold the button for 3s to enter setup menu.

11 BASS + / -


Adjust bass level.

12 TREBLE + / -

Adjust treble level.

13 [MUTE] button

Mute or resume the sound.

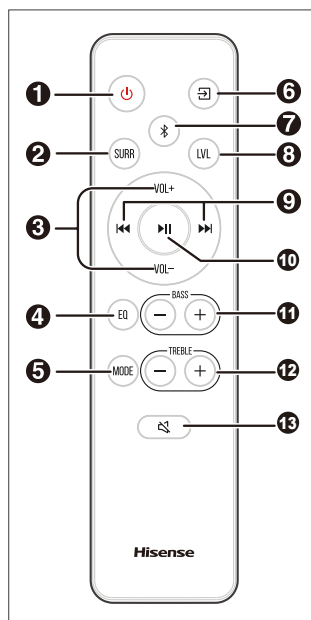

3.4 Prepare the Remote Control


IMPORTANT: The remote control will work within a 19.7 feet (6m) range, however this may be impossible if there are obstacles between the unit and the control.

3.5 Replace the Remote Control Battery

Press and slide the back cover to open the battery compartment of the remote control.

Insert two AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.

Close the battery compartment cover.

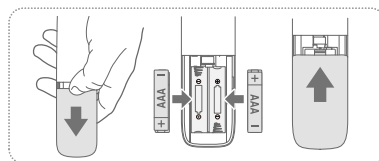

Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive “+” and negative “-” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.



- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

4. Placement and Mounting

4.1 Placement

- A If your TV is placed on a table, you can place the soundbar on the table directly in front of the TV stand, centered with the TV screen.

- B If your TV is attached to a wall, you can mount the soundbar on the wall directly below the TV screen.

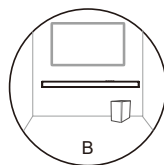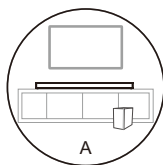

4.2 Wall Mounting the Soundbar

Caution: If you are unfamiliar with power tools or layout of electrical wiring in the walls of your home, consult a professional installer.

It is the installer's responsibility to verify that the wall will safely support the total load of the soundbar and wall brackets.

Additional tools (not included) are required for the installation.


Do not overtighten screws.

Keep this instruction manual for future reference.

Use an electronic stud finder to check the wall type before drilling and mounting.

WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: ≤ 1.5 meters.

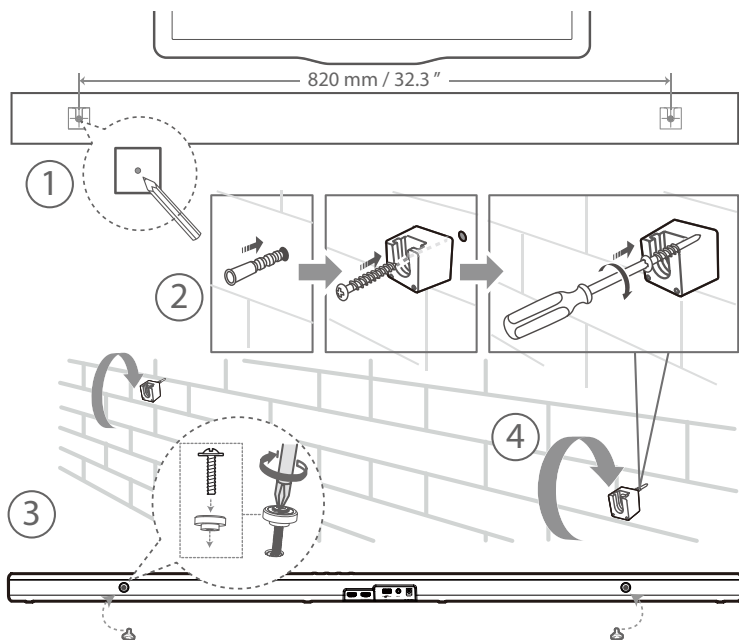

1. Drill 2 parallel holes (Ø0 5.5-6 mm each according to wall type) in the wall. The distance between the holes should be 860mm/33.8".
2. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver. Make sure that they are securely installed.
3. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
4. Lift the unit onto the wall mount brackets and slot into place.

5. Connections

Dolby Atmos®

Dolby Atmos® gives you immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound. For more information, please visit dolby.com/technologies/dolby-atmos


DTS: X

DTS: X, the border sound is no longer constrained by fixed-position speaker placement or specific channel signals.

5.1 Use the HDMI Socket

Method 1: Use the HDMI eARC/ARC Socket

The eARC/ARC (Enhanced Audio Return Channel) function allows you to send audio from your ARC compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and MUTE)

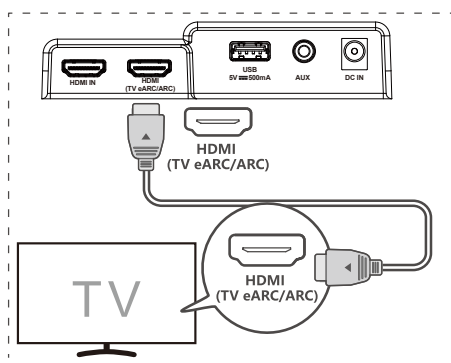


- Connect the HDMI cable from soundbar **HDMI (TV eARC/ARC)** socket to the HDMI eARC/ARC socket on your ARC compliant TV. Then press the remote control to select **HDMI eARC/ARC**.

Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about **eARC/ARC** function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.

Method 2: Standard HDMI

- If your TV is not HDMI ARC-compliant, connect your soundbar to the TV through a standard HDMI connection.

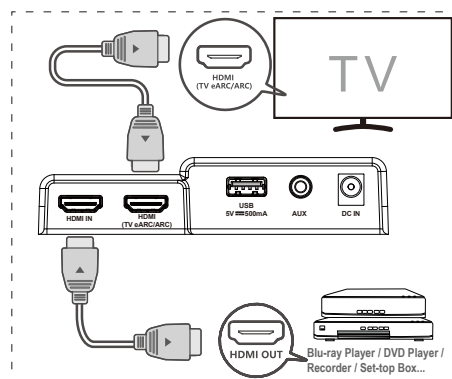


1. Use an HDMI cable to connect the soundbar's **HDMI OUT (eARC/ARC)** socket to the TV's HDMI IN socket.
2. Use an HDMI cable to connect the soundbar's **HDMI IN** socket to your external devices (e.g. game consoles, DVD players and blu-ray).

Hi-Concerto function

When connected to a Hisense TV that supports Hi-Concerto function, the soundbar plays audio in sync with the TV, enhancing your sound experience by providing a richer and more immersive auditory soundscape.

To use this function, when the soundbar is connected to the TV for the first time, simply select the "TV Speaker with Soundbar (Hi-Concerto)"

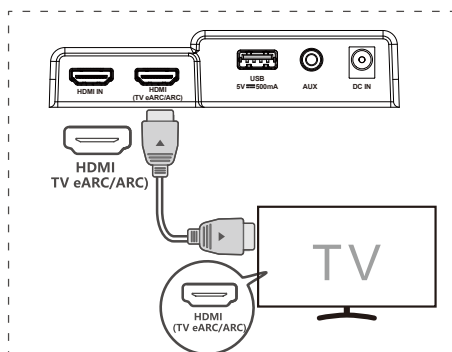


Tips:

- This function is only supported in eARC mode, so please make sure the TV's eARC function is enabled.
- The message displayed may differ with the TV model.
- Ensure that the TV and soundbar are connected with an HDMI cable.
- This function is available in some Hisense TV and some soundbar models.
- In Hi-Concerto mode, the volume can only be adjusted via the TV remote control, and the volume adjustment buttons on the audio system are disabled. When the TV's Audio Output option is switched to eARC, the remote control's volume adjustment will work normally.


Use the Hisense EzPlay Function

For Hisense EzPlay, when the Soundbar connects with a Hisense TV via HDMI eARC/ARC, there will be a Soundbar Setting menu on the TV, and you can control this menu via your TV remote to control most of the Soundbar features.

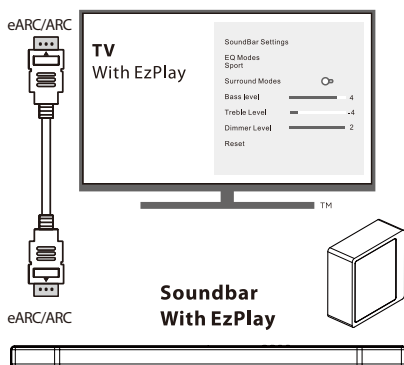

TV menu example (different models may have different menus):

Setting--Sound--Soundbar Setting.

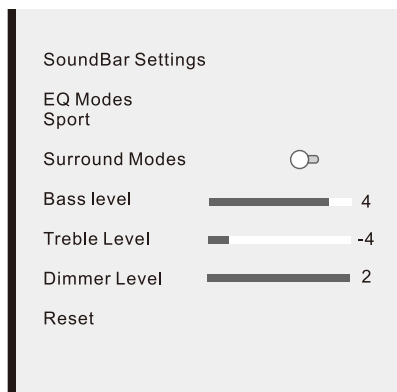

Tips:

- This function is available only when both Soundbar and TV support Hisense Ezplay.
- This function requires Soundbar and TV connected via HDMI eARC/ARC, and the CEC of the TV must be turned ON.
- If everything is set right, for the first time connect, there would be a tip on the TV screen to guide you find the Soundbar setting menu.

Room Fitting Tuning

This function analyzes the listening room environment and the listening position through the TV, and provides an optimized sound.


- To enable this function, turn on the (Soundbar Settings > Soundbar Acoustic Tuning) option on your Hisense TV menu. Please follow the operation guidance provided by the TV to complete the calibration process.

Tips:

- Please complete a full calibration process when using this function for the first time.
- This function works when the soundbar connects to some of the Hisense TVs.

5.2 Use the AUX Socket

- A. Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the **AUX** socket on the soundbar.

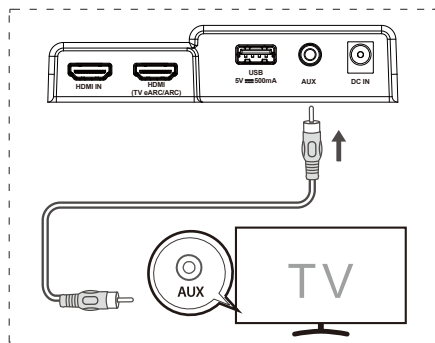


- B. Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **AUX** socket on the soundbar.

5.3 Connect Power

Risk of product damage!

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the soundbar.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Soundbar: Use the AC adapter, connect to the DC IN socket on the soundbar and to a power outlet.
- Subwoofer: Connect the mains cable to the AC~ socket of the subwoofer and then into a mains socket.

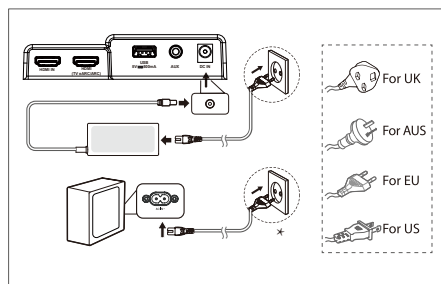

* Power cord quantity and plug very by regions.

Automatic pairing

The subwoofer and soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.

- Determine the status based on the wireless Subwoofer indicator.

LED State	Status
Fast blink	Subwoofer in pairing mode
Constant on	Connected / Pairing successful
Slow blink	Connection / Pairing Failed

- Fast blinking: 3 times per second
- Slow blinking: 1 times per seconds

Tips:

- Do not press the PAIR button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main bar manually.

Manual Pairing

1. Ensure that all cables are well connected and the main bar is in Standby mode.
2. Press and hold the PAIR button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press  the button on the main bar or on the remote control to switch the main bar on.
4. Press and hold the  (Source) the button to enter SW Pairing.
5. After the wireless connection succeeded, the Pair Indicator will light up.
6. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 3 minutes. Repeat step 1 ~ 4.

Tips

- If the wireless connection fails again, check if there is a conflict or strong interference (e. g. interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.
- The Subwoofer should be within 6m(18feet) of the Soundbar in an open area.
- If the main bar is not connected with the subwoofer and it is in On mode, the POWER Indicator will flash. Follow step 1 ~ 4 above.

6. Pair up with the Subwoofer

7. Control Via ConnectLife

This soundbar can be fully controlled via the ConnectLife** App. You can easily set functions such as playback control, volume adjustment, input source switching, and sound effect settings. Please download the latest version from the app store to ensure the best user experience.



**ConnectLife is a smart home platform from Hisense Group. Use ConnectLife to connect more devices and start a smart life experience


8. Connect to Wi-Fi

8.1 Works with Apple AirPlay

Use AirPlay to set up the Wi-Fi connection of iOS device (iOS7 or later) and Soundbar.

Wi-Fi network setting with iOS device

- 1. Turn on the product by pressing the Power button.
- 2. On your iOS device, select the Settings and then Wi-Fi.
- 3. Select "Hisense S5120Q" on the SET UP NEWAIRPLAY SPEAKER.
- 4. Make sure your home router is selected. In this step, you can change the product's name of your choice and also you can set up a password. After completing the settings, select the Next.
- 5. Select Done.

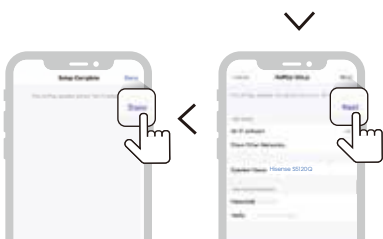

8.2 Multi-room audio

- This soundbar can be used as part of multiroom speaker setup. This means that the same music can be played from your soundbar and other compatible speakers simultaneously throughout your home.
- To use this feature, make sure the soundbar and your smartphone / tablet are on the same network. You can use Airplay 2 app to control compatible multiroom speakers. You can then play the music on multiple speakers at the same time, assign speakers to different groups, control the volume individually, or use master volume to change the volume on all speakers at the same time.

9. Basic Operation

9.1 Standby/ON

When you first connect the soundbar to the mains socket, the main bar will be in Power ON.

- Press the button on the unit or on the remote control to switch the unit ON.
- Press the button again to switch the unit back to STANDBY mode.

State	Action	Function
ON		• Follow source state
Standby	Press once	• Wi-Fi is still on. • It still supports Airplay2.

9.2 Auto-Standby / Auto-Wake Feature

- **[Auto-Standby]** Your soundbar has been programmed to enter Standby mode automatically when no audio is detected for 15 minutes. For example, this would happen when pausing playback, or should the soundbar be left on accidentally.
- **[Auto-Wake]** If a TV or an external device is connected (HDMI), the unit will switch on automatically when the TV or the external device is switched on.

To disable this feature, please follow the steps below:

1. During ON mode, pointing the remote at the soundbar, press and hold the **►||** button for 3 seconds to open the menu.
The unit's display will scroll "**MENU**".
2. Press the **►||** button 6 times in succession, the display shows: **Auto Wake [ON /OFF]**.or
3. Press the **►||** button 7 times in succession, the display shows: **Auto Standby [ON /OFF]**.Select the content with **VOL +/-** button on the remote control, and then press **►||** to confirm your selection and exit the settings. Repeating these steps will toggle the feature "**ON**" and "**OFF**".

9.3 Select Modes and USB mode.

- Press the **☞**(SOURCE) button repeatedly on the unit or on the remote control to select the **HDMI ARC, HDMI 1, BT**(Bluetooth) and **USB** mode.
- Press the **✂** button on the remote control to select the **BT** (Bluetooth) mode.
- The selected mode will show on the display.

Display	Mode
EARC ARC	EARC ARC
HDMI IN	HDMI IN
BT-IN NO BT BT PAIRING	Bluetooth Connected Disconnected Pairing
USB	USB

9.4 Adjust the Bass/Treble Level

- Press the **BASS +/-** buttons on the remote control to adjust bass level (bass +5 ~ bass -5).
- Press the **TREBLE +/-** buttons on the remote control to adjust treble level (treble +5 ~ treble -5).

9.5 Select Surround Sound Mode

- Press the **SURR** button on the remote control to select desired preset surround sound mode: **OFF, Pure, Pro**.
- **OFF**: Direct mode originally to source (CHANNEL TO CHANNEL).
- **Pure**: Upmix different audio source to the highest format device can support, without

rendering to keep pure sound quality.

- **Pro**: Use advanced audio renderer to provide better immersive experience. For stereo and surround audio source.

9.6 Adjust the Volume

- Press the **VOL+ /VOL-** buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the **🔇** (MUTE) button on the remote control. Press the **🔇** (MUTE) button again or press the **VOL+ /VOL-** buttons to resume normal listening.

9.7 Select Equalizer (EQ) Effect

- While playing, press the **EQ** button on the remote control to select desired preset equalizers: **MUSIC, MOVIE, NEWS, SPORT, GAME**.

9.8 Select Sound Mode

- While playing, press the Mode button on the remote control to select desired preset sound mode: **OFF, Voice, Night, AI**

9.9 Level Control

- While playing, press the LVL button on the remote control to select channel to adjust level, **Sub, Center, L/R balance, Front Height, Surround Level**
- L/R balance (LVL +5 ~ LVL-5).
- Sub, Center, Front Height, Surround Level (LVL+3~LVL-3).
-

9.10 Set the Audio Delay (AV SYNC)

This function is used to correct lip-sync issues when the audio plays ahead of the video by adding audio delay.

- By default, the audio delay is set to 00.
- 1. During ON mode, press and hold the **►||** button for 3 seconds to open the menu, then press the **►||** button 9 times in succession. The unit's display will scroll "**LT 00**".
- 2. Press the **VOL+/-** buttons will be a 10 ms frequency hopping to adjust the delay time. Set 200ms maximum delay.

- Press the ►|| button or exit settings 10S.

Tip:

- Adjustment range: [00~200ms].
- The audio delay setting is only valid for digital audio (eg HDMI IN, HDMI ARC).

9.11 Setup Menu

- During ON mode, press and hold the ►|| button for 3 seconds to open the menu.
- Select the content with the ◀◀/▶▶ buttons.
- Change the initial values for each of the settings with VOL+/- buttons.
- Press the ►|| button to confirm your selection and exit the settings.
- If no button is pressed within 10 seconds, the system will automatically exit the menu.

Display (press ◀◀ / ▶▶)	Description (press VOL + / -)
1 MUSIC	Select Equalizer (EQ) Effect. (MUSIC, MOVIE, NEWS, SPORT, GAME)
2 SUR	Switch Surround Sound [OFF, Pure, Pro]
3 BAS +5	Adjust the Bass Level
4 TRE +5	Adjust the Treble Level
5 DIM 3	Adjust the Brightness (Exit menu to take effect)
6 AUTO WAKE ON	Switch Auto Wake [ON / OFF]
7 AUTO STRND BY ON	Switch Auto Standby [ON / OFF]
8 DTS VIRTUAL:X	Switch: DTS Virtual:X [ON / OFF]
9 LT 00	Set the Audio Delay (AV SYNC)
10 OFF	switch Voice, Night , AI, Off mode
11 AP MODE	Display Wifi connection status
12 CLEAR WIFI	Clear Wifi setting

10.AUX / HDMI Operation

- Ensure that the soundbar is connected to the TV or audio device.
- Press the  (SOURCE) button repeatedly on the soundbar or on the remote control to select the **AUX, HDMI eARC/ARC, HDMI IN** mode. The selected mode will show on the display.

- Operate your audio device directly for playback features.
- Press the **VOL+/-** buttons to adjust the volume to your desired level.


Tip:

- The Soundbar may not be able to decode all digital audio formats from the input source. In this case, the Soundbar will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** or **Dolby Digital** (Refer to the user manual of the input source device for its audio setting details) with eARC/HDMI IN input.
- When selecting a different audio format, the unit will display the following as follows.

Audio (abbreviation)	Display
LPCM 2ch LPCM 5.1ch LPCM 7.1ch	PCM AUDIO
Dolby Digital Dolby TrueHD Dolby Digital Plus	DOLBY AUDIO
Dolby Atmos - Dolby TrueHD Dolby Atmos - Dolby Digital Plus	DOLBY ATMOS
DTS DTS Discrete Surround DTS-ES 6.1 Matrix DTS-ES 6.1 Discrete DTS 96/24 DTS 96/24 ES Matrix DTS Express DTS-ES 8-Channel Discrete	DTS
DTS-HD High Resolution DTS-HD Master Audio	DTS-HD
DTS:X DTS:X Master Audio	DTS-X

11. USB Operation

- Insert the USB device.

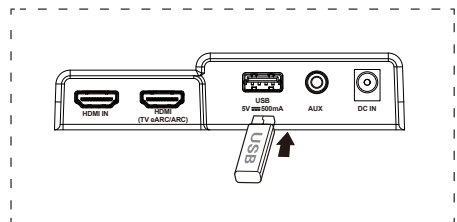

2. Press the  (SOURCE) button repeatedly on the soundbar or on the remote control to select the **USB** mode.
3. During playback:

	Start, pause or resume play
	Skip to the previous or next track

Tip:

- The unit can support USB devices with up to 32 GB of memory.
- The USB devices format requirement is Hi-Speed USB (2.0) / FAT32.
- This unit can play : WAV / WMA / MP3 / FLAC/ALAC.
- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB Multifunctional card reader, the USB storage device may not be recognized.
- Do not remove the USB storage device while reading files.

12. Bluetooth® Operation

12.1 Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 26 feet (8m) (without any object between the Bluetooth device and the unit).
- Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.

1. During ON mode, press the  button repeatedly on the unit or the  button on the remote control to select Bluetooth mode. "**NO BT**" will show on the display if the unit is not paired to any Bluetooth device.
2. Activate your Bluetooth device and select the search mode. "**Hisense S5120Q**" will appear on your Bluetooth device list.
 - If you cannot find the unit, press and hold the  button to be searchable. The display will show "**BT Pairing**".
3. Select "**Hisense S5120Q**" in the pairing list. After successful pairing, the display panel shows "**BT_IN**".
4. Play music from the connected Bluetooth device.

To disconnect the Bluetooth function, you can :

- Switch to another function on the unit.
- Disable the function from your Bluetooth device. The Bluetooth device will be disconnected from the unit.
- Press and hold the  button. When the unit is connected to 2 Bluetooth devices, press the Bluetooth button briefly to disconnect the first connected Bluetooth device. When the device is only connected to 1 Bluetooth device, press and hold the Bluetooth button to directly enter the pairing mode for the second device.

Tips:

- Enter "0000" for the password if necessary.
- If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- If the connection is lost, follow the instructions above to pair your device to the player again.

12.2 Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device

through the player.

- If the device also supports Audio Video
- Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device. Pair your device with the player.
- Play music via your device (if it supports A2DP).
- Use supplied remote control to control play (if it supports AVRCP).

	Start, pause or resume play.
	Skip to the previous or next track.

13. Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No sound

- Make sure that the unit is not muted. Press  or **VOL+/-** button to resume normal listening.
- Press  button on the unit or on the remote control to switch the soundbar to standby mode. Then press the  button again to switch the soundbar on.
- Unplug both the soundbar and the subwoofer from the mains socket, then plug them again. Switch on the soundbar.
- Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using

digital (e.g. HDMI) connection.

- The subwoofer is out of range, please move the subwoofer closer to the soundbar. Make sure the subwoofer is within 5 m of the soundbar (the closer the better).
- The soundbar may have lost connection with the subwoofer. Re-pair the units by following the steps on the section "Pairing the Wireless Subwoofer with the Soundbar".
- The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. The device is not muted.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

The Soundbar turns off

- When the unit's external input signal level is too low, the Sound Bar will be automatically turn off after 15 minutes. Please increase the volume level of your external device.

The subwoofer is idle or the indicator of subwoofer do not light up.

- Please unplug power cord from the mains socket, and plug it in again after 4 minutes to reset the subwoofer.

Wi-Fi connection cannot be established.

- Check the availability of WLAN network on the router.
- Place the Wi-Fi router closer to the unit.

14.Specifications

Model Name	S5120Q
Soundbar	
Adapter Mode • Input • Output	ADS-65HI-19A-2 24048E 100-240V~ 50/60Hz max. 1.5A 24.0V --- 2.0A 48.0W
USB port for playback USB Compatibility USB Playback support / file formats	5V ---500mA Hi-Speed USB (2.0) / FAT32 32G (max) ,
Dimension (WxHxD)	1200 x 45 x 58 mm / 47.2" x 1.8" x 2.3"
Net weight	1.65 kg / 3.64 lbs
Frequency Response	160Hz~20KHz
Operating Humidity Range	10 % ~ 70 %
Operating Temperature	0°C - 45°C
Wireless specification	
Network supported	WiFi IEEE 802.11a/b/g/n/ac/axWireless Frequency Band (Wi-Fi) / Radio Frequency Power Transmitted (EIRP) 2.4G Wi-Fi: 2400 MHz~2483.5 MHz / ≤20dBm 5.1G Wi-Fi: 5150 MHz~5350 MHz / ≤20dBm 5.7G Wi-Fi: 5470 MHz~5725 MHz / ≤20dBm 5.8G Wi-Fi: 5725 MHz~5850 MHz / ≤14dBm
Bluetooth version / profiles Bluetooth frequency range Bluetooth Max. transmitting power (EIRP)	V 5.4 (A2DP, AVRCP) 2400 MHz ~ 2483.5 MHz ≤ 20 dBm
5.8G Wireless frequency range 5.8G Max. transmitting power (EIRP)	5.8G: 5725 MHz ~ 5875 MHz ≤ 10 dBm
Modulation Type	FSK
Subwoofer	
Power Supply	AC 100-240V~ 50/60Hz
Power Consumption	84 W / < 0.5 W (StandBy)
Dimension (WxHxD)	370 x 370 x 150mm / 14" x 13.3 "x5.9"
Net weight	7.05 kg / 15.54 lbs
Frequency Response	35Hz~160Hz
Amplifier (audio output power)	
Soundbar	360W
Subwoofer	280 W
Total	640W
Remote Control	
Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V X 2)

- Design and specifications are subject to change without notice.

15 . Trademarks

- For DTS patents, see <http://xperi.com/dts-patents/>. MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, DTS:X, THE DTS:X LOGO, VIRTUAL:X, AND THE DTS VIRTUAL:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.
- The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®.
- To control this AirPlay 2-enabled speaker, iOS 11.4 or later is required. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards. Apple, Airplay are trademarks of Apple Inc., registered in the U.S. and other countries and regions.
- Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by The HISENSE International Industries, Incorporated is under license. Other trademarks and trade names are those of their respective owners.



For 5G Wi-Fi Device

The device for operation in the band 5150–5350 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

	AT	BE	BG	HR	CY	CZ	DK
	EE	FI	FR	DE	EL	HU	IE
	IT	LV	LT	LU	MT	NL	PL
	PT	RO	SK	SI	ES	SE	UK(NI)
	UK						





WARNING This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

EN

FCC INFORMATION (for US customers)

NOTE:

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

IC Notice: CAN ICES(B)/NMB(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Warning:

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."



FR

Règlement de la FCC (pour les clients américains)

REMARQUE :

- Ce dispositif a été testé et déclaré conforme aux limites d'un dispositif numérique de classe B, conformément à la partie 15 des règles de la FCC.
Ces limites ont pour but d'assurer une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement produit, utilise et peut émettre de l'énergie en radio fréquence et, s'il n'est pas installé et utilisé conformément aux directives, il peut causer un brouillage nuisible dans les communications radio.
- Cependant, il n'est pas garanti que des interférences ne se produiront pas dans une installation particulière. Si cet appareil provoque des interférences nuisibles à la réception radio ou de télévision, ce qui peut être déterminé en mettant l'appareil hors tension, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :
 - Réorienter ou déplacer l'antenne de réception.
 - Augmenter la distance entre l'appareil et le récepteur.
 - Brancher l'appareil à une prise sur un circuit différent de celui sur lequel le récepteur est branché.
 - Consulter le revendeur ou un technicien radio/TV expérimenté.

Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) ce dispositif ne peut pas causer d'interférences nuisibles et
 - (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent causer un mauvais fonctionnement.
- Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité avec les limites de la classe B de la FCC. Fonctionnement de l'appareil.

Avis d'Industrie Canada: CAN ICES(B)/NMB(B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Avertissement :

- Pour rester en conformité avec les consignes d'exposition aux RF, placez le produit à au moins 20 cm des personnes proches.
- Les changements ou modifications de cet appareil non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorisation de l'utilisateur à utiliser l'équipement.

