 


# USER MANUAL

NO. CV-D902

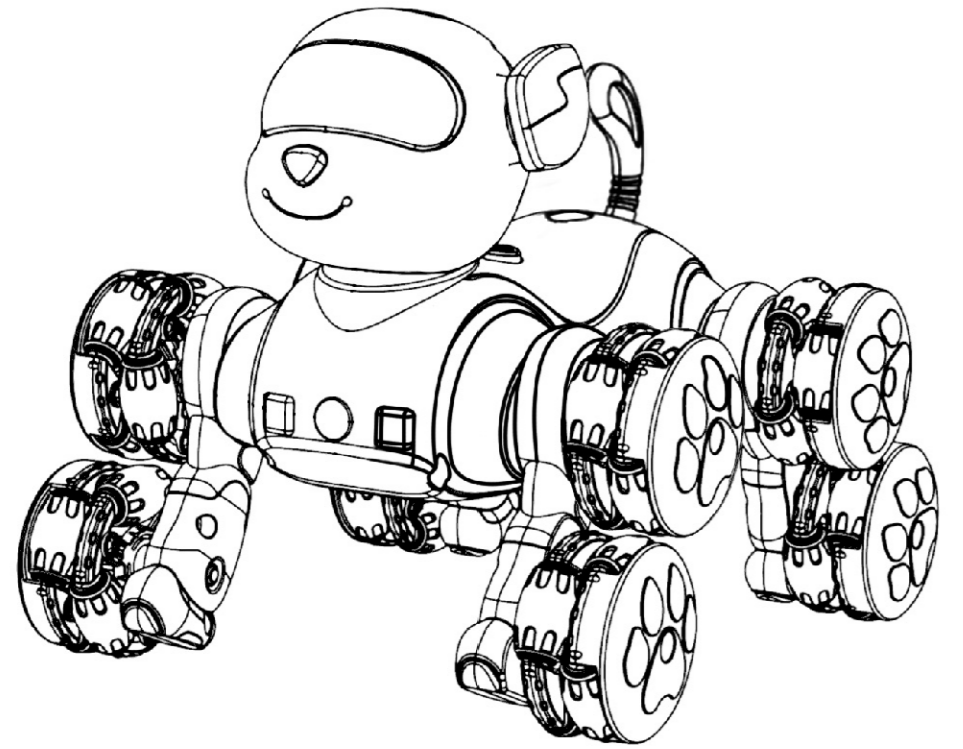

8 stunt wheels, climbing, dancing, telling stories, greeting, programming

function Type-c direct charging, 360° rotation, gesture sensing, lighting and music, slow-motion function



(1)

Thank you for using our company's toy products. In order to give you a better understanding of this product, please use them before use. Reading the following instructions thoroughly will bring you a different operating experience.

Attention: The remote-controlled dog products shown in this instruction manual are for reference only. Please refer to the actual product for the product's appearance.

### ● Electronic control products

This product is suitable for children aged 8 and above. It is assembled/charged by adults and then played by children. Please use this product under adult supervision.

● Warning: Please do not disassemble or modify this product without authorization, any changes may cause the product to malfunction. Frequently used.

This manual is applicable to the introduction of a series of products in our company. Each product has a different configuration, please refer to the specific configuration. Check the configuration of the packaging box.

1. The remote-controlled dog uses 1 rechargeable battery. For the voltage details, please refer to the battery diagram in the battery compartment. The remote control uses 2 non-rechargeable 1.5V AAA batteries.

2. The removal and installation of batteries should be operated correctly according to the polarity and voltage inside the toy battery room;

3. Non-rechargeable batteries are not rechargeable;

4. Rechargeable batteries must be charged under adult supervision;

5. Rechargeable batteries should be removed from toys before charging;

6. Different types of batteries or old and new batteries cannot be mixed;

7. Only batteries that are the same or equivalent to the recommended battery can be used;

8. When using up the battery, it should be removed from the toy; if not used for a long time, please remove the battery from the toy;

 
 
 
9. The power terminal shall not be short circuited;

10. Use a screwdriver to unscrew the screws on the battery compartment cover, install the battery according to the correct positive and negative polarity, and use screws. Unscrew the screws on the battery compartment cover with a knife and remove the battery;

11. Maintenance and upkeep: This product is composed of plastic, hardware, and electronic components, and should not be immersed in water or stored for a long time. Place or use in a humid environment, regularly check for missing wires, plugs, casings, and other components. When defects are found, use should be stopped until they are repaired completely.

(2)

### Product configuration (this product is divided into three different configurations)

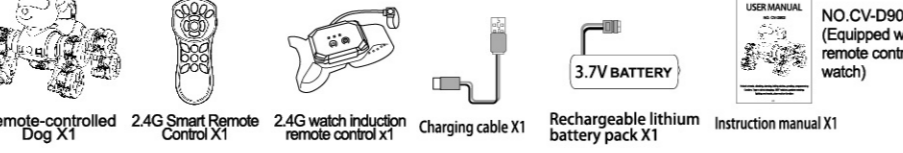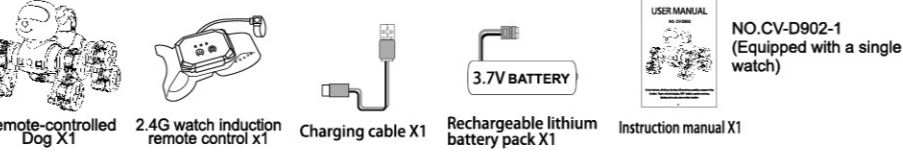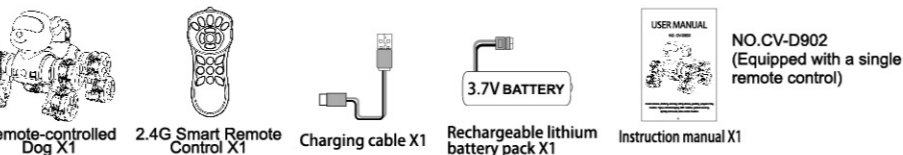

### How to install batteries

1. Remote Control  
1. Open the battery cover of the remote control and install 2 1.5V "AAA" batteries according to the positive and negative instructions in the battery compartment of the remote control.  
2. Cover the battery.

 
2. Remote-controlled Dog  
1. Open the battery cover at the bottom of the remote-controlled dog, connect the battery pack to the power plug of the remote-controlled dog, and install it in the battery compartment at the bottom of the remote-controlled dog.  
2. Close the battery cover and tighten it with a screwdriver.

3. Watch remote control  
1. Open the battery cover of the watch remote control and follow the instructions in the battery compartment of the watch remote control. Install two 1.5V "AAA" batteries into the positive and negative indicators inside.  
2. Close the battery cover.

### How to charge

This new battery pack needs to be charged before it can be used.  
**Battery Charging Mode 1**  
First, connect the Type-C plug on the charging cable to the Type-C interface of the battery pack, and then connect the USB plug of the charging cable to the power source to start charging.

**Battery Charging Mode 2**  
Before charging, please make sure that the battery pack is in the battery compartment of the remote-controlled dog and is connected to the plug in the battery compartment. Turn off the power switch of the remote-controlled dog, insert the Type-C plug of the charging cable into the charging port, and finally connect the USB plug of the charging cable to the power source to start charging.  
(You can also use a regular Type-C data cable for charging.)  
It takes 3 to 4 hours to fully charge the battery. The charging cable is equipped with a charging indicator light. The red light is on during charging, and it will go out when the battery is fully charged. Do not overcharge the battery, as charging for an excessively long time will not increase the battery capacity.




(3)

### 2.4G automatic frequency description

 1. Install the batteries in the remote control. The indicator light of the remote control will start flashing. Install the batteries in the remote-controlled dog and turn on the switch. It will then start entering the connection state. When the connection is successful, the indicator light of the remote control will go out. Note: If the connection is not successful, please repeat the above operations.  
2. Each remote control can only be connected to one remote-controlled dog. After a successful connection, each remote-controlled dog will not interfere with one another. Note: Multiple remote-controlled dogs cannot be connected simultaneously.  
3. If the remote control does not detect the 2.4G signal emitted by the powered-on remote-controlled dog within one minute, and the power indicator light is flashing, you need to restart the power switch to pair the frequencies.  
4. When you need to pair with other remote controls or remote-controlled dogs of the same model, you need to turn off the power of the remote-controlled dog before re-pairing.

### Introduction to the Functions of the Smart Remote Control

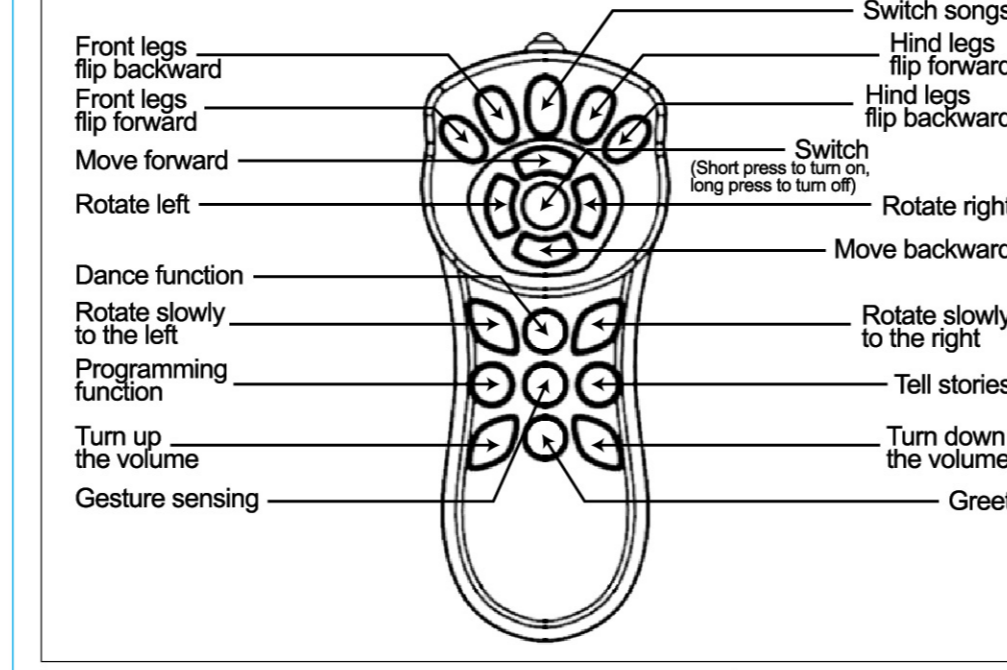

### Function Introduction of the Watch Remote Control

1. Short press: Switch songs  
When the watch is tilted downward, the front wheels flip forward.  
When the watch is tilted upward, the front wheels flip backward.  
When the watch is tilted to the left, the rear wheels flip forward.  
When the watch is tilted to the right, the rear wheels flip backward.

2. Press and hold this button:  
Short press: Switch speed  
Short press: Turn on  
Long press: Turn off

3. Gesture sensing mode  
Tilt the watch down - Move forward  
Tilt the watch up - Move backward  
Tilt the watch to the left - Rotate left  
Tilt the watch to the right - Rotate right

(4)

### Introduction to the Play Methods of the Remote-controlled Dog

1. Basic control  
Press and hold the forward button on the remote control, and the remote-controlled dog will move forward.  
Press and hold the backward button on the remote control, and the remote-controlled dog will move backward.  
Press and hold the forward button and the left rotation button on the remote control simultaneously, and the remote-controlled dog will turn left.  
Press and hold the forward button and the right rotation button on the remote control simultaneously, and the remote-controlled dog will turn right.

2. 360° Rotation Stunt  
Press and hold the left rotation button on the remote control, and the remote-controlled dog will rotate left.  
Press and hold the right rotation button on the remote control, and the remote-controlled dog will rotate right.

 
 
 
3. Slow-motion 360° Rotation  
Press and hold the slow-motion left rotation button on the remote control, and the remote-controlled dog will rotate slowly to the left.  
Press and hold the slow-motion right rotation button on the remote control, and the remote-controlled dog will rotate slowly to the right.

4. Gesture Sensing Function  
First, press this button briefly to turn on the gesture sensing function. Then, bring your palm close to the sensing device on the top of the dog's head. Moving your palm from the left will make the dog rotate left, and moving it to the right will make the dog rotate right.  
(Note: Your palm needs to be kept at a relatively close distance to the dog to perform this operation.)

5. Climbing Stunt  
Press and hold the front legs flip forward button on the remote control, and the front legs of the remote-controlled dog will flip forward 360°.  
Press and hold the front legs flip backward button on the remote control, and the front legs of the remote-controlled dog will flip backward 360°.  
Press and hold the hind legs flip forward button on the remote control, and the hind legs of the remote-controlled dog will flip forward 360°.  
Press and hold the hind legs flip backward button on the remote control, and the hind legs of the remote-controlled dog will flip backward 360°.

(5)

### 6. There are various ways to play, waiting for you to explore.

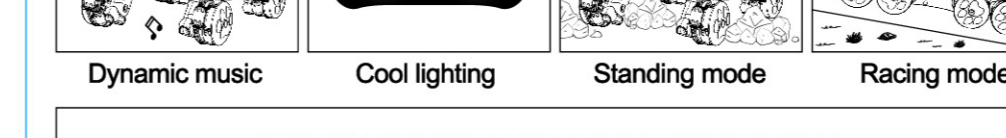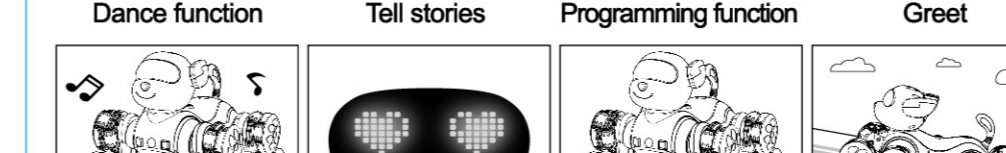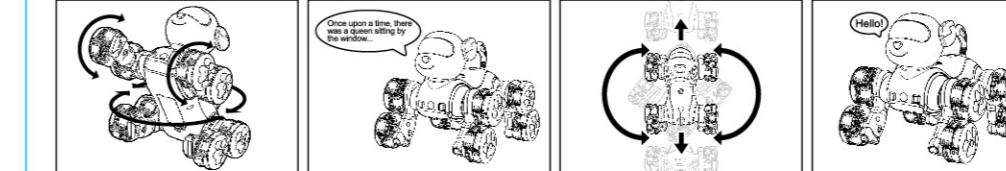

1. A fist tilted downward means moving forward  
2. A fist tilted upward means moving backward  
3. When the fist tilts to the left, it indicates a left rotation.  
4. When the fist tilts to the right, it indicates a right rotation.

1. Turn on the switch of the remote-controlled dog and reconnect the remote control.  
2. Install the batteries correctly in the remote control or the remote-controlled dog.  
3. Charge the rechargeable battery pack has insufficient power.

1. Battery or rechargeable battery pack inside the remote control. The electricity is insufficient.  
2. There may be interference sources near the venue.

1. Turn on the power switch again for the power-off protection of the remote-controlled dog.

(6)

### Operation tips

Please press the power switch to ensure that the power switch is in the on state. When you operate it, if the power switch is in the off state, the remote-controlled dog will not be able to be powered on.  
When the battery power is consumed, the left and right steering is not sensitive, and the forward and backward will be slow; take off the battery and charge it.  
The effective control distance of the remote-controlled dog: The control distance of the watch remote control is approximately 30 meters, and that of the smart remote control is approximately 50 meters. When the distance exceeds the specified range, the remote-controlled dog may stop or become out of control.

**Important Notice**  
When connecting the Type-C socket, you need to use a bit of force to insert it in place properly, so as not to affect the power-on effect!

### General fault handling

Fault symptoms	Reason for malfunction	Processing method
The remote-controlled dog cannot move.	1. The remote control is not connected, or the switch of the remote-controlled dog is not turned on. 2. The batteries are not properly installed in the remote control or the remote-controlled dog. 3. The rechargeable battery pack has insufficient power.	1. Turn on the switch of the remote-controlled dog and reconnect the remote control. 2. Install the batteries correctly in the remote control or the remote-controlled dog. 3. Charge the rechargeable battery pack.
The remote-controlled dog is out of control and the remote control distance is short.	1. Battery or rechargeable battery pack inside the remote control. The electricity is insufficient. 2. There may be interference sources near the venue.	1. Replace the battery inside the remote control with a new one. Battery or rechargeable battery pack. Charge the vehicle. 2. Change the venue.
Abnormal protection	1. When the functions of the remote-controlled dog are hindered by external forces and it is unable to complete all the functional movements, or when there is a short circuit in the battery of the circuit.	1. Turn on the power switch again for the power-off protection of the remote-controlled dog.

(7)

### To consumers

1. When playing with the remote-controlled dog indoors, please be careful not to damage the furniture or glass.  
2. Please play in a safe outdoor area. Do not play with the remote-controlled dog on the road or among crowds to avoid potential dangers.  
3. When you hear thunder while playing with the remote-controlled dog outdoors, you should stop playing immediately.  
4. Do not drive the remote-controlled dog towards people.  
5. Do not throw or collide the remote-controlled dog randomly.  
6. When storing the remote-controlled dog, please keep it away from fire sources and high-temperature areas.  
7. The remote-controlled dog is equipped with a complex electronic circuit and a large number of components. Please do not disassemble, assemble, or modify the circuit board casually.  
8. When the remote-controlled dog is covered with dirt and dust after playing, it should be gently wiped with a damp cloth.  
9. Do not put toys in water, as it can damage electronic components.  
10. The packaging box and instructions contain important information, please keep them properly.

### Maintenance matters

1. Keep away from fire sources, avoid direct sunlight, high temperature and humidity, or keep in the car for a long time to avoid short circuits in the circuit to catch fire.  
2. When not in use, remove the batteries from the remote-controlled dog and the remote control, and put the remote-controlled dog and the remote control back into the colorful box packaging. This can prevent damage or deformation during transportation or storage.  
3. The remote-controlled dog should be gently wiped with a damp cloth.  
4. When not playing with it, please remove the batteries from the remote-controlled dog and the remote control to avoid reducing the battery life.

### Reminder

When the remote-controlled dog is moving, please do not touch the wheels of the remote-controlled dog with your hands to avoid getting injured.

Do not play on the roadside or in dangerous places to prevent accidents.

(8)

**FCC Statement**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.