

2A35W-H96MAXV6

Do not let the player be exposed to rain or other moisture and avoid contact with water.

To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheating of the player. Keep it candles and other lit objects away from the player. Please do not open the case of the player. Only a specialist is allowed to do this.

Placement of unit Issues
Please place the player on a flat area. Keep it away from sunlight and avoid heat, humidity and frequent shaking to avoid damage the case and other components of the player and shorten the service life of the player for the best performance of the player, please do not place heavy objects on the player and keep it at least 6 inches away from the wall.

Power Issues
Do not use over-voltage, otherwise the player will be damaged and might cause fire. Please connect the power cord correctly and make sure the power cord is not damaged in the United States, that means supplying 110 VAC to the device. Please plug the power cord if you do not use the player for long time to prevent damage caused by lightning.

Cleaning Issues
Please unplug the power cord before cleaning the player. Use a slightly wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.

Moisture Issues
Please keep the player away from any humid places, like a basement. Confirmation of moisture might cause damage to the player. In this case, please turn on the player and let the heat of the player dry inside the humidity away.

About the user manual
Please read the user manual carefully and keep the manual in a safe place for review if necessary. The pictures in this user manual might be different with the pictures shown on the TV because of a difference in firmware.

If any of the components needs to be replaced, please make sure only authorized components are used. Otherwise it might cause fire, electronic shock or other damage.

Package Contents

Accessories	Quantity
Power adapter	1
Remote control	1
EU cable	1
User manual	1

RK3568 Android TV Box Installation:

1. Power on the TV Box (the blue indicator light on), connect the TV with HD 2. Switch to the correct date source, enter the main interface.
2. Set up wireless network or insert cable to connect wired network.
4. Open any TV or audio you want to use.

Connect the TV with HD Cable

Power on the TV BOX

Power: Press to OFF

- 1. **Home**: Press to choose from menu items of corresponding operations in Home, Pricis, Photos and website.
- 2. **Home**: Fast key to go back to main menu.
- 3. **Return**: Press to return back to previous menu.
- 4. **VOL+**: Press to increase/decrease the volume.
- 5. **Cursor/Power**: Press to the navigation button to cursor.

Navigation: Press to navigate left/right/up/down, Press OK to enter the menu.

YouTube

2A35W-H96MAXV6

Do not let the TV set or other electronic devices be placed on top of the TV.

To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheating of the player. Keep it candles and other lit objects away from the player. Please do not open the case of the player. Only a specialist is allowed to do this.

Placement of unit Issues
Please place the player on a flat area. Keep it away from sunlight and avoid heat, humidity and frequent shaking to avoid damage the case and other components of the player and shorten the service life of the player for the best performance of the player, please do not place heavy objects on the player and keep it at least 6 inches away from the wall.

Power Issues
Do not use over-voltage, otherwise the player will be damaged and might cause fire. Please connect the power cord correctly and make sure the power cord is not damaged in the United States, that means supplying 110 VAC to the device. Please plug the power cord if you do not use the player for long time to prevent damage caused by lightning.

Cleaning Issues
Please unplug the power cord before cleaning the player. Use a slightly wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.

Moisture Issues
Please keep the player away from any humid places, like a basement. Condensation of moisture might cause damage to the player. In this case, please turn on the player and let the heat of the player dry inside the humidity away.

About the user manual
Please read the user manual carefully and keep the manual in a safe place for review if necessary. The pictures in this user manual might be different with the pictures shown on the TV because of a difference in firmware.

If any of the components needs to be replaced, please make sure only authorized components are used. Otherwise it might cause fire, electronic shock or other damage.

Package Contents

Accessories	Quantity
Power adapter	1
Remote control	1
EU cable	1
User manual	1

RK35H Android TV Box Installation:
 1. Power on the TV Box (the blue indicator light on, connect the TV with HD 2. Switch to the correct date source, enter the main interface.
 2. Set up wireless network or insert cable to connect wired network.
 4. Open any TV or audio you want to see.

Power: Please to OFF

- Home:** Press to choose from menu items of corresponding operations in Home, Photo, Music and website.
- Home:** Fast key to go back to main menu.
- Return:** Press to return back to previous menu.
- VOL+:** Press to increase/decrease the volume.
- Cursor/Power:** Press to the navigation button to cursor.

Startup:
After turning on the power supply, the blue light is lit, about 30 seconds to enter the main interface.

2A35W-H96MAXV6

Do not let the player be exposed to rain or other moisture and avoid direct sunlight.

To ensure good ventilation, please do not put the player in bookcases, cabinet or other confined places. Keep well-ventilated to prevent fire or electronic shock caused by overheating of the player. Keep it candles and other lit objects away from the player. Please do not open the case of the player. Only a specialist is allowed to do this.

Placement of unit Issues
Please place the player on a flat area. Keep it away from sunlight and avoid heat, humidity and frequent shaking to avoid damage the case and other components of the player and shorten the service life of the player for the best performance of the player, please do not place heavy objects on the player and keep it at least 6 inches away from the wall.

Power Issues
Do not use over-voltage, otherwise the player will be damaged and might cause fire. Please connect the power cord correctly and make sure the power cord is not damaged in the United States, that means supplying 110 VAC to the device. Please plug the power cord if you do not use the player for long time to prevent damage caused by lightning.

Cleaning Issues
Please unplug the power cord before cleaning the player. Use a slightly wet rag to clean the player instead of liquid detergent. Do not use solvents like gas, because this might damage the case of the player.

Moisture Issues
Please keep the player away from any humid places, like a basement. Confirmation of moisture might cause damage to the player. In this case, please turn on the player and let the heat of the player may dry out the humidity away.

About the user manual
Please read the user manual carefully and keep the manual in a safe place for review if necessary. The pictures in this user manual might be different with the pictures shown on the TV because of a difference in firmware.

If any of the components needs to be replaced, please make sure only authorized components are used. Otherwise it might cause fire, electronic shock or other damage.

Package Contents

Accessories	Quantity
Power adapter	1
Remote control	1
EU cable	1
User manual	1

RK3568 Android TV Box Installation:

1. Power on the TV Box (the blue indicator light on), connect the TV with HD 2. Switch to the correct date source, enter the main interface.
2. Set up wireless network or insert cable to connect wired network.
4. Open any TV or audio you want to use.

Connect the TV with HD Cable

 
Power on the TV BOX

Power: Press to OFF

- 1. **Home**: Press to choose from menu items of corresponding operation in video, photo, music and website.
- 2. **Home**: Fast key to go back to main menu.
- 3. **Return**: Press to return back to previous menu.
- 4. **VOL+**: Press to increase/decrease the volume.
- 5. **Cursor/Power**: Press to the navigation button to cursor.


Navigation: Press to navigate left/right/up/down, press OK to enter the menu.

Startup:
After turning on the power supply, the blue light is lit, about 30 seconds to enter the main interface.

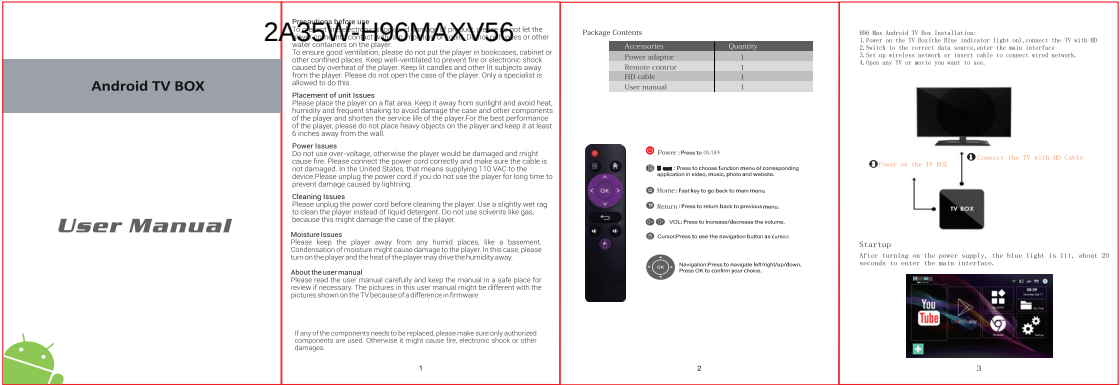


Accessories	Quantity
Power adaptor	1
Remote control	1
HDMI cable	1
User manual	1

Accessories	Quantity
Power adaptor	1
Remote control	1
HDMI cable	1
User manual	1

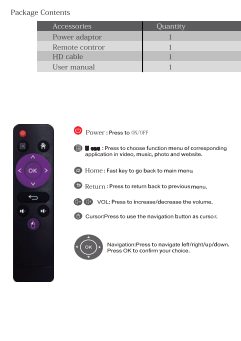 

- | Package Contents | |
|-------------------|----------|
| Accessories | Quantity |
| Power adaptor | 1 |
| Remote controller | 1 |
| HDMI cable | 1 |
| User manual | 1 |

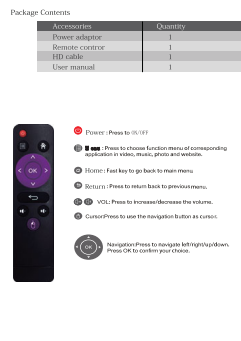

How Use Android TV box Installation:

1. Plug in the power cable indicator light and connect the TV with IP.
2. Switch to the correct data source, enter the main interface.
3. Press the power button on the remote control to connect wireless network.
4. Open any TV or movie you want to see.


Power on the TV BOX

connect the TV with HD Cable

Startup

After turning on the power supply, the blue light is lit, about 2 seconds to enter the main interface.

- How Use Android TV box Installation:**
1. Plug in the power cable indicator light and connect the TV with IP.
 2. Switch to the correct data source, enter the main interface.
 3. Press the power button on the remote control to connect wireless network.
 4. Open any TV or movie you want to see.
-
- Power on the TV BOX**
- connect the TV with HD Cable**
- Startup**
- After turning on the power supply, the blue light is lit, about 2 seconds to enter the main interface.
-

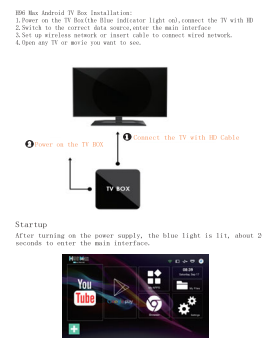

How Use Android TV box Installation:

1. Plug in the power cable indicator light and connect the TV with IP.
2. Switch to the correct data source, enter the main interface.
3. Press the power button on the remote control to connect wireless network.
4. Open any TV or movie you want to see.

Power on the TV BOX

connect the TV with HD Cable

Startup

 
After turning on the power supply, the blue light is lit, about 2 seconds to enter the main interface.

WiFi Setting
 Make sure that you are on the WiFi network from the upper right corner. System $\Rightarrow$ Start scanning available WiFi networks around you automatically.

HD/VOIP call setting
 Display $\Rightarrow$ Turn on 'GPU acceleration' $\Rightarrow$ Click 'HD Output Mode Setting: 1080@60Hz'.
 Then you can start video in the second page.

4


WiFi Setting
 Make sure that you are on the WiFi network from the upper right corner. System $\Rightarrow$ Start scanning available WiFi networks around you automatically.




HD/VOIP call setting
 Display $\Rightarrow$ Turn on 'GPU acceleration' $\Rightarrow$ Click 'HD' Output Mode Setting '1080@60Hz'.
 Then you can start video in the second page.



 4

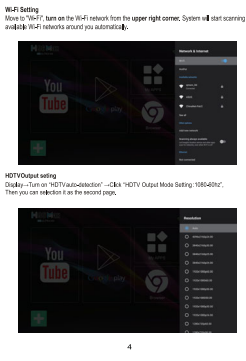

 
WiFi Setting
 Make sure that you are on the WiFi network from the upper right corner. System $\Rightarrow$ Start scanning available WiFi networks around you automatically.



HD/VOIP call setting
 Display $\Rightarrow$ Turn on "OutputAudioDevice" $\Rightarrow$ Click "HD" Output Mode Setting "1080/40Hz".
 Then you can start using it in the second page.



4

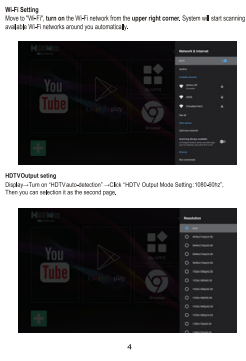

APP install

Move to **application**. Press **OK** to enter in

You can install software by the **scriptable function**. Press **file download** (your desired software in the format from) to complete the **install**. You will choose your desired device in order to scan.

Press **OK** to install your desired software.

After the evaluation finished the software can be shown on the applications menu.

My Apps

Move to **My Apps**. Press **OK** to enter in

You can see icons relating to different function on the picture

5

APP install

Move to **Applications**. Press OK to enter it.

You can install software by the **screenplay function**. Press F1 to download your desired software from the formats from the computer to the USB. You will choose your desired device in order to scan the USB OK to transfer you desired software.

After the evaluation finished the software can be shown on the applications menu.




My Apps

Move to **My Apps**. Press OK to enter in.

You can see icons relating to different function on the picture



5

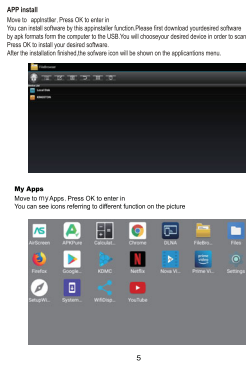

APP install


Move to **Applications**. Press **OK** to enter in
You can install software by the **command-line function**. Press **F1** download your desired software
in formats from the computer to the USB. You will choose your desired device in order to scan.
Press **OK** to transfer your desired software.

After the evaluation finished the software can be shown on the applications menu.


My Apps

Move to **My Apps**. Press **OK** to enter in
You can see icons relating to different function on the picture

5

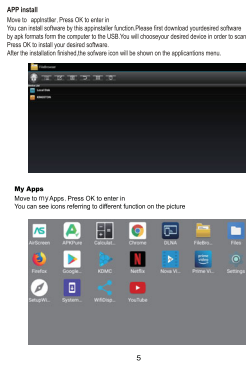[illegible][illegible]

The screenshot shows a BIOS boot menu with a black background and yellow text. At the top, it says 'Boot' and 'Reset'. Below this, there are two main options: 'Boot' and 'Reset'. The 'Boot' option is highlighted with a yellow bar. Below 'Boot', there are several sub-options: 'Boot to Hard Drive', 'Boot to CD-ROM', 'Boot to USB', 'Boot to Network', 'Boot to Floppy', 'Boot to Serial', 'Boot to Parallel', 'Boot to SATA', 'Boot to IDE', 'Boot to SCSI', 'Boot to FireWire', 'Boot to USB-LAN', 'Boot to USB-Modem', 'Boot to USB-Printer', 'Boot to USB-Speaker', 'Boot to USB-Microphone', 'Boot to USB-Webcam', 'Boot to USB-Digital Camera', 'Boot to USB-Digital Video Recorder', 'Boot to USB-Digital Audio Recorder', 'Boot to USB-Digital Video Camera', 'Boot to USB-Digital Audio Camera', 'Boot to USB-Digital Video Camera', 'Boot to USB-Digital Audio Camera'. The 'Reset' option is also highlighted with a yellow bar. Below 'Reset', there are several sub-options: 'Reset to Default', 'Reset to Factory', 'Reset to User', 'Reset to BIOS', 'Reset to CMOS', 'Reset to BIOS', 'Reset to CMOS', 'Reset to BIOS', 'Reset to CMOS'. At the bottom of the screen, there is a line of text: 'Press F1 to enter BIOS Setup'. Below this, there is a line of text: 'Press F2 to enter BIOS Setup'. At the very bottom, there is a line of text: 'Press F3 to enter BIOS Setup'.

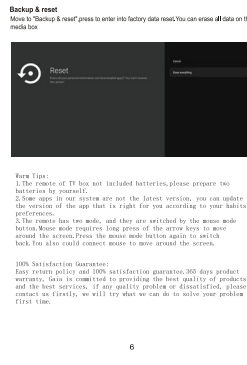

The screenshot shows a BIOS boot menu with a black background and yellow text. At the top, it says 'Boot' and 'Reset'. Below this, there are two main options: 'Boot' and 'Reset'. The 'Boot' option is highlighted with a yellow bar. Below 'Boot', there are several sub-options: 'Boot to Hard Drive', 'Boot to CD-ROM', 'Boot to USB', 'Boot to Network', 'Boot to Floppy', 'Boot to Serial', 'Boot to Parallel', 'Boot to FireWire', 'Boot to SATA', 'Boot to IDE', 'Boot to SCSI', 'Boot to RAID', 'Boot to LSI', 'Boot to HBA', 'Boot to SATA RAID', 'Boot to IDE RAID', 'Boot to SCSI RAID', 'Boot to LSI RAID', 'Boot to HBA RAID', 'Boot to SATA RAID', 'Boot to IDE RAID', 'Boot to SCSI RAID', 'Boot to LSI RAID', 'Boot to HBA RAID'. The 'Reset' option is also visible below 'Boot'.

- [illegible]

[illegible][illegible][illegible][illegible][illegible][illegible][illegible]

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.