 


Aeritto

MODEL:CB24M-D

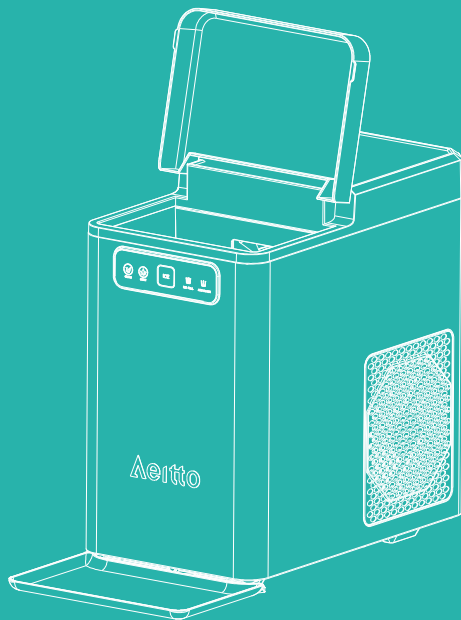

SOFT NUGGET ICE MAKER

This product is designed for making chewable and crunchy ice, a suitable choice for cocktails and beverages. To achieve the best performance, please read and adhere to the instructions strictly before using. Please keep the user manual for future reference. We hope you enjoy your home & office ice maker.

Thank you again for choosing Aeitto. Questions or Concerns? You are welcome to contact us via

support@aeitto.com

facebook.com/Aeitto

www.aeitto.com

1(888)986-0011 (Mon-Fri 9:00-17:00 EST)



Please fully read and understand this manual before using and keep this manual for future reference.

REGISTER NOW!

Activate Your 12 months Manufacturer's Warranty for Aeitto Products!

To activate your warranty, please submit your Order ID through one of the following methods:

Email us at: support@aeitto.com, or Submit online via our official website:
www.aeitto.com/?vipwarranty.

Note: This warranty is only valid for products purchased through authorized retailers or our official website. Purchases from other channels are not eligible.

- ✓ FREE upgrade to FULL Replacement Guarantee - no need to return.
- ✓ Once registered, you will be ensured that if anything goes wrong with your product, we will either send you a brand new unit as a replacement (Absolutely FREE) or provide a FULL refund of your order.
- ✓ Just send your Amazon Order ID to Email support@aeitto.com or scan the QR code to activate the extended warranty.

NOTE: Must register within 7 days after receiving your new product.



Register Warranty

TABLE OF CONTENTS

WARNING	01
DIAGRAM	04
INSTRUCTIONS	06
Control panel	07
BEFORE USE	08
HOW TO USE	09
TROUBLESHOOTING	10

CLEAN AND MAINTENANCE	14
Clean	15
DESCALING	16
NOTES	16
SPECIFICATIONS	17
PACKAGE INCLUDED	18
WARRANTY PERIOD	19

 
 
 
 
 
WARNING

- Before using, check that the voltage power corresponds to the one shown on the appliance nameplate.
- Avoid using a power strip due to overheat caution. If you have to use a power strip:
 - (1) Only use the grounded power strip.
 - (2) The electrical rating of the cord must be equal to or greater than the rating of this appliance.
- Do not, under any circumstances, alter or remove the third (ground) prong from the power cord. For personal safety, this product must be properly grounded.
- **Do not fill the reservoir with any other liquid except water. Using any liquid except potable water is misuse and will void your warranty.**
- Do not use water that is microbiologically unsafe or of unknown quality.
- Fill the water reservoir with water of room temperature or lower.
- Do not immerse any part of the product into water, or plug or unplug the product with wet hands.
- Do not touch the ice-making parts when using to avoid frostbite.
- Do not use outdoors.
- The appliance must be placed upright on a flat and level surface in a well-ventilated area with an ambient temperature between 55°F-90°F (13°C-32°C).
- Keep away from heat sources such as ovens, heaters, or corrosive gases.
- Leave a 4 inches (10.2 cm) clearance on all sides of the ice maker for proper ventilation.
- Do not use the appliance for other than intended use.
- Do not attempt to disassemble, repair, modify, or replace any part of your product.

- The incline angle of the ice maker cabinet should not exceed 45° during transportation or use.
- Do not turn the ice maker upside down, which may lead to disfunction of the compressor or the refrigerating system.
- Please allow time for the fluids in the compressor to settle after the ice maker is moved or transported.
- Before using the ice maker for the first time, please wait for at least 6 hours after the ice maker has been leveled and positioned in the proper place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliances by a person responsible for their safety.
- Clean the appliance by following the operation of 'Maintenance' before operating.
- In the automatic water mode, such as long-term power without water standby for more than 30 minutes, the solenoid valve will be closed, you need to unplug and then power before you can fill water.

**This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received,
including interference that may cause undesired operation.**

DIAGRAM

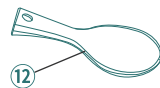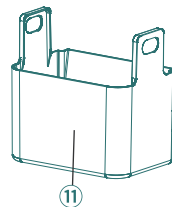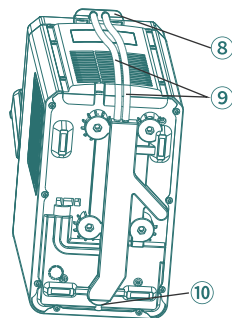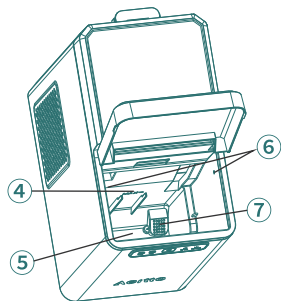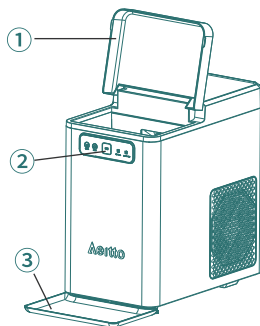


- ① Top cover
- ⑤ Water tank
- ⑨ Drain tube
- ⑫ Ice scoop

- ② Control panel
- ⑥ Infrared sensor
- ⑦ Filter
- ⑩ Condensate overflow hole

- ③ Drip tray
- ④ Maximum water level
- ⑧ Drain plug
- ⑪ Ice basket

INSTRUCTIONS

 CONTROL PANEL

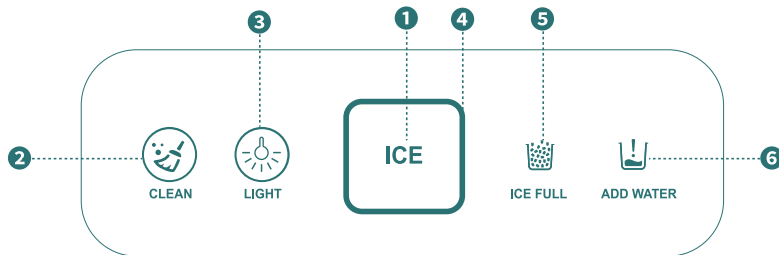

TOUCH BUTTONS

1 ICE Button: Press the “ICE” button , the icon lights up, it begin to work, Press this button again, it will stop making ice.

2 CLEAN Button: Press the button to enter the cleaning mode, the icon will light up and the cleaning will run for 10 minutes, then the light will go out. During cleaning, press the button again to exit the cleaning mode.

Note: When using the ice maker for the first time, or if the machine has not been used for a long time, it is recommended to clean it before making ice. Moreover, it is recommended to discard the ice made within one hour and use the ice after one hour.

3 LIGHT Button: Turn on/off the interior light bulb.

INDICATOR LIGHTS

④ "ICE" indicator:

White--making ice

Blue&clean light on--Auto cleaning

Green&ICE full light on--ICE full

Yellow&Add water light on--ADD water

⑤ **"ICE FULL"**: When the ice basket is full, the "ICE FULL" light illuminates and the ice maker automatically stops working. Please open the top cover, pour the ice out. Wait a moment, the ice full indicator light will extinguish, and automatically start ice making.

⑥ **"ADD WATER"** indicator: When there is no water available, the "ADD WATER" light illuminates.
(Note: After adding water, you need to press the "ICE" button again to restart ice making.)

BEFORE USE

- Unpack and take out all the accessories.
- Place the ice maker upright on a flat surface for 6 hours before use.
- Keep the ice maker out of direct sunlight and away from other sources of heat.
- Ensure that there is a gap of at least 4 inches between the ice maker and any walls or other vertical surfaces. Keep the ice maker's cooling vents clear to ensure proper heat release and efficient performance.

HOW TO USE

- Before start making ice, first please fill the water tank with water and check the drain tube, make sure the drain plug has been inserted into the tube.
- Plug the power cord into the socket and switch on the rated power supply.
- Press the “ICE” button , the icon lights up, it begin to work, Press the button again, it will stop making ice.
- For the first time, or if the appliance has not been used for a long time, it is recommended to clean this appliance before you start to make ice.

TROUBLESHOOTING

TROUBLESHOOTING

Phenomenon	Cause	Solution
The machine does not respond.	Not powered.	Check the power supply. Check the power cord connection. Check the power cord for damage.
	There is no power in the power jack.	
	The power cord is not plugged in firmly.	
	Power cord is damaged.	Please contact professional after-sales service personnel via support@aeitto.com.
“ADD WATER” indicator light on.	Lack of water.	Please add water.
	The filter cover is clogged.	Remove the filter to check if there are any foreign objects, then restart the ice maker.
“ICE FULL” indicator light on.	Ice basket is full.	Please take out the ice cubes from the ice basket.
	Poor induction of ice full sensor.	Clean the infrared sensor.



Phenomenon	Cause	Solution
Water leakage.	The drain plug is not plugged in or is not plugged in properly.	Plug the drain plug into the drain tube.
	Condensate for an extended period may lead to overflow from the front drain hole of the base into the drip tray.	Condensation water may accumulate on the base due to high humidity or prolonged use of the Ice Maker. Simply tilt the machine slightly to allow water to flow out of the drain hole of the base.
Slow ice making or no ice making.	The ambient or water temperature is too high.	The machine should be operated under 90°F , and the temperature of adding water should be 45°F-90° F.
	Refrigerant leakage or blockage.	Please contact professional after-sales service personnel via support@aeitto.com.
Ice maker makes a squeaking noise.	The sound of ice piling up and squeezing inside the machine.	Turn the Ice Maker off and allow it to defrost for at least 10 hours. When the ice has melted, switch it back on.

Phenomenon	Cause	Solution
Ice maker makes a squeaking noise.	Scale build-up inside the machine causes the sound of parts rubbing together.	More frequent squeaking usually requires white vinegar or descaling solution cleaning to remove internal mineral scale buildup.
The water in the reservoir is not clean. / The ice produced is not clean.	The ambient or water temperature is too high.	Regularly perform self-cleaning cycles and remove scale/mineral deposits.
	Use of unsuitable water.	· Ensure the water added from the tap or supply is clean and potable. It is strongly recommended to use purified or distilled water. · The temperature of adding water should be 45°F-90° F.
	The filter is clogged or dirty.	Disassemble the filter at the bottom of the reservoir. Check and clean when necessary.
	Dirty or residual water is not emptied in time.	· After the self-cleaning process is complete, be sure to drain the dirty water from the drainpipe. · After each use, make sure to promptly empty the residual water in the reservoir to prevent the buildup of scale/mineral deposits/mold from prolonged storage.

CLEAN AND MAINTAIN

CLEAN

For the first time, or the clean procedure has not been running for a long time, it is highly recommended to run this procedure at first.

1. Clean the inside of the ice machine

- Before clean procedure, check the two drain tubes is connected firmly to the back of the drain port and the end of the drain tubes are blocked by plug.
- Open the top cover, take out the ice basket, add water into the tank.
- Press “CLEAN” button, the icon lights up, it will run cleaning procedure for at least 10 minutes, then the icon goes out. Press the button again, it will stop cleaning.
- Take out the drain tube to drain the water; plug the drain plug infirmly after completion. Fill clean water in the water tank.
- Repeat cleaning 2-4 times if needed until the ice maker became clean and no residual detergents.

2. Cleaning surface of the ice maker

- Clean the interior and water tank with a soft.
- Turn off the ice maker and unplug.
- Commercial cleanser for stainless steel and granule-free liquid cleanser are eligible for cleaning the stainless steel surface, and rub in the direction of the brush lines with a damp, soft sponge. Then dry the surface with a soft cloth as well.

Note: Do not apply appliance wax, polisher, solvents, or chemicals on the stainless steel surface.

- Cleaning ice basket, ice scoop with a soft cloth dipped in soapy water, dry with a soft cloth after rinsing them. (Note: Do not use solvents or chemicals.)

DESCALING

- 1.Remove all the ice.
- 2.Drain the ice maker through the drain hoses.
- 3.Pour descaling solution into water reservoir according to instructions and add water to the max water line.
- 4.Press and hold the “CLEAN” button to enter cleaning program.
- 5.The cleaning program ends in 10 minutes. Then empty the ice maker through the drain hoses.
- 6.Refill water into the water tank. Repeat step 4 and step 5 more than twice to rinse out the residues.
- 7.Remember to use fresh water each time.

NOTES

- After the cleaning process is complete, be sure to drain the dirty water from the drainpipe.
- Do not use organic solvent, boiled water, detergent, strong acid or strong alkali, etc. for descaling.
- If white vinegar is used for descaling, the ratio of vinegar to water can be between 1:10 and 1:1, depending
 - on the vinegar concentration and the severity of the scaling.
- It's recommended to descale the ice maker once a week to keep ice fresh and help the machine last longer.
- If using tap water, cleaning schedule may need to be adjusted based on hardness of water.

SPECIFICATIONS

Product: Ice Maker

Model: Model:CB24M-D

Power source: 120V AC/60Hz

Ice-Making Current : 1.5A

Ice-Harvesting Current: 2A

Refrigerant: R600a

Housing: Stainless Steel

Maximum ice basket capacity:0.75L

Water tank capacity: 1.0L

Net weight: 7.9 kg/17.4lbs

Certificate:ETL

Operating environment:55°F-90°F

Unit size:13x7.3x12.8in/ 330x185x325mm

PACKAGE INCLUDED:

- Ice Maker x1
- Ice Basket x1
- User Manual x1
- Drip Tray x1



This product contains a refrigerant, which under Federal Law must be removed prior to product disposal. If you are disposing of this, or any refrigeration product, check with your local waste company for guidance.

WARRANTY PERIOD

1- Year Warranty Limited Warranty From Aeito

- For the Period of: One Year From the date of the original purchase.
- Appliances Covers: If anything goes wrong with your product, we will either send you a brand new unit as a replacement (Absolutely FREE) or provide a FULL refund of your order.
- This warranty only cover orders from authorized brand online stores and our official website. We are not responsible for any purchases from other distribution channels.

What Aeito will not cover

- Service trips to your home.
- Improper maintenance.
- Replace the house fuses or resetting of the circuit breakers.
- Incidental or consequential damage caused by possible defects with this appliance.
- Labor and other charges to install and/ or remove the product.

Each Aeito home & office ice maker will be free from defects in material and craft, This warranty does not cover damage from neglect, misuse, contamination, alteration, accident, or abnormal conditions of operation or handling. This warranty covers the original purchaser only and is not transferable. Questions or Concerns? You are welcome to contact us with your questions via support@aeitto.com.

Through the following channels,
you can quickly contact us.



support@aeitto.com



www.aeitto.com



facebook.com/Aeitto



1(888)986-0011
(M-F 9:00-17:00 EST)



Extended Warranty