

KPKUE

User Manual

Smart WiFi Digital Picture Frame

Model: DP-10A



Thank you for choosing our product.

Ensure thorough reading of the manual before connecting to power and powering on the device.

Welcome to Your Smart Wi-Fi Digital Frame

Designed to preserve and share life's moments

Share Memories 4 Ways:

1:  Frameo App (Danish-engineered):

Download the Frameo app to wirelessly sync photos/videos.

2:  Computer:

Transfer files via the Type-C port to the built-in storage.

3:  USB Drive:

Plug into the USB port for instant playback or file transfers.

4:  SD Card:

Insert into the SD card slot for instant playback or file transfers.

 Important Notes:

 
USB/SD cards (max 128GB supported).

Always download the Frameo app first.
For updates and advanced features, visit Frameo or email:

support@kpkue.com



Now, let's start exploring.

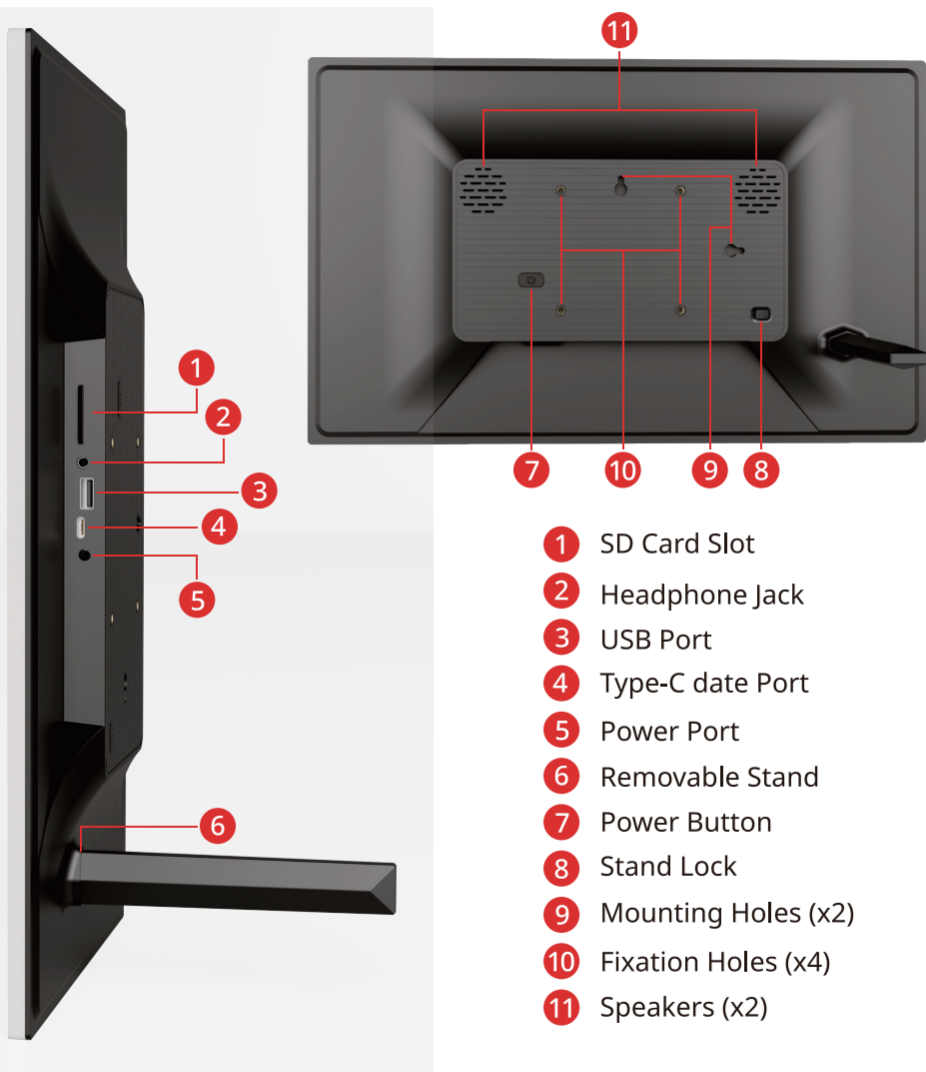

Contents

Contents

- Getting started 1
 - Hardware 1
 - File Formats 2
 - Quick Setup 2
- Start using 3
 - Connecting a new friend 3
- Navigating your Frameo 4
 - + Add friend 4
 - Gallery 4
 - Settings 4
 - Power menu 4
 - + Album 4
 - Adjust photo 4
 - React 5
 - Hide photo 5
 - Deleting Photos 5
 - Interacting with videos 5
 - Power menu 5
 - React menu 6
 - External storage menu 6
 - Clock and Weather widgets 6
 - Weather menu 6
- Settings 7
 - My frame 7
 - Frame name 7
 - Frame location 7
 - Set language 7
 - Weather location 7
 - Temperature unit 7
 - Date 7

Contents

Contents

- Time 7
- Time zone 7
- Set first day of week 7
- Enable/Disable 24-hour format 7
- Manage photos** 8
 - My Photos 8
 - Transfer from computer 8
 - Import photos 8
 - Export photos 8
 - Play from external storage 8
- My Friends** 9
 - Change options for a friend 9
 - Add person 9
- Display** 9
 - Brightness level 9
 - Sleep mode 9
- Slideshow** 10
 - Timer 10
 - Fill frame 10
 - Frame background 10
 - Photo display order 10
 - Reverse photo display order 10
 - Show caption 10
 - Show profile photo 10
 - Show clock 10
 - Show weather 10
 - Video volume 11
 - Video playback 11
 - Autoplay 11
 - Auto mute 11
- Wi-Fi** 11
 - Wi-Fi details 11
 - Reset Wi-Fi 11

Contents

Contents

- Notifications**12
 - Show notifications12
 - Notification volume12
 - Storage space12
 - Backup12
 - Network connection12
 - New photos12
 - Transfer from computer12
 - New friends12
 - Software update12
 - Feature news12
 - Date and time12
- Backup and Restore**13
 - Set up a cloud backup13
 - External storage backup13
 - Automatic backup13
 - Back up now13
 - Delete backup13
 - Restore from backup14
 - Reset frame14
 - Clear frame data14
 - Factory reset14
- Help**15
 - Guide15
 - Support15
- About**16
 - Hardware brand and model number16
 - Peer ID16
 - Frameo version16
 - Check for update16
 - Beta program16
 - Third party attributions16
 - Share anonymous analytics data16
- Warranty, Support and Safety information and more**17

Getting started

Getting started

Congratulations on your new KPKUE digital frame!

For first-time setup, follow the Quick Setup Guide or on-screen prompts during initial activation.

Once configured, connect your frame with friends and family ones to instantly share life's moments.

Hardware

Digital Photo Frame:

Built-in 64GB storage (About 7GB pre-allocated for system use).

Power Adapter:

Input: AC 100-240V, 50/60Hz

Output: DC 12V-2A (4.0mm interface)

Cable Length: 1.5 meters

Detachable Stand:

Press the lock button on the rear to release.

User Manual:

Complete guide for the Smart Wi-Fi Digital Photo Frame.

File Formats

File Formats

Type	Supported formats
Photos	JPEG, JPG, PNG, WEBP
Videos	MP4, 3GP
USB Drive	Up to 128GB
SD Card	Up to 128GB
Computer	Windows, Linux

Quick Setup

When starting your frame for the first time, you will need to set up the frame.

- Select a language. This will be the language used on the Frame.
- Connect your frame to the internet by connecting it to Wi-Fi.
- Verify or correct the date and time.
- Frame may ask you to update to the latest version.
It is recommended to update your frame before continuing if asked to.
(Do not disconnect power during firmware update; screen flickering is normal.)
- Enter your name, and the location where you have placed your frame, e.g. "John Doe" and "Living room", "Kitchen" or "Office". Finally, set the timezone if not already correct.

Start Using

Start Using

The next step is to connect Frame with your friends and family by providing them with a code from your frame.

If you want to be able to send photos to the frame yourself, start by downloading the app for iOS or Android on App Store or Google Play. Then use the code to connect your frame and app.

Connecting a new friend

Make sure that your friend has downloaded and installed the Frameo app.

Click the add friend icon on your frame . A dialog will appear showing a connection code, which is valid for 12 hours.

Now share this code in whatever fashion you prefer e.g. SMS, E-Mail, IM, phone call, to your friend.

Once your friends have added the code in their Frameo app, they will automatically appear on your frame and be able to send you photos.

 
Read chapter Change options for a friend to allow connected friends, to retrieve and share the connection code via the smartphone app.



Navigating your Frameo

Navigating your Frameo

Swipe left or right to go through your photos.
To access the menu, simply tap once on the screen.

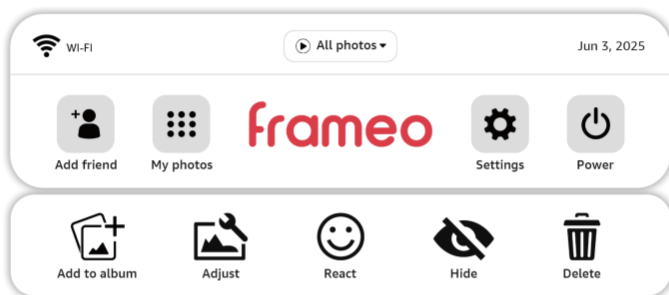

In the menu you will find the most used features.

Add friend

This will generate a code that you can share with your friends and family so they can connect and send photos to your frame.

Gallery

Opens a gallery which allows for easy and fast navigation through all your photos.

Settings

Opens the Settings.

Power menu

Opens the Power menu.

Album

Opens the Album menu.

Adjust photo

Allows you to adjust the position of the photo in the frame for an even better fit. Here you can also use  to rotate your photo, and you can use  to edit the caption on imported photos. For received photos, please ask the sender to edit the caption in the Frameo app.

Navigating your Frameo

React

Opens the React menu.

Tips: The React menu can also be accessed by double-tapping on the screen.

Hide photo

Hides the current photo. This means that the photo will no longer be shown in the slideshow. If needed, the photo can be shown again through the settings menu.

Deleting Photos

Delete the current photo, Photos can only be deleted from the frame's internal storage. Deletion is disabled when viewing files from external storage (USB/SD card).

Interacting with videos

When a video is shown, two additional controls are shown. One for play/pause of the video and one to control the volume level for video sounds.

Press  to start the video playback. Pressing  will pause the video playback.

Press  to open the volume slider. Use the slider to adjust the volume level for video sounds.

Pressing  will mute the video while pressing  will unmute the video.



Power menu

Tap the power icon  to access the power menu. Here you can power off using , restart your frame using  or enter sleep mode using .

 


NB. Make sure to always use the power off button on the device or in the power menu to turn Frameo off. Never disconnect power when Frameo is running.

Navigating your Frameo

React menu

Tap one of the reactions to let the sender know how it made you feel.

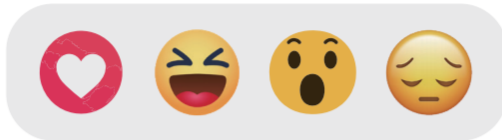

External storage menu

When inserting an external storage (e.g. a SD card) a menu will automatically appear with three options: Press  to play photos directly from the external storage, press  to import photos to the internal memory of your frame or press  to make a backup of your frame.



Clock and Weather widgets

The current time and weather will appear in the upper-right corner of the frame when the frame has received at least one photo. Tapping either of these will open the weather menu.

Weather menu

The weather menu contains more detailed weather forecasts and has shortcuts to weather-related settings.



Shows the weather location of your frame. Tap to access the weather location settings.

1 DAY

1-day forecast, which includes weather conditions for time periods of the day.

4 DAY

4-day forecast. Tap to see the weather forecast for the next four days.



Displays the frame's current time. Tap to access the time settings.

Settings

Settings

Through the settings, you can personalize your frame to your needs.

My frame

Frame name

Changes the name of your frame. This is also the name that connected friends and family will see in their list of connected frames in the smartphone app.

Frame location

Changes the location of your frame. This is the location displayed on your friends' and family's list of connected frames, which can help to distinguish frames from each other.

Set language

Sets the language used on the frame.

Weather location

Sets the location for the frame's weather feature, ensuring that your frame displays the appropriate weather forecast for you.

Temperature unit

Toggles between the Fahrenheit and Celsius temperature scales.

Date

Sets the date used on the frame.

Time

Sets the time used on the frame.

Frame will automatically try to set the correct date and time when connected to the internet.

Time zone

Sets the time zone used on the frame.

Set first day of week

Sets which day of the week is considered the first.

Enable/Disable 24-hour format

Enables, and disables, 24-hour time format.

Manage photos

Manage photos

In the manage photos menu, you can see how many photos are on your frame and the storage they use. You can also see the amount of storage left available on your device for storing new photos.

My Photos

Tap a photo to access options:

Play, Add to Album, Edit, Hide, or Delete. Hidden photos remain stored and can be restored via the filter menu in the top-right corner.

Long-press a photo to enter Single/Multi-Select mode. Select individual or multiple photos, then use the top-right icons to:

● Add to Album ● Hide ● Delete ● Select All

Transfer from computer

Allows you to transfer photos from a computer using a USB cable. Enable the feature and then follow the on-screen guide for step-by-step instructions on how to transfer photos to your frame.

Import photos

Allows you to import photos from an external storage (e.g. SD card).

Before you try to import photos, make sure you have an external storage (e.g. SD card) inserted into your frame with the photos you wish to import.

Start by selecting the photos that you want to import onto your frame.

Once selected, tap the import button  to start the import process.

Use  to select or deselect all photos on the external storage (e.g. SD card).

Use  to set the sort order of photos before import and  to order by ascending/descending.

Export photos

Allows you to export photos from the frame to external storage (e.g. SD card).

The export function will export all photos on the frame as well as profile pictures.

Play from external storage

Enables / disables playback of photos and videos directly from an external storage (e.g. SD card) without taking up space on the frame.

My Friends

My Friends

This list contains all the connected friends that are allowed to send photos to your frame.

Change options for a friend

Click the options icon  to open the friend options menu.

From here, you can allow / disallow if a friend may share the code to the frame. If this is enabled, the friend can retrieve and share the code to the frame from his/her app.

From the options menu you can also delete a friend, by pressing the DELETE FRIEND button. This will remove the friend from the list and thereby remove their permission to send photos to the frame. You will then be asked to confirm the removal and if you would like to remove all photos previously received from this friend.

Add person

To allow a new person to send you photos, simply tap the add friend button  and share the presented code in whatever way you prefer.

Display

Brightness level

Adjust the brightness level of the screen.

Sleep mode

Frame offers a sleep mode which turns off the screen to reduce power consumption. The default setting is to turn off the screen at 23:00 and turn on the screen again at 07:00 every day.

This can be altered by changing your sleep schedule(s). It is possible to have multiple schedules active at once to e.g. have different settings for weekdays and the weekend or a separate schedule to turn off the frame while at work.

Your frame is not powered down or in standby, so you will still be able to receive photos during sleep mode.

Slideshow

Slideshow

Timer

Set the duration that a photo should be displayed before showing the next photo.

Fill frame

Set default photo display behavior.

When enabled (Smart Crop): Photos automatically highlight the focal point to fill the screen.

When disabled (Fit to Screen): Photos fit within the display with blur bands added to sides (left/right or top/bottom).

Frame background

Choose between several different frame background options to be shown as bars if the photo does not fill the screen.

Photo display order

Sets the order in which your photos are displayed on the frame.

- By date taken: Photos are shown in order of when it was taken.
- By date received: Photos are shown in order of when it was received.
- Shuffle: Photos are shuffled and shown in a random order.

Reverse photo display order

Sets whether photos are displayed newest to oldest or oldest to newest.

Show caption

Set whether or not to display the captions that your friends have sent with the photo. Check to display captions. Uncheck to hide captions.

Show Profile Photo

Check to show friends' profile photos; uncheck to hide them.

Show clock

Set whether or not to display the clock widget in the upper-right corner of the slideshow.

Show weather

Set whether or not to display the weather widget in the upper-right corner of the slideshow.



Slideshow

Video volume

Adjust the volume level for video sounds on the frames.

Video playback

Determines how videos should be played when autoplay is enabled.

- Loop videos: The video will loop until the slideshow timer is up.
- Play once: The video will play once and show its thumbnail until the timer is up.
- Play once and continue: The video will play once and continue to the next photo, or video, once it completes.

Autoplay

Enables/disables autoplay of videos in the slideshow. Videos can always be manually started regardless of this setting.

Auto mute

Enable to automatically mute the video volume after a short period of time of not interacting with the frame.



Wi-Fi

Set which Wi-Fi the frame connects to. If you are connecting to a network with a captive portal, Connection status will say that Wi-Fi login is required and show . Tap this to open a login screen where you can enter credentials to access the network.

Wi-Fi details

Use ⓘ to show details about the current connected Wi-Fi.

Reset Wi-Fi

Use ⋮ to delete all Wi-Fi information and restart your frame.



Notifications



Notifications

Show notifications

Enables/disables whether notifications are shown in the slideshow (e.g. when a new photo is received).

Notification volume

Adjust the volume level for notification sounds.

Storage space

Enables/disables notifications shown when frame storage is low.

Backup

Enables/disables notifications shown if automatic backup has failed.

Network connection

Enables/disables notifications showing network connection status.

New photos

Enables/disables notifications shown when receiving new photos.

Transfer from computer

Enables/disables the display of a notification when transferring photos from a computer.

New friends

Enables/disables notifications shown when new friends are added.

Software update

Enables/disables notifications shown when a software update has been installed.

Feature news

Enables/disables notifications shown when new exciting features are added.

Date and time

Enables/disables notifications shown if time or date is not set correctly.

Backup and Restore

Backup and Restore

Set up a cloud backup (Frameo+)

 Tap Set up cloud backup and select a friend that has an active Frameo+ subscription, to initiate a cloud backup of your frame.

If you already have a backup set up, tap it to see more details.

Backup status will indicate what state your backup is in, with a symbol.

Cloud symbols and their meaning:

-  Backup complete and secured in the cloud
-  Cloud backup in progress
-  Frame is currently not backed up in the cloud
-  Waiting for other device to act (check the Frameo app on your phone)
-  Cloud backup failed

**This is an optional subscription plan;
core functionality remains fully accessible without a subscription**

External storage backup

Backup frame to external storage (e.g. SD card)

Tap to make a backup of your photos, friends and settings. The time of the latest successful backup is also displayed here.

Any existing backup on the external storage will be overridden!

Tips: Please note, frames will need SD card or USB flash drive with a maximum of 128GB of storage.

Automatic backup

If checked, your frame will automatically take a backup within 30 hours of receiving new photos or making changes to your frame.

Back up now

Photo frames will start backing up to external storage immediately

Delete backup

The photo frame will immediately delete the backup from the external storage

Backup and Restore

Restore from backup

Before you attempt to restore your frame, start by confirming that your backup is up-to-date. This is done by confirming the date under “Backup frame to external storage (e.g. SD card)”. If e.g. the last backup is too old or if no backup is made, then press the “Backup frame to external storage (e.g. SD card)” button to make a new backup.

NB: To keep both the old and the new frame operational at the same time after restoring from backup, please make sure that both frames are updated to the latest version beforehand.

If you wish to restore a backup on a frame that has already been set up, then you must first reset the frame. This is done by pressing the “Reset frame” button. This will delete all data on the Frame and reset the Frame to its setup screen.

On the setup screen you can select the “Restore from backup” button which will restore your frame according to the backup.

If the “Restore from backup” button isn’t visible, then confirm that the external storage (e.g. SD card) is correctly mounted.

Reset frame

Clear frame data

Deletes all data of the photo frame.

Factory reset

Will clear all system upgrades and all data of the photo frame.

This will permanently remove all your photos, friends/connections and settings.

? Help

Guide

Shows the quick start guide, which was shown when you first started the frame.

Support

Find contact information for Frameo's support team, and find technical device information.

The menu features a special QR code that is there for our support staff to scan. It contains additional device details and information, enabling our support team to efficiently address your specific concerns and provide accurate assistance. Simply take a photo of the QR code and share it with our support staff.

About

Hardware brand and model number

Photo frame brand and model

Peer ID

This is a unique ID for your photo frame. When contacting our support, please provide this ID with your message.

Frameo version

Shows what version of the Frameo software is currently installed on your frame.

Check for update

Check if an update is available for your frame.

Beta program

If checked, the device will join the Beta program, where it will receive updates more frequently and before normal release devices.

Third party attributions

Open source libraries

Opens a list of open source libraries used in the app and their licenses

Share anonymous analytics data

Sharing anonymous analytics data helps us tremendously to improve the Frameo software. We understand if you do not wish to share this data with us. Keep it checked if you wish to help us improve Frameo. Set unchecked to deny the sharing of anonymous analytics data.

Warranty, Support and Safety information

Warranty, Support and Safety information

WARNING

Power Supply: Use the included power adapter (12V 2A / 4.0×1.7mm connector) for power supply.

This adapter must not be used to power other devices.

Unauthorized Repairs: Any repair attempts by unauthorized personnel will void the warranty.

Immediate Shutdown: Disconnect power immediately if smoke, abnormal noise, or odors occur.

Long-Term Storage: Unplug the device when not in use for extended periods.

COVERAGE

This warranty covers:

Digital photo frame

Included accessories:

- Power adapter
- Stand bracket

Contact support for defects in the display, power adapter, ports, or other components.

DURATION

12 months from the date of purchase. Valid claims require:

Proof of purchase (showing date and model)

Fault documentation (photos/videos)

CLAIM PROCESS

Return the product with a written description of the defect attached.

KPKUE will determine repair or replacement (partial/full) during the warranty period.

Replacement units inherit the original warranty period (no extension).

Warranty, Support and Safety information

EXCLUSIONS

Warranty does not cover:

Damage from misuse, improper operation, or non-original accessories.

External factors (hurricane, earthquake, lightning, water damage, fire).

Altered/removed product serial numbers.

Unauthorized modifications, disassembly, or repairs.

ADDITIONAL TERMS

Software Updates: OS and app features may change; technical specifications in this manual are subject to updates.

Modification Rights: Manufacturer reserves the right to modify documentation, components, configurations, and features without prior notice.



KPKUE

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.