

# SENCOR®



## SFP 1460

User's manual

Návod k obsluze

Návod na obsluhu

Használati útmutató

Instrukcja obsługi

EN

CZ

SK

HU

PL

MP3 PLAYER

MP3 PŘEHRÁVAČ

MP3 PREHRÁVAČ

MP3-LEJÁTSZÓ

ODTWARZACZ MP3

*Before operating this unit, please read all instructions.*

*Než začnete toto zařízení používat, přečtěte si všechny pokyny.*

*Skôr ako začnete toto zariadenie používať, prečítajte si všetky pokyny.*

*Mielőtt használatba veszi ezt a készüléket, olvassa el az összes utasítást.*

*Zanim zaczniesz używać tego urządzenia, przeczytaj wszystkie polecenia.*

## MAIN FUNCTION

- Elegant appearance and easy to use.
- Multi-Code Player – Supporting MP3, WMA, formats.
- USB disk not requiring further installation of drivers – applies to operating systems Windows 2000/XP and newer, and Mac OS X 9.2 and newer.

## IMPORTANT

### DON'TS

- Do not place naked flames, such as lighted candles on or near the product.
- Do not place objects filled with liquids, such as vases on or near the product.
- Do not use or store this product in a place where it is subject to direct sunlight, heat, excessive dust or vibration.
- Do not keep or store this product in wet conditions for long period.
- Do not clean this product with water or other liquids.
- Do not block or cover the slots and holes in the product.
- Do not push foreign objects into the slots or holes in the product.
- Do not attempt to open or repair this device yourself. Entrust repairs to a specialised service centre.
- Keep plastic bags out of children's reach.

## SAFETY INSTRUCTIONS

- Before using this product, read and follow all warnings and instructions.
- When used by a child, make sure the recommended volume level is adhered to.
- This product is intended for household use only and not for commercial or industrial use.
- Do not expose to dripping or splashing.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Ventilation should not be impeded by covering ventilation openings with items such as newspapers, table cloths, curtains and the like.

- Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable position or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty.


**WARNING**

- Never remove the casing of this apparatus.
- Never place this apparatus on the other electrical equipment.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

## KEY AND CONNECTION FUNCTIONS

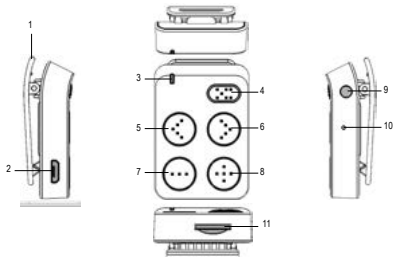

No.	Description	Function
1	Clip	
2	Micro USB Port	For PC connection / Charge
3	Status LED Indicator (Red and Blue)	For charging and play status
4	▶   Button	On/Off, Play/Pause
5	< Button	Back Track / Fast-Backward
6	> Button	Next Track / Fast-Forward
7	- Button	Volume down
8	+ Button	Volume up
9	Earphone Output Jack	3.5mm earphone set connection
10	Reset Button	For hardware reset
11	Memory Card Slot	For external Micro SD Memory Card

## ABOUT PLAYER'S BATTERY

Player has an internal, non-user-replaceable rechargeable lithium battery. For best results, the first time you use the player, let it charging for about 2 ~ 3 hours or until the charging LED long light from blinking before you use it.

### **IMPORTANT:**

The player may continue to drain energy from the battery when switched to stand by mode, so when it is not used for an extended period of time, **it is necessary to charge it at least once per month.**

## CHARGING MODE

You can recharge the Player's battery in two ways:

By connecting the player to a computer or using a USB charger (*not included*).

1. The **Status LED** will light blinking in red when the USB power source connected.
2. When the battery is fully charged, the **Status LED** will switch to long light red from blinking.

## PC CONNECTION MODE

### 1. CONNECT PLAYER TO COMPUTER

- 1.1 Connect player to Windows OS computer with the USB cable, then "USB Mass Storage Device" is detected and related driver is installed by your computer. A removable disk drive will display in "My computer" folder, user can operate Read and Write function. And the battery is charging in background. (for Windows 2000 / XP System or above)
- 1.2 Or, connect player with MAC OS X computer, then an "Untitled" icon will display on the desktop indicating the player is a removable disk, user can operate Read and Write function. And the battery is charging in background. (For MAC OS X 9.2 or above)

#### **NOTE:**

In USB power charger or PC connection mode, the player can play music if you press or press and hold the ►|| button.

### 2. DISCONNECTING THE PLAYER FROM THE COMPUTER

Please safely remove the player when it is in computer connection mode, otherwise, the data stored in the Player might be lost.

- 2.1 If you're using a Windows OS PC, you can disconnect the player in My Computer or by clicking the "Safely Remove Hardware" icon in the Windows system tray.
- 2.2 If you're using a Mac OS PC, you can also disconnect player by dragging the player icon on the desktop to the Trash.
- 2.3 And now, is safe to disconnect the player with your computer, unplug the USB connector from player and then your computer.
- 2.4 If you accidentally disconnect player without disconnect it, reconnect it to your computer.

## GETTING START PLAYER

### 1. ON / OFF

- 1.1 Plug-in earphone set into player's earphone output jack;
- 1.2 Press and hold the ►|| button, until the Status LED light up in blue, to power On the player.
- 1.3 The blue light will switch to blinking and then the music will play in seconds automatically.
- 1.4 To turn Off the Player; press and hold the ►|| button until the status LED light fast blinking and then the Player will switch Off in seconds.

**NOTE:**

If no any supported music file at the player's memory; the status indicator light will be flashing fast and then will go Off, and the player will turn Off in seconds automatically.

### 2. PLAY / PAUSE MUSIC

- 2.1 Press ►|| button to pause the playing music.
- 2.2 Press it again to resume.
- 2.3 If player is in pause state for 3 minutes, it will be turned to standby Off automatically.

### 3. ADJUST VOLUME

- 3.1 Press the +/- button to increase or decrease the volume.
- 3.2 Press and hold +/- button to increase or decrease volume level continuously.
- 3.3 **For the purpose of hearing protection**, a sound signal is made in the headphones when the default setting level is reached that may exceed 85 dB and upon every increase in volume thereafter. Press ►|| button to accept the warning and enter into the volume control for increase the level and until to maximum level.

### 4. PLAY NEXT / PREVIOUS MUSIC

- 4.1 In playing mode;
- 4.2 Press the > button to play the next track.

4.3 Press the < button to play the previous track.

## 5. FAST MOVE FORWARD / BACK

5.1 Hold down the > button to move quickly forward.

5.2 Hold down the < button to move quickly back.

### INDICATOR LED LIGHT FUNCTION

- **Playing mode:** Blue light flashing once per second.
- **Pause mode:** Blue light flashing 2 seconds once.
- **PC connecting mode:** Blue light will flash when data transferring.
- **In charging Mode:** Red light flashing once per second. (In charging)
- **Charging completed:** Red light bright
- **Low battery in 20%:** Red light flashing.

### INSERT MICRO SD MEMORY CARD

This player allows you to play those support media files from Micro SD memory card. Also, it will increase the mobile hard-disk memory capacity of the player if you use this option.

- Turn OFF the player and then insert the memory card into player's memory card slot; ensure that the memory card is inserted firmly and with the correct side.
- Now you can turn ON the player, the player will reading and searching the supported music files from memory card / internal memory, once found music will play automatically.
- Player will give priority to external memory card when it has been inserted into memory card slot, and then play the built-in memory.
- Before you want to take out the memory card from player, please turn OFF the player.

## RESET THE PLAYER

In some circumstances, the device may encounter dead halt during use. This device has design with built-in a mini tact switch in a hole which located at right side on device. It can provide reset function to restart the device.

### TO RESET:

- Carefully insert an unfolded paper clip or a similar thin, and if possible blunt, instrument (0.8 – 1 mm) into the hole until you touch the barrier. Actually that is the tact switch button surface.
- Then add a bit of force and you will get a click sound and feeling return from switch. The device is reset and restart in seconds.

## TROUBLESHOOTING

Play cannot turn ON	<ul style="list-style-type: none"><li>• Check whether battery have enough energy.</li></ul>
No sound is heard	<ul style="list-style-type: none"><li>• Check whether Volume is set to "minimum" and connect the headphone plugs firmly.</li><li>• Check whether the headphone plug is dirty.</li><li>• Corrupted WMA / MP3 may make a static noise and the sound may cut off. Make sure that the music files are not corrupted.</li><li>• Check whether music files format are support.</li></ul>
Upload / Download of music files fails.	<ul style="list-style-type: none"><li>• Check whether player's USB connector is connected with computer properly.</li><li>• Check whether driver is installed correctly.</li><li>• Check whether the player's memory is in full.</li></ul>

## TECHNICAL SPECIFICATIONS

<b>Unit Dimension</b>	47.5mm (H) x 32 mm (W) x 17 mm (D)	
<b>Unit Weight</b>	15 g	
<b>Interface</b>	USB 2.0 (High Speed)	
<b>Memory Capacity</b>	Flash memory: 4 GB	
<b>Memory Card Slot</b>	For Micro SD Memory Card (Support up to 16GB possible)	
<b>Rechargeable Battery</b>	Lithium 3.7V 110mAh (Play Time: 5-6.5 hours)	
<b>Supported formats</b>	MP3	32Kbps – 320Kbps
	WMA	32Kbps – 384Kbps
<b>Headphones</b>	Headphone power output	2 mW x 2 (at 32 Ohm)
	Frekvenční rozsah	20 Hz – 20 000 Hz
	Odstup signál/šum	80 dB
<b>Audio File Type</b>	MP3, WMA	
<b>Operating Temperature</b>	0°C to 40°C	
<b>Operation System</b>	Windows 2000 / XP or newer, MAC OS X 9.2 or newer	

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product.

Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

### For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

### Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives that apply to it.

Changes in the text, design and technical specifications may change without prior notice and we reserve the right to make these changes.

# SENCOR®

## EN Warranty conditions

**Warranty card is not a part of the device packaging.**

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

**This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

**Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.