

KEPEAK

www.kepeak.com

User Manual

Model:1476 | XHP70 LED Flashlight

- Thank you for purchasing our product.
- Please read this user manual carefully and use the product correctly before using it.
- If you have any questions about our product, please contact us through Amazon Buyer-Seller Messaging, we will reply in time.



KEPEAK

Catalog

PRECAUTIONS DURING USE	01
PRECAUTIONS FOR BATTERY	01
PRECAUTIONS FOR STORAGE	02
PRODUCT ACCESSORIES	03
PRODUCT STRUCTURE	04
CHECK THE BATTERY LEVEL	04
5 LIGHT MODE AND SWITCH-OFF	05
SPECIFICATION	05
HOW TO INSERT THE BATTERY	06
HOW TO ADJUST THE LIGHT	07
COMMON PROBLEM SOLVING	08

SAFETY PRECAUTIONS

PRECAUTIONS DURING USE

- Please read the instruction manual of this product carefully before use.
- This product will be slightly heated during use, it is recommended to use low level lighting, if the heat is serious, you can use low level or turn off the power and wait for the product to cool down before continuing to use.
- Do not shine directly into the eyes to avoid eye damage.
- The torch should not be disassembled and modified for repair by non-professionals as this may damage the circuit board.
- The repair warranty is not included with the modified product.
- If the flashlight is abnormally hot, makes strange noises and smells, or feels abnormal, stop using it immediately.

PRECAUTIONS FOR BATTERY

- The product is equipped with a 5000mAh lithium-ion battery, the working life of a lithium ion battery is greatly influenced by the way it is used and the environment in which it is used.

- Be careful not to charge the battery too often, not to overcharge and over discharge it.
- The battery may become warm during charging or use, but this is not abnormal.
- Do not use too high a voltage, please use a 5 V 1 A charging adapter to charge the battery.
- Please do not reverse positive and negative of the battery, otherwise the circuit board will be burned.
- Do not use batteries of different types and voltages at the same time.
- Do not mix old and new batteries.

PRECAUTIONS FOR STORAGE

- Keep out of reach of children.
- For batteries that are not used for a long period of time, store them fully charged and then charge and discharge them once every three months to avoid chemical corrosion.
- Do not use this product underwater for long periods of time.
- Do not leave the torch in contact with sunlight, water, chemicals and corrosive gases for long periods of time as this may damage the torch.

Product accessories

Before using this product, please check that the flashlight and its full set of accessories are included.



XHP70 Flashlight *1



TYPE-C Cable



18650 Battery Tube *1



AAA Battery Holder*1



Lanyard*1



5000mAh 26650
Rechargeable Lithium Battery



User Manual

How to use

1. PRODUCT STRUCTURE



2. CHECK THE BATTERY LEVEL

*Check the remaining battery charge before use, If the battery is low, please charge the battery.



25%



50%



75%



100%

3. 5 LIGHT MODE AND SWITCH-OFF

* Mode switching:

When the flashlight on, just press the power button to switch modes in the following order.

Switch in the order of →high brightness→medium brightness→low brightness→flash→SOS→off.

* One-click off:

Keep pressing for more than 3 seconds, the flashlight can be turned off in any mode.



Specification

Brand name	KEPEAK	Model	1476
Led Chip	XHP70 LED	Body Dimensions	16.2*4.3*3.2CM
Weight	200g	Material	Aluminum alloy
Compatible battery	26650/18650/3*AAA battery	Light mode	High/Medium/Low/Strobe/SOS
Charging method	5V1A TYPE-C	Waterproof level	IPX6
Charging method	6-8h	Usage time	6-10h

How to insert the battery

- * Do not insert +-in the opposite direction.
- * After inserting the battery, close the battery cover tightly.



Supports various types of batteries



Charging method (USB rechargeable & built-in 2 ports)

- * Be sure to turn off the power when charging.
- * You can easily charge the battery from your computer or powerbank by using the Type C cable (included).
- * Supports power output for emergency charging phone.




input




output

How to adjust the light

- ① Large irradiation range:
Floodlight for wide range illumination.

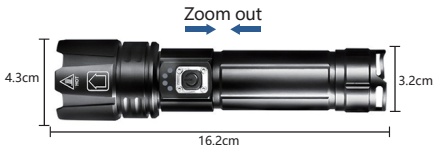

- ② Long range illumination:
Spotlight Suitable for long range illumination, throws a beam of light up to 3280ft.

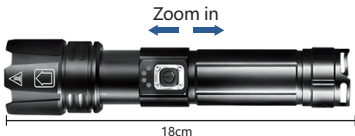

Common problem solving

If you have any of the following problems with your flashlight, please first take corrective action according to the corresponding problem.

Malfunction	Possible causes	Solution
The light does not come on when the switch is turned on.	Please make sure that the switch is pressed correctly	Check the switch
	Check that the battery cap is not loose	Tighten the end battery cover
	Check the remaining battery power *When using 26650 lithium-ion batteries	Charge the battery
	Check that the battery is correctly installed.	Remove the battery, check the positive and negative battery terminals and insert the battery correctly.
	Check battery contacts for dirt	Clean the surface with alcohol
	Check if battery life is over	Replace with a new battery
Does not light up in flash/SOS mode	Check if the battery is dead	Please charge battery

The charging light does not light up when charging	Check if the charger is defective	1.Replace with a new charger
		2.The battery may be exhausted, It needs to be charged for about 20 minutes and then see if it returns to normal.