

PORTRONICS
DASH 13
PARTY SPEAKER WITH WIRELESS KARAOKE MIC



User Manual

Functional Brief Description		
	Power Switch On/Off	
	Short Press	Adjust Bass or Tweeter
	Long Press	3s long press reset the device
	Short Press	Mode Switch
	Long Press	Force disconnect the BT
	Short Press	Turn on/ Change light effect
	Long Press	Turn off the lights
	Short Press	Reduce the volume
	Long Press	Reduce the volume quickly
	Short Press	Increase the volume
	Long Press	Increase the volume quickly
	Short Press	Play the last song
	Long Press	N/A
	Short Press	Play the next song
	Long Press	N/A
	Short Press	Play/Pause
	Long Press	Enter TWS mode / Exit TWS mode

Turn the power on or off. ⓪

Long press "⓪" button to switch on, short press "⓪" button to switch off.

Mode Switch ⓪

Short press "M" button to switch mode
"BT" → "USB" → "AUX IN".

The first time booting will enter into Bluetooth model by default, the next booting will enter into the same mode and setting as last selection.

Short press button to adjust bass or tweeter.

Bluetooth Connecting ⓪

Short press "M" button switch to BT mode, there will have a prompt sound, choose pairing name Dash 13 on your device to connect. Once successfully connected, there will be an indication prompt sound.

Bluetooth Play Mode ⓪

Short press "⓪" button to Play and Pause, Long press "⓪" Enter and Exit TWS mode. Short press "⓪" to Play the last song. Short press "⓪" to Play the next song. Short press "+" button to increase the volume, Long press "+" button to increase the volume quickly. Short press "-" button to reduce the volume, Long press "-" button to reduce the volume quickly.

Music Mode (USB) ⓪

1. MP3 Player (USB): Insert a USB, it will play music from USB automatically.

Short press "⓪" button to Play and Pause. Short press "⓪" to Play the last song, Long press "⓪" to fast-rewind the song, Short press "⓪" to Play the next song, Long press "⓪" to fast-forward the song. Short press "+" button to increase the volume, Long press "+" button to increase the volume quickly. Short press "-" button to reduce the volume, Long press "-" button to reduce the volume quickly.

Aux Mode ⓪

1. Insert the AUX cable, and then press the "M" button switch to AUX mode.
2. Short press "⓪" button to Play and Pause.
3. Short press "+" button to increase the volume, Long press "+" button to increase the volume quickly. Short press "-" button to reduce the volume, Long press "-" button to reduce the volume quickly.

RGB Light Control ⓪

1. Short press button to turn on light/ change light effect
2. Long press button to turn off light.

TWS Function ⓪

1. When the BT mode is not connected to a Bluetooth device, long-press "⓪" (for the host device) to enter the

Bluetooth TWS mode. The secondary device will automatically search for pairing and does not require any operation.

2. Once the automatic pairing between the main and secondary devices is successful, there will be a sound as a prompt, indicating that the TWS has been successfully connected.

3. Long press "⓪" to exit the TWS mode.

Note: To enter the Bluetooth TWS mode, you need to long press the play button when the device is not connected to any Bluetooth device. This will enter the Bluetooth TWS mode for the host (left channel). It will automatically search for and pair the sub-device.

Otherwise, it is impossible to enter the TWS mode for searching and pairing.

Power And Recharge ⓪

The are 4 indication lights on the control panel:

100%, 4 indication lights ON;

75%, 3 indication lights ON;

50%, 2 indication lights ON ;

<25%, one indication light will be flashing.

Note: The device will automatically turn off when the battery voltage lower than 6V.

Please use DC5V 2A current safety standard charge to charge the speaker, when charging starts, the charge indicator lights up in red. Charging will complete in about 4 hours and the indicator will turn off.

Echo Control Adjustment ⓪

Adjust Echo Level:

Double-press the M button to enter Echo Control Mode. Within 5 seconds, use the "+" or "-" buttons to increase or decrease the echo level.

Adjust Microphone Volume:

Press and hold the M button to enter Microphone Volume Mode. Within 5 seconds, use the "+" or "-" buttons to adjust the microphone volume.



www.portronics.com

For Support
Visit: www.portronics.com
Email: help@portronics.com
Contact No.: +91 9555245245
(Working Hrs.: Monday - Saturday 10:00am - 6:00pm)



E-Waste Management
E: info@tracycler.com
For E-Waste & RoHS compliance
refer to www.portronics.com/ewaste