 


Kinglucky

QUICK START GUIDE


Wireless Bluetooth
headphones

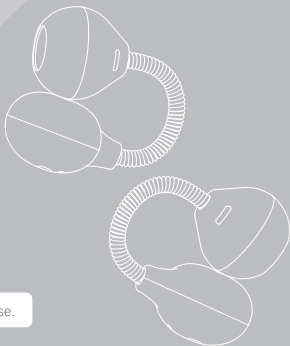

Please read the instructions before use.


FIRST-TIME PAIRING

1

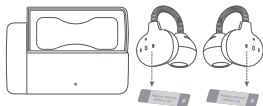


Remove the protective films.

2

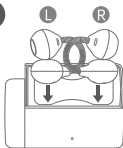


Place the ear clips in the charging case and close the lid.

3

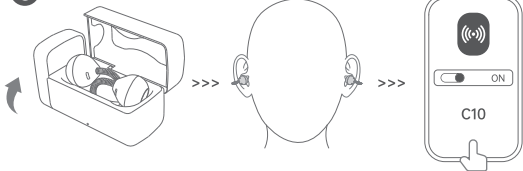


Open the lid, wear the earbuds, and select "C10" to connect.


RECOMMENDED

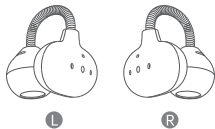

1. Wear the earbuds according to the L / R markings.

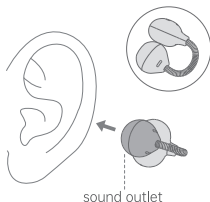


2. Make sure the speaker (the smaller part) faces forward, and the battery housing faces backward.

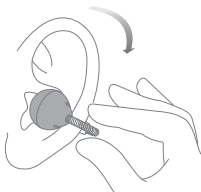

3. Adjust the earbuds up or down until they fit comfortably.

SMART TOUCH CONTROLS

Note: The touch control is at the upper back of the earbuds, not in the middle. Gently touch this area to use it.

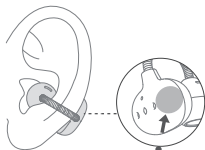

TOUCH AREA

PHONE CALL STATUS

- ● Answer
- 2s Decline
- ● End Call

MUSIC MODE

- 2s L 🔊 -
- R 🔊 +
- ● ▶ ||
- ● ● (L) ◀◀
- ● ● (R) ▶▶
- ● ● ● Voice Assistant

LED BEHAVIORS



LED indicator



Pairing mode



White & blue light flashing



Paired successfully



Light off



Charging in case



 
Blue light stays on



Fully charged



Light off



LED indicator



Charging earbuds



White light stays on



Earbuds fully charged



Light off



Low battery



White light flashing



Charging case



Orange light flashing



Case fully charged



Orange light stays on

TROUBLESHOOTING GUIDE

If the earbuds fail to connect

1. Clear pairing records (if applicable)

Go to your phone's settings and check the list of connected or previously connected devices.

If the earbuds appear, tap "Forget / Remove this device."

2. Take out the earbuds

Remove both left and right earbuds from the charging case and make sure they are not connected to any other device.

3. Reset the earbuds

Tap either the left or right earbud 5 times consecutively.

4. Wait for the prompt

The blue indicator light will flash for about 1 second and a power-off sound will play, indicating the reset is complete.

5. Reconnect

Place the earbuds back into the charging case, then take them out again and reconnect

LIFETIME WARRANTY & CUSTOMER SUPPORT



SCAN ME TO ACTIVATE LIFETIME WARRANTY WITHIN 14 DAYS

Thank you for choosing Kinglucky! Explore our latest products, parts, and accessories at www.kingluckyshop.com. For assistance, contact us at support@kingluckyshop.com

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Kinglucky

Sound that Keeps Up