


LOGIC L-PAD



USER MANUAL

1. HARDWARE OVERVIEW

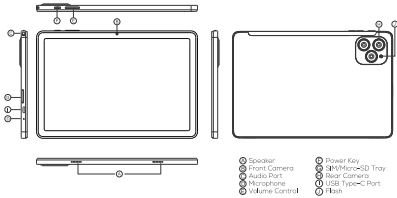

2. WELCOME

This user manual with the operating instructions and the legal information booklet are part of the product. Please read the information carefully before you turn on your device. They contain important information about device safety, usage and disposal.

Please keep this document in a safe place and pass them on in full to the new owner if the device changes hands.

Package contents:

- Logic L-PAD Tablet
- Power adapter (200W/40W, 5V/2A) + USB-C Cable
- Card-Pin tool
- Tablet rugged flip case
- User Manual

Remove all components from the packaging and remove the packaging material including the protective film. Check to ensure that the delivery is complete.

If you find that there are missing or damaged components, contact customer service immediately.

*Depending on model

Operation and storage

- Temperature: 0°C to 30°C
- Relative humidity: 30% to 70%
- Refer to the detailed operating instructions for technical specifications on the power adapter and battery. The battery in this product cannot be easily replaced by users themselves.

3. TECHNICAL SPECIFICATIONS

Operating System	Android 10.0
Display	DOT IPS (4:3) 800*1280
RAM	4GB + 6GB Extended Mem
ROM	32GB
CPU	Unisoc T80 Quad-Core
GPU	VR G62300
Battery	5000mAh Li-Ion Polymer
Ports	Type-C 2.0, 3.5mm Standard Headphone Jack
Camera	5MP Front Camera, 2MP Rear Camera
Card Slot	Qualcomm with / Micro SD Slot
GPS/AGPS	Yes
Voltage	5V/2A
Network Access	WiFi 2.4G and 5G, BT v5.0 4G: B2/4/5/7/17/36/66 3G: B2/B5 2G: GSM/GPRS/PCS/IS95

4. QUICK GUIDE

Charging the tablet

Make sure your tablet is fully charged before using it for the first time.

- Connect the USB-C cable into the supplied power adapter and to the charging socket (USB-C) on the tablet.
- Plug the power adapter into a socket.

• Always keep the power adapter connected to the socket until the battery of the tablet is fully charged. In addition, always disconnect the power adapter from the tablet when you are not charging the tablet.

IMPORTANT: Do not charge the tablet via USB ports on a PC or laptop. The required energy of over 2A can electrically overload these ports. Turning on the tablet for the first time or press the ON/OFF switch for approximately 5 seconds.

Each time you turn on the tablet after setting it up, the lock screen will appear during start-up. To unlock the screen, drag the lock screen upwards from bottom to top with your finger.

The applications menu

The applications menu contains all the important functions of your tablet. You can find all the applications and widgets installed on your tablet by swipe up from the bottom of the screen.

*The icon for opening the device settings is also found in activating WiFi and opening the browser.

Browser

- Open the settings.
- In the settings, tap "Network/Internet" → "Wi-Fi".
- Use the tip of your finger to move the slider for Wi-Fi from left to right.
- Tap on word "Wi-Fi". The tablet searches for all available wireless networks.
- Tap the network that you want to connect to.
- Enter the network key (password) if necessary.
- Tap "Connect". The tablet will then connect to the selected network.

Browser

The browser is an app located in the Applications menu.
Tap the icon to open the browser. To enter an internet address (URL), type it in the search bar displayed vertically at the top of the window.

Downloading and installing Apps via Google Play™

- You must be connected to the Internet to be able to download apps. You also need a Google™ account.
- Open the "Play Store" in the Applications menu.
 - Sign in with your Google account. Google Play opens once you have signed in successfully.
 - If you do not yet have a Google account, tap "I'd create a new account" in the sign window. An assistant guides you through the process of setting up an account.
 - Tap on app.
 - You can search the "Play Store" by using the search bar at the top of the screen or by clicking the desired category.
 - Tap "Install" in the subwindow.
 - You may also have to accept the terms of use. Pre-installed apps must be purchased before you can download them. You can find the installed app in the Applications menu.

Reset

If the Tablet "Freezes" and no longer responds, you can reset it. To reset the device, hold down the ON/OFF switch until your tablet restarts/reboots. You can then release the ON/OFF switch.

*Any files that have not been saved will be lost when the Tablet is reset.

Switching off the tablet Standby

Simply press the ON/OFF switch on the device to activate the standby mode. Press it again quickly to take the tablet out of standby mode.

Shutting down

- Press the ON/OFF switch for approximately 2 seconds. A selection window appears.
- Tap "Power OFF" in the selection window. The tablet shuts down and turns OFF.

Saving energy

- Deactivate the WiFi function when it is not in use.
- Only leave the power adapter connected to the socket until the tablet's battery is fully charged. In addition, always disconnect the power adapter from the tablet when you are not charging the tablet.
- Reduce the display brightness under "Display" → "Brightness level" in the settings.
- Activate standby mode or turn off the tablet completely if you are not using the tablet.

Inserting the SIM/micro-card

Carefully insert the tool into the opening next to the SIM Card carrier and push the card carrier out by carefully pressing in the Pin. Insert a nano-SIM card into the lower part of the carrier. In the front part you can insert a second nano-SIM or a Micro SD. Then carefully push the card carrier back into the tablet.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference.
2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this document without the express written consent of the manufacturer may void the warranty.
The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

set by the FCC is 15.183A. Tests for SAR are conducted with the maximum power output of the device.

Caution: Changes or modifications to this document without the express written consent of the manufacturer may void the warranty.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.


The manufacturer is not responsible for any damage or loss of data resulting from the use of this device.

LOGIC L-PAD



MANUAL DE USUARIO

1. DESCRIPCIÓN GENERAL DEL HARDWARE

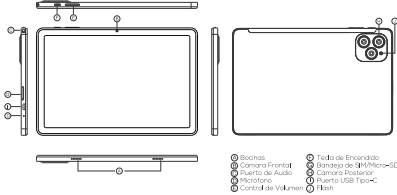

2. BIENVENIDO

Este manual de usuario, junto con las instrucciones de funcionamiento y el folleto de información legal, forman parte del producto. Por favor, lea todo esta información detenidamente antes de encender su dispositivo. Contienen información importante sobre la seguridad, el uso y la eliminación del mismo.

Por favor, conserve este documento en un lugar seguro y entregúelo completo al nuevo propietario en caso de que el dispositivo cambie de manos.

- Contenido del Paquete:
- Tableta L-PAD
 - Adaptador de Corriente (200V~240V, 5V/2A) • Cable USB-C
 - Herramienta para Ranura de Tarjeta
 - Esquema (Google) Resolvente
 - Manual de Usuario

Retire todos los componentes del paquete y elimine el material de embalaje, incluido la película protectora. Verifique que el contenido está completo.

Si encuentra componentes faltantes o dañados, comuníquese de inmediato con el servicio de atención al cliente.

*Dependiendo del modelo.

Operación y almacenamiento

- Temperatura: 5°C a 35°C
- Humedad relativa: 30% a 70%
- Consulte las instrucciones de funcionamiento detalladas para conocer las especificaciones técnicas del adaptador de corriente y la batería. La batería de este producto no puede ser reemplazada fácilmente por el usuario.

3. ESPECIFICACIONES TÉCNICAS

Sistema Operativo	Android 10.0
Procesador	Qualcomm Snapdragon 865
RAM	4GB + 6GB Memoria extensible
ROM	64GB
CPU	Unicore T801 Quad-Core
GPU	VR 6E8300
Batería	5000mAh, Li-Ion Polymer
Puertos	Type-C 2.0, 43.5mm Conector estándar para audífonos
Cámaras	Cámara Frontal 8MP, Cámara Posterior 20MP
Servicio de Tarjetas	Dual SIM (con / sin tarjeta Micro SD)
Operación	5G
Volante	SWiSE
Acceso a la Red	WiFi 802.11 a/b/g/n, BT v5.0, 2G GSM, 3G HSPA, 4G LTE

4. GUÍA RÁPIDA

Carga de la Tableta

Por favor, cargue completamente su tableta antes de utilizarla por primera vez.

- Conecte el cable USB al adaptador de corriente incluido y al puerto de carga (USB-C) de la tableta.
- Conecte el adaptador de corriente a una toma eléctrica.

* Mantenga el adaptador de corriente conectado solo hasta que la batería de la tableta esté completamente cargada. Además, desconéctelo siempre de la tableta cuando no esté en uso.

IMPORTANTE: No cargue la tableta a través de puertos USB de una PC o laptop. La energía requerida de más de 2A puede sobrecargar el dispositivo y dañar la batería. Encienda la tableta por primera vez. Presione el botón de encendido/apagado durante aproximadamente 5 segundos.

* Cada vez que encienda la tableta después de configurarla, aparecerá la pantalla de bloqueo durante el inicio. Para desbloquearla, deslice el dedo hacia arriba desde la parte inferior de la pantalla.

Menú de aplicaciones

El menú de aplicaciones contiene todas las funciones importantes de su tableta. Puede encontrar todas las aplicaciones y widgets instalados deslizando hacia arriba desde la parte inferior de la pantalla.

* El icono para abrir la configuración del dispositivo también se encuentra en la Activación de WiFi y apertura del navegador.

- Abra la configuración.
- En configuración, toque "Red e Internet" o "Redes".
- Use la pestaña de la izquierda para mover el control de Wi-Fi de izquierda a derecha.
- toque la pestaña "Wi-Fi". La tableta buscará todas las redes inalámbricas disponibles.
- toque la red a la que desea conectarse.
- toque la clave de red (contraseña) si es necesario.
- toque "Conectar". La tableta se conectará a la red seleccionada.

Navegador

El navegador es una aplicación ubicada en el menú de aplicaciones. Toque el icono para abrir el navegador. Para ingresar una dirección de internet (URL) escrita en la barra de búsqueda que aparece en la parte superior central de la pantalla.

Descarga e instalación de apps mediante Google Play™

Debe estar conectado a Internet para poder descargar aplicaciones. También necesita una cuenta de Google™.

- Abra la "Play Store" en el menú de aplicaciones.
- Ingrese sesión con su cuenta de Google. Google Play se abrirá una vez que haya iniciado sesión correctamente.
- Si aún no tiene una cuenta de Google, toque "Crear una nueva cuenta" en la ventana de inicio de sesión. Un asistente lo guiará durante el proceso de creación.
- Seleccione una aplicación.
- Puede buscar en "Play Store" utilizando la barra de búsqueda en la parte superior de la pantalla o seleccionando la categoría deseada.
- toque "Instalar" en la aplicación seleccionada.
- También es posible que deba aceptar los términos de uso. Las aplicaciones de pago deben comprarse antes de descargarse. Puede encontrar la aplicación instalada en el menú de aplicaciones.

Reinicio

Si la tableta se "congeló" y no responde, puede reiniciarla. Para hacerlo, mantenga presionado el botón de encendido/apagado hasta que la tableta se reinicie. Luego puede volver al botón.

* Los archivos que no se hayan guardado se perderán al reiniciar la tableta.

Modo de espera (Standby)

Presione brevemente el botón de encendido/apagado para activar el modo de espera. Presiónelo nuevamente para salir de este modo.

Apagar la tableta

Presione el botón de encendido/apagado durante aproximadamente 2 segundos. Aparecerá una ventana de opciones.

- toque "Apagar" en la ventana. La tableta se apagará.

Ahorro de Energía

Desactive la función WiFi cuando no está en uso.

- Mantenga el adaptador de corriente conectado solo hasta que la batería de la tableta esté completamente cargada. Además, desconéctelo siempre de la tableta cuando no está en uso.
- Reduzca el brillo de la pantalla en "Panel de configuración" o "Panel de configuración" dentro de la configuración.
- Active el modo de espera/apaga completamente la tableta si no la está utilizando.

Insertión de la SIM / tarjeta microSD

Inserte cuidadosamente la herramienta en el orificio junto a la bandeja de la tarjeta SIM y presione suavemente para extraerla. Coloque una tarjeta nano SIM en la parte inferior de la bandeja. En la parte frontal puede insertar una segunda nano SIM o una tarjeta microSD. Luego, vuelva a introducir la bandeja cuidadosamente en la tableta.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this instruction manual may void the warranty.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

set by the FCC is 15.18W. Note: For FCC part compliance with the FCC rules, the device must be used in accordance with the following conditions:

- 1. The device must not cause harmful interference.
- 2. The device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this instruction manual may void the warranty.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.

The manufacturer is not responsible for any damage caused by the use of this device.