



Now,
On MyBosch,
Register your
appliances
Get the following
benefits for free:
bosch-home.cn
mybosch



Range Hood

DWA8BBA3AS

[en] User manual and installation instructions

Table of contents

INFORMATION FOR USE

1	Safety	2
2	Avoiding material damage.....	3
3	Environmental protection and saving energy	4
4	Familiarising yourself with your appliance	5
5	Basic operation	5
6	Cleaning and servicing	6
7	Troubleshooting	7
8	Customer Service	7
9	Disposing of your old appliance	7
10	INSTALLATION INSTRUCTIONS	8
10.1	Safe installation.....	8

1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.

Only use this appliance:

- For extracting cooking vapour.
- in private households and in enclosed spaces in a domestic environment.
- up to an altitude of max. 4000 m above sea level.

Do not use the appliance:

- With an external timer.

1.3 Restriction on user group

This appliance may be used by children aged 15 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance. Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised. Keep children under the age of 8 years away from the appliance and power cable.

1.4 Safe use

WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

WARNING – Risk of poisoning!

When the hood is being used to clear fumes from a stove burning gas or other fuels, the room must be kept well ventilated.

- ▶ Gas stoves consume a lot of air when working. Please open doors and windows to ensure good air ventilation in the kitchen.

WARNING – Risk of fire!

Do not allow the stove flames to directly burn the hood.

Fatty deposits in the grease filters may catch fire.

- ▶ Never operate the appliance without a grease filter.
- ▶ Clean the grease filters regularly.
- ▶ Never work with naked flames close to the appliance (e.g. flambéing).
- ▶ Do not install the appliance near a solid fuel heating appliance (e.g. wood- or coal-burning) unless the heating appliance has a sealed, non-removable cover. There must be no flying sparks.

Hot oil or grease ignites very quickly.

- ▶ Always supervise hot oil and fat.
- ▶ Never extinguish burning oil or fat with water. Switch off the cooking zone. Extinguish flames carefully using a lid, fire blanket or something similar.

⚠ WARNING – Risk of burns!

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

⚠ WARNING – Risk of injury!

Components inside the appliance may have sharp edges.

- ▶ Carefully clean the appliance interior. Items placed on the appliance may fall off. Changes to the electrical or mechanical assembly are dangerous and may lead to malfunctions.

- ▶ Do not make any changes to the electrical or mechanical assembly.

The light emitted by LED lights is very dazzling, and can damage the eyes (risk group 1).

- ▶ Do not look directly into the switched-on LED lights for longer than 100 seconds.

The production process and characteristics of tempered glass determine that there may be a very small probability of spontaneous breakage.

- ▶ Wear protective gloves.
- ▶ Call customer service.

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer services. → Page 7

Incorrect repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, the supply cord may be specially prepared and only available from the manufacturer or its service agent. A specially prepared cord may include a part of the appliance.

This appliance contains grounding connections that are only used for functional purposes.

2 Avoiding material damage

ATTENTION!

Condensate may cause corrosion damage.

- ▶ To prevent condensation from building up, switch on the appliance during cooking.

If moisture gets into the controls, this may result in damage.

- ▶ Never clean controls with a wet cloth.

Incorrect cleaning damages the surfaces.

- ▶ Follow the cleaning instructions.
- ▶ Do not use harsh or abrasive detergents.
- ▶ Clean stainless steel surfaces in the direction of the finish only.

- ▶ Never clean controls with stainless steel cleaners. If you put incorrect stress on the design elements, they may break off.

- ▶ Do not pull design elements.
- ▶ Do not place objects on the design elements or hang objects from them.

There is a risk of surface damage if you do not peel off the protective film.

- ▶ Remove the protective film from all parts of the appliance before using for the first time.

Painted surfaces are easily damaged.

- ▶ Follow the cleaning instructions.
- ▶ Ensure that the painted surfaces are not scratched.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Switch off the lighting if it is no longer required.

- When the lighting is switched off, it does not consume any energy.

Clean or replace the filters at regular intervals. The effectiveness of the filter is retained.

Put the cooking lid on.

- The cooking vapours and condensation are reduced.


Only use the additional functions if required.

- Switching off additional functions reduces power consumption.

4 Familiarising yourself with your appliance

4.1 Appliance

You can find an overview of the parts of your appliance here.

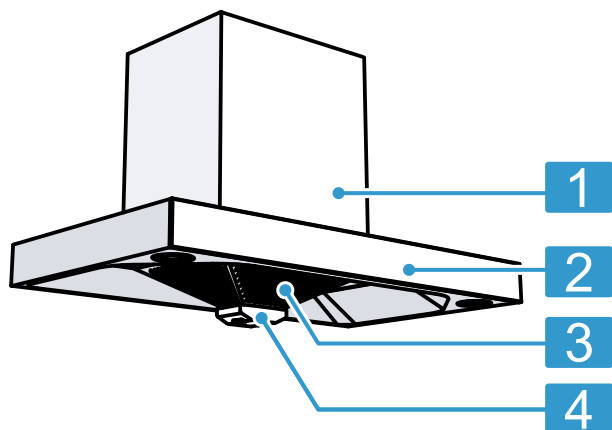

1 Decorative cover

2 Controls

3 Filter screen

4 Oil cup

4.2 Technical Data

Product model	DWA8BA3AS
Power supply	220-240V/50Hz
Total appliance rated power input	274W
Motor rated power input	270W
Lamp rated power input	2W×2
Net weight	24.2kg
Appliance dimensions (WxDxH)	896×505×623mm

4.3 The control panel

You can use the control panel to configure all functions of your appliance and to obtain information about the operating status.



① Switch on / off appliance

1 Speed 1

2 Speed 2

⧗ Boost

☀ Lighting

5 Basic operation

5.1 Switching on and off

- ▶ Touch "①" symbol to start the hood at fan speed 2.
- ▶ Touch the boost "⧗" symbol to operate at the highest speed and run for about 3 minutes, then auto-switch back to the previous speed.
- ▶ Touch "①" symbol again, the hood will keep running at low speed and switch off after about 3 minutes. Touch "①" symbol again to switch off the appliance.

5.2 Choosing the speed setting

- ▶ when the hood is switched on, press the corresponding symbol and the fan will operate at the matching speed. Speed 1 is low speed, Speed 2 is high speed, and the "⧗" symbol is the boost mode.

5.3 Lighting control

- ▶ Press the lighting button "☀" to turn the lights on or off.

6 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

6.1 Cleaning products

You can obtain suitable cleaning products from after-sales service or the online shop.

ATTENTION!

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Only use glass cleaners, glass scrapers or stainless steel care products if recommended in the cleaning instructions for the relevant part.
- ▶ Wash sponge cloths thoroughly before use.

6.2 Cleaning and maintenance

Clean the appliance as specified. This will ensure that the different parts and surfaces of the appliance are not damaged by incorrect cleaning or unsuitable cleaning products.

⚠ WARNING – Risk of fire!

If the hood is not cleaned as stipulated by the manual, there is the risk of fire.

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

⚠ WARNING – Risk of burns!

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

⚠ WARNING – Risk of injury!

Components inside the appliance may have sharp edges.

- ▶ Please wear the protective gloves.
- ▶ If the filter is removable, please carefully clean the inside of the appliance after removing the filter.

1. Observe the information regarding the cleaning agents.
2. Clean as follows, depending on the surface:
 - Clean stainless steel surfaces in the direction of the finish using a sponge cloth and hot soapy water.
 - Clean painted surfaces using a damp sponge cloth and hot soapy water.
 - Clean aluminium using a soft cloth and glass cleaner.
 - Clean plastic using a soft cloth and glass cleaner.
 - Clean glass using a soft cloth and glass cleaner.
3. Dry with a soft cloth.
4. Apply a thin layer of the stainless steel cleaning product to stainless steel surfaces using a soft cloth.

You can obtain stainless steel cleaning products from the after-sales service or the online shop.


6.3 Clean filter screen

Attention!

The falling filter screen may damage the hob below.

- ▶ Hold the filter screen with one hand.
- ▶ Improper cleaning may damage the surface of the filter screen.
- ▶ Do not clean the filter screen in the dishwasher.

1. Remove the filter screen with a screwdriver.

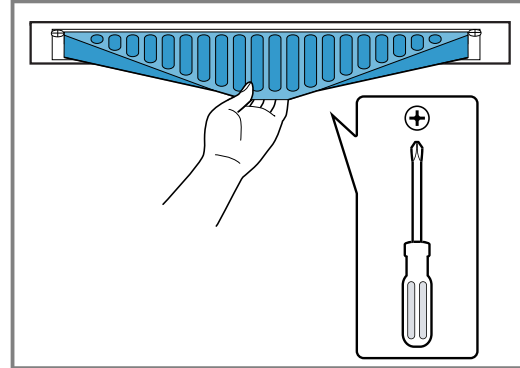


2. Clean the surface of the range hood with a soft cloth.
 3. Separate the inner and outer layers of the filter screen and soak them in hot detergent water for more than ten minutes.
- Notes: Choose the special cleaner for tough grime.
4. Wipe the filter screen with soft cloth.
 5. Dry with a soft cloth after cleaning.
 6. Reinstall the filter screen onto the machine.

6.4 Clean the oil cup

When the oil in the oil cup reaches two-thirds of its capacity, clean it in time to prevent overflow.

1. Remove the oil cup from the slot carefully.

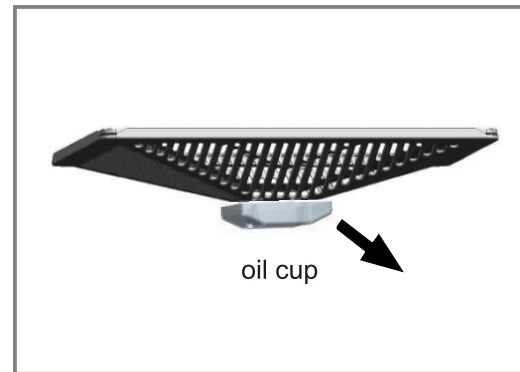

Maintain the oil cup in a horizontal position to avoid oil leakage.

2. Empty the oil cup.
3. Return the oil cup horizontally.

7 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

WARNING – Risk of injury!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.
→ "Customer Service", Page 7

WARNING – Risk of electric shock!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, the supply cord may be specially prepared and only available from the manufacturer or its service agent. A specially prepared cord may include a part of the appliance.

7.1 Malfunctions

Fault	Cause and troubleshooting
The appliance is not working.	The mains plug of the power cord is not plugged in. ▶ Connect the appliance to the power supply. There has been a power cut. ▶ Check whether the lighting in your room or other appliances are working. Different causes are possible. 1. Switch the appliance off and on again. ✓ If the fault was a one-off, the message disappears. 2. If the message appears again, please call customer service and mention error code. → "Customer Service", Page 7
Lighting does not work.	The lamp is defective. ▶ Call → "Customer Service", Page 7.
The suction power is not strong.	Kitchen air ventilation. ▶ Close the windows smaller. The extraction resistance is high. ▶ Select the highest fan setting.
Self-cleaning button flashes, audible sounds.	Self-cleaning function defective. 1. Switch the appliance off and on again. ✓ If the fault was a one-off, the message disappears. 2. If the message appears again, please call customer service and mention error code. → "Customer Service", Page 7

8 Customer Service

Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

8.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. Depending on the model, the rating plate can be found:

- ▶ Inside the appliance (remove grease filters for access).
- ▶ On top of the appliance.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

9 Disposing of your old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose your old appliance in compliance with local environmental regulations.

10 Installation instructions

Observe this information when installing the appliance.



10.1 Safe installation

Follow these safety instructions when installing the appliance.

⚠ **WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

⚠ **WARNING – Risk of electric shock!**

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box.
- ▶ Call customer services. → Page 7

Incorrect installation is dangerous.

- ▶ Connect and operate the appliance only in accordance with the specifications on the rating plate.
- ▶ Connect the appliance to a power supply with alternating current only via a properly installed socket with earthing.
- ▶ The protective conductor system of the domestic electrical installation must be properly installed.
- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the conditions of Overvoltage Category III and according to the installation regulations.

- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, the supply cord may be specially prepared and only available from the manufacturer or its service agent. A specially prepared cord may include a part of the appliance.

Sharp-edged components inside the appliance may damage the connecting cable.

- ▶ Do not kink or trap the connecting cable.

⚠ **WARNING – Risk of fire!**

The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

Grease deposits in the grease filter may catch fire.

- ▶ The specified safety clearances must be complied with in order to prevent a build-up of heat.
- ▶ Observe the specifications for your cooking appliances. If the installation instructions for the cooking appliances specify a different clearance, the larger of the two must always be provided for. If gas hobs and electric hobs are operated together, the largest specified clearance applies.

The grease deposits in the grease filter may catch fire.

- ▶ Never work with naked flames close to the appliance (e.g. flambéing).
- ▶ Do not install the appliance near a heat-producing appliance for solid fuel (e.g. wood or coal) unless a closed, non-removable cover is present. There must be no flying sparks.

⚠ **WARNING – Risk of injury!**

The appliance is heavy.

- ▶ The appliance must not be fitted directly onto plasterboard or similar lightweight materials.
- ▶ To ensure correct installation, you must use a material which is sufficiently stable and suitable for both the structural conditions and the weight of the appliance.

The appliance may fall down if it has not been properly fastened in place.

- All fastening components must be fixed firmly and securely in place.

Changes to the electrical or mechanical assembly are dangerous and may lead to malfunctions.

- Do not make any changes to the electrical or mechanical assembly.

Components inside the appliance may have sharp edges.

- Wear protective gloves.

Risk of injury from glass splinters.

- Protect the filter cover against impact.
- Do not drop the filter cover.
- Wear protective goggles during installation.


10.2 Included in delivery

After unpacking all parts, check for any damage in transit and completeness of the delivery.

Name	Quantity
Range hood	1 pc
Instruction Manual for Use and Installation	1 pc
Exhaust pipe (including reducer pipe)	1 set
Smoke pipe base	1 set
Range hood hanger	1 pc
Auxiliary decorative cover	1 pc
Decorative cover	1 pc
Decorative cover hanger	1 pc
Oil cup	1 pc
Screw $\Phi 4.5 \times 50$	6 pcs
Plastic expansion tube $\Phi 10 \times 50$	6 pcs
Self-tapping screw ST4.2x22	8 pcs
Self-tapping screw ST4x12	2 pcs
Sealing gasket of smoke pipe base	1 pc
Safety shield	1 pc

10.3 Ceiling cut-out


For the installation of the cooker hood, please carefully check the appliance and cabinet dimensions, unit: mm.

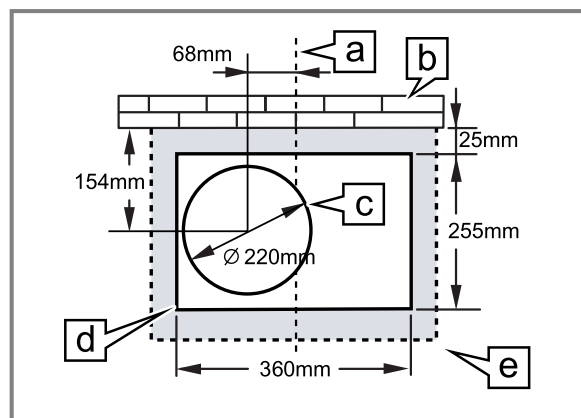

Symbol	Name	Explanations
a	Appliance central line	
b	Installation wall	
c	Round hole	Ceiling cut-out option 1
d	Square hole	Ceiling cut-out option 2
e	Decorative cover area	

10.4 Appliance and cabinet dimensions

For the installation and subsequent maintenance of the cooker hood, please carefully check the appliance and cabinet dimensions, unit: mm.

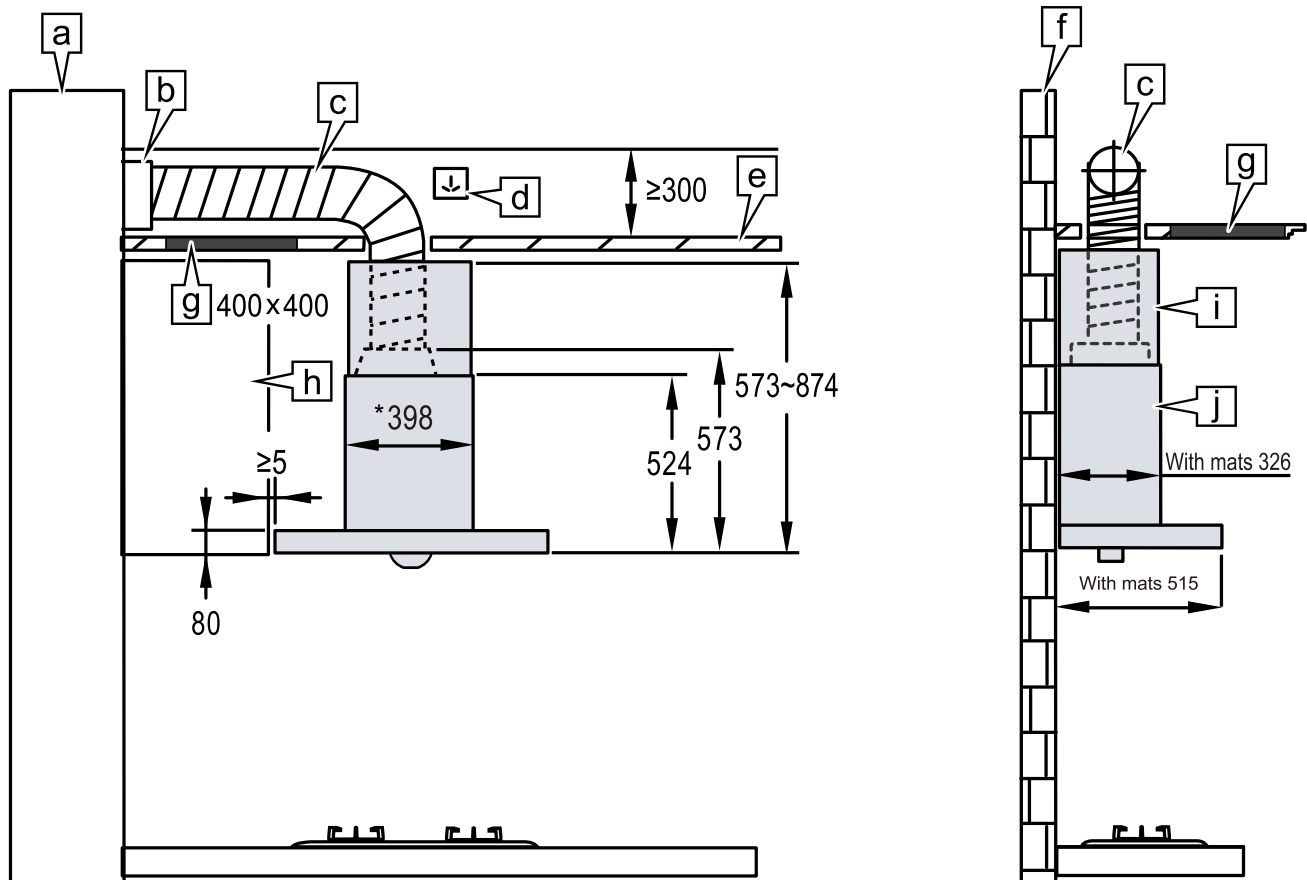

Symbol	Name	Requirement
a	Common flue	
b	Non-return valve	The inner diameter of the Non-return valve should not be less than 160mm. After being connected to the Common flue, it can effectively prevent the backflow of smoke and cross-contamination of odors, ensuring the smoke exhaust effect.
c	Exhaust pipe	A short and straight exhaust pipe should be used, with a length of less than 3 meters and one bend. Otherwise the optimum extraction performance is not achieved and fan noise is increased.
d	Mains socket	
e	Ceiling	The height above the ceiling should not be less than 300mm and there should be no obstacles that affect the arrangement of the smoke pipes.
f	Installation wall	The recommended diameter of the wall opening is 210mm. If the wall opening is too small, it will affect the smoke exhaust effect.
g	Access port	The access port should be close to the check valve and the recommended size be 400x400mm. It should avoid the cabinets and ensure that there is no obstruction above to facilitate the staff's inspection and maintenance of the exhaust system.
h	Cabinet	For built-in installation, please reserve >331mm for cabinet depth (exclude door thickness).
i	Auxiliary decorative cover	
j	Decorative cover	

If the appliance is installed above a gas appliance, the minimum distance between the supporting surface of the cooking vessel on the stove and the lowest part of the appliance should be at least 65cm. If the gas appliance installation instructions specify greater installation distances, this should be taken into account. For the following components, the 65cm installation distance can be reduced:

- Non-combustible parts of appliance, or
- Components operating at an ultralow safety voltage,

When these parts are deformed, protection against access to live parts shall not be affected.

10.5 Instructions for the electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

⚠ WARNING – Risk of electric shock!

It must always be possible to disconnect the appliance from the electricity supply. The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ The mains plug for the mains power cable must be easily accessible after the appliance is installed.
- ▶ If this is not possible, an all-pole isolating switch must be integrated into the permanent electrical installation according to the conditions of overvoltage category III and according to the installation regulations.
- ▶ The permanent electrical installation must only be wired by a professional electrician. We recommend installing a residual-current circuit breaker (RCCB) in the appliance's power supply circuit.

Sharp-edged components inside the appliance may damage the connecting cable.

- ▶ Do not kink or trap the connecting cable.
- The connection data can be found on the rating plate. → Page 7
- The connecting cable is approx. 1.30 m long.
- This equipment complies with the European Community radio interference immunity regulations.
- The appliance fulfils the requirements of protection class I and must only be operated in conjunction with an earth conductor.
- Do not connect the appliance to the power supply during installation.
- Ensure that the protection against contact is guaranteed during installation.

10.6 Information on the installation situation

- Install this appliance on the kitchen wall.
- To install additional special accessory parts, observe the enclosed installation instructions.
- The width of the extractor hood must correspond at least with the width of the hob.
- To optimally detect the cooking vapours, install the appliance in the middle of the hob.

10.7 General information

Follow these general instructions during the installation.

- For the installation, observe the currently valid building regulations and the regulations of the local electricity and gas suppliers.
- When discharging the exhaust air, the official and legal regulations, such as the regional building code., must be observed.
- In order to freely access the appliance for servicing, select an easy-to-reach installation site.
- The surfaces of the appliance are sensitive. Avoid damaging them during installation.

10.8 Installation

Prepare the wall

Requirements: The wall is suitable for installation.

1. Cover the stove and prevent damage.
2. Determine the position of the range hood based on the location of the stove, then determine the center.
3. Check the installation sheet, measure and mark the positions of the range hood hanger screws, safety limit screws, decorative cover hanger screws.

Notes: The decorative cover hanger is used to fix the auxiliary decorative cover.

4. Ensure that there are no power lines, gas pipes or water pipes at the drilling site.
5. Drill the holes with drill bits at the diameter of Ø10mm.


6. Drill the depth of holes as per the length of screw.

7. Insert the expansion tube into the wall hole, fix the range hood hanger to the wall with expansion screws and tighten the expansion screws.

8. Insert the expansion tube into the wall hole, fix the decorative cover hanger to the wall with expansion screws and tighten the expansion screws.

Prepare machine

1. Set the appliance on a soft surface.
2. Place the pipe socket and seal on the top of the hood, and align the screw holes of the pipe socket with the fixing holes of the hood.
3. Use 8 ST4.2x22 screws to fix the pipe socket to the hood and tighten the screws.

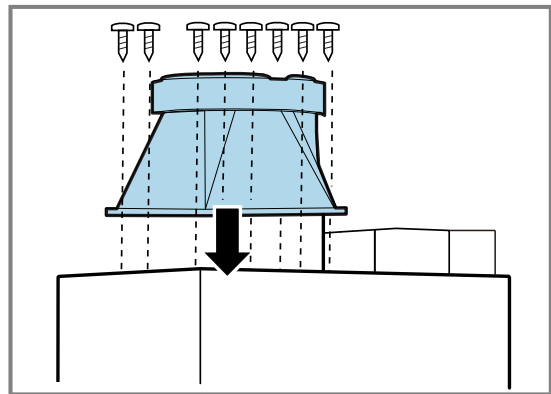

Install machine

⚠ Warning - Risk of Injury

The components in the machine may have sharp edges.


- ▶ Please wear protective gloves.

1. Lift the machine and hang the machine on the rack of range hood.
2. Insert the expansion pipes in the holes in ④, fix the safety stop block to the wall with expansion screws and tighten the expansion pipes.

Connect the exhaust pipe


Install the exhaust pipe at the air outlet on the top of machine.

1. Connect the exhaust pipe to the smoke pipe base and fix it with ST4x12 self-tapping screws.

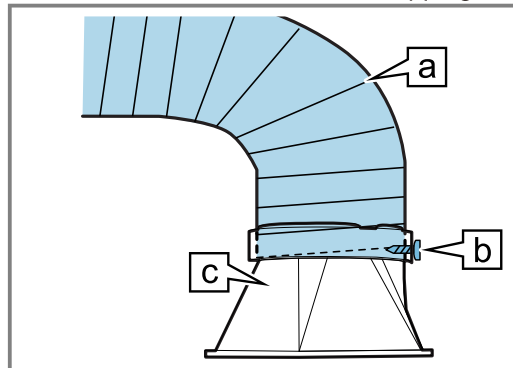

Symbol	Name
a	Exhaust pipe
b	Self-tapping screw ST4x12
c	Smoke pipe base

Wall drilling dimensions

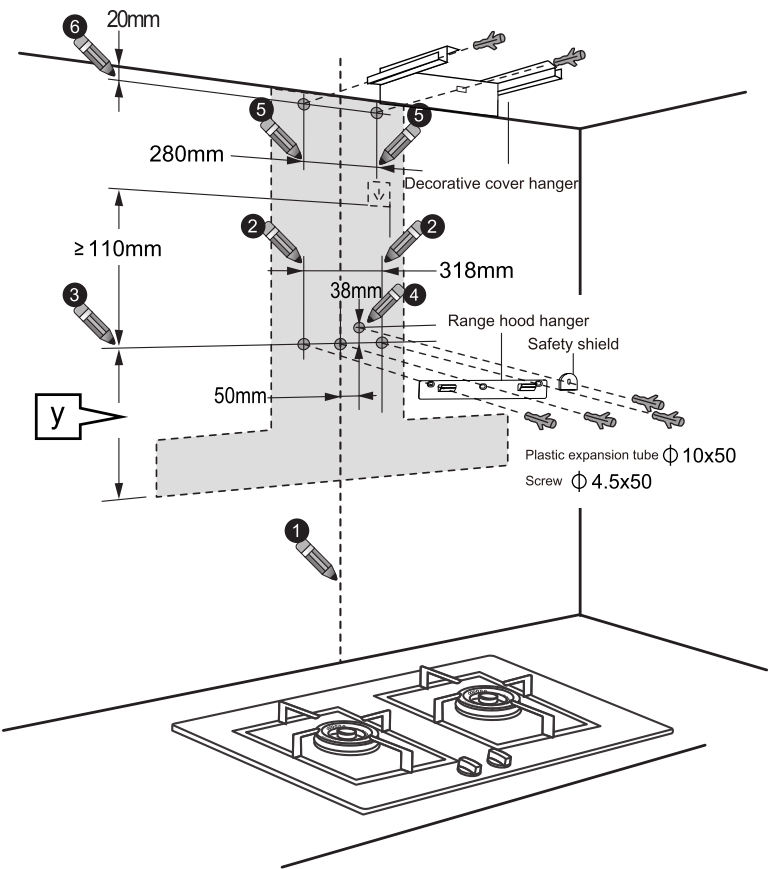

Symbol	Name
y	Dimensions: The lower edge of 505mm is the lowest point of the range hood (excluding the oil cup).



List of names and information of harmful substances in the product										
Component name	Hazardous substance									
	Pb	Hg	Cd	Cr(VI)	PBBs	PBDEs	DBP	DIBP	BBP	DEHP
Housing component	×	○	×	○	○	○	○	○	○	○
Printed circuit assembly	×	○	×	○	○	○	○	○	○	○
Power cord and connecting wire	×	○	○	○	○	○	○	○	○	○
Display unit	×	○	○	○	○	○	○	○	○	○
Motor, drive components and fan	×	○	○	○	○	○	○	○	○	○
Air circulation component	○	○	○	○	○	○	○	○	○	○
Air purification component (oil filter)	○	○	○	○	○	○	○	○	○	○
Lighting component	×	○	○	○	○	○	○	○	○	○
Oil cup	○	○	○	○	○	○	○	○	○	○
Expansion pipe	○	○	○	○	○	○	○	○	○	○
Notes 1: ○: It indicates that the content of the hazardous substance in all homogeneous materials of the component does not exceed the national standard requirements for restricted use of hazardous substances in electronic products. ×: It indicates that the content of the hazardous substance in all homogeneous material of the component exceeds the national standard requirements for restricted use of hazardous substances in electronic products. Notes 2: The components not listed above indicate that their hazardous substance content does not exceed the national standard requirements for restricted use of hazardous substances in electrical and electronic products.										

Precautions: The above-mentioned table contains all components of such type of products manufactured by our company. The product components shall be subject to actual configuration. If you have any questions, please call the customer service hotline.

Prompt description of environmental protection information

The user should use and maintain this product according to the requirements of the product manual. The improper use or disposal of this product may have an impact on the environment and human health.

If you plan to dispose of this product in accordance with Regulations on the Recycling and Disposal of Waste Electrical and Electronic Products, you should hand it over to a processing enterprise with the qualification for disposal of waste electrical and electronic products. Please refer to the table above for information on the content of harmful substances in the product.



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.



Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:

www.bosch-home.com/welcome

BOSCH
HOME APPLIANCES
SERVICE

Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Hausgeräte GmbH

Carl-Wery-Straße 34
81739 München, GERMANY
www.bosch-home.com

A Bosch Company

8001385289 (060311) REG26

en

