 




Contact our expert:
support@yelow.net


CR1001E Alarm Clock with USB Charger
THE BEST DECORATION FOR BEDROOM

[Http://www.yelow.net](http://www.yelow.net)

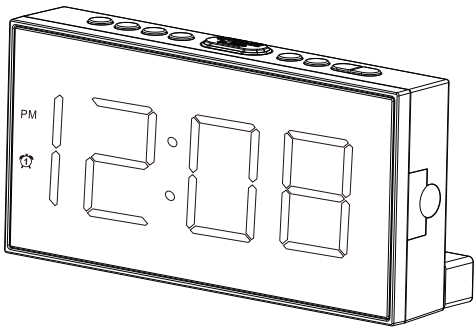

Version 2.0

 Chapter 1 LOCATION OF CONTROLS

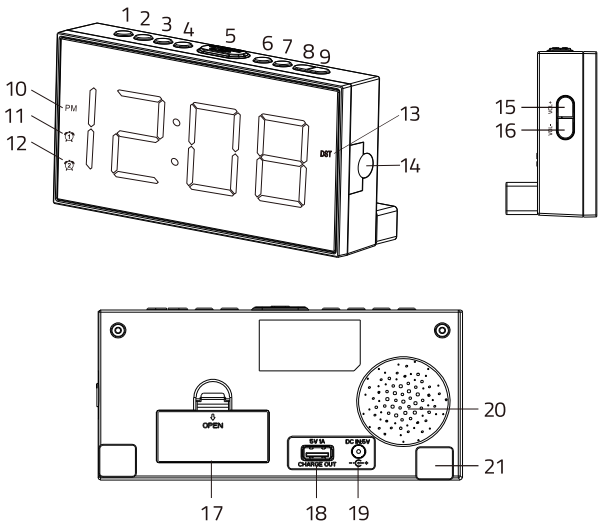


- | | | |
|-----------------------|-------------------------|-------------------------|
| 1. Set Time Button | 9. Alarm 2 Button | 17. Battery Compartment |
| 2. Hour Button | 10. PM Indicator | 18. USB Port |
| 3. Minute Button | 11. Alarm 1 Indicator | 19. DC Jack |
| 4. Dimmer Button | 12. Alarm 2 Indicator | 20. Speaker |
| 5. SNOOZE Button | 13. DST Indicator | 21. Holder (x 2pcs) |
| 6. Alarm Pause Button | 14. 12/24H & DST Button | |
| 7. Alarm OFF Button | 15. Volume + Button | |
| 8. Alarm 1 Button | 16. Volume - Button | |

Note: Battery is not included

Chapter 2 POWER RESOURCES

 1. Install 2pcs 1.5V “AAA” size batteries to the proper terminals in the battery compartment to memorize the time setting in case of power outage.
NOTE: Batteries(not included) don't support time display but can memorize time & alarm setting and trigger an alarm in case of AC power failure.
2. Connect the adapter line to DC jack , then plug into a 100~240V AC wall power outlet.

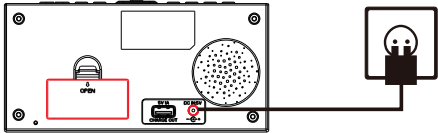

Chapter 3 TIME SETTING

1. Press **SET TIME** button once, display **12:00** starts flashing.
2. Press **HOUR** button to set the hour. press **MIN** button to set the minute.
3. Press **SET TIME** button or **SNOOZE OK** button to save time or wait for 5 seconds to confirm automatically.
- 4.To change 12H/24H time format
Press **12/24H & DST** button to change 12H/24H time format.

Chapter 4 ALARM SETTING

- 1. Press  button, the alarm indicator  (11) will light up, the display  starts flickering.
- 2. Press  button to set the hour, press  button to set the minute.
- 3. Press  button or  button to save alarm time or just wait for another 5 seconds to confirm automatically.
- 4. Push  or  button to adjust alarm volume.

Setting ALARM 2 is the same as ALARM 1.

Chapter 5 DIMMER

Repeatedly press  button to adjust the brightness of display for your preference.

There is 5 levels, The sequence is as follows:

01-02-03-04-05-04-03-02-01.....

Chapter 6 DST

Hold press  button to switch to DST format.

DST indicator will turn on.

Hold press  button again to turn off DST function.

DST indicator will be off.

Turn off Alarm

When alarm goes off:

- 1. Press  button to pause the alarm, alarm will ring every 9 minutes.
- 2. Press  button to turn off the alarm for today.
The alarm indicator  or  is still on, which means alarm is still activated and will ring after 24 hours.
- 3. Cancel Alarm

Press  button to turn off alarm1 or alarm 2 permanently. And corresponding indicator  or  will disappear. Alarm 1 will turn off permanently if you press  button when Alarm 1 goes off. Similarly, Alarm 2 will turn off permanently if you press  button when Alarm 2 goes off.

Chapter 7 USB CHARGING

Plug charging cable into device such as phone or tablet.

Device can charge your phone or tablet at the same time.

The maximum charge current is 1 Ampere.

