

17ORA

WIRELESS SPEAKER

BOC241



USER MANUAL

Please read the instructions carefully
before using the product.

PRODUCT SPECIFICATIONS:

- ◆ Model: BOC241
- ◆ Bluetooth version: 5.1
- ◆ Connection Distance: 10M approx
- ◆ SNR: 85dB
- ◆ Battery: 2400mAh 3.7V 8.88Wh
- ◆ Playingtime: 4H
- ◆ Charging time: 4H
- ◆ Speaker driver: $\Phi 52\text{mm}$
- ◆ Power: $4\Omega/5\text{W} \times 2$ RMS
- ◆ Frequency: 140HZ-18KHZ
- ◆ Input: $5\text{V} \rightleftharpoons 1\text{A}$
- ◆ Dimensions: 400*56.6*75.3mm
- ◆ Weight: 675g

PACKING LIST:

Wireless speaker $\times 1$
Type-C charging cable $\times 1$
AUX cable $\times 1$
User manual $\times 1$

POWER ON/POWER OFF:

Power On: When the speaker is power off, rotate the power switch clockwise to turn on the speaker and with blue lights flashing.

Power Off: When the speaker is power on, rotate the power switch counter clockwise to turn off the speaker and with blue light off.

BLUETOOTH CONNECTION:

1. Turn on the Bluetooth speaker, and the blue light flashes for pairing. Search the bluetooth device "1HORA-BOC241" on your phone, it will connect with your phone.
2. As the Bluetooth speaker is turned on, it will automatically connect with the previous mobile phone that has connected before, no more searching Bluetooth device on your phone any more.
3. No pairing connected for 10 minutes, the speaker will automatically shut down. For usage again, restore the twist switch to the shutdown position before starting the speaker.

MUSIC PLAYING & PICK UP CALLS:

1. When playing music, click the "" to pause the music and then click button again to restart to play.
2. When a call comes, click the "" to pick up a call, and then click the button again to hang up a call. In order to reject a call, long press the button "" for 2 seconds.
3. When the music is playing, rotate the clockwise to turn on the volume.
4. When the music is playing, counter clockwise to turn down the volume.
5. Press "" to play the previous song.
6. Press "" to play the next song.

MODE SWITCH:

The speaker will enter wireless BT mode when power on. Insert the TF card then it will automatically enter the TF card playback. Click the "" button to switch TF card / AUX / wireless BT mode.

LIGHTING ADJUSTMENT:

The "M" key can control the light on and off, you can long press the "M" key to turn on or off the light function.

CHARGING:

1. This product has built in non-removable rechargeable battery, which can be charged by type-C cable.
2. Charging voltage and current is 5V=1A.
3. When the speaker is charged, the red light will be on. As it is fully charged, the lights will be off.
4. Charging the speaker while playing music will speed up the decline of battery life. We suggest use the speaker after fully charged. Repeated charging and discharging will lead to the decline of battery life, which is a normal phenomenon of rechargeable batteries.

WARRANTY STATEMENT:

All products are warranted to be free from defective materials and workmanship. The warranty period for all equipment provided by our company is 12 months after purchase. If you have any questions, please contact a customer service representative for assistance.