


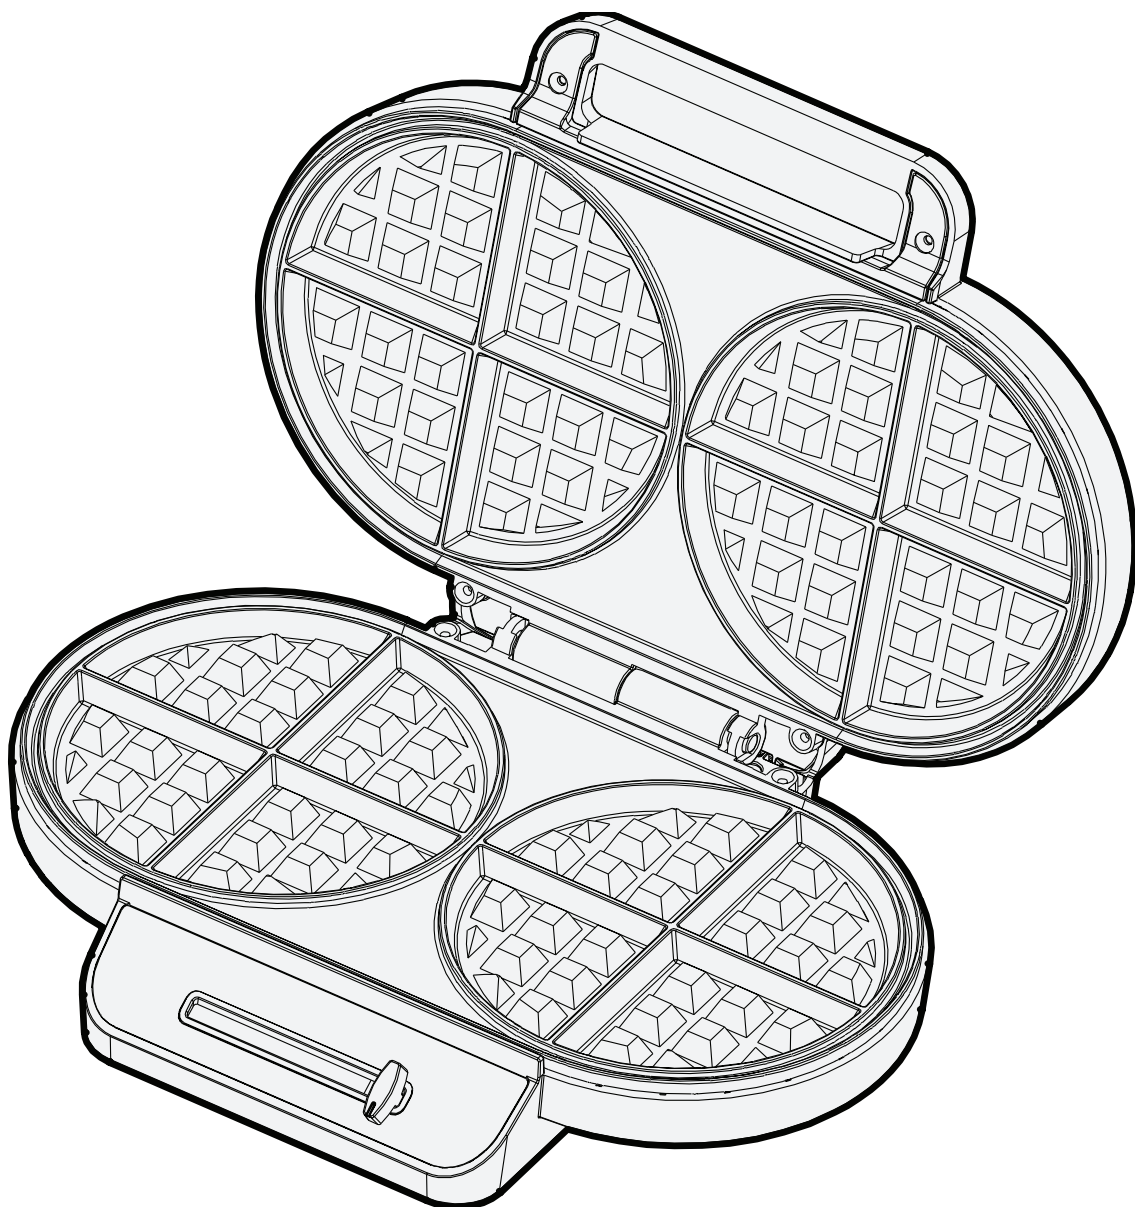

DUAL ROUND WAFFLE MAKER

Product Instructions

Product No. 2000295

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.


SCAN ME



Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Components

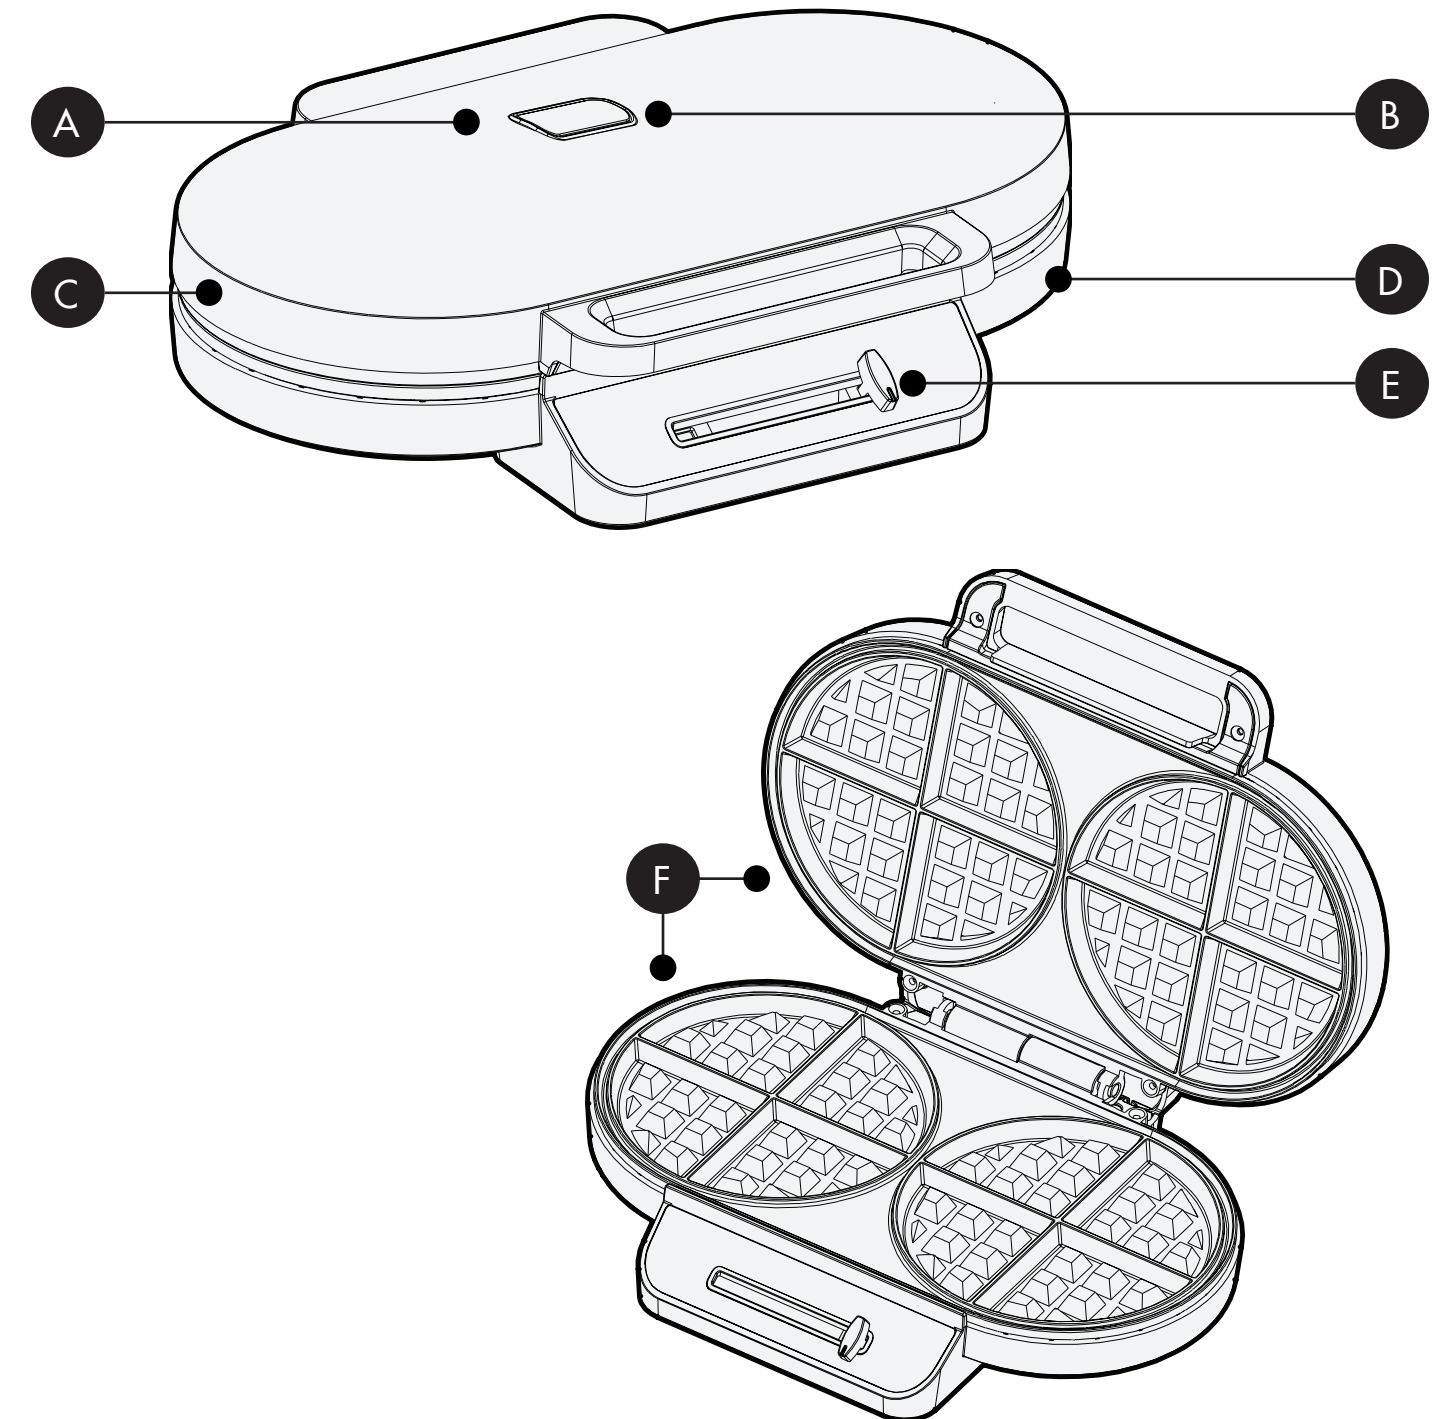

A. Metal Cover
B. Indicator Light
C. Upper Housing

D. Lower Housing
E. Temperature Control
F. Plates

Information

Important Safety Notice

This product is not suitable for use by children or by individuals with physical, sensory, or mental impairments that may limit their ability to operate the equipment safely, unless they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following all safety instructions provided in this manual.

Surfaces become very hot during use.

Before First Use

- Plug in the waffle maker. Both the red and green lights will turn on while it heats. Once the red light switches off, this will indicate the waffle maker is heated up and the green light will remain on to indicate it's ready to use
- Clean the baking plates with a damp cloth or sponge
- Lightly grease the plates with butter or cooking oil
- Plug in the sandwich maker and heat until the green ready light switches off

Note: Light smoke during first use is normal due to initial heating of internal components.

Cleaning

Never use harsh or abrasive cleaners - they damage the non-stick coating.

1. Unplug and cool completely
2. Remove excess oil with kitchen paper
3. Use wooden/plastic spatula for stuck food
4. Clean plates and exterior with damp cloth
5. Wipe exterior with damp cloth



Environmental Protection

Do not dispose of electrical products with household waste. Recycle where facilities exist.

Contact your local authority or retailer for recycling advice.

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Technical Specifications

Input Voltage: AC 220V-240V, 50-60Hz
Rated Power Input: 1200W

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

VonHaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Usage & Safety



Please read all instructions carefully before use and retain for future reference.



CAUTION: Hot surfaces.



Keep all electrical components dry at all times. Water and electricity create serious safety hazards that can result in injury or death.

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

