



6+

CONTENTS AND GETTING STARTED

 
Contents

- 2 Turbo Tinkle Vehicles
- 2 Remote Controls
- 2 Turbo Tinkle Drivers


Getting Started

Vehicle

1. Make sure the power switch on the bottom of each vehicle is in the off position. Use a phillips-head screwdriver to remove the screw from each battery cover and then remove each battery cover.
2. Insert 3 AAA 1.5V batteries (not included) in the orientation shown.
3. Replace each battery cover and securely tighten each screw.

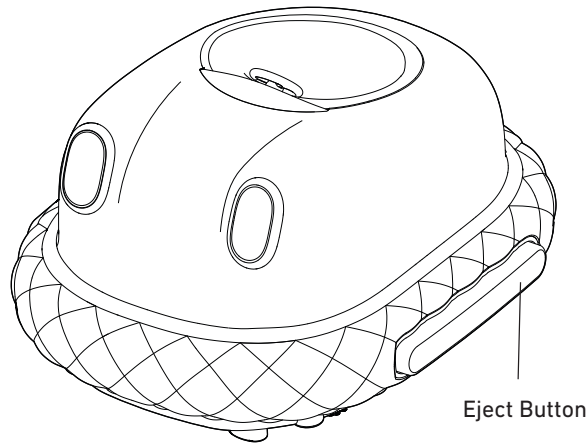




ON/OFF Switch

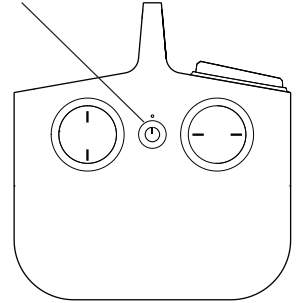 

Remote control

1. Use a tool to press and hold the battery cover release on the back of each remote control and then slide down each battery cover.
2. Insert 2 AAA 1.5V batteries (not included) into each battery compartment according to the battery diagram.
3. Slide each battery cover back into place securely.

   ON/OFF Switch

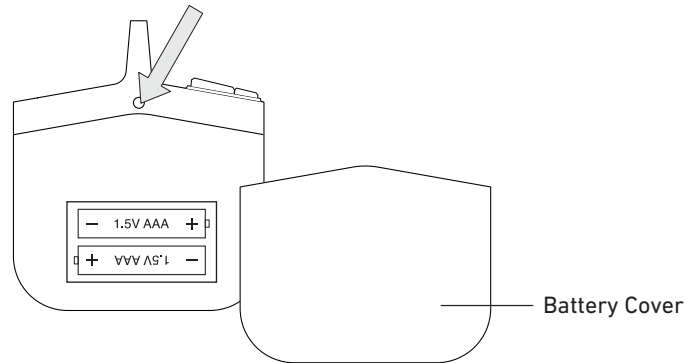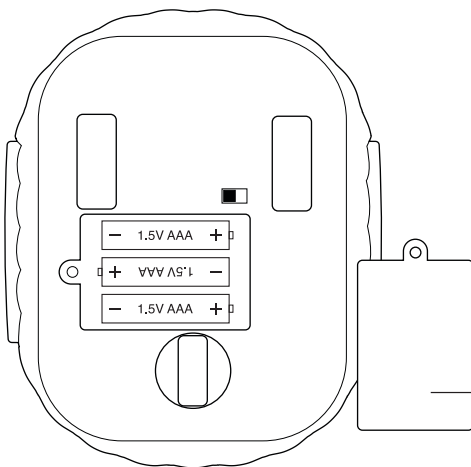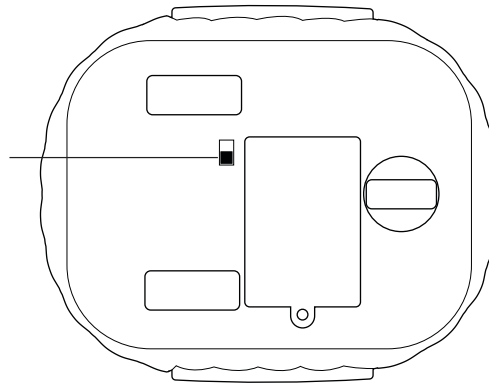

HOW TO PLAY

 
1. Make sure the remote controls and vehicles are powered off.
2. Press the power button on the first remote control to power on the remote control. The pairing light will glow white, fading on and off, to indicate the remote control is in pairing mode and ready to pair with the first vehicle.
3. Flip the switch on the bottom of the first vehicle to the on position to power on the vehicle. The vehicle lights will glow, fading on and off, to indicate the vehicle is in pairing mode. The vehicle will automatically begin pairing with the remote control.
4. Wait for the pairing light on the remote control to quit fading on and off. It will stay solidly lit when pairing is successful.
5. Repeat steps 1 through 4 for the other remote control and vehicle.
6. If pairing is unsuccessful within 60 seconds, power off both the remote control and vehicle and then repeat steps 1 through 3.
7. If pairing is interrupted or out of range, the remote control and vehicle will both enter pairing mode and attempt to reconnect. Move the remote control and vehicle closer together. If pairing is unsuccessful within 60 seconds, power off both the remote control and vehicle and then repeat steps 2 through 4.
8. When finished driving, press the power button on the remote control to power off the remote control and flip the switch on the bottom of the vehicle to the off position to power off the vehicle.

Note: To save battery life, the remote control and vehicle automatically enter sleep mode after 5 minutes of inactivity. To wake from sleep mode, power off and then power on the remote control and vehicle.

HOW TO PLAY


Forward Or Reverse

Push the left joystick to drive forward or reverse.

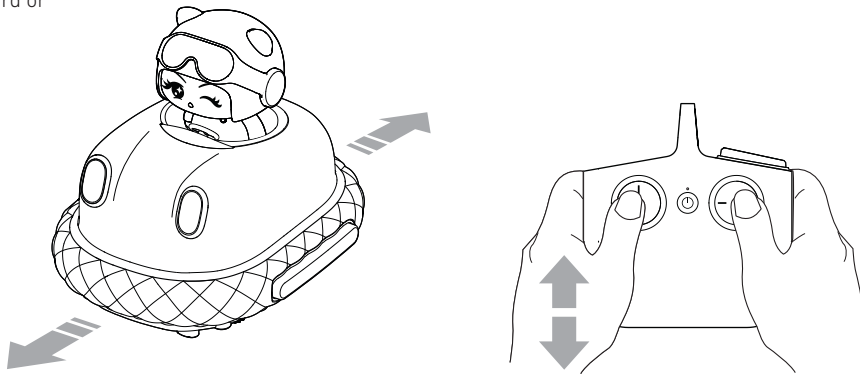


Turn Left Or Right

 Push the right joystick to drive turn left or turn right.

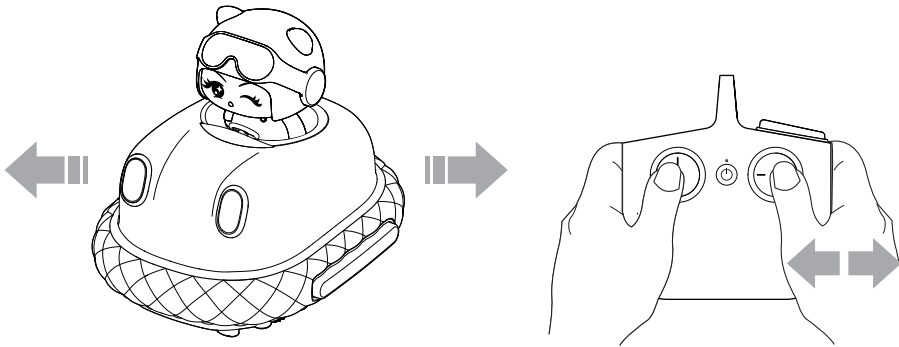


Turbo

 Press for a boost of speed!

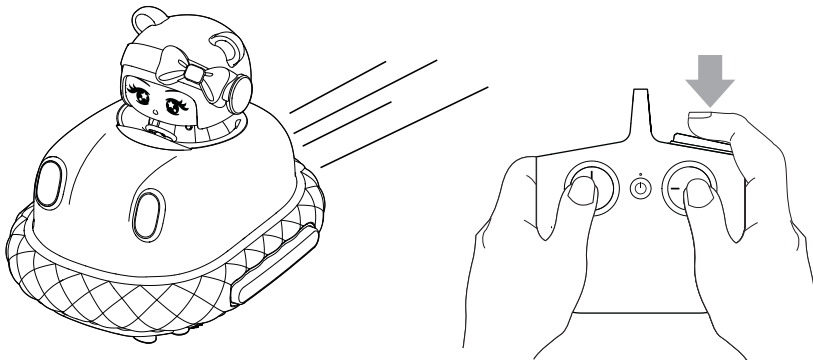

Eject Win!

 Aim for the rival vehicle's side bumpers and send the driver flying!

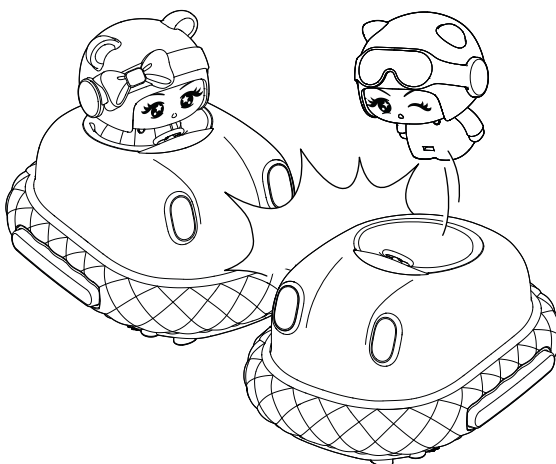

SAFETY PRECAUTIONS

- Adult supervision is recommended when operating the vehicles.
- Always drive responsibly and make sure driving paths are clear. Never drive towards or in close proximity to people or animals. Never drive on streets or roadways to avoid traffic hazards.
- Keep fingers, hair, and loose clothing away from tires and all moving parts while the vehicles are in motion.
- Avoid exposing the vehicles and remote controls to water. Avoid driving through water. Never drive outdoors in rain or snow. Never leave the vehicles or remote controls outdoors overnight.
- Do not expose the vehicles or remote controls to extreme temperatures.
- Do not leave the vehicles or remote controls near sources of heat or under direct sunlight for extended periods.
- Do not sit, step, stand, or place objects on the vehicles. They are not designed to support extra weight.
- Do not disassemble or modify the vehicles or remote controls.
- Thoroughly inspect the vehicles and remote controls before every use. If the vehicles or remote controls appear worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

ALKALINE BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire; batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Sharper Image® name and logos (including the 77 logo) are trademarks or registered trademarks. Distributed by and © 2025 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Model No.: 1018812

 **WARNING:**
CHOKING HAZARD – Small Parts.
Not for children under 3 years of age.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

Printed in China

For customer support, please visit
www.msccustomercaare.com or call

1-800-374-2744