



MTCLTBEANGRY

GORRO DE LUZ DETARABAJO
WORKLIGHT
BEANIE
USER MANUAL



3 LED Light
Intensity Levels



Rechargeable
Li-polymer Battery



RoHS



Made in China to Matco specifications

OPERATION - ON/OFF




Press the **'ON/OFF'** switch on the Work Light to turn on and change between (3) light intensity levels. The first press of the switch selects full power (120lm). The second press, 75% (90lm). The third press, 50% power (60lm). To switch off, press for the fourth time.

REMOVING THE WORK LIGHT



To remove the work light, pull the beanie rim open and push the light out from the hat inward. Once this is removed, you can charge your light and your beanie can now be washed.

CHARGING THE LIGHT

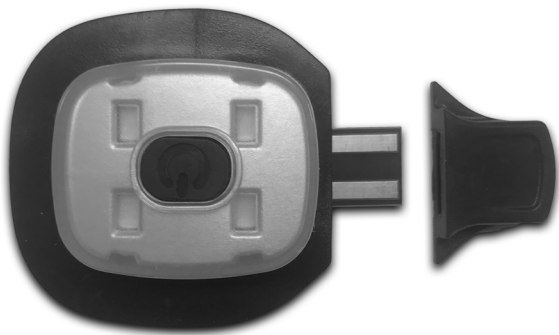

USB Socket



Computer



Car Charger



Power Bank

First remove the protective cover to reveal the USB connector. Plug the light USB connector into a USB wall socket (not supplied) or 12V USB car charger socket (not supplied), computer or power bank for a minimum of 4 hours.



**GORRO DE LUZ DETARABAJO
WORKLIGHT
BEANIE**

MANUAL DE USUARIO



3 luces LED
Niveles de intensidad



Recargable Batería
de polímero de litio



RoHS



Fabricado en China según las especificaciones de Matco.

FUNCIONAMIENTO - ENCENDIDO/APAGADO




Presione el interruptor de '**ENCENDIDO/APAGADO**' en la luz de trabajo para encender y cambiar entre (3) niveles de intensidad de luz. La primera pulsación del interruptor selecciona la máxima potencia (120 lm). La segunda pulsación, 75% (90lm). La tercera pulsación, 50% de potencia (60lm). Para apagar, presione por cuarta vez.

DESMONTAJE DE LA LUZ DE TRABAJO



Para quitar la luz de trabajo, tire del borde del gorro para abrirlo y empuje la luz hacia afuera del gorro. Una vez que se quita esto, puede cargar su luz y su gorro ahora se puede lavar.

CARGA DE LA LUZ

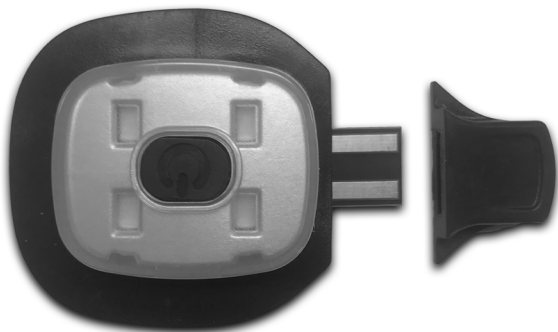

Toma USB



Computadora



Cargador de coche



Banco de energía

Primero retire la cubierta protectora para revelar el conector USB. Enchufe el conector USB de la luz en un enchufe de pared USB (no incluido) o un enchufe de cargador de automóvil USB de 12 V (no incluido), computadora o banco de energía durante un mínimo de 4 horas.