

POWERTEC

5-3/4" Universal Trim Router Plate (1/4" Thick)



WARNING

To reduce the risk of injury, turn router off and disconnect it from power source before installing and removing accessories. An accidental start-up can cause injury.

WARNING

For your own safety, read and follow all safety procedures listed in the router instruction manual.

PACKAGING CONTENTS

- 1 - 5-3/4" Universal Trim Router Plate
- 4 - M4 Screws

TOOLS NEEDED

Phillips Head Screwdriver

INTENDED USE

This clear acrylic router plate provides better visibility and when used with a PORTER-CABLE style guide bushing (sold separately) it allows a bit to follow the path intended by a template or jig.

ASSEMBLY


- Remove the existing router plate and all related hardware from the router.
- On the chart find the model and the corresponding letter for your router.
- Find the corresponding letters for your router in Figure 1. These letters are also printed on the router plate. **NOTE:** Some routers have more than one option.
- Place the universal router plate onto the router and line up the first letter with the appropriate hole and then rotate the plate until all holes for the pattern line up. Install and tighten the machine screws.

MAINTENANCE

- Carnauba wax may be applied to the universal router plate to reduce scratching and make it slide easier. If scratching does occur, carefully polish with plastic polish until the scratches are removed.


DeWALT*		
DWP611PK	A	Fixed Base
	B	Plunge Base
Makita*		
RT0701CX7	C	Plunge Base
	D	Fixed Base
Bosch*		
GKF125CEN	E	
PR110	F	
PR10E/PR20EVS	F	
Ryobi*		
P601	G	
PORTER-CABLE*		
PCE6435	H	

Figure 1

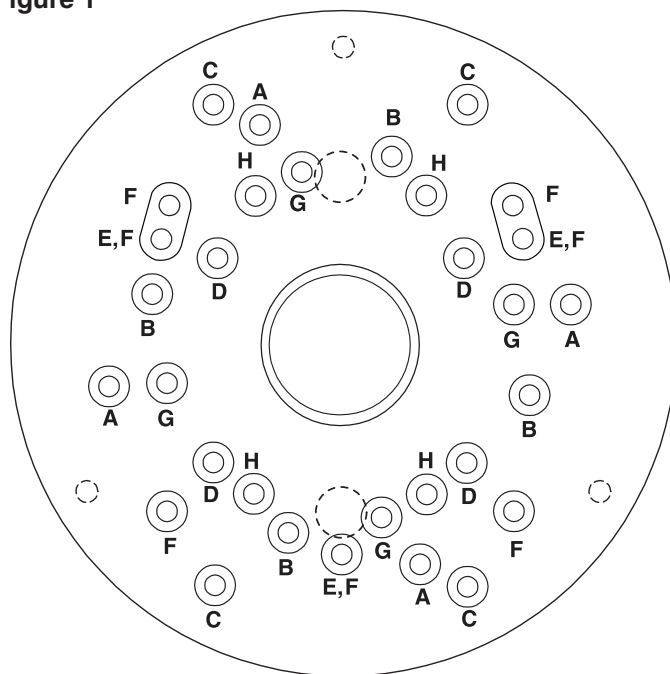

* PORTER-CABLE, DeWALT and Craftsman are trademarks of The Black & Decker Corporation/ Bosch is a trademark of the Robert Bosch Tool Corporation/ Makita is a trademark of Makita Corporation/ Ryobi is a trademark of RYOBI, LTD.

 Visit us on the web at powertecproducts.com



Southern Technologies, LLC
Waukegan, IL 60087

