 
 
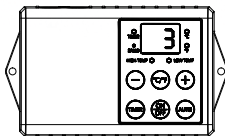 


Windigaga

GABLE WALL-MOUNTED FAN

Model: BT-WM15P070S0

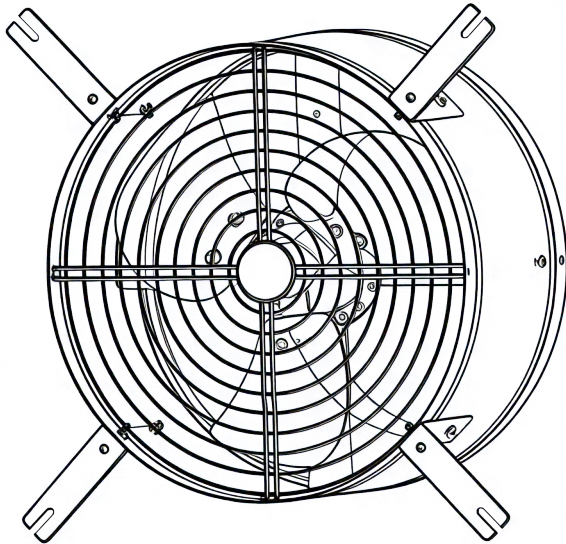

We Are Here For You !

Email: support@windigaga.com

INSTRUCTION >>

CONTENTS

Safety Precautions	01
Product Description	03
Installation	03
Operating Instructions	05
Remote Control Usage Instructions	06
Q&A	07
Warranty	08
Product Catalog	08

SAFETY PRECAUTIONS

WARNING

Read all safety warnings, instructions, illustrations and specifications provided with this electrical appliances. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.



Save all warnings and instructions for future reference.

Improper operation may cause personal injury.



Improper operation may cause damage to the machine.

Improper operation may cause others object damage.



The symbol indicates that the user should pay high attention to and pay attention to the drawing shows the situation to be noted, and the left figure shows "Be careful of electric shock"



Disconnect the fan when moving from one location to another.

Do not use a power supply that does not meet the rated voltage.



The use of non compliant power supplies can cause fire or electric shock.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



If the machine emits smoke, odor, motor noise and other abnormal conditions, Please do not use it. It may cause fire or electric shock.



Do not disassemble, repair or rectify the machine during use. Doing so may result in fire or electric shock and personal injury.



Do not damage or arbitrarily change the original power cord, and do not bend, forcibly pull, bind or press the power cord under heavy objects. This will damage the power cord, causing electric leakage fire or electric shock.



If the machine is not used for a long time, please unplug the power cord from the socket.



The connection socket must be installed with leakage protection switch device.



Never insert fingers, pencils, or any other object through the guard when fan is running.



When the power cord is unplugged from the socket, the plug should be unplugged. Do not pull the power cord to forcibly pull the wire, which may cause damage to the wire - and lead to leakage or electric shock.



This product is to be used in doors.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



To reduce the risk of injury to persons, please observe the following. In the United States, OSHA compliant guards are required when fan is installed with in 7 feet of the floor or working level. In Canada, CSA compliant guards are required when fan is installed below 2.5 meters(8.2 feet) above the floor or grade level.

FCC Warning Statement:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



FCCID:2BCGA-XEXHAUST18

PRODUCT DESCRIPTION

PRODUCT STRUCTURE DIAGRAM

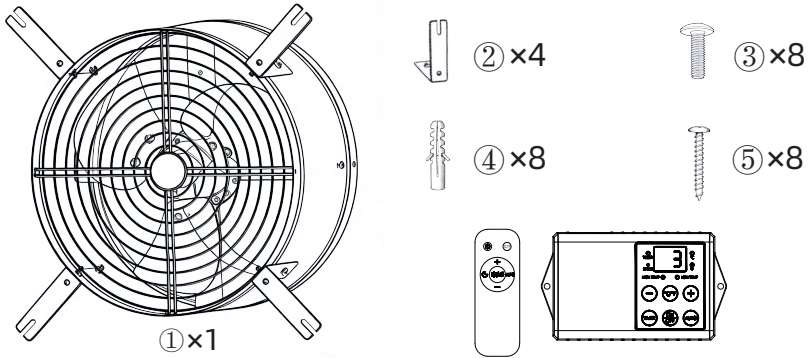

①	Gable fan	1
②	Mounting bracket	4
③	Flat-head screws for bracket	8
④	Plastic expansion tubes for Solid Brick Wall	8
⑤	Self-tapping screws for fixed products	8



Specification

Model	Power	Voltage	Speeds	Features
BT-WM15P070S0	70W	120VAC 60Hz	3	Auto Temperature control



INSTALLATION

TIPS! Prepare tools in advance:

 
 
Cross screwdriver, Small wrench, Hammer, Electric drill

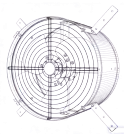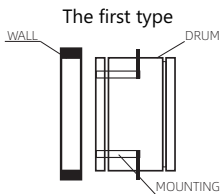

First type

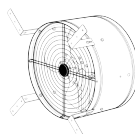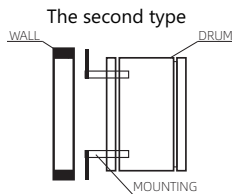  


Second type

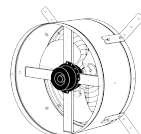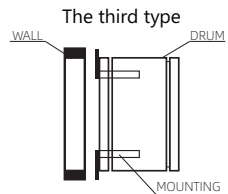  


Third type

 
Step1: Select the installation type based on your installation requirements.

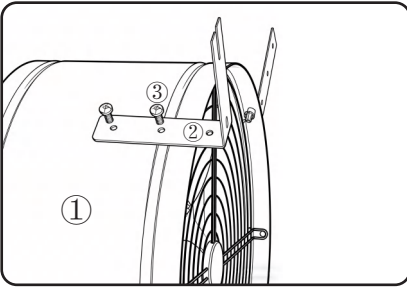

 
Step2: Lock the 4pcs mounting bracket ② to the Product housing ① with 8pcs large flat head screw ③.

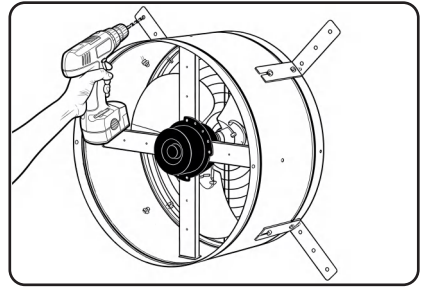

 Step3. For Cement or Solid Brick Walls: Drill the mounting holes into the wall, then insert the included anchors into the mounting holes and secure all screws.
For Wooden Walls: Secure the top panel to the wall with Self-tapping screws ⑤

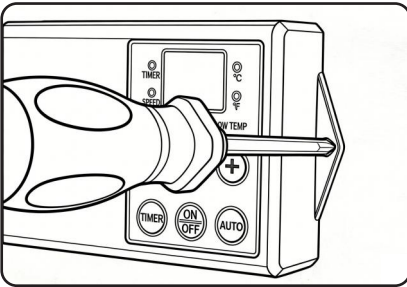

 
Step4: Install the control box at the desired location. Then plug it in to use.

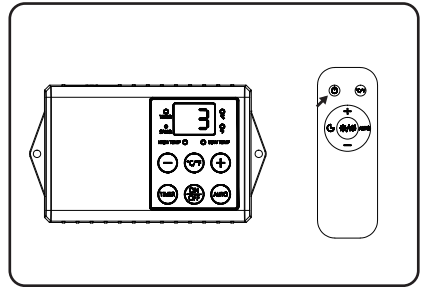

Step5. Install 2 AAA batteries to the remote (Batteries are not included). Press and hold the power button for 5s to pair (within 15s of plug in) with control box. If more than 15s after plug in, unplug the power and restart again to pair. A 'Beep' sound if successfully paired.

OPERATING INSTRUCTIONS

 Control Box Panel

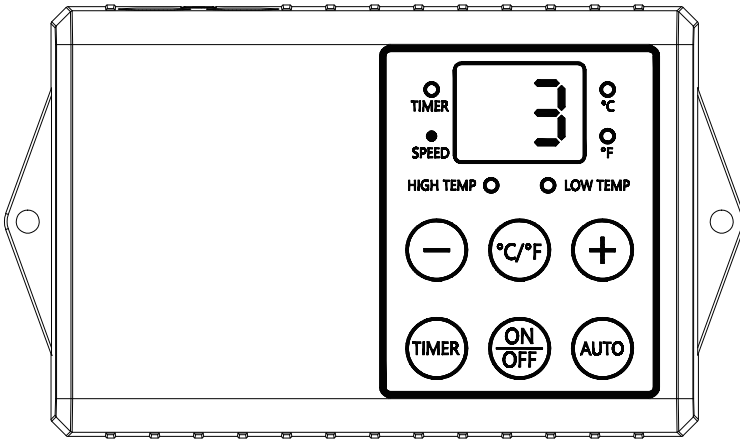

BUTTON DESCRIPTION



ON/OFF BUTTON

Press the button to set power ON/OFF.



TIMER BUTTON

Press the button to set the fan's shutdown time. Maximum setting: 18 hours.

+ - BUTTON

Press the button to add or reduce the setting parameters.



- Adjust the fan speed in any mode.
- Adjust the time in timer mode.
- Adjust the temperature in Auto mode.



Long press to set the temperature conversion between degrees Celsius and Fahrenheit.



AUTO BUTTON

Press the button to set modes: Speed(Normal) – Environmental Temp – LowTemp – High Temp – Speed(Normal).


Press	Mode	Display
①	Normal: Continue running at setting speed	Speed display
②	Environmental Temp: Reference for High/Low TEMP Setting, Running at Normal setting	Speed and Environmental Temp alternate display
③	Low Temp: Set Auto running TEMP, If Environmental Temp \leq Setting Temp, Running	Speed and Environmental Temp alternate display
④	High Temp: Set Auto running TEMP, If Environmental Temp \geq Setting Temp, Running	Speed and Environmental Temp alternate display
⑤	Return to Normal mode	Speed display

Press to Low/High Temp Setting, Low or High indicator light remains constantly on, and the display screenflashes, then press the + or - button to set the desire temperature .

Note:

Adjusting timer settings and auto settings will be automatically confirmed after 5 seconds.

 Remote Control Usage Instructions

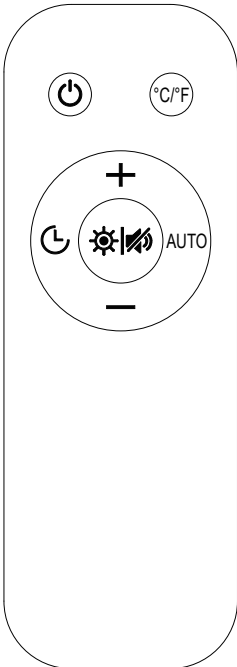

NOTE

Batteries are not included. Install 2 AAA batteries before using the remote.

Press and hold the power button for 5s to pair (within 15s of plug in) with control box. If more than 15s after plug in, unplug the power and restart again to pair, there will be a 'Beep' sound if successfully paired.

Press to turn ON/OFF.

Press the button to add or reduce setting parameters.

- Adjust the fan speed in any mode.
- Adjust the time in timer mode.
- Adjust the temperature in Auto mode.



Press to turn on/off the screen brightness.

Long Press to turn on/off the sound.




Press the button to set modes: Speed(Normal)–Environmental Temp–Low Temp–High Temp–Speed(Normal)



Press the button to set the fan's shutdown time, The timing range is from 1 to 18 hours.



Press the button to turn on/off swing function,Long press to set the temperature conversion between degrees Celsius and Fahrenheit.

Questions	Answers
Why isn't the remote control working?	<p>a , The remote control may not have been paired. Press and hold the power button for 5s to pair (within 15s of plug in) with control box. If more than 15s after plug in, unplug the power and restart again to pair , there will be a 'Beep' sound if successfully paired.</p> <p>b.The remote requires 2 AAA batteries (not included). Avoid using rechargeable batteries. It works up to about 65 feet (20 meters), but walls or obstacles may shorten the range. For best results, please use the remote within this distance or closer.</p> <p>c.Ensure that the device's plug is securely connected to the outlet. If the issue persists, try using a different power outlet.</p>
Why does the fan frequently turn on and off in AUTO mode?	<p>When the set high or low temperature trigger points are close to the actual room temperature, especially when used together with an air conditioning system, temperature fluctuations are common. We recommend setting the AUTO mode triggers at least $\pm 6^{\circ}\text{F}$ away from the current room temperature.</p>
How to cancel the high and low temperature mode?	<p>Press Auto button until to Speed(Normal) mode.</p>
Does the product retain settings after power off?	<p>The power supply box retains its settings as long as it remains powered. If the power supply box is completely disconnected from power, it will not retain the settings.</p>
How do I turn off the display on the control box?	<p>Press the remote control  button briefly to turn off.</p>
How do I perform maintenance on this fan?	<p>Step 1 Disconnect the power supply before cleaning or servicing the fan. Step 2 Wipe the exterior with a dry cloth or use a light vacuum to remove dust.</p>

WARRANTY

 
 
 
 
Ehaiir warrants this product to be free of defects in material and workmanship for the applications specified in the Owner's Manual for a period of 24 months from date of purchase. This warranty only applies to the original purchaser of this product.

If you have any questions, you are welcome to contact us ! We will get back to you within 24 hours.

Email: support@windigaga.com

※ Please have your order ID ready before contacting Customer Support

Product Catalog

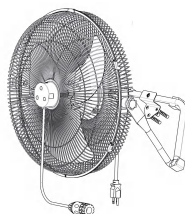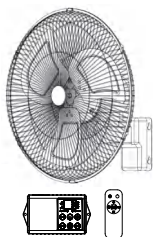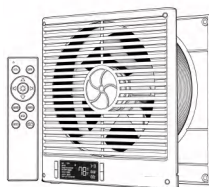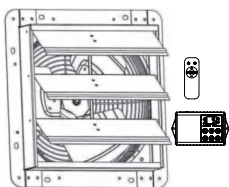

MADE IN CHINA

FC
FCCID:2BCGA-XEXHAUST18

ETL
C-UL-USA
Intertek
5021700

