

40 mm

70 mm

## Warranty Card

### 1. Warranty Terms

Within 15 days from the date of purchase, a product with any quality defects arising under normal operating circumstances is eligible for replacement of the same type or free repair;  
 Within 1 year from the date of purchase, a product with quality defects arising under normal operating circumstances is eligible for free repair;  
 Within 3 years from the date of purchase, a product with any quality defects is eligible for repair subject to a charge.

### 2. This warranty card automatically expires under the following circumstances. But customers can still enjoy fee-based maintenance services.

- 2.1 Disqualified product without Onyx BOOX trademark;
- 2.2 Unauthorized disassembly or repair;
- 2.3 The machine series number is missing or altered;
- 2.4 Any damage caused by misuse, malicious acts, negligence, inflow of any liquid, accident, natural calamities, or physical force;
- 2.5 The faulty product does not belong to Onyx.

### 3. Maintenance Services Notices


User must send the product for repairing or maintenance. Before sending it, please contact the After-sales Department of Onyx to ascertain the cause of the fault and fill out the maintenance application form (this form can be downloaded from the Onyx official website). The original or a copy of the purchase voucher (invoice) is needed when the consumer sends the product to the After-sales Department.

### 4. Particular Declaration

The native consumer is protected by the consumer protection laws of his local country. If a consumer buys a product in a foreign country, then the consumer must follow the foreign country's consumer protection law.

Onyx reserves the right to the final interpretation of this policy.

## Safety Notice/Warning

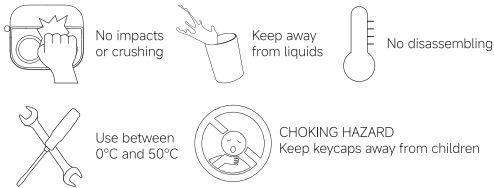

### Disclaimer:

Due to space limitations, the information contained in this Quick Start Guide is incomplete. Product images may slightly differ from the actual product. Demonstration images and illustrations are for reference only. For product appearance (including but not limited to color) and functionality, please refer to the actual product. Onyx reserves the right to modify the product specifications and content included in this Quick Start Guide.

Official Website: <https://www.boox.com/>




## BOOX Tappy Bluetooth Page Turner

Quick Start Guide & Warranty Card



Customer support center:  
<https://help.boox.com>  
 Email: [help@boox.com](mailto:help@boox.com)

©Onyx International Inc. All rights reserved.

## Package Contents

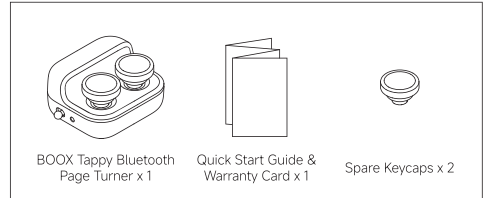

### Optional (Users need to purchase separately):

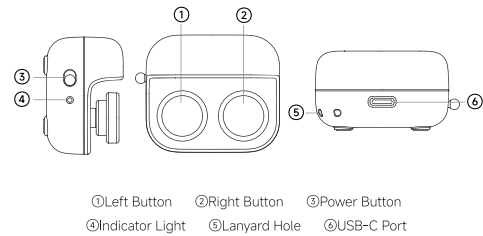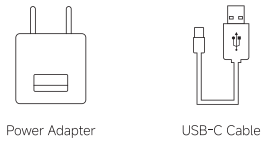

## Quick Start Guide

### Pairing:

1. Turn on Pairing Mode: Slide the Power button ON to turn on your Page Turner. Press and hold both the left and right buttons simultaneously for about 2 seconds.  
 \*When the device is in discovery (pairing) mode, the indicator light will flash blue. This mode lasts for 60 seconds. If pairing is not completed within this time, the blue light will turn off. To pair, please repeat the process from the beginning.
2. Connection: Access the Bluetooth on your eReader to pair with the Page Turner, and find the device "BOOX Tappy".
3. Successful Pairing: Once the Page Turner is connected successfully, the indicator light will stay solid blue for about 1 second and then turn off. The Page Turner's buttons are now ready for use.

4. If pairing fails, press and hold both the left and right buttons again to resend the pairing signal.
5. Unpairing: In your eReader's Bluetooth settings, find the "BOOX Tappy" device and unpair (or forget) it.

### Mode Switching:

1. Mode Switching: Press and hold both the left and right buttons for about 5 seconds to change the mode. A flashing green light (for about 3 seconds) confirms the mode switch. It allows you to cycle through 3 modes.
2. Reading Mode: The left button functions as Volume Up, and the right button as Volume Down. If the reading app does not support page turning with these buttons, please enable the "Volume Buttons for Page Turn" option within the app. This mode is only supported on Android devices.
3. Multimedia Mode: The left button works as Previous Track, and the right button works as Next Track.
4. Browsing Mode: The left button scrolls up, and the right button scrolls down.

### Low Battery Warning:

If the battery level is below 10%, the indicator light will flash red slowly when the device is switched on. During use, pressing any button will cause the indicator light to flash red 5 times. Please charge the device promptly when the battery is low.

Charging specifications: DC 5V 0.05A  
 Frequency range: BLE:2400-2483.5MHz

Onyx International Inc. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.boox.com/doc/>  
 Safety Instruction: No impacts or crushing. Keep away from liquids. No disassembling. Use between 0°C and 50°C.

**FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**IMPORTANT NOTE:**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

**ISED Warning**

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes.