



ELECTRIC KETTLE

PE-EK022
User Manual



SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all Instructions.
- To protect against electric shock and injuries to persons do not immerse cord, plugs, or unit in water or other liquid.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off ", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- To reduce the risk of injury, do not drape cord over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

SAVE THE INSTRUCTIONS

HOUSEHOLDUSEONLY

WARNING: Improper use of the grounding plug can result in electric shock.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. To protect against electrical shock, this appliance is equipped with a cord having a 3-prong grounding-type plug for insertion into a proper grounding-type electrical outlet. DO NOT alter the plug for use in a 2-prong outlet. If the plug will not fit into an outlet, have a proper outlet installed by a qualified electrician.

- a) A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
 - The extension cord should be a grounding-type 3-wire cord.

CAUTION: Risk of injury, any other servicing should be performed by an authorized service representative

CLEANING AND MAINTENANCE




- Always unplug the kettle from the socket and allow it to cool completely before cleaning or descaling it.
- DO NOT immerse the kettle, its power cable, and socket or base into water to avoid hazards.

1. With kettle unplugged, empty any remaining water and rinse. Allow kettle to cool. The mesh filter may be removed by pulling up on the filter tab which is visible through the kettle opening. To replace filter, line up the filter with tab towards the inside of the kettle and slide down until it snaps into place.
2. To avoid scale/lime deposit buildup, empty kettle after each use. To remove discoloration or scale/lime deposit from heating element: Place 1/2 teaspoon (2.5 ml) cream of tartar (available in the spice aisle of grocery store) into the kettle. Then fill the kettle 1/2 full with water. Plug into outlet, press START/ CANCEL button, and bring to boil. Press CANCEL button. Unplug and let cool. Rinse several times with clean tap water.
3. Wipe the exterior of the kettle with a damp cloth. Do not use abrasive scouring pads or powders since they may scratch the smooth surface of the kettle.



Questions or Concerns?
support@parisrhone.com

KNOWING YOUR ELECTRIC KETTLE

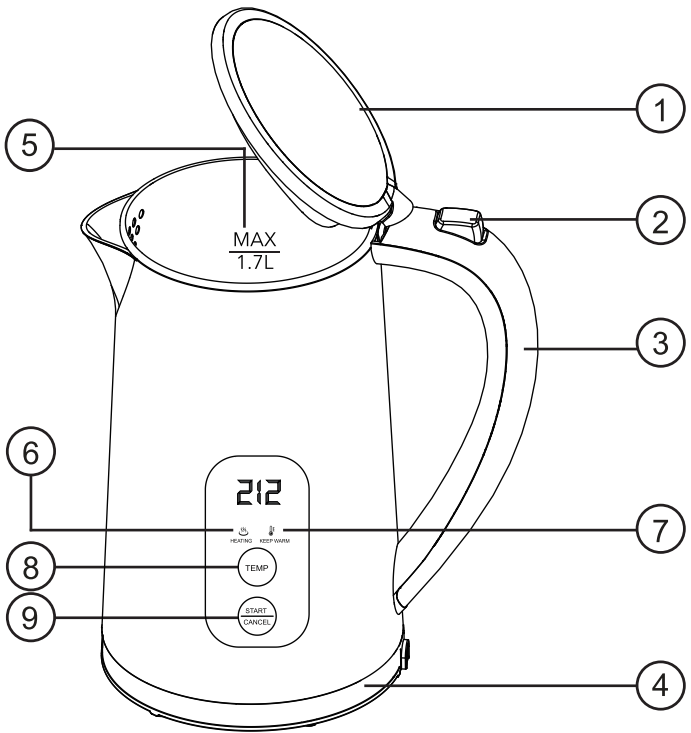

- ① Lid

② Open Lid Button

③ Handel

④ Power Base

⑤ Max Water Line
- ⑥ Heating Indicator

⑦ Keep Warm Indicator

⑧ Setting Temperature Button

⑨ Start/Cancel Button



Package Contents

- 1 × Electric Kettle
- 1 × Power Base
- 1 × User Manual

Specifications

Voltage	120V AC, 60Hz
Power	1500W
Capacity	1.8qt / 1.7L

USING YOUR ELECTRIC KETTLE

Before First Use

Press OPEN button to lift lid and fill kettle with water to the Max Water Line. Press the lid down until it locks in place. Press START/CANCEL button to start heating. When the set temperature is reached,the kettle will automatically keep warm for 4 hours and then shut off automatically.Discard water and repeat 2-3 times, rinsing out the kettle each time.

Operation




- Before use, make sure the power cord, the base and the body are all dry.
- When filling the kettle, always remove it from the base.
- Pay attention to the escaping steam to avoid scalding.

- 1.Plug in the correct voltage.
- 2.Fill the kettle with water. Do not exceed the Max water level.
- 3.Touch the TEMP button to select temperature.
- 4.Touch the START/CANCELbutton to start working, and touch it again to stop working.

Defult Temperature

- 212 °F BLACK
- 200 °F COFFEE
- 190 °F OOLONG
- 180 °F GREEN
- 175 °F WHITE
- 160 °F DELICATE

Buttons and Indicators

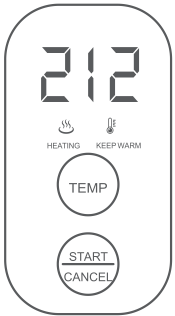

KEEP WARM & AUTO-SHUTOFF

When the set temperature is reached, the kettle will automatically keep warm for 4 hours, and then shut off automatically.

Boil-Dry Protection

- The heating element is protected by two automatic safety devices. If your kettle is accidentally switched on without being filled with water, or is allowed to boil dry, the kettle will automatically switch off. You should:
- Unplug the kettle and wait about 20 minutes for the element to cool down.
- Refill the kettle; then use as normal and check that the kettle functions correctly.

WARRANTY

Thanks for choosing Paris Rhône Electric Kettle.

This product is covered with Paris Rhône product and labor warranty for 12 months from the date ofits original purchase.

The warranty will not apply in cases of:

- Accident, misuse, or repairs performed by unauthorized personnel.
- Any unit that has been tampered with or used for commercial purpose.
- Normal wear and tear of wearable parts.
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the User Manual, e.g. connection to an unsuitable mains supply or non-compliance with the instructions.
- Partially or completely dismantled appliances.
- Defects caused by or resulting from damages from shipping or from repairs, service, or alteration to the product or any ofits parts that have been performed by a repair person not authorized by Paris Rhône.

We can only provide after-sales service for products that are sold by Paris Rhône or Paris Rhône authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

※Please have your invoice and order ID ready before contacting Customer Support.



support@parisrhone.com



www.parisrhone.com



Manufacturer: Shenzhen Aspiron Technology Company Limited
Address: 3rd Floor, Yiben Building, No.1063 Chaguang Road, Xili Street, Nanshan District, Shenzhen,Guangdong, China



Intertek
3103807
Made In China

尺寸：120*160MM

折页

材质：128克铜版纸