

# ZLINE

ATTAINABLE LUXURY<sup>®</sup>



User Manual

**DUAL FUEL RANGES**  
**CDR, MDR, PCDR, PMDR,**  
**PSDR, & SDR MODELS**

[zlinekitchen.com](http://zlinekitchen.com)



ZLINE Kitchen and Bath provides Attainable Luxury, where the kitchen and bath of your dreams is never out of reach. Through our unique designs and unparalleled quality, we're dedicated to providing you an elevated experience in the heart of your home. With an endless selection of features and finishes, our inspiration is your reality.

**ZLINE**  
ATTAINABLE LUXURY®





ZLINE is fueled by a passion for innovation—a relentless pursuit of bringing the highest end luxury designs and professional features into everyone’s homes.

Because we continually strive to improve our products, we may change specifications and designs without prior notice.

Scan the QR code to view the most up-to-date version of the Installation Manual and User Manual.

 **WARNING:** This product can expose you to chemicals including nickel, which is known to the State of California to cause cancer. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# TABLE OF CONTENTS

|                                         |        |
|-----------------------------------------|--------|
| IMPORTANT SAFETY INSTRUCTIONS . . . . . | 1      |
| Gas Safety . . . . .                    | 1      |
| Electric and Gas Safety . . . . .       | 6      |
| Cooktop Safety . . . . .                | 7      |
| Tipping Safety . . . . .                | 9      |
| Cooking Safety . . . . .                | 11     |
| <br>OPERATION . . . . .                 | <br>14 |
| Surface Burner Operation . . . . .      | 15     |
| Oven Operation . . . . .                | 20     |
| <br>CARE AND MAINTENANCE . . . . .      | <br>25 |
| Replacing the Oven Lights . . . . .     | 25     |
| Cleaning Your Range . . . . .           | 26     |
| <br>TROUBLESHOOTING . . . . .           | <br>29 |
| <br>WARRANTY . . . . .                  | <br>32 |



# IMPORTANT SAFETY INSTRUCTIONS

## GAS SAFETY



**WARNING:** If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
  - Do not try to light any appliance.
  - Do not touch any electrical switch.
  - Do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

# IMPORTANT SAFETY INSTRUCTIONS



**AVERTISSEMENT :** Le non-respect à la lettre de ces instructions peut causer un incendie ou une explosion, qui pourrait entraîner des dommages matériels, des blessures ou la mort

- Ne pas entreposer ou utiliser d'essence ou tout autre liquide ou gaz inflammable à proximité de cet appareil ou de tout autre appareil.
- **EN PRÉSENCE D'UNE ODEUR DE GAZ :**
  - Ne tenter d'allumer aucun appareil ;
  - Ne toucher à aucun commutateur électrique ;
  - N'utiliser aucun téléphone dans l'immeuble ;
  - Appeler immédiatement le fournisseur de gaz à partir d'un téléphone situé à l'extérieur de l'immeuble ; Suivre les instructions du fournisseur de gaz ;
  - S'il est impossible de joindre le fournisseur de gaz, appeler le service des incendies.
- L'installation et la réparation doivent être effectuées par un installateur ou une agence de réparation ayant les qualifications requises ou par le fournisseur de gaz.



# IMPORTANT SAFETY INSTRUCTIONS



WARNING

## WARNING:

Never Operate the Top Surface Cooking Section of this Appliance Unattended.

- Failure to follow this warning statement could result in fire, explosion, or burn hazard that could cause property damage, personal injury, or death.
- If a fire should occur, keep away from the appliance and immediately call your fire department. **DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.**



ATTENTION

## ATTENTION :

Ne faites jamais fonctionner la surface de cuisson, sur le dessus de cet appareil, sans surveillance.

- Le non-respect de cette mise en garde pourrait entraîner un incendie, une explosion ou un risque de brûlure et ainsi causer des dommages matériels, des blessures ou la mort.
- Si l'appareil prend feu, tenez-vous à l'écart et appelez immédiatement votre service des incendies. **NE TENTEZ JAMAIS D'ÉTEINDRE UN FEU DE GRAISSE OU D'HUILE EN L'ASPERGEANT D'EAU.**

# IMPORTANT SAFETY INSTRUCTIONS



**WARNING:** Never use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating. Never use the top of the range or the interior of the oven as storage areas, as items could melt or ignite, increasing the risk of fire, damage, and/or serious injury.



**AVERTISSEMENT:** Ne JAMAIS utiliser cet appareil électroménager en guise de chauffferette. Le fait de chauffer une pièce ainsi peut entraîner un empoisonnement au monoxyde de carbone ou une surchauffe du four.



**WARNING:** NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks airflow through the oven and may cause carbon monoxide poisoning. Aluminum foil linings may also trap heat, causing a fire hazard.



**AVERTISSEMENT:** Ne JAMAIS recouvrir une fente, un trou ou une conduite dans le fond du four ni recouvrir entièrement une grille d'un matériau comme du papier d'aluminium. Un tel revêtement bloque la circulation d'air dans le four, ce qui peut entraîner un empoisonnement au monoxyde de carbone. De plus, le papier d'aluminium peut emprisonner la chaleur, ce qui risque de provoquer un incendie.

# IMPORTANT SAFETY INSTRUCTIONS

- The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation, improper use of the appliance, or failure to heed the warnings listed.
- This appliance has been designed for non-commercial, domestic use only.
- The plug should always be accessible.
- This manual does not cover all possible conditions that may occur during installation and/or operation. Always contact a qualified service technician or the manufacturer about problems you may not understand.



**WARNING** Installation and service on this product must only be conducted by a qualified installer, service agency, or gas supplier.

## IMPORTANT SAFETY ALERTS



**DANGER**

**DANGER:** When you see this symbol in the instructions, it indicates a hazardous situation which, if not avoided, could result in death or serious injury.



**WARNING**

**WARNING:** When you see this symbol in the instructions, it indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

- Please ensure that the altitude of your home is conducive for the use of gas cooking products. If the product is installed at higher altitudes above sea level, you may experience issues with gas pressure that will affect product performance. Please consult your local gas company for recommendations before purchasing or installing.



# IMPORTANT SAFETY INSTRUCTIONS



## ELECTRIC AND GAS SAFETY

### WARNING

- Be sure your appliance is properly installed and grounded by a qualified technician in accordance with all governing codes and ordinances and with the National Fuel Gas Code ANSI Z223.1—latest edition and the National Electrical Code ANSI/NFPA No. 70—latest edition in United States, or CAN/CGA B149.1, B149.2, and the Canadian Electrical Code, Part 1, in Canada. Check your local building codes, as they may vary from the general rules outlined in this manual.
- Gas leaks cannot always be detected by smell. As such, gas suppliers recommend that you use a gas detector approved by UL or CSA. For more information, contact your gas supplier.
- If a gas leak is detected, refer to the “WHAT TO DO IF YOU SMELL GAS” alert on page 1.
- Know how to shut off gas supply at the meter and disconnect the electrical power to the appliance at the circuit breaker or fuse box in case of an emergency. Installers should also show appliance owners the location of the appliance gas shut-off valve and how to shut it off if necessary.
- Do not repair or replace any part of the appliance unless specifically recommended in this manual. All other servicing should be done only by a qualified technician. This may reduce the risk of personal injury and damage to the appliance.



### DANGER

Always disconnect gas and power when servicing this product, especially for larger-scale repairs impacting important appliance functionality; failure to do so increases the risk of fire, explosion, injury, or death.

# IMPORTANT SAFETY INSTRUCTIONS



**WARNING**

## STATE OF CALIFORNIA PROPOSITION 65 WARNINGS

- The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the state to cause birth defects or other reproductive harm and requires businesses to warn customers of potential exposure to such substances.
- Gas appliances can cause minor exposure to at least four main substances — benzene, carbon monoxide, formaldehyde, and soot — caused primarily by the incomplete combustion of natural gas or liquid propane fuels.
- Properly adjusted burners, indicated by a bluish rather than yellow flame, will minimize incomplete combustion. Exposure to these substances can also be minimized by venting with an open window or by using a ventilation fan or range hood.



**DANGER**

## COOKTOP SAFETY

- Areas near surface burners or throughout the appliance may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials touch, these areas until they have had sufficient time to cool.
- If a grease fire occurs, never touch a flaming pan. Immediately turn the controls off. Smother a flaming pan on a surface burner by covering the pan completely with a well-fitting lid, cookie sheet or flat tray.
- A grease fire can also be put out by covering it with baking soda or, if available, by using a multi-purpose dry chemical or foam-type fire extinguisher. Use an extinguisher **ONLY** if:
  - You have a Class A, B, or C extinguisher and you know how to operate it.
  - The fire is small and contained in the area where it is started.
  - The fire department is being/has been called.
  - You can fight the fire with your back to an exit.
- Flames inside the oven can be smothered completely by closing the oven door and turning controls to OFF, or by using a fire extinguisher.
- When heating fat or grease, watch it closely. Fat or grease may catch fire if allowed to become too hot.

# IMPORTANT SAFETY INSTRUCTIONS

- Use only dry potholders and oven mitts. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholders touch hot heating elements, flames, or burners. Do not use a towel or other bulky cloth instead of a potholder.
- Know which knob controls which surface burner. Visually check that the burner has lit. Then adjust the flame so it does not extend beyond the edge of the pot/pan.
- Pot/pan handles should be turned inward and not extend over surface burners. To reduce the risk of burns, ignition of flammable materials, and spillage due to unintentional contact with the pot/pan, the handle of the utensil should be positioned so that it is turned inward, and does not extend over adjacent surface burners.
- Always use a proper flame size. Adjust the flame size so it does not extend beyond the edge of the pot/pan. The use of undersized pots/pans will expose a portion of the burner flame to direct contact and may result in ignition of clothing. Adjusting the flame size to appropriate levels will also improve efficiency.
- Always use proper pot/pan and cookware sizes. This appliance is equipped with surface units of different sizes. Select cookware with flat bottoms large enough to cover the surface unit.
- Only certain types of glass, ceramic, earthenware, or other glazed cookware are suitable for use without breaking due to sudden changes in temperature. Check the manufacturer's recommendations for appliance use.



**Never leave burners unattended. Boilovers cause smoke and greasy spillovers that may ignite, or a pan that has boiled dry may melt. DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.**

- Do not use decorative surface burner covers.
- If a burner is accidentally turned on, the cover may become extremely hot or melt. Because the flame is concealed, it may not be apparent that the burner is operating. Contact with a hot cover may result in burns.
- Decorative burner covers may also restrict airflow to the burner, causing improper combustion and overheating, which can damage the appliance or burner components.

# IMPORTANT SAFETY INSTRUCTIONS



## TIPPING SAFETY



- TIPPING RANGES CAN CAUSE SERIOUS PERSONAL INJURY OR DEATH.
- TO REDUCE THE RISK OF TIPPING OF THE RANGE, THE RANGE MUST BE SECURED WITH A PROPERLY INSTALLED ANTI-TIP DEVICE.
- FAILURE TO PROPERLY INSTALL THE ANTI-TIP DEVICE INTO THE WALL COULD RESULT IN THE DEATH OF A CHILD OR ADULT.

| ENGLISH                                                                                                                                                                                                                                                                                                                           | FRANÇAIS                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Install the anti-tip device to the structure and/or the range. Verify the anti-tip device has been properly installed and engaged by sliding the range back toward the wall where both brackets have been secured, as outlined in the directions on "Installing the Anti-Tip Device" on page 29 of the installation instructions. | Installez le dispositif antibasculement sur la structure et/ou la cuisinière. Vérifiez que le dispositif antibasculement est correctement installé et enclenché en faisant glisser la cuisinière vers le mur, là où les deux supports ont été fixés, comme indiqué dans la section « Installation du dispositif antibasculement » à la page 29 des instructions d'installation. |
| Engage the range to the anti-tip device by safely tilting the front of the range upward slightly and moving it back to its final resting place, making sure the mounting pins slide under both brackets.                                                                                                                          | Engagez la cuisinière dans le dispositif antibasculement en inclinant légèrement l'avant de la cuisinière vers le haut et en la ramenant à son emplacement de repos final, en vous assurant que les broches de montage glissent sous les deux supports.                                                                                                                         |
| Re-engage the anti-tip device if the range is moved. Do not operate the range without the anti-tip device in place and engaged.                                                                                                                                                                                                   | Engager de nouveau le dispositif antibasculement si la cuisinière est déplacée.<br>Ne pas utiliser la cuisinière lorsque le dispositif antibasculement n'est pas installé et engagé.                                                                                                                                                                                            |
| See installation instructions for details.                                                                                                                                                                                                                                                                                        | Voir les directives d'installation pour obtenir de plus amples renseignements                                                                                                                                                                                                                                                                                                   |
| Failure to do so can result in death or serious burns to children or adults.                                                                                                                                                                                                                                                      | Toute omission de le faire expose les enfants et les adultes à un risque de décès ou de brûlures graves.                                                                                                                                                                                                                                                                        |



# IMPORTANT SAFETY INSTRUCTIONS



DO NOT TIP THE RANGE MORE THAN 4" (102 mm) FROM THE WALL AS IT COULD TIP OVER AND CAUSE INJURY.

- Never completely remove the leveling legs or the range may not be secured to the anti-tip device properly. NEVER step or sit on the door.
- The range will not tip during normal use. However, without a properly fastened anti-tip bracket, the range can tip if too much force or weight is applied to the open door.

## BURNER GRATES

- The grates must be properly positioned before cooking. Improper installation of the grates may result in scratching of the cooktop and poor combustion.
- Do not operate burners without appropriate pot/pans or cookware on the grates.
- Be sure to place cookware directly on the center of each grate in order to maximize cooking efficiency; see below for more.



## STORAGE AND FIRE SAFETY

- Items of interest to children should not be placed in cabinets above the appliance or on the steel back splash vent at the back of the range. Children climbing on the appliance to reach items could be seriously injured.
- DO NOT leave children alone or unattended when the appliance is hot or in operation, even if the burners and oven have been off for several minutes. The unit's door, knobs, and cooktop may still have residual heat, and children could be seriously burned.
- DO NOT let anyone climb, play, sit, or stand on or around any part of the appliance. They could damage the range or cause it to tip over which could result in serious burns or other severe personal injury.
- NEVER wear loose fitting or hanging garments while using the range. Be careful when reaching for items placed in cabinets over the appliance.

# IMPORTANT SAFETY INSTRUCTIONS

- Flammable materials, liquids, and vapors should not be stored on, in, or near the appliance. They can be ignited if it contacts flames or hot oven surfaces and may cause severe burns. This includes cooking grease, gasoline, aerosol cans, paper, plastic, and cloth items, as well as cookbooks, plastic ware, and towels. Plastic items may melt if left too close to the vent. Flammable materials may explode and result in fire or property damage.
- Allow the burner grates and other surfaces to completely cool before touching them.
- Gas leak testing of the appliance must be conducted according to the manufacturer's instructions; always consult a qualified technician.
- Make sure your appliance is properly installed and grounded by a qualified installer, according to instructions explained in the Installation Manual. Any adjustment and service should be performed only by qualified gas range installers or service technicians.



WARNING

## COOKING SAFETY

### Initial Oven Burn-Off

- Before using your range for cooking, perform the following initial burn-off procedure:
  - Set the oven to BAKE at 400 °F (200 °C) and operate for 1 hour.
  - After completion, set the oven to BROIL and operate for an additional 1 hour.
  - For 48" (1219 mm) models, perform this procedure on the large oven. Operating the small oven on BAKE for 1 hour is sufficient.
- During initial operation, odor, smoke, and noise may occur. This is normal as manufacturing residues burn off and internal components expand and settle.
- Ensure the room is well ventilated by keeping air inlets open and/or operating a range hood above the appliance.
- After the oven has completely cooled, wipe the interior with hot water and a kitchen-safe cleaner. Clean all oven racks and shelves before use.

# IMPORTANT SAFETY INSTRUCTIONS

## Safe Cooking Practices

- Closely monitor foods being fried at high flame settings, and always heat fats slowly.
- When frying with a combination of oils or fats, mix them before heating. Use a deep-fat thermometer, if available, to prevent overheating beyond the smoke point.
- Use the minimum amount of fat necessary for shallow or deep-fat frying. Overfilling cookware with fat may cause spillovers when food is added.
- Ensure foods are as dry as possible before frying. Frost or moisture can cause hot fat to bubble and spill over the sides of the pan.
- Never move a pan of hot fat, including a deep-fat fryer. Allow it to cool completely before handling.
- Never cook food directly on an open flame without cookware. Always use appropriate pots or pans. Operating burners without cookware may damage the grate finish.
- DO NOT use a wok on the surface burners if the wok has a round metal ring that is placed over the burner grate to support the wok. This ring acts as a heat trap, which may damage the burner grate and burner ring. It also may cause abnormal carbon monoxide levels, potentially resulting in a health hazard.
- To prevent burns, always be sure burner knobs are in the OFF position and all grates are cool before attempting to remove them.



**DANGER**

**If you smell gas, immediately turn off the gas to the appliance and call a qualified service technician. Never use an open flame to locate a leak.**

- DO NOT lift the cooktop. Lifting the cooktop can cause damage and improper operation of the appliance.
- When cooking, adjust the burner controls so the flame heats only the bottom of the pot, pan, or cookware and does not overlap at the sides.
- Cookware, pots, and pans that conduct heat slowly, i.e. glass pots, should be used in conjunction with burner flames at a low or medium setting.
- Use the appliance only for cooking tasks as outlined in this manual.

# IMPORTANT SAFETY INSTRUCTIONS

## COOKTOP MAINTENANCE

- For reasons of hygiene and safety, this appliance must always be kept clean. Food residue may clog the igniter and notches of the burner spread, stopping the burner from functioning correctly. To prevent unpleasant smoke, the possibility of fire, and the appliance from discoloring or staining, clean cooktop after each use, and wipe up acidic or sugary spills as soon as the appliance has cooled. See the "Care and Maintenance" section for more information.
- The sealed burner spreads of your appliance are not secured to the cooktop and are designed to be removed. Boil overs or spills will not seep underneath the cooktop. The burners should be cleaned after each use.
- Before maintenance and cleaning, disconnect the appliance and allow cooling down.



According to the U.S. Department of Agriculture: DO NOT hold foods at temperatures between 40 °F to 140 °F (4 °C to 60 °C) more than 2 hours. Cooking raw foods below 275 °F (135 °C) is not recommended.



## COMBUSTION SAFETY

- Gas appliances can cause minor exposure to several substances, namely benzene, carbon monoxide, formaldehyde, and soot, caused primarily by the incomplete combustion of natural gas fuel.
- If gas does not ignite within four seconds, turn off the knob and allow at least five minutes for any gas to dissipate. Repeat the lighting procedure outlined on page 15.



When using the cooktop for the first time, burners may not ignite right away. Time is required for gas to fully fill the operating system. In this instance, do not keep burner knobs pushed in for longer than a few seconds.

## POWER FAILURE

- If electricity or power fails in your home, surface burners can still be lighted manually if necessary. Simply hold a lighted match near a burner and turn the knob counter-clockwise to the "HI" setting. After the burner lights, remove the lit match and turn the knob to the preferred setting.
- In case of electric power failure, reset oven/broiler controls to the OFF position and do not attempt to use oven/ broiler until the power has been restored.

# OPERATION

## GUIDELINES FOR USING SURFACE BURNERS



Scan to follow along with a video.

- These ranges use electric ignition and are equipped with an automatic re-ignition feature on all surface burners. If a burner flame is extinguished unexpectedly (for example, due to a draft), the system will automatically detect the loss of flame and re-ignite the burner, provided gas flow is still present.
- On most models, when a surface burner control knob is pressed, sparking will occur at all surface burners. However, only the selected burner will receive gas and ignite. This is normal operation and is a standard characteristic of gas range ignition systems.
- Only the selected burner will spark, receive gas, and ignite. These models use a single-point ignition system, rather than a multi-point ignition system.

## SURFACE BURNER FLAME SIZE


- When adjusting surface burner control knobs, turn them slowly until the desired flame size is achieved.
- When operating the appliance on natural gas, the flame should be steady and blue. Occasional yellow or orange flickers are acceptable.
- If the flame appears yellow or orange and remains that way, check the surrounding environment. Candles, cleaning products, airborne dust, or other atmospheric conditions may affect flame color.
- If abnormal flame conditions persist and the appliance has been converted for liquid propane gas (LPG) by a qualified technician, the conversion may not have been performed correctly. Verify that all orifices are properly installed. If necessary, contact the installer.
- If the appliance is operating on natural gas and flame issues continue, contact your local gas utility to check for supply-related conditions.



# OPERATION

## SURFACE BURNER OPERATION

1. Push in the control knob for the surface burner you wish to use.
2. While pushing in, turn the control knob counterclockwise to the HI position. Sparking will occur at the burner and ignition should occur within 0.5 to 2 seconds.
3. Once the burner is lit, turn the control knob to adjust the flame to the desired heat setting.
  - If the burner does not ignite or the flame goes out, turn the control knob to the OFF position and repeat the procedure.


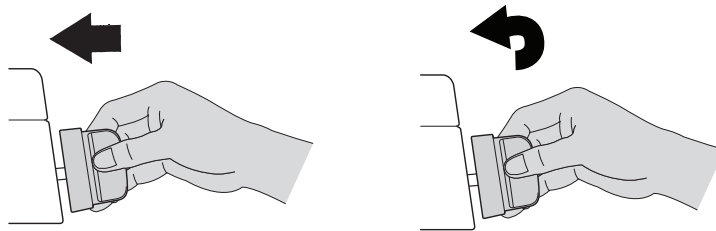


**WARNING**

Use care when utilizing the knobs on your range top. Turning knobs too far beyond their highest setting — or turning too hard — may permanently damage knobs.

## USING THE BURNERS CORRECTLY

1. Always check that the burner caps are properly installed before operation:
2. Verify that the flame of the range top burners is completely blue and with a regular aspect as shown at right:
3. Never let flames wrap around cookware; this creates a safety hazard and can also damage your cookware:

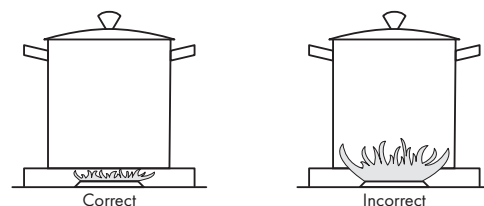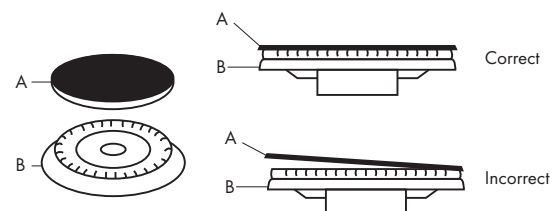

**WARNING**

**DO NOT** ignite burners if the black burner cap is not installed or not centered on the burner spread; the flame will be irregular and may increase injury risk.

# OPERATION

## GRIDDLE OPERATION (48" - 1219 mm MODELS)

- 48" (1219 mm) models are equipped with an enameled, reversible cast iron griddle. The griddle may also be purchased separately for compatible models.
- Use care when placing or flipping the griddle to avoid damage to the griddle surface or the cast iron grates beneath it.
- Before first use, clean the cast iron griddle thoroughly with warm, soapy water to remove dust or any protective coating. Rinse with clean water and dry using a soft, clean, lint-free cloth.
- Place the griddle vertically (front to back) over a single set of burner grates until it seats securely. Do not place the griddle horizontally (left to right) across multiple burner grates.
- For even heating, operate the front and rear burners beneath the griddle.



**WARNING**

The surface of the griddle may be hot for several minutes after use. Please allow sufficient time for the griddle to cool prior to moving and cleaning.


- Do not use stovetop grills on this gas appliance.
- Using a stovetop grill on a sealed gas burner can restrict proper combustion and may result in elevated carbon monoxide levels, which can be hazardous to your health.
- Use only ZLINE-approved griddles designed for this appliance.

# OPERATION

## KNOB FUNCTIONS

### CDR/SDR SERIES MODELS

#### SURFACE BURNER KNOB FUNCTION

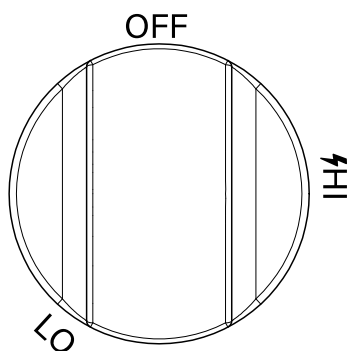


#### DUAL BURNER KNOB FUNCTION



### MDR SERIES MODELS

#### SURFACE BURNER KNOB FUNCTION

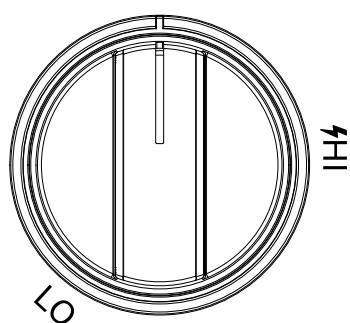

#### DUAL BURNER KNOB FUNCTION



- HI: Maximum Flame Height
- LO: Minimum Flame Height
- SIM: Simmer Mode

# OPERATION

- These ranges are equipped with dual-function surface burners that include a SIM (simmer) setting. Use the simmer setting for low-heat cooking tasks such as melting chocolate or butter, cooking rice and delicate sauces, simmering soups and stews, or keeping cooked food warm.
- **NOTE:** For MDR series models, ensure the burner is in the OFF position by rotating the control knob until the indicator line aligns with the cutout on the knob ring. For additional information, refer to "Accent Lights" on page 19.

| HEAT SETTINGS AND SIMPLE COOKING GUIDE |                                                                                          |
|----------------------------------------|------------------------------------------------------------------------------------------|
| SIM<br>(Dual Burners Only)             | Steaming rice, warming food, melting chocolate or butter.                                |
| LO                                     | Melting large quantities.                                                                |
| Low-medium                             | Low-temperature frying, simmering large quantities, heating milk, cream sauces, gravies. |
| Medium                                 | Sautéing and browning, braising, pan-frying, maintaining slow boil on large quantities.  |
| Medium-HI                              | High-temperature frying, pan boiling, maintaining slow boil on large quantities.         |
| HI                                     | Boiling liquid quickly, deep frying. This also ignites the burners.                      |

# OPERATION

## ACCENT LIGHTS

### MDR & PMDR SERIES RANGES

#### What the accent light button does

- OFF (button not illuminated): All LED knob rings are OFF, even if a burner or the oven is on.
- ON (button illuminated):
  - All knob rings glow DIM as ambient/accent lighting.
  - Any active control (burner ON or oven ON) switches its ring to BRIGHT.
  - Non-active controls remain DIM.

#### How to use

1. To turn accent lighting ON/OFF:
  - Press accent light once to enable ambient lighting (DIM rings).
  - Press again to disable ambient lighting (all rings OFF).
2. To operate a burner or the oven:
  - When accent lighting is ON, the ring for any engaged knob (burner ON/oven ON) turns BRIGHT; others stay DIM.
  - When accent lighting is OFF, rings do not illuminate, regardless of knob position.

#### Indicator behavior summary

- Accent Light OFF + Burner/Oven OFF: All LED rings OFF
- Accent Light OFF + Burner/Oven ON: All LED rings OFF
- Accent Light ON + Burner/Oven OFF: All LED rings DIM
- Accent Light ON + Burner/Oven ON: The corresponding LED ring is BRIGHT; others not in use are DIM.

#### NOTE:

- The accent light feature is decorative and not a safety indicator. Always verify burner/oven status by knob position and display/markings.
- If rings do not illuminate when expected, confirm the accent light button is ON.
- Brightness levels are fixed (DIM/BRIGHT) and not user-adjustable.


# OPERATION

## OVEN OPERATION


### 30" & 36" (762 mm & 914 mm)

- To turn on the oven, push in the control knob and turn it counterclockwise to the desired BAKE temperature.
- The white indicator light (preheat light) next to the knob will remain illuminated during preheating and will turn off once the oven has reached the set temperature.
- To operate the BROIL function, push in the control knob and turn it counterclockwise to BROIL.
- The white indicator light will illuminate when broil is activated.
- 30" and 36" (762 mm and 914 mm) models are equipped with one oven control knob, with BAKE temperature settings ranging from 200 °F to 500 °F (93 °C to 260 °C), in addition to the BROIL function.
- **NOTE:** For MDR series models, ensure the burner is in the OFF position by rotating the control knob until the indicator line aligns with the cutout on the knob ring.

### CDR/SDR SERIES MODELS

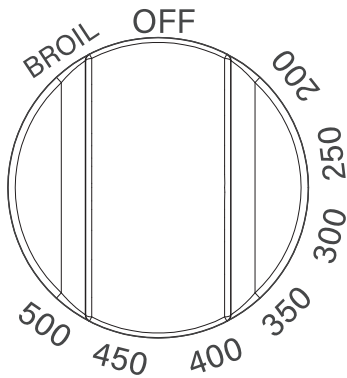

### MDR SERIES RANGES

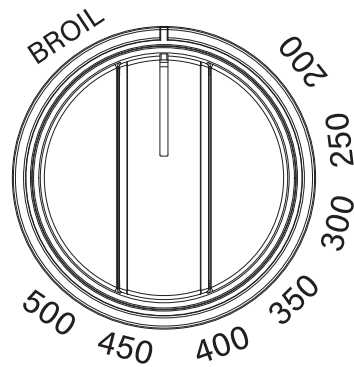



# OPERATION

## 48" (1219 mm)


- 48" (1219 mm) models are equipped with two oven control knobs, one for the small oven and one for the large oven.
- The maximum BAKE temperature for the small oven is 450 °F (230 °C), in addition to BROIL. The maximum BAKE temperature for the large oven is 500 °F (260 °C), in addition to BROIL.
- To turn on either oven, push in the control knob and turn it counterclockwise to the desired BAKE temperature.
- The white indicator light (preheat light) next to the knob will remain illuminated during preheating and will turn off once the oven has reached the set temperature.
- To operate the BROIL function on either oven, push in the control knob and turn it counterclockwise to BROIL.
- The white indicator light will illuminate when broil is activated.
- **NOTE:** For MDR series models, ensure the burner is in the OFF position by rotating the control knob until the indicator line aligns with the cutout on the knob ring.

## CDR/SDR SERIES MODELS

### SMALL OVEN KNOB



### LARGE OVEN KNOB

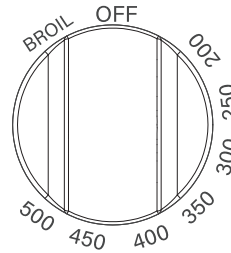

## MDR SERIES MODELS

### SMALL OVEN KNOB



### LARGE OVEN KNOB



# OPERATION

## OVEN VENTS

- The oven vent is located under the back splash on the back of the oven. Do not block the ducts in the oven vent when cooking in the oven.
- Avoid touching the vent opening or nearby surfaces while the oven is on — they may become hot, which increases the risk of injury.
- **NOTE:** It is normal for steam or moisture to dispel from the oven vent and collect on the cooktop. This happens more often when baking foods that contain a lot of moisture. Condensation is more common in colder months due to the cooktop being colder than normal. Condensate water is a natural occurrence and is non-corrosive.

## OVEN FUNCTIONS AND FEATURES

### BAKE

- Natural airflow baking occurs when heat is generated by the bake burners located at the bottom of the oven cavity, beneath the drip pan. Heat is distributed throughout the oven by natural convection. This is a traditional bake mode.
- To operate this mode, turn the oven on and select a temperature between 200 °F and 500 °F (93 °C to 260 °C).
- For 48" (1219 mm) models, the maximum BAKE temperature for the small oven is 450 °F (230 °C).
- **NOTE:** Preheating typically requires 15–25 minutes, depending on the selected temperature and installation conditions.
- For optimal baking results, allow the oven to fully preheat before placing food inside.
- For best baking results, place food on the center oven rack position. Adjust the rack position as needed based on food size and desired browning.

# OPERATION

## CONVECTION BAKE

- Heat is generated by the bake burners located at the bottom of the oven cavity. A convection fan at the rear of the oven circulates the heated air to promote more even heat distribution around the food. Convection cooking typically allows for faster cooking, operation at lower temperatures, and more uniform results compared to traditional baking.
- To operate this mode, turn the oven on, select the desired temperature, then press the fan button on the front of the oven.
- For best results, place food on the center oven rack position. When cooking on multiple racks, stagger cookware to allow proper air circulation.
- When using convection bake, you may reduce the recipe temperature by approximately 25 °F (15 °C) or shorten the cooking time, as needed.
- **NOTE:** The 48" (1219 mm) model small oven is not equipped with a convection fan.
- For optimal convection baking results, allow the oven to fully preheat before placing food inside.

## BROIL

- During broiling, heat radiates downward from the broil burner to provide even coverage and fast cooking.
- The broil temperature is 500 °F (260 °C).
- For best broiling results, place food on an upper oven rack position.
- Adjust the rack position as needed to achieve the desired level of browning while preventing excessive charring.
- **NOTE:** The oven door must remain closed during broiling.



**WARNING**

Carefully monitor food being cooked under the broiler, as this function works quickly and can burn food within only a few minutes.

# OPERATION

## OVEN COOKING

- Use care when opening the oven door. Let hot air or steam escape before removing or placing food.
- DO NOT heat unopened food containers. Pressure build-up may cause containers to burst and result in injury.

## OVEN RACK PLACEMENT

- Insert the oven racks between the upper and lower rack guides at any of the available rack positions.
- To remove a rack, pull it out to the fully extended position, then lift the front of the rack slightly and pull it out of the sliding mechanism.
- **CAUTION:** Use care when installing or removing racks. The rack guides and sliding mechanisms may have sharp edges.
- Oven racks for 30", 36", and 48" (614 mm, 762 mm, and 1219 mm) large ovens are designed to support up to 25.0 lb (11.0 kg).
- Oven racks for the 48" (1219 mm) small oven are designed to support up to 15.0 lb (7.0 kg).



**WARNING**

Users should use caution with heavier food loads than those outlined above to limit risk of injury and/or damage to your range.


Take care to reset all cooktop/oven/broiler burner controls to the OFF position after use of the appliance.

# CARE AND MAINTENANCE

## REPLACING THE OVEN LIGHTS



To prevent electrical shock or injury, make sure the oven and light bulbs are cool and power to the oven has been turned off before replacing light bulbs.

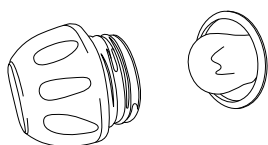

To replace the light bulbs (2) located at the upper left and bottom right corners of the 30", 36", and 48" (762 mm, 914 mm, and 1219 mm) large oven, unscrew the protection cap that projects out inside the oven. The 48" (1219 mm) model small oven has 1 bulb.

**NOTE:** The light bulbs screw in, rather than plug in.

**NOTE:** Touching bulbs with your fingers may cause them to burn out. We recommend using protective gloves or a clean cloth for this process.



Visit [www.zlineparts.com](http://www.zlineparts.com) and search "SGP-108" to order a replacement.

# CARE AND MAINTENANCE

## CLEANING YOUR RANGE

- Do not attempt any of the following cleaning methods until all burners are off and the oven is completely cool. We also recommend disconnecting power before cleaning the unit to limit risk of electric shock.
- It is normal for moisture to form between the oven door's two glass panels, especially when cooking or baking foods with a lot of moisture. The range is designed with vents between the panes of glass; any moisture should dissipate within 12–24 hours.
- Clean only the parts listed in the manual.
- **DO NOT CLEAN DOOR GASKETS.** The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.
- Take care when using cleaning products in spray form: never direct the spray onto the electrical wiring, thermostat, and bulb.
- Acidic fluids such as tomato sauce or lemon juice should not be left on the cooktop for extended periods, as etching may occur. This type of damage is not covered under the manufacturer's warranty.
- **IMPORTANT:** During cleaning, never use abrasive cleaners. Scratches on the stainless steel surfaces are permanent. **DO NOT** clean the range when hot. Do not use bleach or alcohol wipes to clean stainless steel. Always follow label instructions on cleaning products.

## STAINLESS STEEL

- To clean the stainless steel surface of the range, use warm sudsy water or a stainless steel cleaner or polish. Always wipe the surface in the direction of the grain. Follow product label instructions for cleaning stainless steel.
- **DO NOT** use a steel wool pad as it will scratch the surface. Do not use cleaners with chlorides or chlorines. Do not use harsh scrubbing cleaners.
- Use a clean, hot, damp cloth to remove soap. Dry with a dry, clean cloth.
- Use care not to rotate the knobs when cleaning to avoid the release of gas.
- For hard-to-reach stains, you can remove knobs by gripping them and carefully pulling them straight out. Clean and dry knobs completely before replacing, using care to put knobs on the correct valves where they were removed.

# CARE AND MAINTENANCE

## ENAMELED CAST IRON GRIDDLE (48" - 1219 mm MODELS ONLY)

- To clean, make sure the griddle is completely cool, then clean with hot water or white vinegar. DO NOT place in a dishwasher.
- Unlike traditional cast iron skillets or griddles, you do NOT need to regularly season (for example, applying a thin layer of oil and then heating it at a high temperature for roughly 1 hour) your enameled cast iron griddle.

## BURNER GRATES, CAPS, AND SPREADS

- Lift off when fully cool. Wash burner caps in hot, soapy water and rinse with clean water. To remove burned-on food particles, gently scrub with a plastic scouring pad. Thoroughly dry before returning the caps to the appliance.
- Do not use cleaners for stainless steel surfaces, as these caps are not stainless steel.
- We recommend cleaning the burner slots routinely with a small gauge wire or needle and especially after bad spills that could clog these holes.
- Burner spreads and burner caps are NOT dishwasher safe.
- Make sure grates are completely cool, then clean with hot water or white vinegar.
- When replacing grates, be sure they are positioned securely over the burners.
- Note that grates have rubber pads on the feet that come into contact with the appliance to avoid scratches. After cleaning, verify the rubber pads are still there. Should they come off, they can be reapplied using a heat-resistant adhesive.

## DOOR HANDLE

- Clean with a warm soap and water solution; dry with a soft, lint-free cloth.
- Do not use abrasive cleaners or scrubbers; they will permanently damage the finish.

## OVEN DOOR

- Use soap and water to thoroughly clean the top, sides, and front of the door. Rinse well. Use a glass cleaner to clean the glass on the outside of the door. Do not use oven cleaners, cleansing powders, or harsh abrasives on the outside of the door.
- Do not allow excess water to run into any holes or slots in the door. Any soap left on the liner causes additional stains when the oven is heated.



# CARE AND MAINTENANCE

## OVEN GLASS

Clean all glass surfaces with a warm soap and water solution. Use a mild glass cleaner to remove fingerprint or smears. **DO NOT** use a steel wool pad as it will scratch the surface. Dry with a soft, lint-free cloth.

## PORCELAIN SURFACES

- Clean the cooktop, drip pan, oven interior, and inner door liners with a warm soap and water solution. Rinse and dry with a soft cloth.
- Before cleaning the oven, remove oven racks and clean separately.
- No commercial oven cleaner or liner protective coating of any kind should be used in or around any part of the oven.
- Remove the drip pan by lifting up from each front corner and sliding out, using care to not damage the lower burner spread in the process, and clean with a warm soap and water solution.
- Do not leave acid or alkaline substances on the porcelain parts (such as vinegar, lemon juice, salt, tomato sauce, etc). Use a rubber spatula to remove food and fat residues.

## OVEN RACKS

Clean oven racks with a warm soap and water solution. To clean heavy soil, use a scouring pad such as steel wool with plenty of water.

# TROUBLESHOOTING

- Please review this list for common troubleshooting tips before calling for service, as this may save you time and money.
- This list contains frequently encountered problems that are not results of faulty workmanship or material use.
- Your product may not have some of the features described here.



If a problem cannot be resolved after following the instructions in the manuals, please contact ZLINE customer service at 1-614-777-5004. Never attempt to repair or disassemble gas lines, burner spreads, or the internal electrical wiring of your range.

| SYMPTOM                                           | POSSIBLE CAUSE                     | POSSIBLE SOLUTION                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Spark tip(s) not igniting.                        | Ignition module has failed.        | If there is still no spark ignition, the appliance burners can still be used if needed. To light them:<br><br>1. Holding a lit match to the flame spreader, push in on the control knob and turn counter-clockwise to HI.<br><br>2. When the flame is burning all the way round the burner, you may adjust the heat.<br><br>Contact ZLINE customer service. |
|                                                   | Unit is not plugged in.            | Plug in unit.                                                                                                                                                                                                                                                                                                                                               |
|                                                   | Igniters are wet or dirty.         | Dry or clean igniters.                                                                                                                                                                                                                                                                                                                                      |
| Igniters spark continuously after flame ignition. | Power supply polarity is reversed. | Contact ZLINE customer service.                                                                                                                                                                                                                                                                                                                             |
|                                                   | Igniters are wet or dirty.         | Dry or clean igniters.                                                                                                                                                                                                                                                                                                                                      |



# TROUBLESHOOTING

| SYMPTOM                                                               | POSSIBLE CAUSE                                                              | POSSIBLE SOLUTION                                                                     |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| Burners will not light.                                               | Burner parts or igniters may be wet, dirty, or misaligned.                  | Check that the burner parts are clean, dry, and correctly assembled.                  |
|                                                                       | Spark tip igniters may be damaged or dirty.                                 | Check that the igniters are clean and not damaged.                                    |
| Igniters are sparking but burners are not igniting.                   | Caps or burners are misaligned.                                             | Realign caps to burners and re-try.                                                   |
| Cooktop burners will not stay lit and auto reignition is not working. | Gas is not flowing properly.                                                | Contact ZLINE customer service.                                                       |
|                                                                       | Spark tip or spark module is not working properly.                          |                                                                                       |
| Burner flame goes out at low setting.                                 | Low gas pressure.                                                           | Contact gas company.                                                                  |
|                                                                       | Air intake holes around burners are obstructed.                             | Remove obstruction from air intake holes.                                             |
|                                                                       | Low flame adjustment may be set too low.                                    | Readjust.                                                                             |
| Burner flames are very large and yellow.                              | Burner spread ports are clogged.                                            | Clean burner spread ports with straightened paperclip, needle, or wire.               |
|                                                                       | Burner spreads or caps are not positioned properly.                         | Remove and carefully re-install burner spreads and caps.                              |
|                                                                       | Appliance is being operated with the wrong type of gas.                     | Ensure that the type of appliance matches the gas supply.                             |
|                                                                       | Regulator is not installed, is faulty, or is set for the wrong type of gas. | Have a qualified technician replace regulator or set regulator for proper gas.        |
|                                                                       | The air quality of the room may be affecting the flame color.               | Ensure that there are no candles, cleaning products, air purifiers, etc. in the room. |

# TROUBLESHOOTING

| SYMPTOM                                                       | POSSIBLE CAUSE                                                                                                                                                                                | POSSIBLE SOLUTION                                                                                  |
|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Brass burner(s) change color.                                 | Brass burners naturally oxidize over time and form a patina that is a beautiful deep brass hue. This process ensures our brass burners are corrosion resistant and is not cause for a return. | This is a normal occurrence for brass burners; no troubleshooting is required.                     |
| “Cracking” or “popping” sound is heard coming from appliance. | This is the sound of metal heating and cooling.                                                                                                                                               | This is normal for oven operation.                                                                 |
| Steam/condensation is coming from the back splash oven vent.  | Cooking foods high in moisture or if the ambient temperature is cold.                                                                                                                         | Condensate water is a natural occurrence and is non-corrosive.                                     |
| Nothing works.                                                | Power supply is not energized.                                                                                                                                                                | Have an electrician check the power supply, including the house circuit breaker, wiring and fuses. |
| Oven will not heat.                                           | Faulty igniter, thermostat, or safety valve.                                                                                                                                                  | Contact ZLINE customer service.                                                                    |
| Foods over-cooked or under-cooked.                            | Incorrect cooking temperature.                                                                                                                                                                | Adjust temperature, or rack position.                                                              |
|                                                               | Calibration of oven temperature.                                                                                                                                                              | Contact ZLINE customer service.                                                                    |



# WARRANTY

## COVERAGE

ZLINE Kitchen and Bath ("ZLINE") dual fuel ranges have a one year parts and service warranty and a limited lifetime warranty on burners, which includes parts and labor for spark tips.

ZLINE warranty periods begin from the original date of product delivery and solely cover the original purchaser of the product, delivered new and in its original carton. The limited warranty covers all parts and labor for necessary repairs if any part of the product, or the product itself, proves to be defective in materials or workmanship. The product must be deemed serviceable via troubleshooting with the ZLINE Customer Experience team. All service on ZLINE products under warranty must be performed by ZLINE-approved and ZLINE-certified service providers unless otherwise specified by ZLINE. Service will be provided during normal business hours. Products must be unobstructed and accessible to the service provider at the time of service. ZLINE's liability is limited to the original purchase price of the product. Additional injuries, losses, damages, or other inconveniences caused by product malfunction or defects in materials are not covered under the terms of this warranty.

## TERMS

ZLINE warranties apply only to the original purchaser of a ZLINE product installed for normal residential use. This is defined as a single-family, residential dwelling in a non-commercial setting. Any warranty claim stemming from installation, operation, or any other use within a commercial setting is not covered under this limited warranty. Commercial settings include, but are not limited to: schools, churches, hotels, restaurants, vacation rentals such as Airbnb, daycare centers, private clubs, fire stations, common areas in multi-family dwellings, nursing homes, food service locations, and institutional food service locations such as hospitals or correctional facilities.

# WARRANTY

This warranty is non-transferable and will not under any circumstance be extended based on the date of installation — the warranty period takes effect from the date of delivery and only covers the original purchaser. The warranty applies only to products installed in the contiguous United States and the District of Columbia. Failure to secure certified warranty service per these terms will result in a forfeiture of the remaining warranty. Out-of-pocket payments will not be reimbursed unless prior approval is received from ZLINE and/or ZLINE-certified service contract partners. Unapproved out-of-pocket payments for service will not be reimbursed. All warranty procedures must be followed to maintain warranty coverage.

If a product qualifies within the service window provided under these warranty terms, and ZLINE is unable to repair the product or a defective part of the product after a reasonable number of attempts, ZLINE reserves the right to offer to replace the defective part or the product or provide the original purchaser a full refund of the purchase price of the product (not including installation, removal, or other charges that were not included in the original purchase price). The original purchaser of the product must provide the original proof of purchase, including the purchase date, when filing a claim to obtain replacement parts, service, or refunds. Additionally, the original purchaser of the product must provide the serial number of the product when filing a claim to obtain replacement parts, service, or refunds.

This warranty shall not apply to any ZLINE product in which the original factory serial number has been removed, altered, or cannot be readily determined for any reason. Further, ZLINE is not responsible for damage resulting from, but not limited to: shipment, delivery, or improper installation; negligence or improper maintenance, misuse, or abuse of the product; unauthorized alteration, modification, or tampering with the product; accident, fire, floods, pest infestations, pandemics, natural disasters, or any other unpreventable or unexplained acts of nature, commonly referred to as “acts of God”; flare-up fires or damages caused by improper electric supply, electrical line current, voltage, or power surges; and service to correct installation not in accordance with the instructions contained in ZLINE’s product manuals and/or with local government codes.

# WARRANTY

This warranty does not apply to aesthetic damage, scratches, or natural wear caused by normal use; second-hand, open box products, or products purchased from an unauthorized retailer; improper liquid propane gas conversion or damage related to improper liquid propane gas conversion; burner flame adjustments or related complaints; corrections regarding normal adjustments or settings or local gas supply issues resulting in low pressure or other issues; damages or issues stemming from alteration or tampering with the range, including, but not limited to, painting any portion of the product's interior or exterior and cutting the supplied power cord to manually hardwire the product; and service for gas pressure issues related to installation at high altitudes. A high-altitude pressure regulator must be sourced by the customer.

In the event service is dispatched, and it is discovered that the reported issue is not covered under warranty based on the disclaimers above, the customer will be responsible for all service fees. Failure to pay these fees will result in the forfeiture of remaining warranty coverage.

Information contained within ZLINE's installation and user manuals, in addition to product information included on ZLINE's website and all related digital listings, do not cover every possible condition and situation that may occur during the installation or operation of ZLINE products.

ZLINE reserves the right to make changes at any time to its products when considered safe, necessary, and useful. Always check the ZLINE website for the most up-to-date version of its product manuals: [www.zlinekitchen.com/pages/manuals](http://www.zlinekitchen.com/pages/manuals).

Do not install or operate any ZLINE product if it has missing or broken parts or if it arrives damaged due to shipping. If ZLINE products arrive damaged, contact ZLINE Customer Experience at 1-614-777-5004 for help. Failure to report a damaged appliance prior to installation or operation may void the warranty.

ZLINE disclaims responsibility for damage or injury caused by improper installation or use of any of its products. ZLINE is under no obligation, by law or otherwise, to provide concessions, including repairs, prorates, rebates, discounts, or replacements, once the warranty has expired.



# WARRANTY

## SERIAL NUMBER LOCATION

Please write down the model number (highlighted in the image below as the “SKU”) and serial number of your appliance. Both numbers are located on the rating tag located on the right front edge of your range. Do not remove permanently affixed labels, warnings, or plates from the product. This will void the warranty. You may also consider attaching your receipt or proof of purchase to this manual.



# WARRANTY



## SERVICE

For warranty service, please contact our Customer Service team at 1-614-777-5004 or visit [www.zlinekitchen.com/contact](http://www.zlinekitchen.com/contact) to utilize our online Customer Experience Portal.



Scan the QR code to view the most up-to-date version of our Installation Manual and User Manual.



Need to purchase a part or accessory for your ZLINE product?  
Visit [www.zlineparts.com](http://www.zlineparts.com), ZLINE's official parts distribution partner.

This page left intentionally blank.

This page left intentionally blank.

This page left intentionally blank.

3.4.0

[zlinekitchen.com](http://zlinekitchen.com)

1-614-777-5004

[contact@zlinekitchen.com](mailto:contact@zlinekitchen.com)

**ZLINE**  
ATTAINABLE LUXURY®

1

2

3

4

5

6

7

8

