

DGBook

Laptop USER MANUAL

IMPORTANT NOTE

 **LFET**
Charging Port

RIGHT 
Headphone Jack

GOODDEALER OFFICAL USER GUIDE

The followings are major sections of this User's Manual:

Introducing the DGBBook Series Notebook PC	2
Base View	2
Bottom View	4
Getting Started	5
Turning on the Power	5
Power System	5
Using the AC Power	6
Emergency Shutdown	7
Using the Touchpad	8
Using the Hotkeys	10
How to Connect to Wireless Network	12
How to Connect to an External SD Card Reader	12
How to Restore Your Laptop	13
FAQs	13
Safety Precautions	15
Specifications	17
Warning	18
Warranty	19

 
About This User's Manual

You are reading the DGBBook Series Notebook PC User Manual.

This User's Manual provides information regarding the various components in the DGBBook Notebook PC and how to use them.

Your DGBook Notebook Tour

Base View

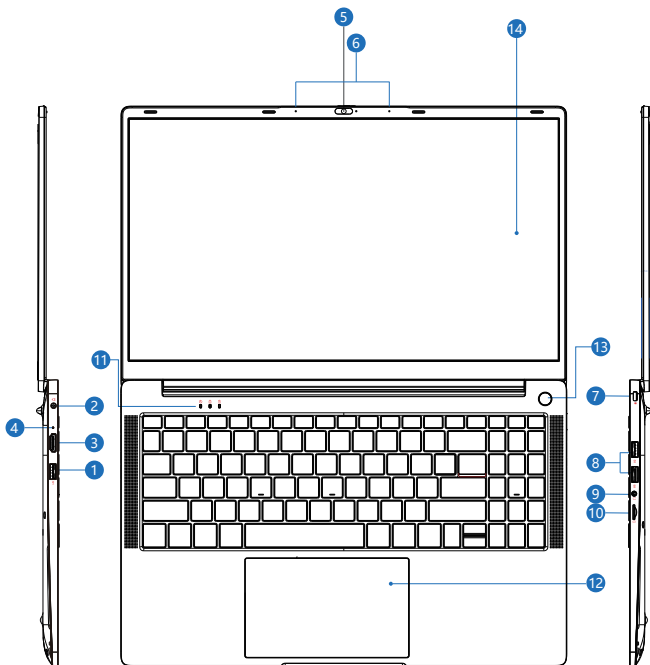

1

USB 3.0

Connects to USB devices

2

Power Interface

Indicates the computer's power status

3

HDMI Port (HDMI 1.4)

Supports high-definition audio and video transmission over a single cable
Maximum resolution: 4K @ 24Hz

4

Charging Indicator

Orange when charging, Blue when fully charged.

5

Camera

The built-in camera allows picture taking or video recording.
Can be used with video conferencing and other interactive applications.

6

Hidden Microphone

For clear voice input during calls and voice commands.

7

K-Slot

For use with a Kensington security cable to prevent theft.

8

USB 3.0

Connects to USB devices

9

Headphone jack

3.5mm 4-pole (TRRS) port for connecting headsets with microphone.

10

Micro SD / TF Card Slot

The same as a Micro-SD card that is used to store data in digital form. Micro SD and TF Cards can be used in various types of devices such as smartphones, cameras, computers and other such devices for storing information like videos, pictures and so.

11

LEDs

Power, Caps Lock, Num Lock.

12

Touchpad

Controls the direction of the moving upward and downward.

13

Power Button

 
Turns the laptop on and off.

14

Screen

The main laptop screen.

DGBook Bottom View

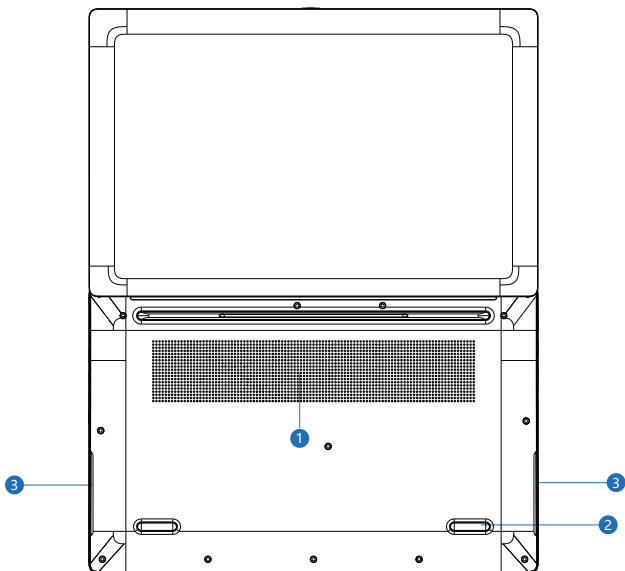


- 1 Heat Emission**
To release heat from the laptop and to prevent overheating from the bottom of the laptop.
- 2 Non-Slip Mat**
To keep your DGBook Series from slipping.
- 3 Stereo Speakers**
Built-in stereo speakers (Left/Right channels) for immersive audio output.

Getting Started

Turning on the Power

 
1. Push and release the power button located beneath the LCD display panel.
2. Use [Fn]+[F6] or [Fn]+[F7] to adjust the LCD brightness.

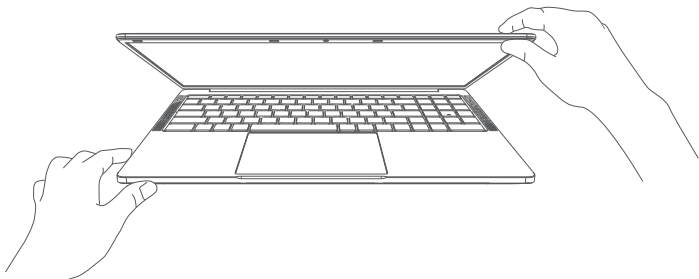

Power System

Using the AC Power

 The DGBBook Series Notebook PC power is comprised of two parts, the power adapter and the battery power system. The power adapter converts AC power from a wall outlet to the DC power required by DCBook series Notebook. Your Notebook PC comes with a universal AC-DC adapter. That means that you may connect the power cord to any 100V-120V as well as 220V-240V outlets without setting switches or using power converters. Different countries may require that an adapter be used to connect the provided US-standard AC power cord to a different standard. Most hotels will provide universal outlets to support different power cords as well as voltages. It is always best to ask an experienced traveler about AC outlet voltages when bringing power adapters to another country.

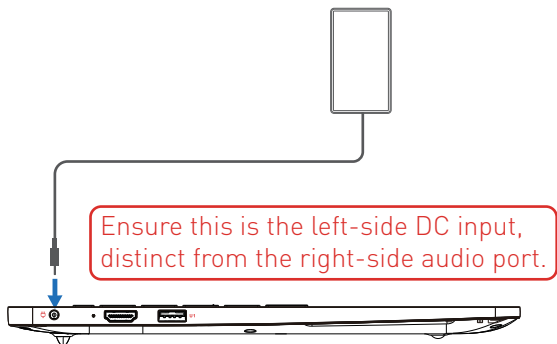

Warning: DO NOT connect the AC power cord to an AC outlet prior to connecting the DC plug to the Notebook PC. Doing so may damage the AC-DC adapter.



IMPORTANT! Damage may occur if you use a different adapter to power the DGBBook Series Notebook PC or use the DGBBook Series Notebook PC's adapter to power other electrical devices. If there is smoke, burning scent, or extreme heat coming from the AC-DC adapter, seek servicing. Seek servicing if you suspect a faulty AC-DC adapter. You may damage both your battery pack(s) and the DGBBook Series Notebook PC with a faulty AC-DC adapter.



WARNING! THE POWER ADAPTER MAY BECOME WARM TO HOT WHEN IN USE. BE SURE NOT TO COVER THE ADAPTER AND KEEP IT AWAY FROM YOUR BODY.

Emergency Shutdown

Press the emergency shutdown key firmly for five seconds to shut down the laptop.



Using the Touchpad

The touchpad is an interactive device that interprets the gestures and position of your fingers to simulate the functions of a regular mouse. It is also an alternative to mouse to position cursor onscreen.

The touch-sensitive pointing device:

The touchpad and selection buttons form a single surface. Press down firmly on the touchpad surface to perform a left click. Press down firmly on the lower right corner to perform a right click.

The touchpad allows you to use one-finger and multi-finger gestures to move the pointer so you can select and click items, rotate and zoom images, scroll lists, as well as swipe and switch between windows.

Moving the pointer

You can tap or click anywhere on the touchpad to activate its pointer, then slide your finger on the touchpad to move the pointer onscreen.

Touchpad Gestures:

use the touchpad to move the cursor or select an item



Swipe On The Trackpad



One Finger Tap



Two Fingers Scroll



Two Fingers Tap



Three Fingers Scroll

Tapping:

Tapping on the touchpad allows you to select items onscreen and open files. The DGBBook Series Notebook has multiple touchpad functions to support its touchpad.

Touchpad Gestures:

Tapping on the touchpad allows you to select items onscreen and open files. The DGBBook Series Notebook has multiple touchpad functions to support its touchpad.

Slide Up:

Move your fingers between the top and bottom of your touchpad to scroll up and down, or move your fingers across the touchpad to scroll sideways. Be careful to space your fingers a bit apart. If your fingers are too close together, they just look like one big finger to your touchpad.

Slide Down:

Move your fingers between the top and bottom of your touchpad to scroll up and down, or move your fingers across the touchpad to scroll sideways. Be careful to space your fingers a bit apart. If your fingers are too close together, they just look like one big finger to your touchpad.

Swipe On the Trackpad:

Use one finger to swipe upward toward the right side.

One Finger Tap:

The one finger tap feature lets you move an object on the desktop using just one finger: tap twice and do not lift the finger from the touchpad, then slide to drag the object.

Two Fingers Scroll:

 
Tapping and dragging with one finger will work as normal, but if you drag two fingers across any part of the touchpad, it will scroll instead. Move your fingers between the top and bottom of your touchpad to scroll up and down, or move your fingers across the touchpad to scroll sideways.

Two Fingers Tap:

Place two fingers on the touchpad and pinch in or stretch out.

Using the Hot Keys

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightness and volume output. To activate hotkeys, press and hold the Fn key before pressing the other key in the hotkey combination.

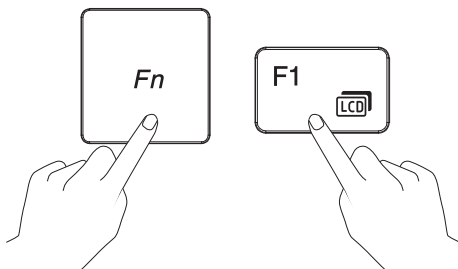

LCD/Monitor Icons F1:

Press Fn+F1 to switch the display settings between LCD only, LCD+Monitor, or Monitor only



Crossed Speaker Icons F2:

Press FN+F2 to turn the speakers ON and OFF.



Speaker Down Icon F3:

Press FN+F3 to decrease the speaker volume.

**Speakers Up Icon F4:**

 
Press FN+F4 to increase the speaker volume.

**Restrict Icon F5:**

Press FN+F5 to restrict the function of the touchpad.

**Sun Down Icon F6:**

Press FN+F6 to decrease the display brightness.

**Sun Up Icon F7:**


Press FN+F7 to increase the display brightness.

**Music Previous Icon F8:**

 Press FN+F8 to play the previous track.

**Music Next Icon F9:**

Press FN+F9 to play the next track.

**Pause Icon F10:**


Press FN+F10 to pause or resume playback.

**Screenshot Icon F12:**

 Use the keyboard shortcut: PrtScn (Print Screen) or CTRL + PrtSc. The first method is also the best known and it works in all versions of Windows: on your keyboard, press the PrtSc (Print Screen) key or CTRL+PrtScn keys. Windows creates a screenshot of the whole screen and saves it to the clipboard.

How to Connect to Wireless Network

A wireless LAN (or WLAN) is a wireless local area network, which can link two or more computers without using wires. Once connected to WLAN, you can access the internet. You can also share files, other devices, and even your internet connection itself. Your computer's wireless connection is turned on by default and Windows will detect and display a list of available networks during setup. Select your network and enter the password if required.

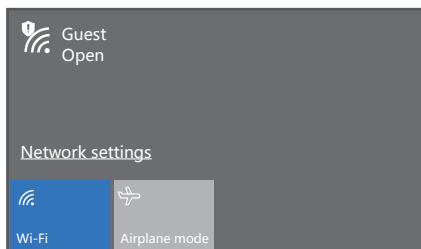

How to Connect to an External SD Card Reader

SD (Secure Digital) cards are used in a wide selection of digital cameras, tablets, media players and cellular phones.

Inserting an SD card

- 1.Align the card so that the connector points towards the port, with the connectors facing down.
 - 2.Carefully slide the card into the port. If you find you need to use any force to insert the card, try re-orientating the card slightly.
 - 3.Push the card until it clicks into place. A few millimeters of the card will extend
- If the card contains some files, the Windows AutoPlay window may appear (this depends on the contents of the card) and ask you if you wish to use a program to access the contents of the card.

How to Restore Your Laptop?

Recovery Management allows you to quickly and easily restore your computer back to its default status. You can choose to keep your files or remove them before reinstalling Windows.

1. From Start, select system reset.
2. Select the Restore tab and click Get started to Choose an option.
3. Select Keep my files to refresh your PC and reinstall your operating system without removing your personal files. Click Next to continue.
4. Resetting the PC will reinstall Windows, change settings back to their factory defaults and remove all preinstalled apps and programs without removing your personal files. Click Reset to continue.
5. You will be shown the reset progress on the screen. The screen will turn off during the reset process.
6. The screen will turn back on when it is installing Windows. Your PC will restart several times during the reset process.
7. Follow the process until it completes.
8. When your PC has completed the reset process, Windows will have been reset back to its factory default settings without removing your personal files.

FAQs

Q: What if the computer doesn't respond at turn-on?

A: Connect the AC adapter and press the blue power button to try turning on the unit. If you get no response, remove the AC adapter, remove any PC cards, and undock the computer—then plug in the AC adapter and try resetting. If you still get no response, contact DGBBook Series customer support for assistance.

Q: What if the computer stops responding?

A: Press CTRL+ALT+DEL to end the application that is not responding. Press the blue power button for at least 4 seconds to turn off the computer. Then press the blue button again to turn the computer back on.

Q: What if the battery doesn't charge?

A: Make sure the AC adapter is plugged into the power source and that the light on the adapter is on. If you're using a power strip, remove the AC adapter from the power strip and plug it directly into a wall outlet. Move the computer away from any nearby heat source. Unplug the AC adapter and allow the battery to cool down. An elevated battery temperature prevents charging.

Q: What if the computer turns off immediately after it turns on?

Battery power is probably extremely low. Plug in the AC adapter to charge and make sure the operating temperature is within the acceptable range.

Q: What if the computer pauses or runs sluggishly?

A: Press CTRL+ALT+DEL to see if an application is not responding. Reboot the computer. Delete temporary and unneeded files. Certain background operations (such as VirusScan) can affect performance while they're running.

Q: What if the touch pad is difficult to control

A: Customize the touch pad by using the Mouse applet in Control Panel (Start, Settings, Control Panel).

Safety Precautions

The following safety precautions will increase the life of the DGBBook Series Notebook PC. Follow all precautions and instructions. Except as described in this manual, refer all servicing to qualified personnel.



Disconnect the AC power and remove the battery pack(s) before cleaning. Wipe the DGBBook series Notebook PC using a clean cellulose sponge or chamois cloth dampened with a solution of nonabrasive detergent and a few drops of warm water and remove any extra moisture with a dry cloth.



DO NOT place on uneven or unstable work surfaces. Seek servicing if the casing has been damaged.



DO NOT place or drop objects on top and do not shove any foreign objects into the DGBBook Series Notebook PC.



DO NOT expose to dirty or dusty environments. DO NOT operate during a gas leak.



DO NOT expose to strong magnetic or electrical fields.



DO NOT press or touch the display panel. Do not place together with small items that may scratch or enter the DGBBook Series Notebook PC.



DO NOT expose to or use near liquids, rain, or moisture. DO NOT use the modem during electrical storms.



DO NOT leave the DGBBook Series Notebook PC on your lap or any part of the body to prevent discomfort or injury from heat exposure.



Battery safety warning: DO NOT throw the battery in fire. DO NOT short circuit the contacts. DO NOT disassemble the battery.



SAFE TEMP: This DGBBook series Notebook PC should only be used in environments with ambient temperatures between 5°C (41°F) and 35°C (95°F).



INPUT RATING: Refer to the rating label on the bottom of the DGBBook series Notebook PC and be sure that your power adapter complies with the rating.



DO NOT carry or cover a DGBBook Series Notebook PC that is powered ON with any materials that will reduce air circulation such as carrying bag.



DO NOT use strong solvents such as thinners, benzene, or other chemicals on or near the surface.



DO NOT use damaged power cords, accessories, or other peripherals. Incorrect installation of battery may cause explosion and damage the DGBBook Series Notebook PC.



DO NOT throw the DGBBook Series Notebook PC in municipal waste. This product has been designed to enable proper reuse of parts and recycling. The symbol of the crossed out wheeled bin indicates that the product (electrical, electronic equipment and mercury-containing button cell battery) should not be placed in municipal waste. Check local regulations for disposal of electronic products.



DO NOT throw the battery in municipal waste. The symbol of the crossed out wheeled bin indicates that the battery should not be placed in municipal waste.

Specifications DGBBook Series

Display	15.6" 1920 x 1080 pixels FHD IPS screen
CPU	4305U, 2.2GHz [DGBBook T1]
RAM	6GB LPDDR3, Dual Channel
Memory Slots	Onboard, Non-Removable
Max Capacity per Slot	3GB+3GB LPDDR3
SSD	128GB SSD, Supports up to 2TB M.2 SATA SSD
GPU	UHD Graphics 610
WiFi	WiFi 2.4Ghz
System	Windows 11 Home
Battery	Li-ion battery 5000mAh 7.7V
Camera	Front Facing 2.0MP
Speaker	Speaker x 2
Ports	HDMI, USB 3.0*3, Headphone Jack
Memory card socket	Supports up to 1TB capacity, Data transfer via USB 2.0
Power adapter	ϕ 3.5mm power connector 12V/3A
Operating system	Windows 11 home
Product Dimensions	357.5 x 229.5 x 19.5 mm

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warranty & Support

DGBook Series User Guide

Need Help or Service?

Visit our support portal for instant assistance:

www.gooddealer.cn/contact

Check warranty status • Download drivers • Submit repair requests

1-Year Limited Warranty: DGBook Series products are warranted against defects in materials and workmanship for one year from the original purchase date.

Service Process: For warranty service, please contact the DGBook Customer Care Center first. Our technicians will verify your eligibility based on the purchase date and guide you through the repair process.

Out-of-Warranty Repair: If your device is no longer under warranty, visit our website or contact support for paid repair options and pricing.

