 




XDEER SAFE

User Instruction Manual [S12FB]

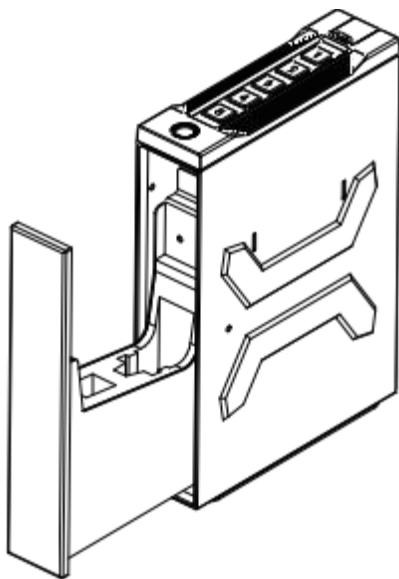

keep your safe

Please contact us at the first time if you have any problems with it. Promise me to be each gather's angels!

ver 2.08.15070125

Table of Contents

XDeer Product Series	001
Get to Know Your XDeer® Safe	002
Programming specification	003-1
Programming operation	004
Customer Support Service	005
Warranty and return requirements	006-1
Spare key description and lost back	006-2
Wall Safe Product Series	007-1
Key Safe Product Series	007-2
Home Safe Product Series	008-1
Gun Safe Product Series	008-2
Rifle Gun Safe Product Series	010

DISCLAIMERS

NEITHER SELLER NOR MANUFACTURER SHALL BE LIABLE FOR UNAUTHORIZED ACCESS, ANY INJURY, LOSS OR DAMAGE TO PERSONAL PROPERTY DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR THE INABILITY TO USE THE

PRE-USE Instructions

Important safety Instructions

1. DO NOT use rechargeable batteries or any other type of non-alkaline battery.
2. DO NOT mix old and new batteries.
DO NOT mix alkaline and standard batteries.
3. DO NOT lock the safe's key and the USB cable inside safe.
4. Connected USB port CAN NOT charge the battery.
5. DO NOT leave the safe in extreme weather conditions. Battery power may be affected.
6. DO NOT store loaded firearms in this unit.
Firearms are serious in nature and must be treated with respect and stored responsibly.



XDEER® SAFE.

THE USER SHALL DETERMINE THE SUITABILITY OF THE XDEER® SAFE BEFORE THE INTENDED USE AND USER ASSUMES

RISK AND LIABILITY WHATSOEVER IN CONNECTION THEREWITH, XDEER® SAFE ARE NOT INTENDED TO PROTECT AGAINST ENVIRONMENTAL HAZARDS INCLUDING FIRE AND WATER.

The XDeer® Safe is a tough and rugged quick access safe. Its solid structure and penetration resistant design makes it ideal for storing keys.


- | | |
|---------------------------|-----------------------|
| ❶ PIN Keypad | ❸ Set screw hole |
| ❷ Emergency Lock | ❹ Battery Compartment |
| ❸ Fingerprint Scanner | ❺ Reset Button |
| ❹ Indicator Light | ❻ Owner's Manual |
| ❺ Firearm storage | ❼ Backup Keys |
| ❻ Pistol magazine storage | ❼ Expansion Screws |
| ❼ Fixing bolt | |

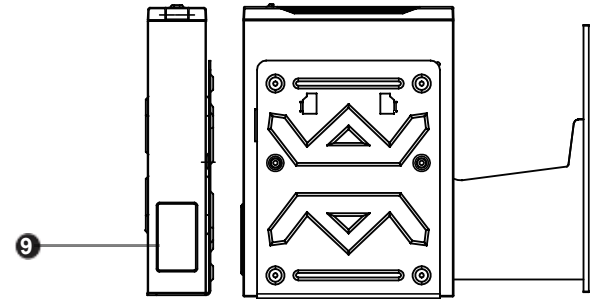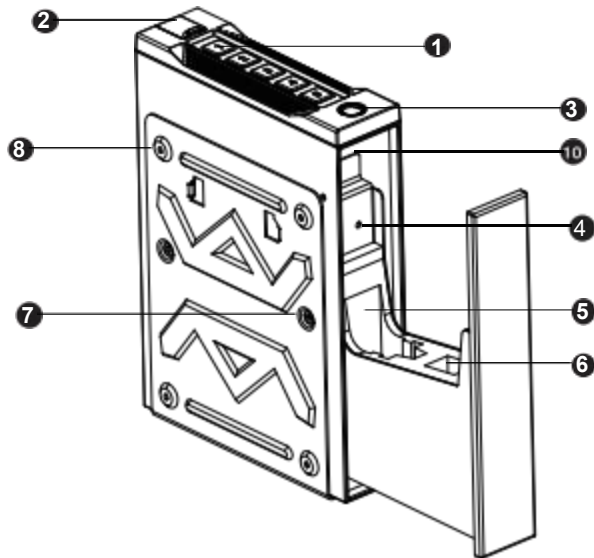  

❶



 ❷



Password setting

In standby mode, press and hold the setting key for 2 seconds until the buzzer beeps twice and the blue light flickers twice the password key light is on in the meantime, then enter a new password of 3-6 digits. After entering the password, press the setting key again and a beep is heard twice, meaning the operation is successful. If three beeps are heard, the password setting is failed. To reset the password after the failure, you need to start from the first step.

Note: After the setting key is pressed, you have 10 seconds to set a new password. If the password is not successfully set within the period, the setting will fail. You need to press the setting key again to start set your password.

Fingerprint setting

30 fingerprints can be set

In standby mode, press and hold the setting key for 2 seconds until the buzzer beeps twice and the blue light flicker twice, the scanner area light is on in the meantime, then release the setting key, put your finger onto the fingerprint zone, and press it for 4 times, each time you input the fingerprints, the buzzer beeps once and the blue light flicker once, and after repeating 3 to 4 times, the buzzer beeps twice, meaning the fingerprint setting is successful.

Note: If the buzzer beeps three times, it means the setting is failed. You need to press the setting key to reset the fingerprint.

Fingerprint setting

1. Setting key description: Press the setting key for 2 seconds, the buzzer beeps twice, the blue light is on, and you can set the fingerprint or password.
2. Factory setting: Initial password: "1234".
Initial fingerprint: The gun safe cannot be opened if no fingerprint information is set. Sound: on.
3. The digital password you set has 3-6 digits (46656 combinations at most). If the password has less than 3 digits or more than 6 digits, the setting will fail. Note: A new password will overwrite the old one;
number of fingerprints: 30.
4. If the password is set while no fingerprint is set, the new password can be used to open the gun safe, but any fingerprints will not be valid at this point. On the contrary, if the fingerprint is set but no password is set, the original factory password "1234" will be invalid. (If the password set by the user is 1234, the door will be opened normally.)
5. For ease of use, you are advised to set a new password and fingerprint.
6. To improve your success rate, register several fingerprints for a single finger at different locations in the scanner "left, right, up, and down. Do not scan any finger that has moisture, lotion, or dirt.



Open the Door with Fingerprints

Put your finger on the fingerprint scanner, If the fingerprint matches the information recorded by the system the door will open rapidly.

NOTE:If the fingerprint doesn't match the information recorded by the system, the buzzer beeps three times and the red light is on.

Error Alarm

The panel will be locked for one minute and the buzzer will alarm for 30seconds consecutively if the wrong password is entered for three times or the incorrect fingerprint is input for five times.

All passwords/fingerprints will be invalid during the alarm period. After the alarm ends, you can try it again.

NOTE:if wrong information is entered again, the alarm time will be longer. You are advised to remove the batteries and reinstall them.

Restoring Factory Settings

Press and hold the setting key for more than 6s (the blue light flash and the buzzer beeps twice at 2nd second) until the buzzer beeps for 2s.

The initialization is successful-the fingerprints are cleared & password set to "1234".

Sound ON/OFF

Sound ON: Hold the "1" button for 5 seconds until you hear one beep and the keypad light will flash once together, the sound is ON.

Sound OFF: Repeat the previous step, the sound is OFF.

Low Voltage Alarm

In order to save the loss of battery power in the safe, the internal LED will only light up when using the master code and fingerprint to unlock, and the USB line interface connected to the power supply can not make the LED light always on.

Internal LED

If the battery power is lower than 4.8V, press any number of the password input panel or input any fingerprint, the alarm sounds 5 times to remind the user of the low voltage for replacement in order to open the door normally next time.

Use the Bluetooth app to control the safe

1. Downloading the control app.

 
- (1) Direct search: Go to the app store, or go to the Google App Store to download "smart life".
- (2) Scan the QR code to download "smart life"



2. Adding Devices (Enable the Bluetooth function)

- ① When connecting to the Bluetooth function of the safe, need to enable the Bluetooth function of the mobile phone.
- ② Press the number 1 on the safe panel twice and press the “Setting Key” once, the blue light will blink, then open the smart life APP page , in the upper right corner of the “+”, click on add device, it will automatically pop up the current addable devices, please select your safe


Refer to the following picture for the smart life APP operation page to adding devices.

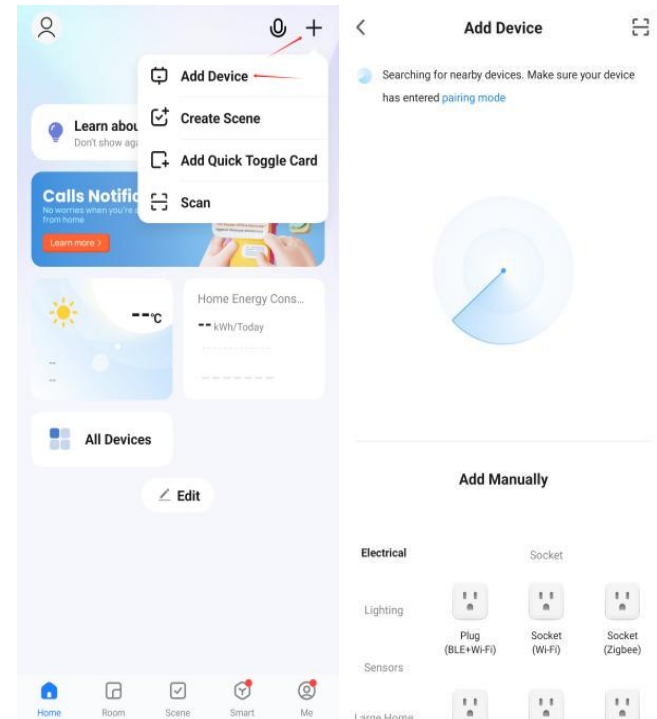


NOTE: Please keep your safe open when connecting Bluetooth function, and don't be too far away from the safe or in the different WiFi environment.

3.Functions of smart life APP

 After pairing, the lock can be unlocked with one click, and the lock can be unlocked by sliding through the app.You can view the door opening record, electricity, error alarm and other information.

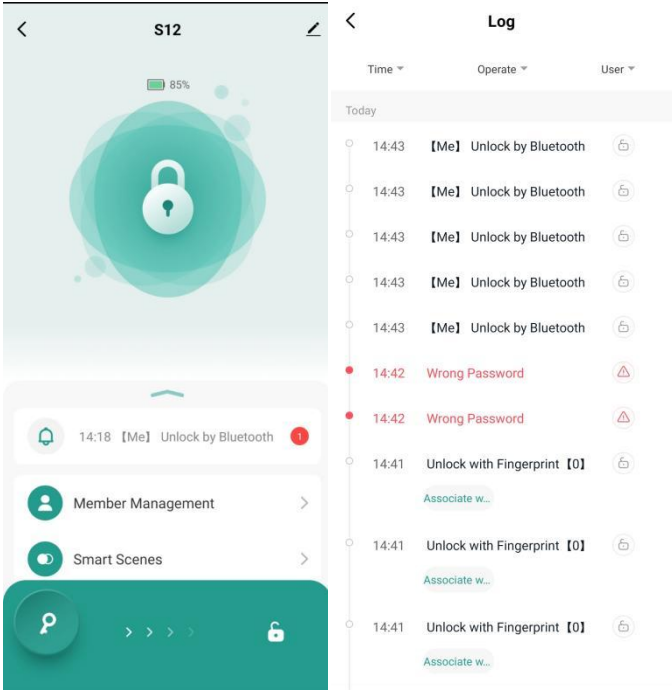

 When you need to re-pair the account, perform the app to remove the device.

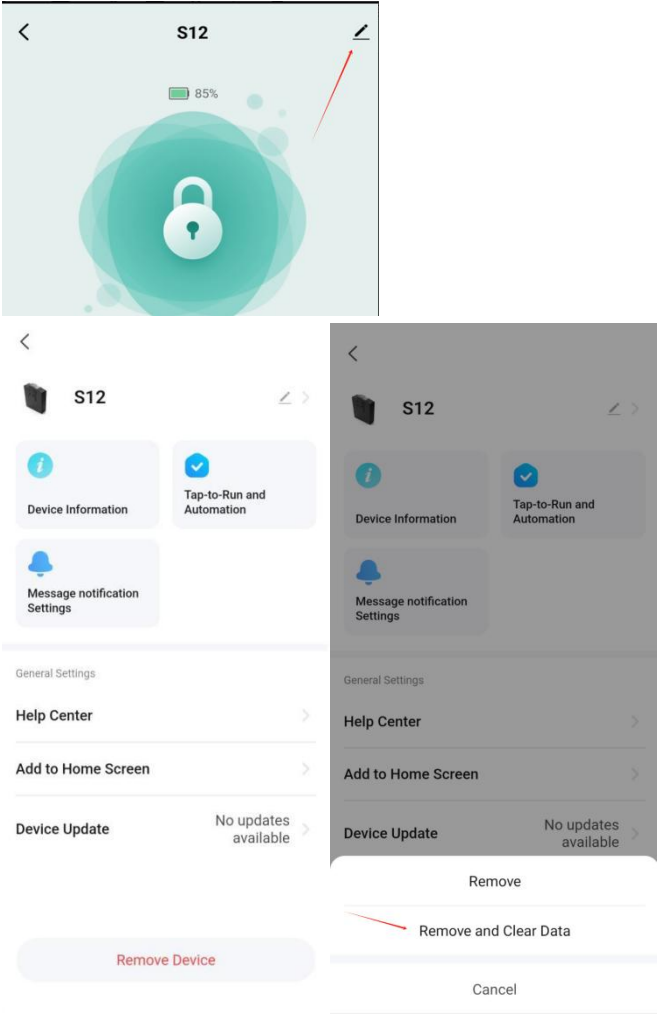

Customer Support Service

 
If you have a problem with your XDeer® safe that is not answered in the this manual, we encourage you to Email us:

xdeersafe@hotmail.com

How shall i talk to them?


You can e-mail the seller by doing the following to get product support.

Give the seller 24-hour to replied.

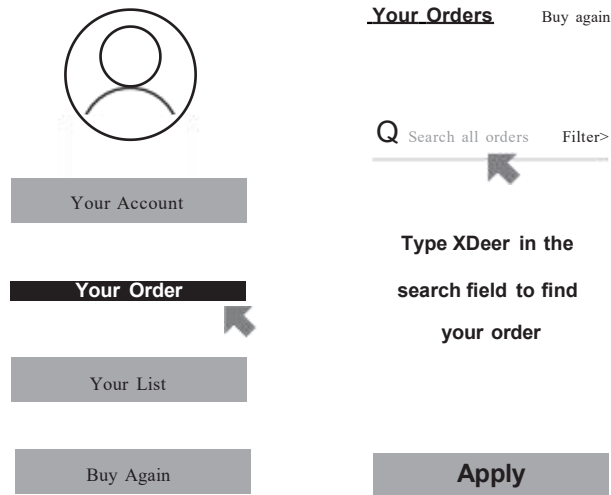


1. Go to your account and find your order.

 2. Type XDeer to search your order.

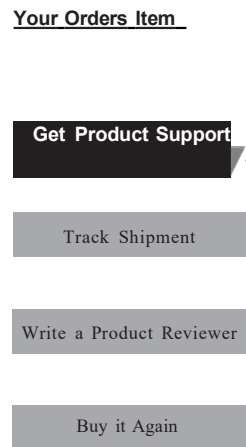

 3. Select your order and click support.

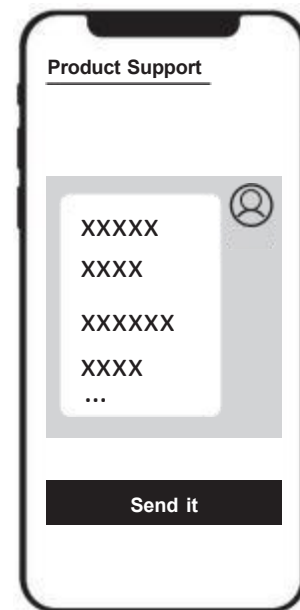

4. Describe the problems you need to solve.

If you have any other questions, you can get more after-sales support by scanning the following QR code through other channels that you find more convenient.

Facebook



Safes Technical Support
E-warranty certificate

Linkedin



Safes Technical Support
E-warranty certificate

WhatsApp



Safes Technical Support
E-warranty certificate

Xdeer Official Website



Safes Technical Support
E-warranty certificate

Youtube



Safes Technical Support
E-warranty certificate

Return and Exchange Requirements

If you are returning/exchanging the product, please be sure not to put the key inside the safe and change the XDeer® safe's code back to the default code. Then apply for a return or exchange on the corresponding platform where you purchased it.

Linked Warranty Terms and Conditions

XDeer® is committed to building high quality products and will make every effort to ensure our products are free from any defects. We warrant to the purchaser that. The XDeer® safe will be free from defects in materials or workmanship for a period one year from the date of purchase.

This warranty does not cover abuse, misuse, use in any manner for which is not designed, neglect, modification, damage inadvertently caused by the owner, accidents, and/or tampering. Any damage to the XDeer® safe as a result of misuse, tampering, abuse, neglect, accident, improper installation, modification, unauthorized service, destruction, or the alteration of the serial number, or use violate of the instructions furnished by the Company will void this warranty.

These warranties are not assignable or transferable to any other person.

The sole responsibility of the Company shall be limited to the repair or replacement (in its sole discretion) of any component of the XDeer® safe which fails to conform to this warranty at no cost to the purchaser for the period of the warranty. If your safe is determined to be defective and we are responsible for the cause we will have it repaired at our expense, or we will send a new replacement at no cost to you. You will be required to return your existing unit as well as all included accessories to XDeer® prior to replacement of the defective unit along with your order of purchase.

TIP: If it is determined your safe needs to be returned, please contact our customer support team, and they will provide you with a return detail.

 
Backup Keys Access

Backup Keys: Access the Safe

The keyhole is located on the top of the safe. Two backup keys are provided. In the event these are needed to open the XDeer® Safe, simply insert one of the backup keys, and turn the key to open the safe.


TIP: If the backup keys are lost or an extra one is required, please contact the XDeersafe.com customer support team and provide them with the code on the keyhole.

Gun Safe Product Series

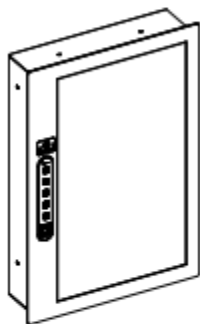

Wall Safe S009
22.04 x 16.22 x 4.13 in

 2 pistols gun

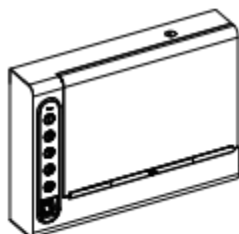

Wall Safe S008
11.6 x 12.4 x 3.5 in


1 pistols gun



CS100-25 **0.78 Cubic**
13.62 x 9.84 x 9.69 in



 CS100-42 **1.69 Cubic**
13.62 x 12.99 x 16.54 in

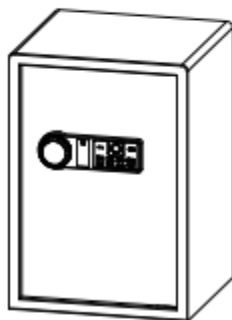


CS100-50 **2.04 Cubic**
13.62 x 12.99 x 19.69 in



Key Safe KS100-30
4.53 x 11.61 x 11.81 in

45 Keys Digital code

 Sturdy and heavy

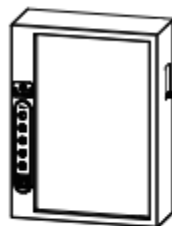

Key Safe KS100-39
4.92 x 11.61 x 15.35 in

60 Keys Biometric

Sturdy and heavy



Key Safe KS100-57
4.92 x 13.78 x 22.44 in

71 Keys Digital code

Sturdy and heavy

 


Key Safe KS100-F39
4.92 x 11.61 x 15.35 in


122 Keys Digital code

Sturdy and heavy


Gun Safe Product Series

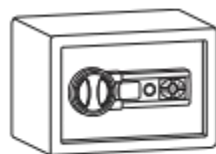


CS200-01 0.43 Cubic
7.87 x 12.20 x 7.87 in

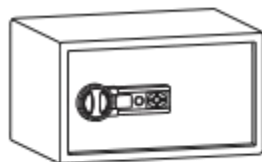 


CS200-02 0.77 Cubic
9.84 x 13.77 x 9.84 in

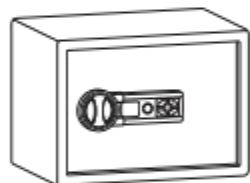 

CS100-03 1.09 Cubic
9.01 x 15.94 x 13.18 in

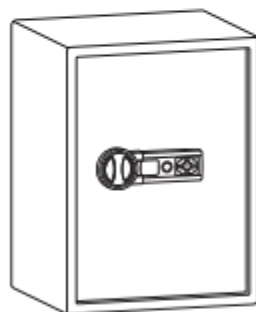 


CS200-05 1.90 Cubic
19.68 x 13.77 x 12.2 in

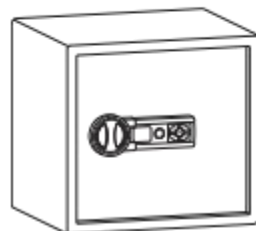 

CS200-04 1.20 Cubic
11.81 x 14.96 x 11.81 in



 Gun Safe S10
14.6 x 10.8 x 3.7 in
Digital code Biometric
KEY/TEPY-C

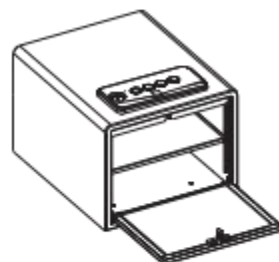

Gun Safe S003
10.1 x 12.1 x 7.91 in
Digital code Biometric
KEY/TEPY-C

 


xdeer S005
11.6 x 12.4 x 3.5 in
Digital code Biometric
KEY/TEPY-C



Gun Safe S006
12.7 x 11.9 x 6.7 in
Digital code Biometric
KEY/TEPY-C

Gun Safe Product Series

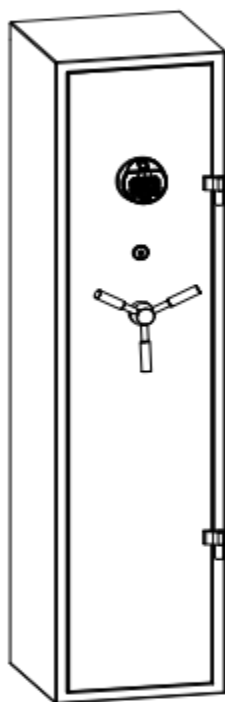


Gun Safe RS100
13.77x 13.77 x 57 in

5 pistols rifles gun

Sturdy and heavy

 Digital code

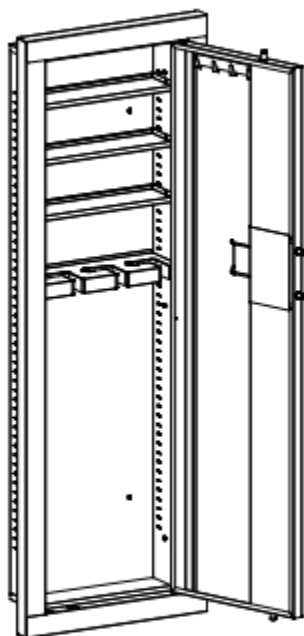

Wall Safe S011
13.77x 13.77 x 57 in

3 pistols rifles gun

Digital code

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.