

MUNBYN

1.0. Safe Components & Functional Overview



1. Knob	2. Emergency Keyhole	3. Indicator Light	4. Digital Keypad	5. Lamp
6. Green Set Button	7. Battery Box	8. Fingerprint Unlock	9. Socket for External Battery	

Note: Only 2 emergency keys are provided. These are unique and cannot be replaced if lost. No spare keys are available from the manufacturer.
Packaged Weight (Excluding Box): 5.64KG
Dimensions (H x W x D): 200 mm x 310 mm x 200 mm (7.87 in x 12.20 in x 7.87 in)

2.0. Getting Started

- (1) Locate the emergency keys inside the accessories bag.
 - (2) Remove the emergency lock cover.
 - (3) Insert the emergency key, press down gently and turn it counterclockwise while simultaneously turning the door knob clockwise to open.
- Note:** For first-time use, you may also connect a Type-C cable to access the safe. Follow the steps in Section 4.0 to enter the default code "159" to unlock the door.
- (4) After using the safe, close the door and turn the handle counterclockwise to lock it.

3.0. Insert the Batteries


- (1) With the door open.
 - (2) Insert four AA alkaline batteries (1.5V each) into the battery compartment.
 - (3) Under normal operation, if the buzzer sounds six times and the red LED flashes six times, this indicates low battery voltage. Replace the batteries immediately.
- Note:** Requires 4 AA alkaline batteries (1.5V each, not included; purchase separately). External Type-C port serves as backup power when batteries are depleted.

4.0. Opening the Door

- (1) Electronic Password
 - Press "START", enter your user code (3-15 digits), then press "ENTER".
 - You will hear a "do, re, mi" confirmation tone, and the green LED indicator will light up.
 - Before the green LED turns off, promptly turn the door handle clockwise to unlock the door.
- (2) Fingerprint
 - Place your registered finger on the fingerprint scanner.
 - The buzzer will beep once, followed by a "do, re, mi" tone, and the door will unlock.
- (3) Security Mode (Dual Authentication)
 - Option 1:
 - Scan your registered fingerprint first.
 - After verification, enter your electronic password.
 - The buzzer will beep once, followed by a "do, re, mi" tone, and the door will unlock.
 - Option 2:
 - Enter your registered password first.
 - Then, scan your registered fingerprint.
 - The door will unlock with the same confirmation tone.

5.0. Setting Your Password

- (1) Press the green **SET** button.
 - (2) Enter your desired 3-15 digit code, then press **ENTER**.
 - (3) Re-enter the same code and press **ENTER** to confirm.
- A "do, re, mi" confirmation tone will sound, indicating successful password setup.
Example: Code: 1234567890123456
Press SET → Enter 1234567890123456 → Press ENTER

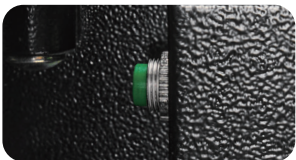

6.0. Fingerprint Registration

(1) Press the green **SET** button. (2) Place your finger on the fingerprint sensor:

- The buzzer will beep once and the LED will flash.
- Lift your finger and repeat this process 4 more times (5 total scans).
- Upon successful registration, you'll hear a "do, re, mi" confirmation tone.

Note: The fingerprint scanner can store up to 50 fingerprints.

7.0. Security Mode Configuration

To Enable Enhanced Security (Dual Authentication):

- (1) Press and hold the green SET button.
(2) Enter: [8] → ENTER → your current password → ENTER.
(3) System will now require both fingerprint AND password verification for access.

To Disable Enhanced Security:

- (1) Press and hold the green SET button.
(2) Enter: [7] → ENTER → your current password → ENTER.
(3) System will then accept either fingerprint OR password for access.

Visual Confirmation:

- Successful setting changes are confirmed by the "Do-Re-Mi" tone.
- Green LED flashes twice for mode activation/deactivation.

8.0. Fingerprint Deletion

To Clear All Registered Fingerprints:

- (1) Press and hold the green SET button.
(2) Enter: [4] → ENTER → your current password → ENTER.
(3) System will immediately:
 - Disable fingerprint unlocking functionality.
 - Emit confirmation tone ("Do-Re-Mi").

Important: This action cannot be undone. You'll need to re-register fingerprints to use biometric unlocking.

9.0. Security Alarm System

Intrusion Detection Protocol:

- The alarm will activate (60-second buzzer) when:
 - (1) 3 consecutive incorrect password attempts.
 - (2) 6 consecutive failed fingerprint scans.

Alarm Deactivation:

- Immediately stops when either:
 - (1) Correct password is entered.
 - (2) Authorized fingerprint is recognized.

10.0. How to Secure Your Safe

Scan the QR code on the right or visit the following website to watch the full installation:

munbyn.biz/sa01mv

Note: Enter the link using only lowercase letters and numbers.

How to mount your safe in a cabinet or on a wall:

- (1) Position the safe inside the cabinet. Mark the drill spots through the holes, then mark the corners for alignment.
(2) Remove the safe and drill on your marks
(3) Align the safe, then secure it from the inside with washers and bolts.

Note: Only use the white plastic anchors for wall mounting by placing them in the hole before the bolt; they are not used for cabinets.



Safe Mounting Video

11.0. Tech Support

MUNBYN provides 24 months warranty and lifetime free service.

If you encounter any issues with the product, don't hesitate to contact the MUNBYN team to receive troubleshooting tips or a prompt replacement.

E-mail: support@munbyn.com

WhatsApp: +86 178 1788 1067

Phone: +1 (628) 229 3612

Support Hours: 24 hours a day, Monday to Friday



Scan to contact
Technical Support



Facebook Messenger:
MUNBYN Official