



Ikarao®

Shell S1

Smart Karaoke Speaker

 
User Manual **EN**

Introduction:

Thank you for your purchase of this product. Be sure that you have read this manual and understood its contents before using the product. Keep the manual where it will be read by all who use the product.

For the Latest Information

The latest versions of the manuals are available from:
<https://www.ikarao.com/pages/support>

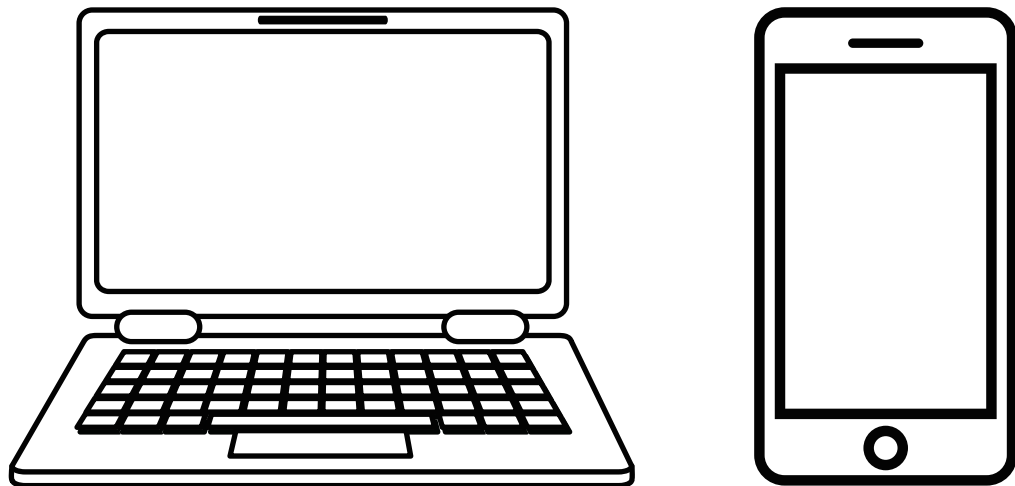

The website can be accessed not only from your computer but also from smartphones and tablets.



Table of Contents

Before You Begin

- **Parts of the Speaker..... 8-14**

Foldable Touch Screen.....	10
Microphone Charging Slot.....	10
Speaker Strap Ring.....	10
Volume Roller.....	10
Power Button	10
Bluetooth Button.....	11
Bass Boost Button.....	11
Playback Mode Switch Button.....	11
3.5mm Microphone.....	13
Aux In.....	13
OTG.....	13
AUX OUT.....	13
USB.....	13
HDMI.....	14
USB-C Charging Port.....	14

- **Parts of the Microphones.....15-16**

Microphone Indicator Light.....	16
Microphone Power Button.....	16

Microphone Volume Control.....	16
Microphone Play/Pause Button.....	16
Microphone Wireless Charging Ring.....	16

- **Parts of the Homepage..... 17-20**

Aux Mode.....	18
Bluetooth.....	18
WiFi.....	18
Lighting Mode.....	18
Volume.....	18
Music Effect.....	19
Microphone Effect.....	19
Settings.....	19
Ikarao Service.....	19
Power Icon.....	20
WiFi Icon.....	20
Battery Icon.....	20
Time Icon.....	20

First Steps

Use Carrying Strap.....	22
-------------------------	----

Speaker Charging.....	23
Microphone Charging.....	24
Power On/Off.....	25

- **Basic Settings..... 26-33**

About.....	27
Brand Name	
Model Name	
Serial Number	
App Version	
Device Version	
Version Update	
Restore Factory Settings	
Display.....	28
Brightness	
Key Brightness	
Sleep Time	
Sound.....	29
Wireless Mic Volume	
Mic Mode	
WiFi.....	30
WiFi On/Off	
Refresh Available Networks List	
Enter Wi-Fi Password	
Wi-Fi Basic Information	
Storage.....	31
Available Storage	

Storage Control	
USB Drive	
TIME.....	32
Automatic Time Update	
24-Hour Format	
Timezone	
Language.....	33


Start to Play

- **Local Media Player..... 35-38**


Favorites.....	36
Repeat Mode.....	36
Play from Beginning.....	36
Play/Pause.....	36
Next Track.....	36
Volume.....	36
Playlist.....	36
Add to Queue.....	36
Create Playlist.....	36
Batch Create Playlist.....	37
Page Turning.....	37
Quick Jump to Specified Page.....	37
View Lyrics.....	38
Different Display on External Screen.....	38
Call Up Control Bar.....	38

Supplied Accessories

 
The following are included with the speaker:

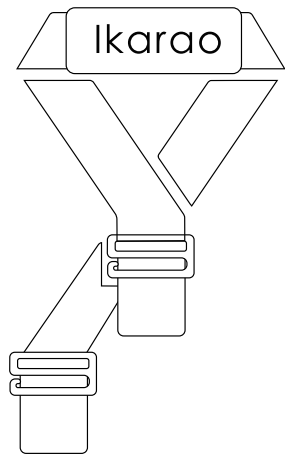


Shoulder Strap

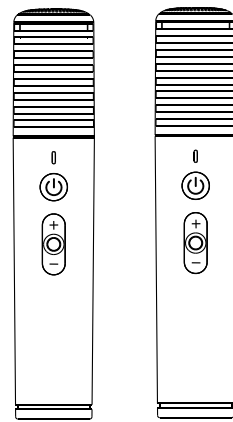 


Wireless Microphones * 2

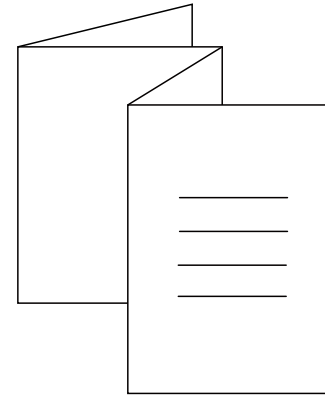 

Quick Start Manual

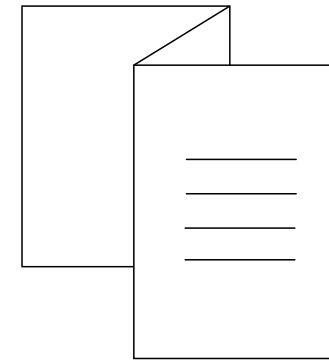 


Warranty Card

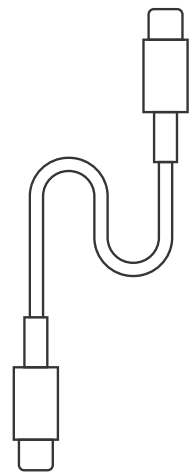 

Type-C Power Cable



 01 Before You Begin

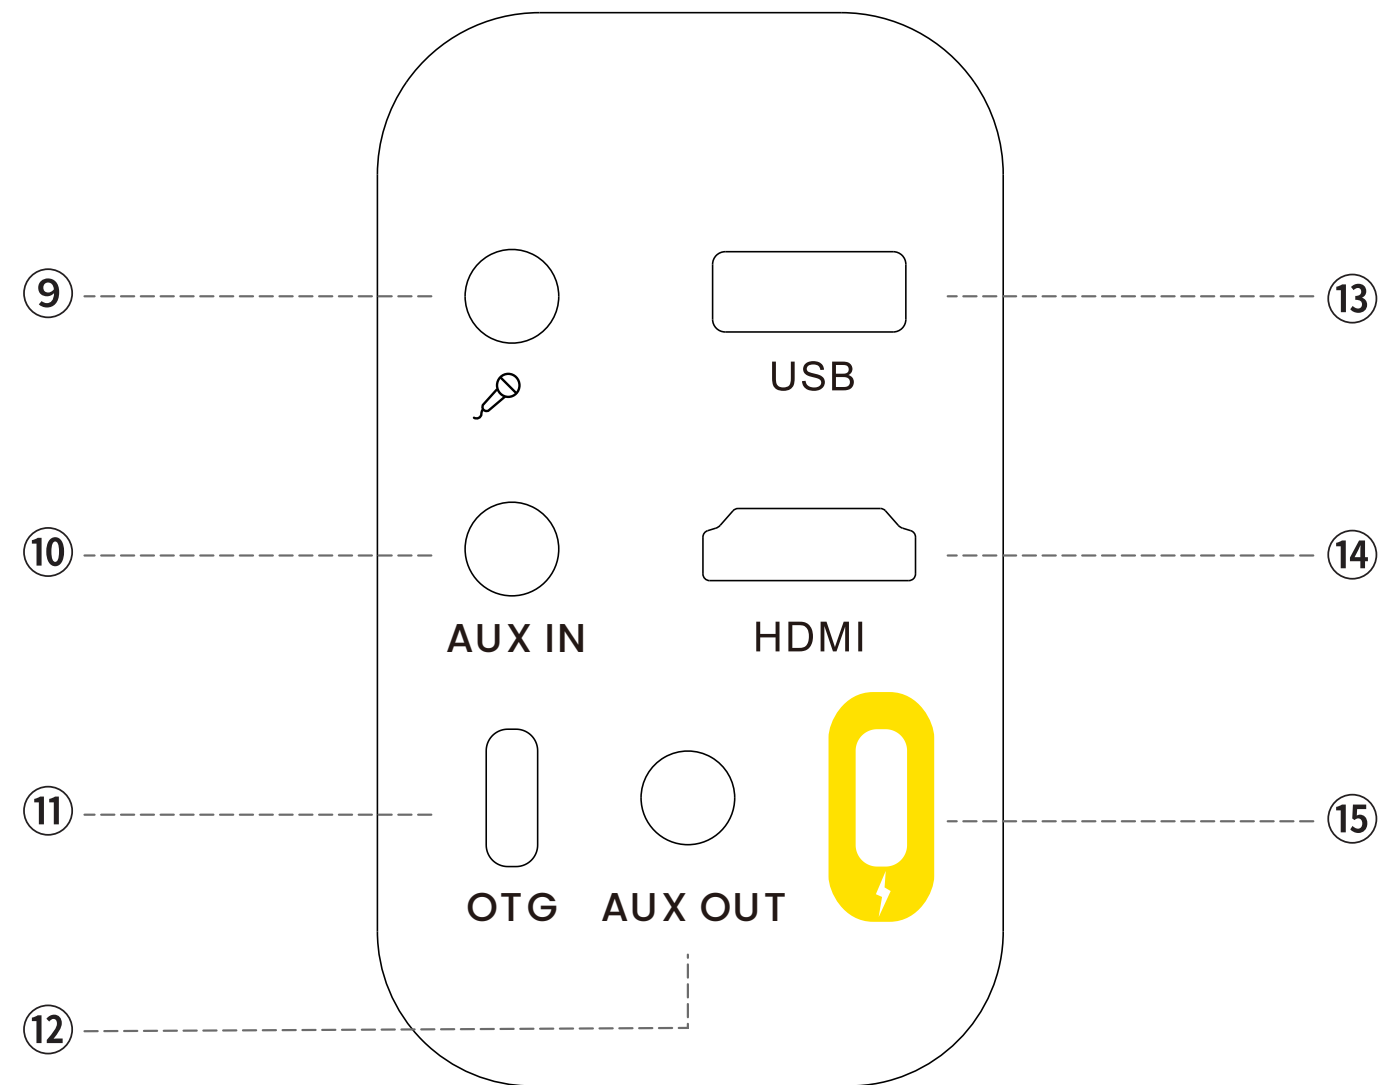

⑨ 3.5mm Microphone.....	13
⑩ Aux In.....	13
⑪ OTG.....	13
⑫ AUX OUT.....	13
⑬ USB.....	13
⑭ HDMI.....	14
⑮ USB-C Charging Port.....	14

Bluetooth Button

Single-click the Bluetooth button to enter pairing mode and disconnect from connected Bluetooth devices.

(For playing music via Bluetooth, please refer to  Page 39 - Play With Bluetooth)

 
Bass Boost Button

Pressing the Bass Boost button enhances the bass effect


Playback Mode Switch Button

Pressing the play/pause button allows you to switch between three playback sources: LOCAL PLAY - Bluetooth - AUX.


(For playing music via AUX IN, please refer to  Page 13 - Aux In. For playing music via USB, please refer to  Page 13 - USB.)

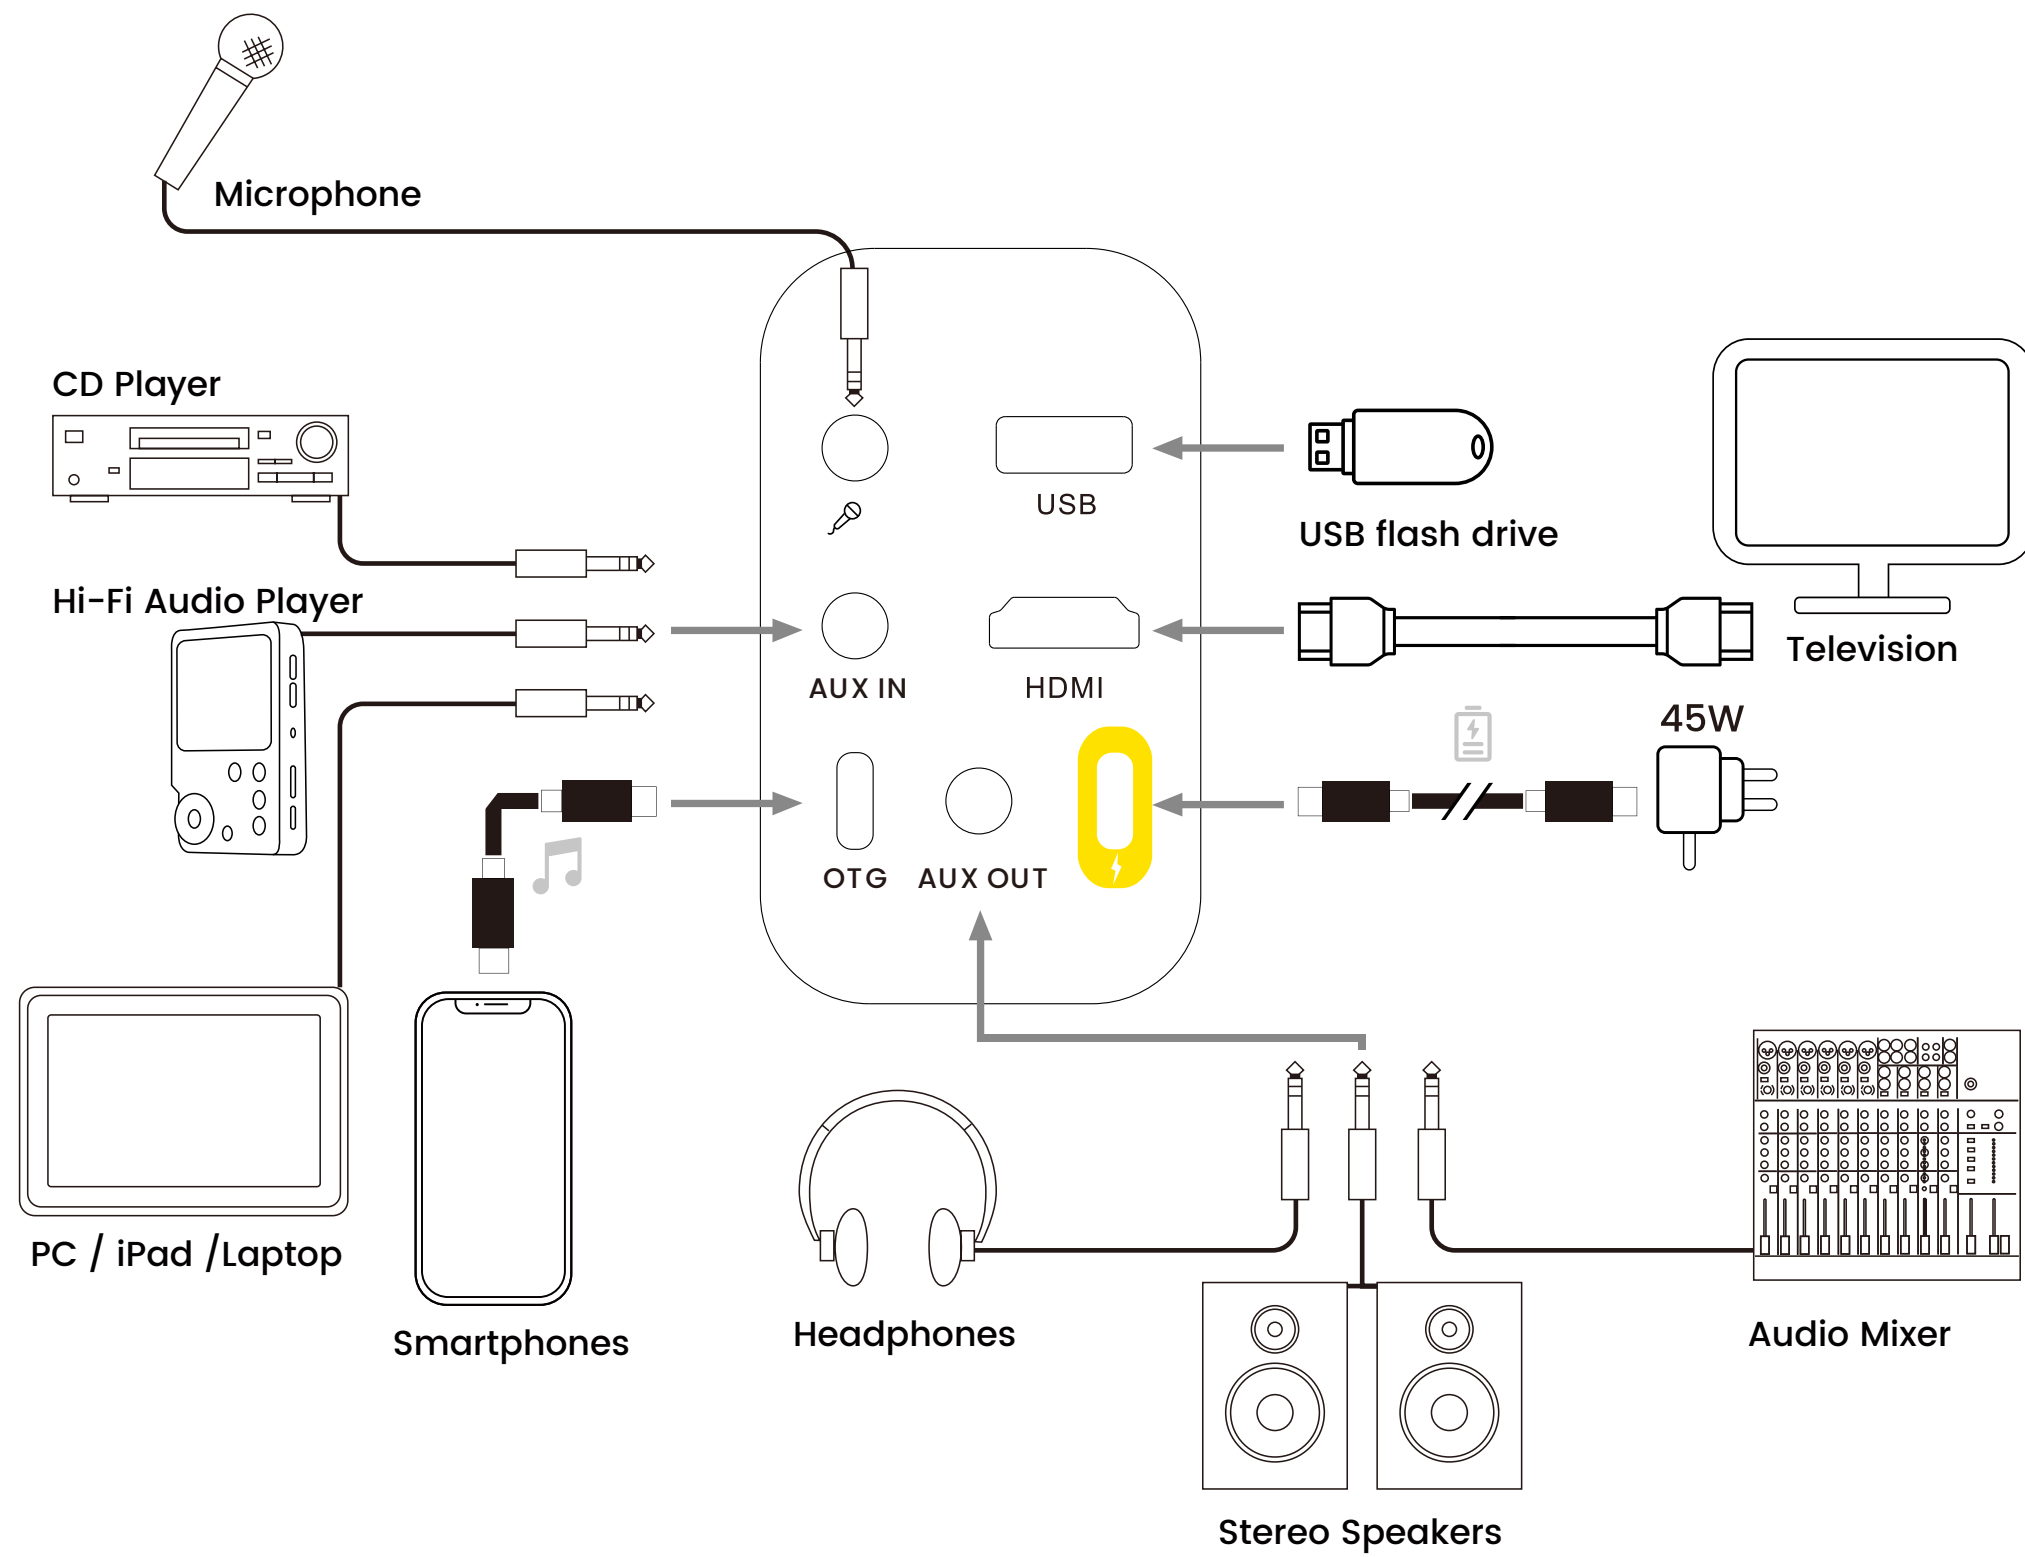

Parts of the Microphones

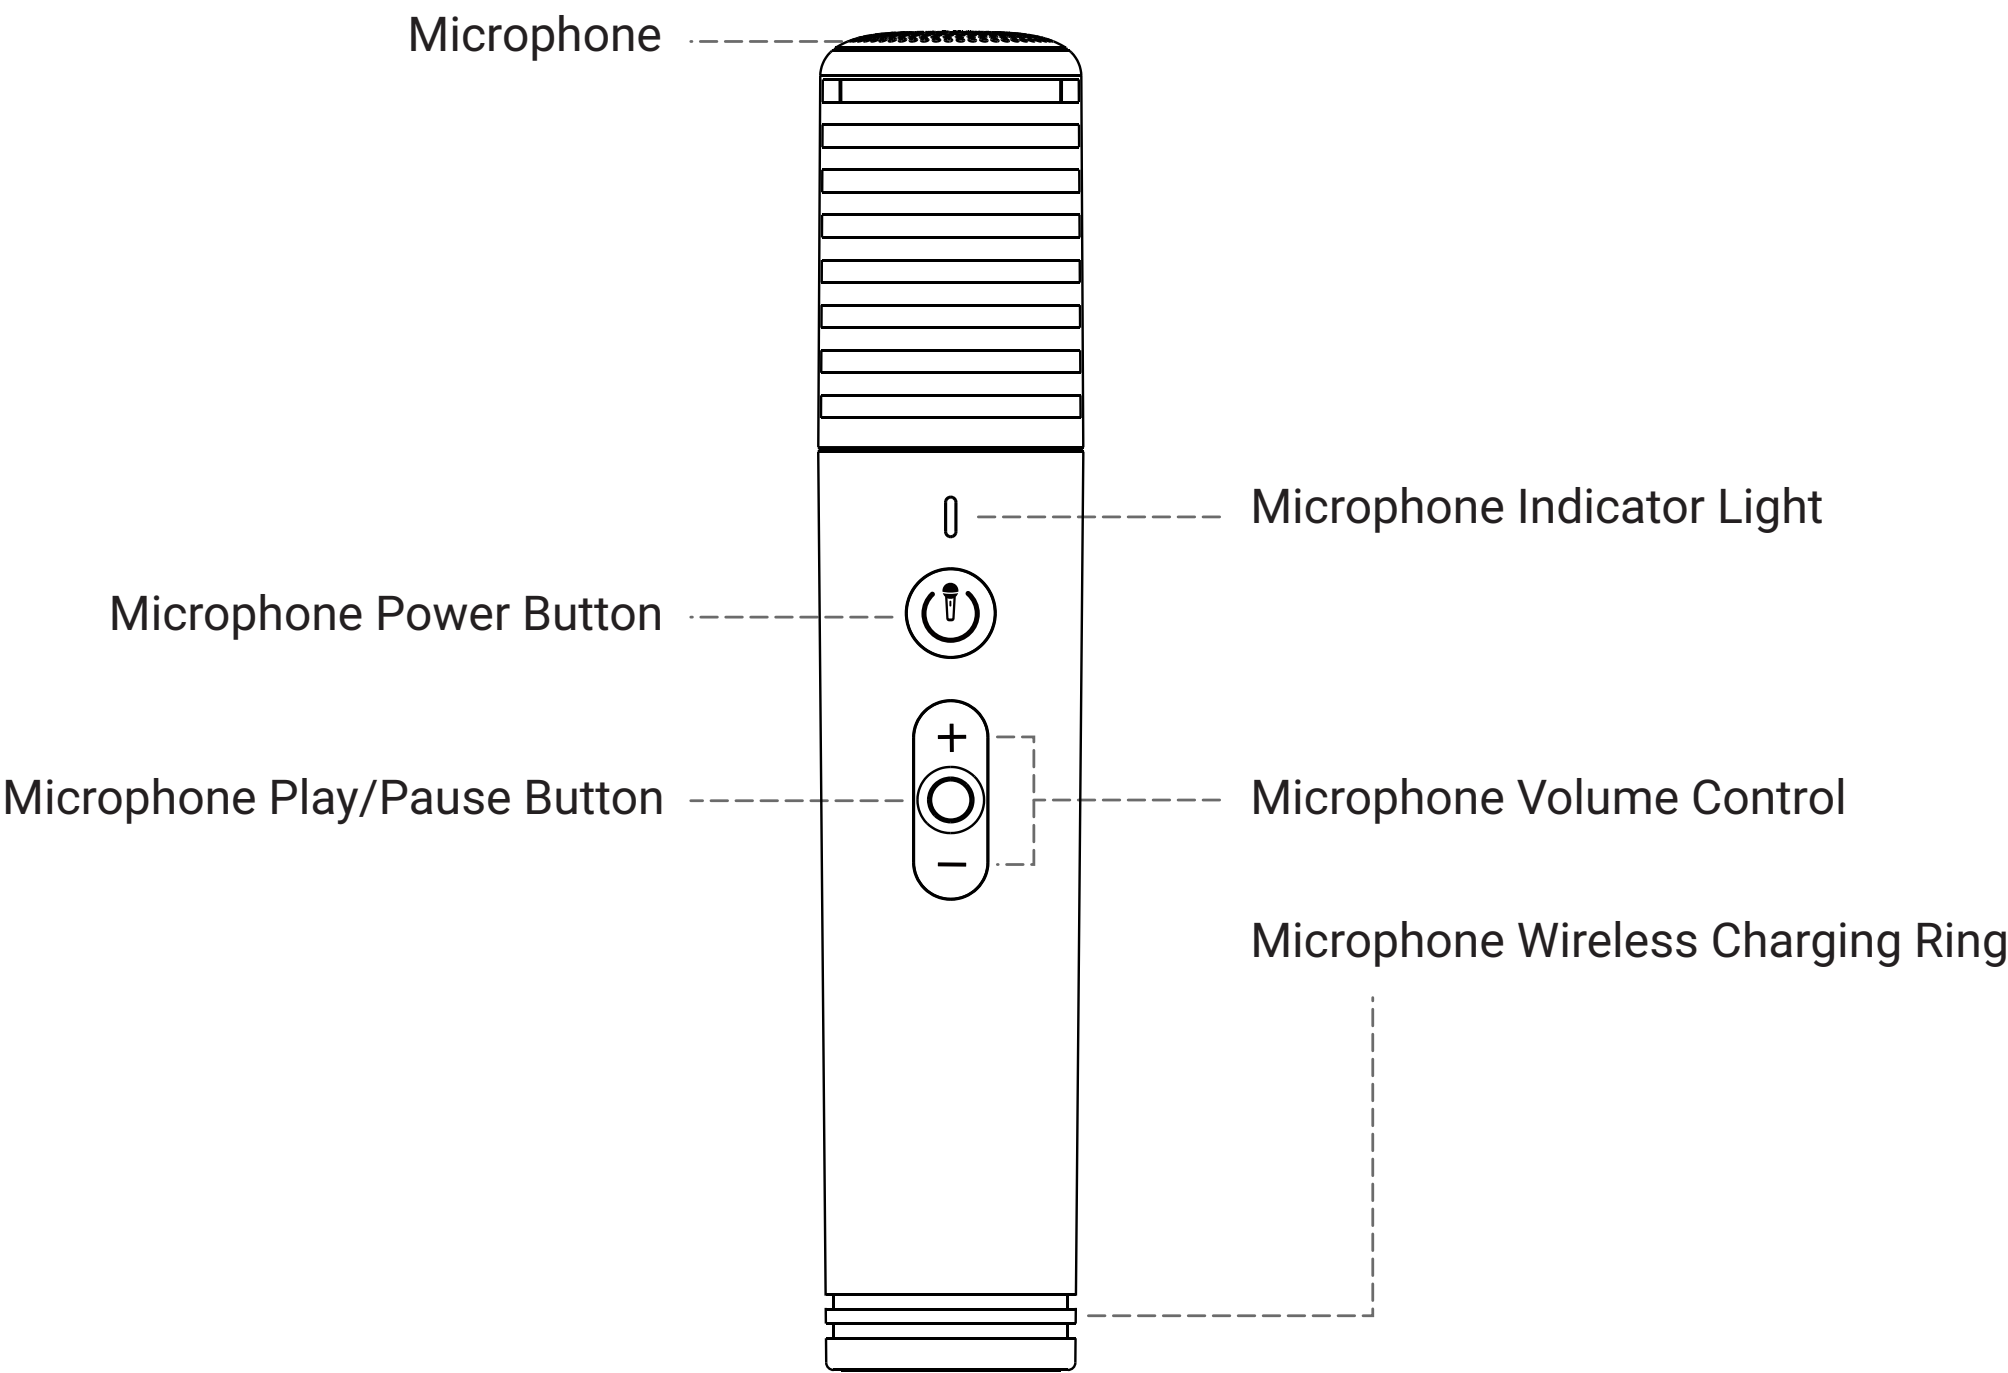 

Parts of the Homepage

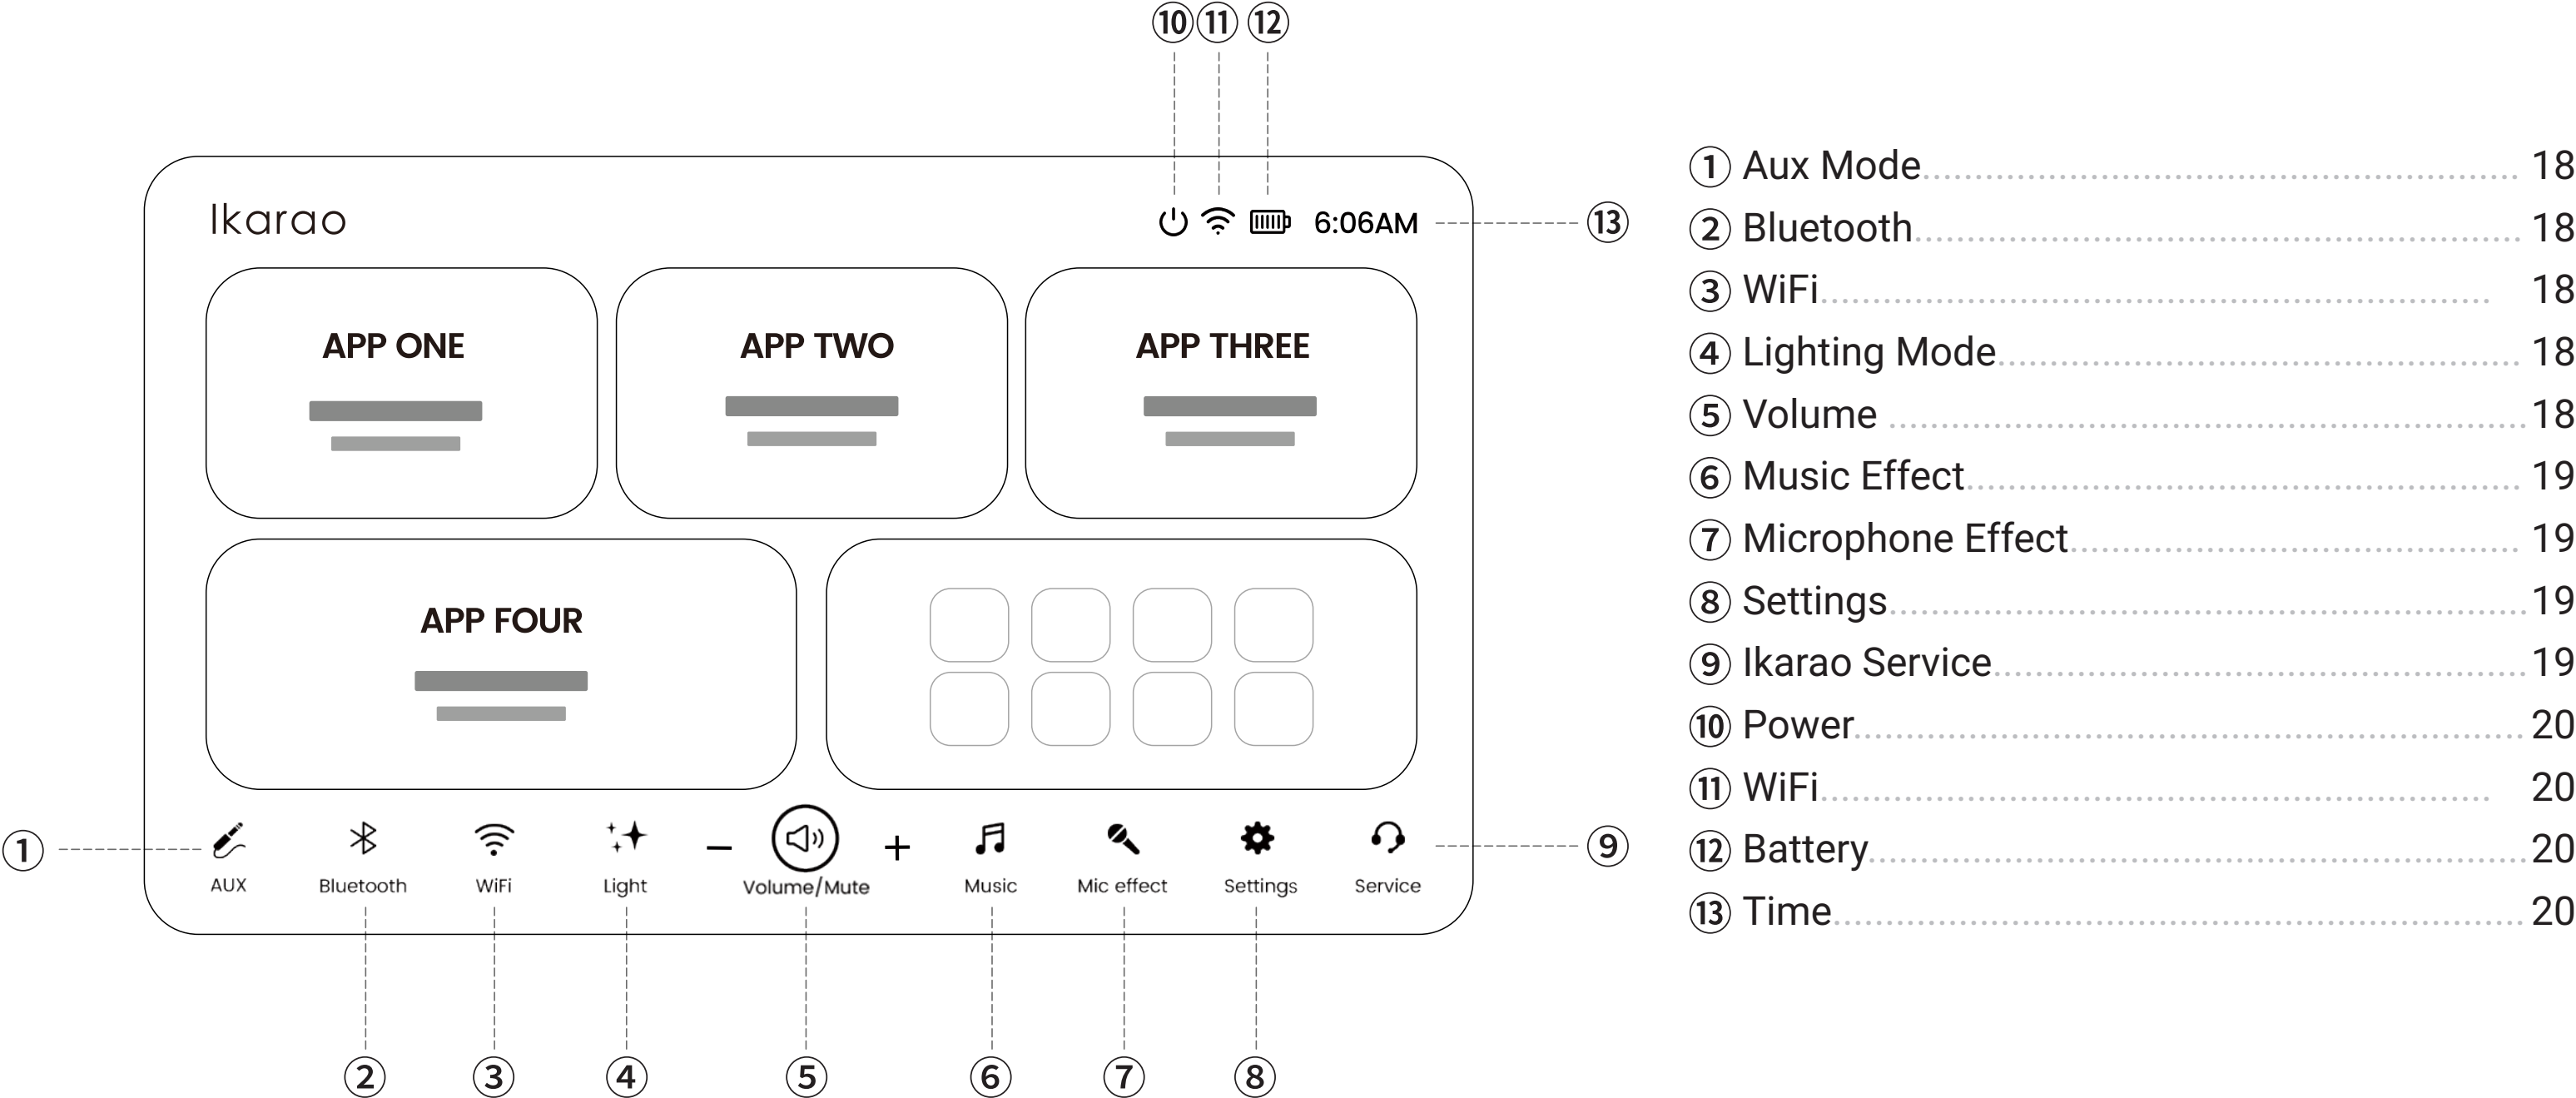 



02

First Steps

Display

Brightness

Drag the slider left or right to adjust the screen brightness.



Key Brightness

Drag the slider left or right to adjust the backlight brightness of the keys.



Sleep Time

Select the number of minutes of inactivity after which the device will automatically shut down.

Sound

Tone Volume

To control the volume of the prompt tone

Wireless Mic Volume

Indicates the connection status and volume of the wireless microphone



Mic Mode

Microphone mode switch

Time

Automatic Time Update

Automatically updates the current time.

24-Hour Format

Enables 24-hour time format.

Timezone

Select your region and timezone.

Time

If Automatic Time Update is off, you can manually set the time.

Date

If Automatic Date Update is off, you can manually set the date.



03

Start to Use

Local Media Player

