

For customer support and to
register your warranty visit:
www.blaupunkt-australia.com.au

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Enjoy it.

21.5" 12 Volt Full HD LED TV with DVD

Introduction

Thank you for purchasing your BLAUPUNKT TV. The following instructions will assist you in operating any of the models in the BLAUPUNKT range.

You may already be familiar with using a similar unit, but please take the time to read the instructions relevant for your model.

Your safety is very important. Please ensure you read the "Safety Instructions" before you operate this unit.

The BLAUPUNKT range has been designed to give you many years of trouble-free service. In the unlikely event that your product fails to work normally, please contact Customer Support at www.blaupunkt-australia.com.au

Contents

Unpacking the TV / Accessories	3
Installing / Removing the StandBase	4
Front / Right Side View and Controls.....	5
Rear View and Sockets	6
Installing Batteries in the Remote Control	7
Remote Control Operation Range.....	7
Remote Control.....	8-9
Making Video and Audio Connections.....	10
Connecting an AV Device with an HDMI Cable	10
Connecting a Computer with a VGA Cable.....	11
Connecting an AV Device with a Component (YPbPr) Cable.....	11
Connecting an AV Device with Composite Cable.....	12
Connecting a Digital Audio Receiver	13
Turning the TV on for the First Time	14
Menu Operation	15
Picture Menu	16
Sound Menu	17
Channel Menu(ATV/DTV)	18
Feature Menu.....	19
PVR	20
EPG	22
DTV	23
Setup Menu	23
PC Setup Menu	25

MEDIA MENU	26
Movie Menu	26
Music Menu	27
Photo Menu	28
Ebook Menu	28
PVR Mangage	29
DVD Menu	29
General Setting	29
Audio setup	30
Dolby setup	30
Video setup	30
Preference setup	31
Disc Care.....	32
Maintenance	33
Hints and Tips	33
Display Modes	36
YPbPr Mode	36
PC Mode	36
HDMI Mode	37
Specifications	38
Safety Warnings	39
Waste Electrical Recycling	42



 
Unpacking the TV / Accessory's




TV set




Remote Control

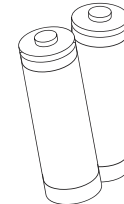

Batteries

 

Neck/Stand

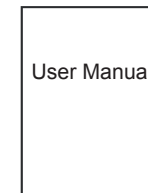 

User Manual



 
Adapter/AC power pack




PB5X14(4PCS) Screws



BB3X8(4PCS) Screws




3m AV cable

 


5m DC cable (12V)

Installing / Removing the Base Stand

 The parts

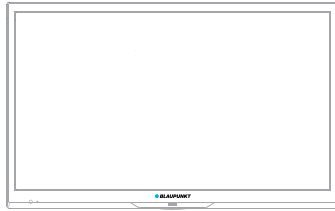


TV set

 


Neck/Stand / Screws

Installation

 Place the TV face down on a soft and flat surface (blanket, foam, cloth, etc.) to prevent any damage to the TV.

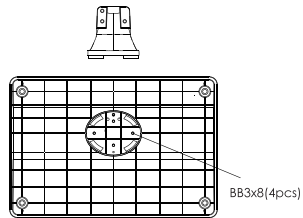

 Fix the base to the neck with 4pcs BB3*8 Screw.

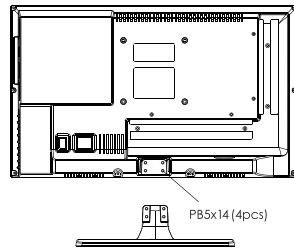


Align the 4 holes in the back cabinet with the holes in the neck, then insert 4 pcs PB5*14 screws with a screwdriver.


This unit is VESA-Compliant and designed to be wall mounted with a VESA-Compliant 100x100 mm mounting kit.

Mount this unit according to the instructions of the wall bracket(not supplied)

*** Please assemble the stand cover into the unit in order to protect your unit while using the wall mount.**

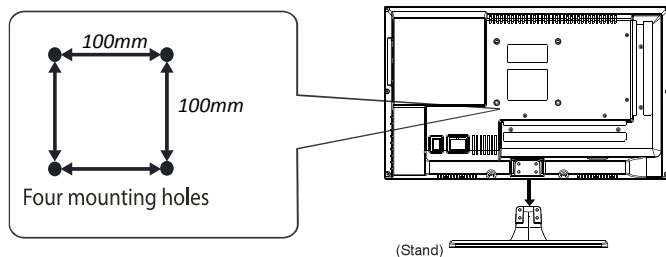 


Front / Right Side View and Controls

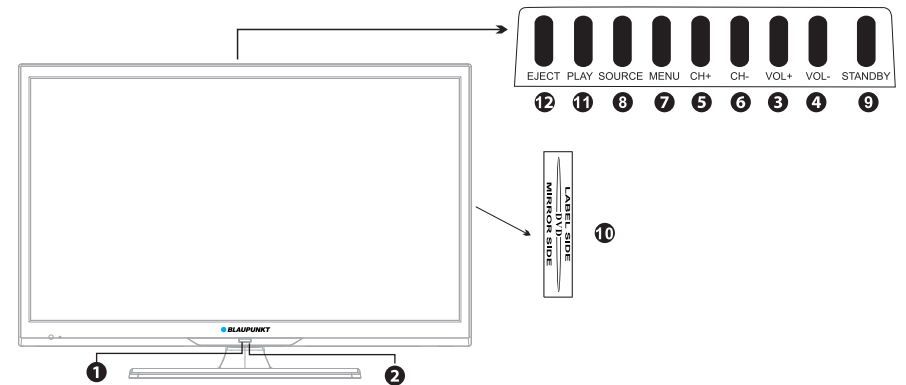 

Item	Description
1 POWER LED	Illuminates green when the TV is turned on. Illuminates red when the TV is in standby mode. The LED will alternate between red and green when the PVR timer programming has started in the standby mode.
2 IR (Infrared Receiver)	Receives IR signals from the remote control. Do not put anything near the sensor, as its function may be affected.
3 VOL + / - 4	Adjusts the volume. Press to select and adjust a setting in the OSD menu.
5 CH +	Press to select a channel or select a sub-menu from the OSD menu.
6 CH -	Press to select a channel or select a sub-menu from the OSD menu.
7 MENU	Displays the OSD (on screen display) menu.
8 SOURCE	Press to select among different input signal sources: DTV, ATV, AV, COMPONENT, HDMI1, HDMI2, HDMI3, PC, MEDIA, DVD. Confirmed the selection on OSD menu.
9 STANDBY	Switches the TV on from standby mode. Switches the TV back to standby mode.
10 DVD Slot	Insert the DVD disc.
11 PLAY	Play or pause.
12 EJECT	Eject the disc.

 
Rear View and Sockets

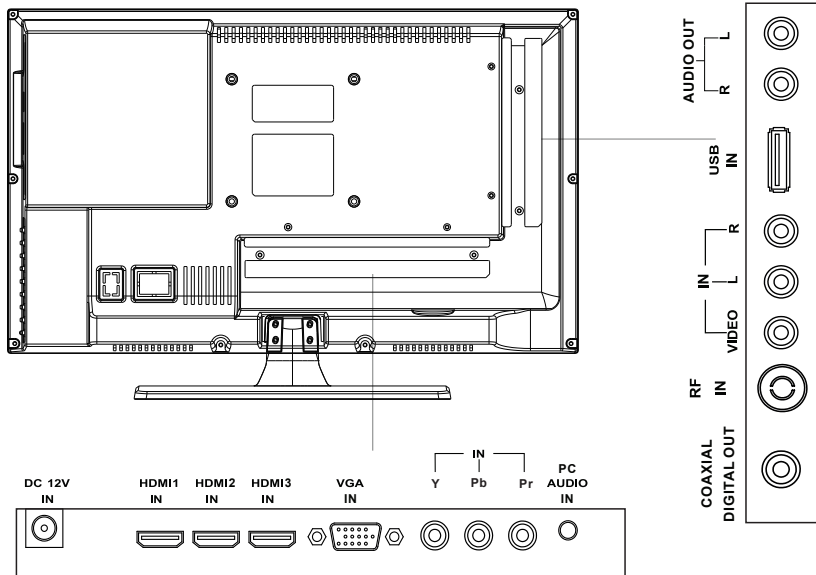

Socket	Description
1 VGA / PC Audio in	To connect to a computer or other devices with a VGA interface.
2 AV	To connect to the Composite VIDEO and AUDIO (L/R) output sockets on external video devices.
3 Digital Audio out (Coaxial)	To connect to the audio socket on the digital/standard 5.1 audio system.
4 HDMI1/HDMI2/HDMI3	To connect to a High-Definition (HD) signal output device, such as a set-top box, blu-ray disc player or AV receiver.
5 USB	Allows the insertion of a USB storage device to play video, audio, photo and text files (Media mode) and record DTV programmes on to a USB storage device.
6 RF	To connect to the aerial socket on the wall with the RF coaxial cable.
7 YPbPr	Color difference components input and relevant video input.
8 Audio OUT	Connect to 'AUX IN' on RV/Board sound system or similar device
9 DC 12V	Connect the AC power pack to the 12V DC IN connection on the TV.

Installing Batteries in the Remote Control

 1. Press and lift the back cover to open the battery compartment of the remote control.
2. Insert two 1.5V AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.
3. Close the battery compartment cover.

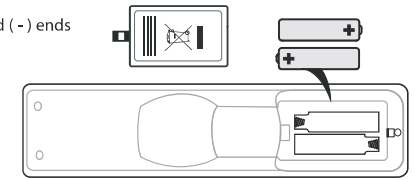

Handling the Batteries

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- When the batteries are exhausted, the remote will not function. Replace both batteries at the same time with new ones.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

 


Handling the Remote Control


- Take care of your fingernails when you press and hold the battery release tab.
- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

Remote Control Operation Range

Point the remote control at the TV no more than 5 metres from the remote control sensor on the TV and within 60° in front of the TV. The operating distance may vary depending on the brightness of the room.

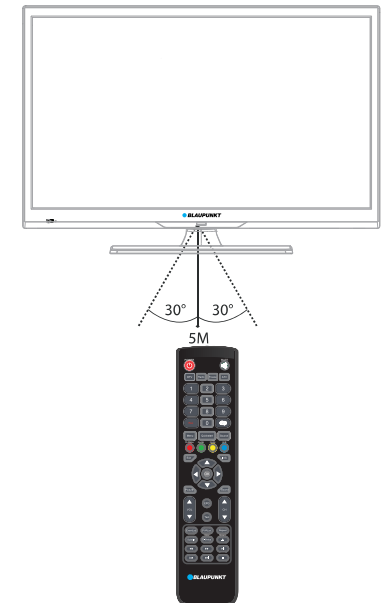

Remote Control

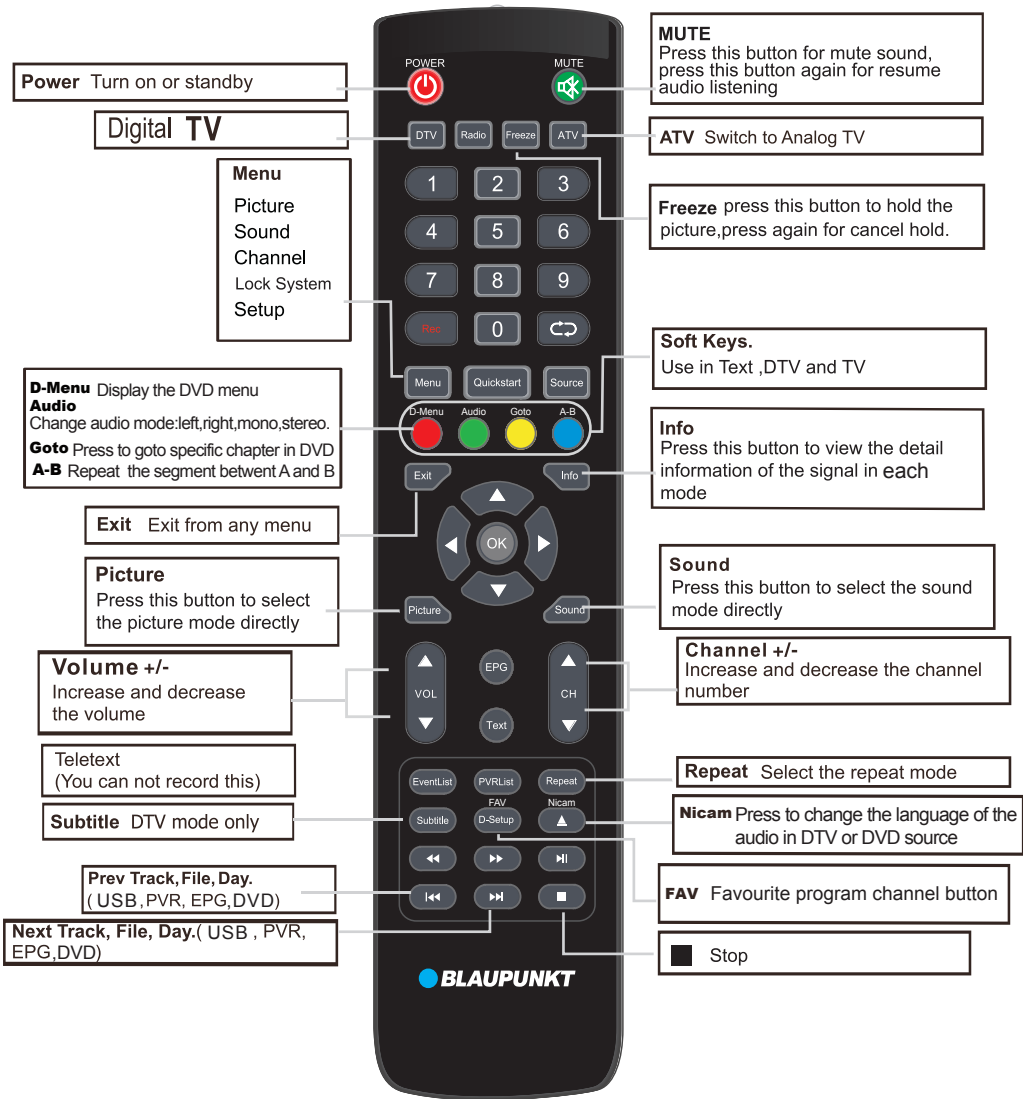 


Replacement Remote part number:BPRC15
Remote Code:807F



Remote Control

 ■ Functions of remote control buttons



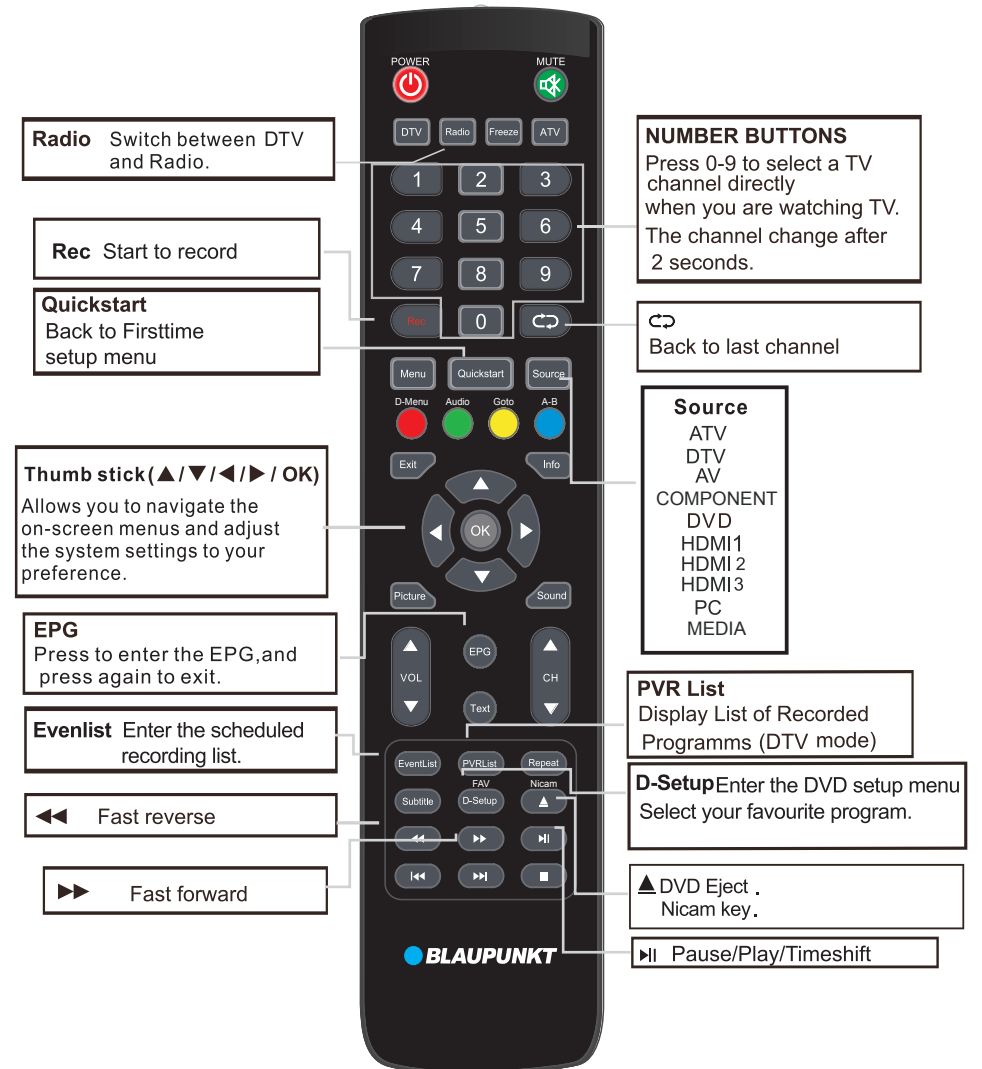




Dependant on the model of the TV some keys will have no function



Making Video and Audio Connections




Not all AV devices have the ability to connect to a TV, please refer to the owner's manual of your AV device for compatibility and connection procedures.


When connecting any external AV device, do not connect the mains cable to the mains socket until all other connections are complete.


Best Video Performance	Signal Type	Separate Audio Connection Required
 HDMI	HDMI (480i/480p/576i/576p/720p/1080i)	No
 VGA	PC	Yes  PC AUDIO
 Y Pb Pr	Component Video (480i/480p/576i/576p/720p/1080i)	Yes  L R
 VIDEO L R	Composite Video	Yes  L R

Connecting an AV Device with an HDMI Cable

- This TV can accept High-Definition Multimedia Interface (HDMI) and supports HDCP (High-Bandwidth Digital Content Protection) Protocol.
- The TV has a total of 3 HDMI input sockets, please make sure the correct input source is selected corresponding to your connected HDMI input socket.
- When you connect to the output of an HD ready player (blu-ray disc player, game console, set-top box or computer) switch to the HDMI function and the TV will automatically detect the resolution used by the HDMI source.
- To get the best picture quality, adjust the blu-ray disc player, game console or set-top box output resolution up to 1366x768p.

 1. Use an HDMI cable to connect the TV's HDMI input socket to the external AV device's HDMI output socket.
2. Plug the connected devices into the mains socket
3. Press the **STANDBY** button on the TV or the  button on the remote control to turn on your TV.
4. Press the **SOURCE** button on the TV or the **SOURCE** button on the remote control to display the Source List. Use the   buttons to select **HDMI** and then press the **OK** button to confirm.

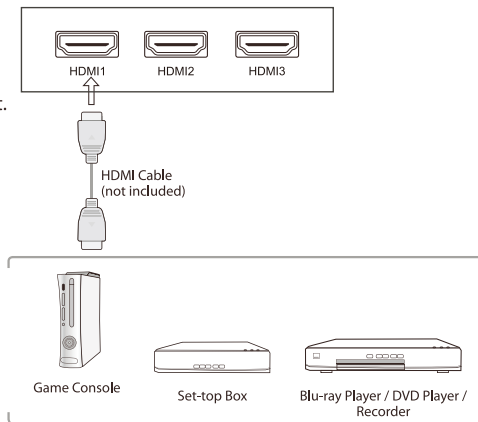

 Although this TV is able to connect to an HDMI device, it is possible that some devices may not operate correctly.

Waste Electrical Recycling

Correct disposal of Product



This sign indicates that this product may not be disposed of with your regular household waste. The recycling and separate collection of such products is your responsibility. Please drop off the above mentioned waste at a designated place for recycling waste electrical and electronic equipment. If you do not know where to drop off your waste equipment for recycling, please contact your local city office or household waste collection service.



The crossed out wheeled dust bin symbol indicates that batteries and /or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemicals symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.



By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries thus help to prevent potential negative consequences for the environment and human health.

 
For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased this product.

Connecting a Computer with a VGA Cable

1. Use a VGA cable to connect the TV's PC input socket to a computer's VGA output socket. Use an audio cable to connect the TV's PC AUDIO input socket to the computer's audio output socket.
2. Plug the connected devices into the mains socket
3. Press the **STANDBY** button on the TV or the **⏻** button on the remote control to turn on your TV.
4. Press the **SOURCE** button on the TV or the **SOURCE** button on the remote control to display the Source List. Use the **▲▼** buttons to select **PC** and then press the **OK** button to confirm.



- The best resolution is 1366×768
- If your computer is set to shut down after a few minutes of idle mode, the TV will also switch to standby due to no signal being received, this is to save energy. Press the **STANDBY** button on the TV when viewed from the front or the **⏻** button on the remote control to restart the TV.

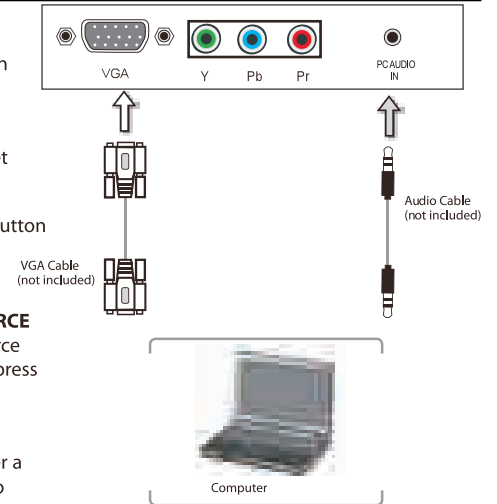


Connecting an AV Device with a Component (YPbPr) Cable

1. Use a component cable to connect the TV's YPbPr input sockets to an external AV device's component output sockets.
2. Use an AV cable to connect the TV's AV input sockets to the external AV device's component audio output sockets. (Audio Left = white, and Audio Right = red)


Component port on the TV	YPbPr		
Video output ports on DVD player	Y	Pb	Pr
	Y	Cb	Cr

 3. Plug the connected devices into the mains socket
4. Press the **STANDBY** button on the TV or the **⏻** button on the remote control to turn on your TV.
5. Press the **SOURCE** button on the TV or the **SOURCE** button on the remote control to display the **Source List**. Use the **▲▼** buttons to select **COMPONENT** and then press the **OK** button to confirm.

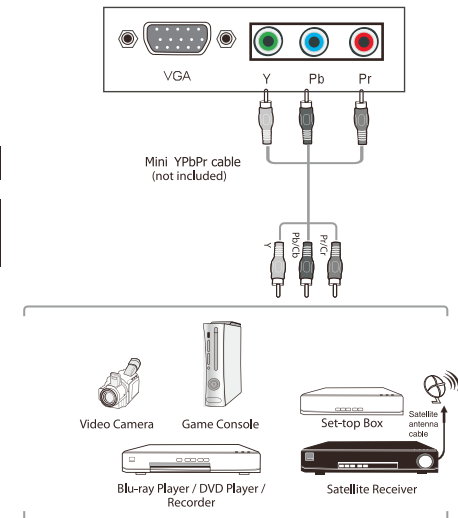

Connecting an AV Device with Composite Cable

 1. Use an AV cable to connect the TV's Mini AV input sockets to an external AV device's composite audio/video sockets. (Video = yellow, Audio Left = white, and Audio Right = red)
2. Plug the connected devices into the mains socket
3. Press the **STANDBY** button on the TV or the **⏻** button on the remote control to turn on your TV.
4. Press the **SOURCE** button on the TV or the **SOURCE** button on the remote control to display the Source List. Use the **▲▼** buttons to select **AV** and then press the **OK** button to confirm.

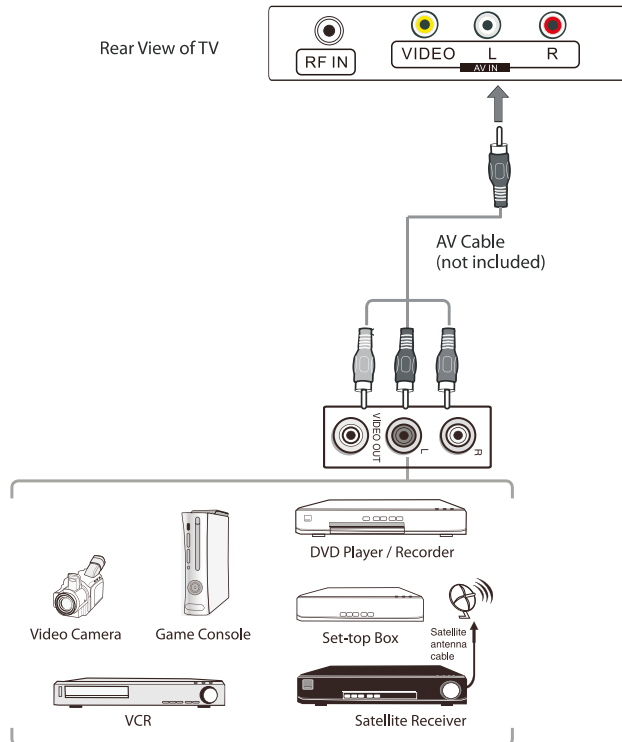


The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

 - Make sure that there is a gap of at least 10 cm on both sides and a gap of 20 cm at the top.

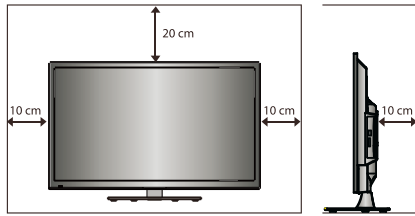

Headphones

- Listening to loud sounds for prolonged periods of time may permanently damage your hearing.
- Before putting on headphones, turn the volume down then put the headphones on and slowly increase the volume until you reach a comfortable listening level.

Standby

- The **⏻** button on the remote control does not switch off the unit completely. The unit will continue to draw electricity from the mains supply while in standby. In the interests of safety and to avoid unnecessary energy consumption, never leave the unit in standby while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Batteries

- Batteries used in the remote control for this unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the remote control. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

2. **TV Channel Logos:** e.g. Shopping channel logos and pricing displays - especially if they are bright and stationary. Moving or low-contrast graphics are less likely to cause ageing of the screen.

3. Time Displays

4. TV Menus

5. **Pause Mode:** Do not leave the screen in pause mode for long periods of time, e.g. when watching videos.

To prevent screen burn if viewing any of the above for long periods of time, reduce contrast and brightness when viewing. Once burn-in occurs it will never disappear completely.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

Important Note

This TV is fitted with the latest ECO friendly power saving technology. If whilst viewing the TV remote control is not used for a period of 4 hours, the Auto Standby feature will operate and power down the TV. A warning message will be displayed to inform you that the TV is about to power down.

Disable this feature by setting the AUTO POWER OFF option in the main Menu / FEATURE to NEVER.

 


Packaging materials are not toys. Please keep away from children. Plastic bags can cause suffocation when pulled over the head.

Connecting a Digital Audio Receiver

For better sound quality, you may want to play the audio through your multi-channel audio receiver.


1. Use an audio cable to connect the TV's Digital Audio out socket to an external audio receiver's audio coaxial input socket.
2. Plug the connected devices into the mains socket
3. Press the **STANDBY** button on the TV or the **⏻** button on the remote control to turn on your TV.
4. Press the **SOURCE** button on the TV or the **SOURCE** button on the remote control to display the Source List. Use the **▲▼** buttons to select any desired input source and then press the **OK** button to confirm.

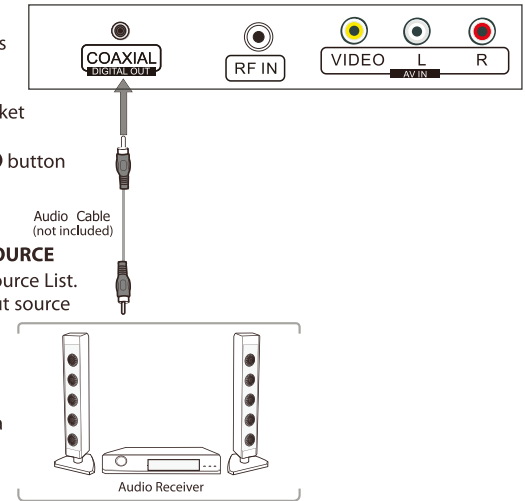

The TV's volume control will have no effect. You may control the audio level via the Audio Receiver.

 
Turning the TV on for the First Time



1. Connect one end of the RF coaxial cable to the aerial socket on the wall and the other end of the cable to the Aerial socket at the rear bottom of your TV.

 Do not connect the TV to the mains supply until you have completed all the connections.

2. Connect the mains cable to the mains socket after you have completed all the connections.

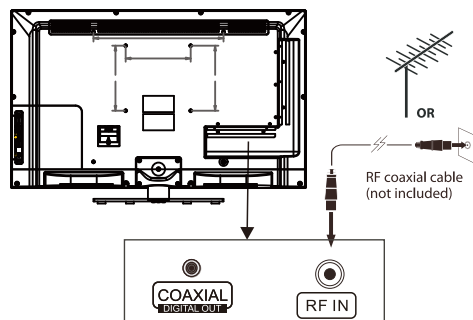3. At this stage, the TV switches to standby mode. The red LED indicator will illuminate on the front panel of the TV.



- 
- Always disconnect the TV from the mains socket when not in use for a long period of time.
 - The **STANDBY** button on the TV or the  button on the remote control is only used for switching the TV into standby, it does not disconnect the TV from the mains power. To completely disconnect the mains power, please remove the mains cable from the mains socket.

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and should not be subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not obstruct the ventilation vents.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Optimum viewing

- View the unit in moderate light to prevent eye strain. It is recommended to watch the unit from a distance 3-7 times that of the screen height.

LED screen

- The LED screen is manufactured using high-precision technology. However, some tiny black points and / or bright points (red, blue or green in colour) may constantly appear on the LED screen. These points are generated in the manufacturing process and are normal.

Screen Burn

- A characteristic of Plasma and LED TV Panels is that displaying the same image for a long time may cause a permanent after-image to remain on the screen. This is called screen burn. Most pictures shown on the unit will be constantly moving and fill the screen.

- Examples of images that you need to watch out for are as follows (this is not an all-inclusive list):

1. **Black Bars:** If black bars appear at the left / right or top / bottom of the screen, it is recommended to change the format so that the picture fills the entire screen.

Specifications

Model	BP2212MHDV
Panel System	21.5" inch LED Panel
Display Resolution	1920(H) x 1080 (V) pixels
Television System	PAL I/BG/DK/SECAM/ BG/DK/L/L'
Brightness	250cd/m ²
Contrast Ratio	1000:1
Power Source	DC 12V===4A
Operating Power Consumption	MAX48W
Standby Power Consumption	<0.5 W
Operating Temperature	0°C - 40°C
Vesa Wall mounting size / Screw size	100x100mm
Speaker Power	3W+3W
Inputs / Output	
HDMI	3
PC	1
PC AUDIO	1
YPbPr	1
AV	1
USB	1
Digital audio out	1
RF (75 Ω)	1
AUDIO OUT	1

Menu Operation

This section explores the menus of your TV. Each menu is outlined and detailed to help you get the most from your TV.

To access the main menu page press **MENU** on the remote.

Press **▲/▼** to cycle through the seven main functions below:

 
PICTURE

SOUND

CHANNEL

FEATURE

SETUP

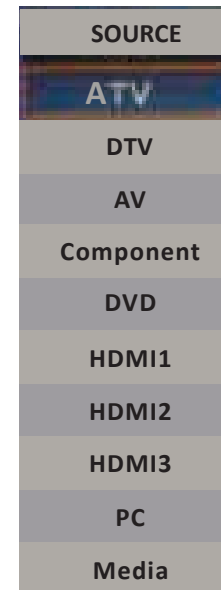

Source Selection

To access the input source's press **Source** on the remote.

Press **▲/▼** to move the cursor

 
Press **OK** to confirm your selection

Features and specifications are subject to change without prior notice.


Picture Menu

Allows you to set your preferred picture mode.

1. Press the **Menu** button and then press the **▲▼** buttons to select the **PICTURE** menu.
2. Press the **OK** or **▶** buttons and then press the **▲▼** buttons to select the following picture options and then press the **OK** button.

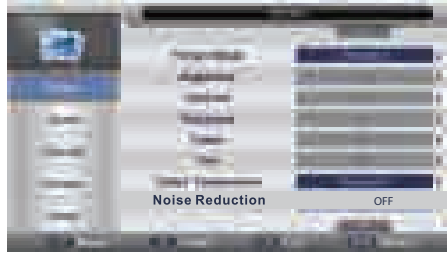

 Picture Mode Press the **▲▼** buttons to cycle among picture mode: Standard / Optimal Soft / User and then press the **OK** button to confirm.

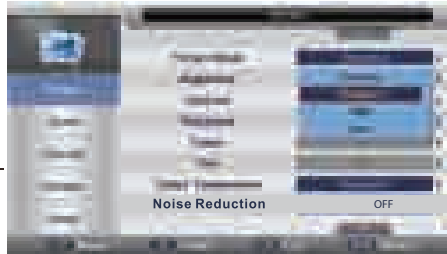


Alternative

You may press the **Picture** button once and then press the **◀▶** buttons to select the picture mode directly.

Brightness Press the **◀▶** buttons to increase or decreases the amount of white in the picture.(for User mode)

Contrast Press the **◀▶** buttons to adjust the difference between light and dark levels in the picture.(for User mode)

 Sharpness Press the **◀▶** buttons to adjust the level of crispness in the edges between light and dark areas of the picture.(for User mode)

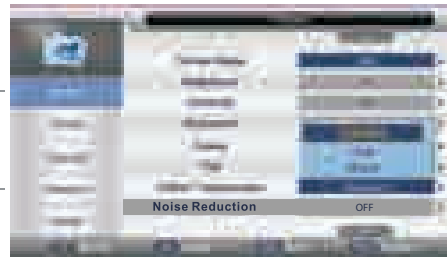

Colour Press the **◀▶** buttons to control the colour intensity.(for User mode)

Tint (For NTSC format) Press the **◀▶** buttons to adjust the balance between red and green levels. (Tint is only available for NTSC signal input via the SCART or AV IN.)

Colour Press the **▲▼** buttons to cycle among

Temperature colour temperature: Standard / Cool / Warm and then press the **OK** button to confirm.

Adjusts the colour components independently to achieve a warm or cool.

- **Standard**
- **Cool:** Increases blue tint
- **Warm:** Increases red tint

Noise Reduction

Press **OK** button or **▶** button to enter, then press **▲/▼** button to select Off, Low, Middle, High. (Only available in ATV/DTV mode)

Reset

Press **OK** button or **▶** button to enter, then choose **OK** to reset the value to factory setting.

HDMI Mode

Resolution	Vertical Frequency (Hz)	Aspect Ratio
480i: 720 x 480	60	Full/4:3 / 16:9 / Zoom1 / Zoom2
480P: 720 x 480		
576i: 720 x 576	50	
576P: 720 x 576		
720P: 1280 x 720	50	
	60	
1080i: 1920 x 1080	50	
	60	
1080P: 1920 x 1080	50	
	60	

Display Modes

The screen resolution has been optimised during production for the display modes listed below.

YPbPr Mode

Resolution	Vertical Frequency (Hz)	Aspect Ratio
480i: 720 x 480	60	4:3 / 16:9 / Zoom1 / Zoom2
480P: 720 x 480		
576i: 720 x 576	50	
576P: 720 x 576		
720P: 1280 x 720	50	
	60	
1080i: 1920 x 1080	50	
	60	
1080P: 1920 x 1080	50	
	60	

PC Mode


Please check the display settings of your computer before connecting to the TV. If the display setting of your computer does not match the TV, there may be no video.

Resolution	Vertical Frequency (Hz)	Aspect Ratio
640 x 480	60	4:3 / 16:9
	72	
	75	
800 x 600	60	
	72	
	75	
1024 x 768	60	
	70	
	75	
1360 x 768	60	
1920 x 1080	60	

Sound Menu

Allows you to select an audio-enhancement technique.

 1. Press the **Menu** button and then press the **▲▼** buttons to select the **SOUND** menu.
2. Press the **OK** or **▶** buttons and then press the **▲▼** buttons to select the following sound options and then press the **OK** button.

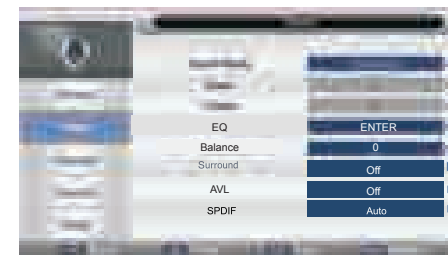

Sound Mode Press the **▲▼** buttons to select an audio-enhancement technique: Standard / Movie / Music / Speech / User and then press the **OK** button to confirm.



Alternative

You may press the **Sound** button once and then press the **◀▶** buttons to select the sound mode.

Bass Press the **◀▶** buttons to control the relative intensity of lower-pitched sounds. (for user mode)

Treble Press the **◀▶** buttons to control the relative intensity of higher pitched sounds. (for user mode)

EQ Press **OK** or **▶** button to enter sub-menu and press **▲ / ▼** button to select. EQ100HZ / EQ300HZ / EQ1KHZ / EQ3KHZ / EQ8KHZ (for user mode)

Balance Press the **◀▶** buttons to adjust the relative volume of the speakers in a multiple speaker system.

Surround Press the **▲▼** button to select ON/OFF.

AVL Press **▲ / ▼** button to select ON or OFF. to control the volume automatically.

SPDIF Press **▲ / ▼** button to select Bitstream / Off / PCM.

 
Reset Press **OK** button to enter sub-menu. select **OK** to reset audio to factory setting.

3. Press the **Menu** button to return to the previous menu. Press the **Exit** button to exit the menu.

Channel Menu(ATV/DTV)

Allows you to set up a variety of channel options.

1. Press the **Menu** button and then press the **▲▼** buttons to select the **CHANNEL** menu.
2. Press the **OK** or **▶** buttons and then press the **▲▼** buttons to select the following channel options and then press the **OK** button.

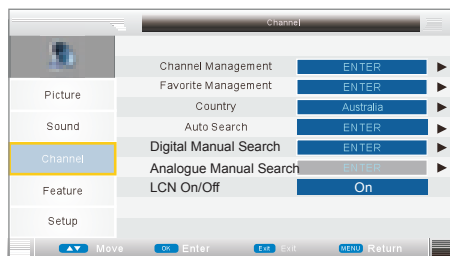

Channel Management

To manage (Delete / Lock / Skip) all channels.

1. Press the **▲▼** buttons to **Channel Management** then press the **OK** button to confirm.
2. A channel management screen will pop up, Press the **▲▼** buttons to select the channel you want to edit.

a. Delete

Press the **GREEN** button to delete the selected channel.

b. Lock

Press the **RED** button to lock your selected channel (The ticked Channels will only be locked when the LOCK option in the FEATURE menu is set to ON)

c. Skip

Press the **YELLOW** button to select the channels that you want to skip when you are selecting channels. Press the **YELLOW** button again to undo it.

d. Move (Only available in ATV)

 
Press the **BLUE** button and then press the **◀▶** buttons to move to the selected position. Press the **BLUE** button or the **OK** button to confirm.

3. Press the **Menu** button to return back to the main menu.
4. Press the **Exit** button to exit the menu.

Favorite Management


To manage (Add / Delete) favorite channels.

1. Press the **▲▼** buttons to **Favorite Management** then press the **OK** button to confirm.
2. A favorite management screen will pop up.
3. Press the **◀▶** buttons to select the channels to be added to your favorite lists. press the **RED** button to add to FAVlist 1. **GREEN** button FAV list 2. **YELLOW** button FAV list 3 or **BLUE** button for FAV list 4.
4. Press the **Menu** button to return back to the main menu.
5. Press the **Exit** button to exit the menu.

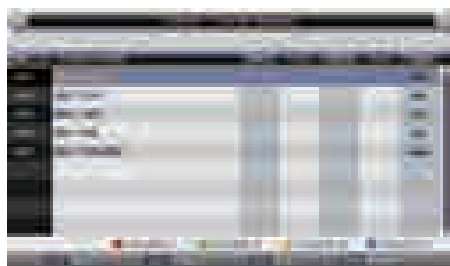

Country

 Press the **▲▼** buttons to select the country and then press the **OK** button to confirm.

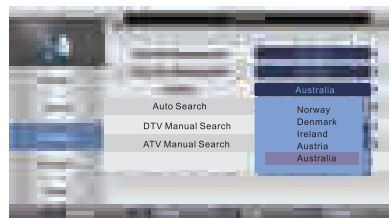

No sound when connecting HDMI

- Check if the input source is **HDMI**.

Audio noise

- Keep the RF coaxial cable away from the other connected cables.

Password

- Select the **Change Pin Code** setting in the **FEATURE** menu, then enter the following master password "**8888**". The master password clears your previous password and allows you to enter a new password.

Lost Password

There is a problem in PC mode.

The signal is out of range (Invalid format)

- Adjust the resolution, horizontal frequency, or vertical frequency.

Vertical bar or stripe on background & Horizontal Noise & Incorrect position

- Use Auto configure or adjust clock, phase, or H/V position.

Screen colour is unstable or single colour

- Check the signal cable.
- Reinstall the PC video card.

FAQs (Frequently Asked Questions)

Why have I lost some / all of my channels?

- It happens sometimes, if you have a weak signal. Usually it just means you'll need to rescan your digital box or TV. Don't worry, it's easy to do. And once you've done it, you should get all the channels available to you. If problems persist you may need to get your aerial checked. Talk to your retailer or contact your local aerial installer.

Why do I get 'blocking' on my digital picture?

- In most cases, blocking is caused by a reception problem – either the signal is too weak or there is some kind of interference. Talk to your retailer or contact your local aerial installer.
- Blocking can also be caused by a digital signal that is too strong. If you are still experiencing blocking and the signal is strong, consult your local aerial installer for advice.

Can I use a portable set-top aerial?

- Some, but only a few, homes may be able to use a set top aerial. However, for a much better reception, we strongly recommend that you use a rooftop aerial.
- If you do not have access to a rooftop aerial – for example, if you rent a flat and the aerial is the responsibility of your landlord, or if you're using a second TV in the bedroom and don't want the hassle and expense of using extension cables, a set – top aerial may be your only option.

What type of aerial do I need?

- If you are installing a new aerial, we recommend a wideband rooftop aerial rather than a loft aerial. Loft aerials generally receive a weaker digital signal and are more likely to get interference from other electrical devices in the home. We suggest you have an aerial survey done before getting an aerial upgrade.
- Talk to your retailer or contact your local aerial installer.

TV cannot be switched on

- Check that the TV is connected to the mains supply
- Make sure all connected AV devices are switched off before switching on your TV.

The remote control does not work

- Check to see if there are any objects between the TV and the remote control causing an obstruction. Ensure that you are pointing the remote control directly at the TV.
- Ensure that the batteries are installed with the correct polarity (+ to +, - to -).
- Install new batteries.

Power is suddenly turned off

- Check the power of the TV. The mains supply maybe interrupted.
- Check if the sleep timer is set.
- Check whether the Auto Standby is activated.

The video function does not work.

No Picture & No Sound

- Check whether the TV is switched on.
- Try another channel. The problem may be caused by the broadcaster.

Picture appears slowly after switching on

- This is normal, the image is muted during the TV startup process. Please contact your service centre, if the picture has not appeared after five minutes.

No or poor colour or poor picture

- Adjust the settings in the **PICTURE** menu.
- Try another channel. The problem may be caused by the broadcaster.
- Check if the video cables are connected properly.

Horizontal / Vertical bar or picture shaking

- Check for local interference such as an electrical appliance or power tool.

Poor reception on some channels

- Station or cable channel may be experiencing problems, tune to another station.
- Station signal is weak, reposition the aerial for better reception.
- Check for sources of possible interference.

Lines or streaks in pictures

- Check aerial (Change the position of the aerial.)

No pictures when connecting HDMI

- Check if the input source is **HDMI**.

Picture appears in wrong ratio

- Adjust the **Aspect Ratio** settings in the **PICTURE** menu.

The audio function does not work.

Picture OK but no sound

- Press the **VOL + / -** buttons.
- Sound muted? Press the **Mute** button.
- Try another channel. The problem may be caused by the broadcaster.

No output from one of the speakers

- Adjust the **Balance** settings in the **SOUND** menu.

Unusual sound from Inside the TV

- A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV.

Auto Search

To select auto search mode (All / Digital / Analogue).

1. Press the **▲▼** buttons to **Auto Search** then press the **OK** button to enter sub menu to select the following item.

All Mode: Select **All** to scan all available DTV and ATV channels and store them. To skip the ATV search press the Menu button. To exit the Tuning menu press EXIT.

Digital Mode: Select **Digital Mode** to scan all available DTV channels and store them.

Analogue Mode: Select **Analogue Mode** to scan all available Analogue Channels and store them. To exit the tuning menu press Exit.

3. Press the **Menu** button to return back to the main menu.

4. Press the **Exit** button to exit the menu.

Digital Manual Search

How to search Digital channels manually.

1. Select **Digital Manual Search**, press the OK button to confirm.

2. Select a channel number by pressing the **►** button or by using the number buttons on the remote control. The Strength and Quality of the signal indication bars are below.

3. Select **Start** to begin the search.

4. To exit the tuning menu press EXIT.

ATV Manual Search

To search analogue channel by entering parameters manually.

1. Press the **▲▼** buttons to **ATV Manual Search** then press the **OK** button to confirm.

2. Select ATV manual search item to enter air channel manual search in ATV source and the user operation interface as following.

Current Channel Displays the current channel number.

Frequency Select AFC On to lock the desired frequency.

Search Press the **◀▶** buttons to start the manual tuning.

Fine-Tune Press the **◀▶** buttons to make manual fine tuning adjustments.

Color System Selects the color system: Auto / SECAM / PAL.

Sound System Selects the sound system: BG / DK / I / L / L'.

LCN On/Off

Press **OK** or **►** to button, Press **▲ / ▼** button to select **On, Off**. Then press **OK** or **►** to confirm.

3. Press the **Menu** button to return back to the main menu.

4. Press the **Exit** button to exit the menu.

Feature Menu

Allows you to set up a variety of feature options.

1. Press the **Menu** button and then press the **▲▼** buttons to select the **FEATURE** menu.

2. Press the **OK** or **►** buttons and then press the **▲▼** buttons to select the following feature options and then press the **OK** button.



Child Lock

1. Press the ▲▼ buttons to **Child Lock** then press the **OK** button to confirm.
2. Use the 0-9 buttons to input a 4-digit password to enter the **LOCK** menu and then press the **OK** button to turn the Lock System **On**.



- The default password is "0000".
- If you change the password, be sure to remember the new password! If you forget the new password, press the master password "8888".

Child Lock : Turns on the Lock options. (This option must be set to ON for the channel management Lock option to function) Once the Lock option is activated (ON). To view any locked channels you will need to give a password. For Auto, Manual tune and TV reset a password will also be needed.
OFF: Turn off the LOCK options. (All functions of the TV will be available)



Keypad Lock

Set to prevent Keypad from being used by your children, or other unexpected usage.
Press OK or ► to select ON/OFF.

Parental Lock : No block: Turn off parental lock.

Block R and above - Block All: Turn on Parental Lock and set the parental rating level to show programs below the level, while a password controls access to higher-level programs.

Press the ▲▼ button to select the Parental Rating, then press the ◀▶ button to select No Block / Block R and above.../Block ALL.

Change Pin Code: Press the **OK** or ► buttons to enter the pin code changing page.

Hotel mode: Press the **ENTER** button to enter the mode.

3. Press the **Menu** button to return back to the main menu.
4. Press the **Exit** button to exit the menu.

Language

System language setting, includes OSD Language, Preferred Subtitle, Preferred Audio, Digital Teletext Language, Anglog Teletext Language.

1. Press the ▲▼ buttons to **Language** then press the **OK** button to confirm.

OSD Language: Press the ▲▼ buttons to select the menu language.

1st/2ndPreferred Subtitle: Press the ▲▼ buttons to select the Preferred Subtitle.

1st/2ndPreferred Audio: Press the ▲▼ buttons to select the Preferred Audio.

Digital Teletex language: Press the ▲▼ buttons to select the Preferred Digital Teletex language.

Analogue Teletex language: Press the ▲▼ buttons to select the Preferred Analogue Teletex language.

3. Press the **Menu** button to return back to the main menu.
4. Press the **Exit** button to exit the menu.

3. Do not expose the disc to direct sunlight or heating sources, store discs in cabinet vertically, and in dry condition.

Prevent exposure to:

Direct sunlight
Heat or exhaust from a heating device
Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, wipe the disc surface gently and radically from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. such cleaning fluids will permanently damage the disc surface.



Caution:

This unit is a class 1 laser product. However this unit uses a visible laser beam which could cause hazardous radiation exposure if directed. Be sure to operate the player correctly as instructed.

 
Maintenance

Careful and regular cleaning can prolong the life of your TV.



Be sure to Disconnect the mains cable from the mains socket before any cleaning.

1. Use a soft dry cloth to wipe away the dust from the screen and surfaces.
2. If the surfaces are extremely dirty, clean the TV with a cloth which has been dipped in a weak soapy water. Wring the cloth until it is almost dry, then use it to wipe the TV.
3. Ensure there is no excess water on the screen. Allow any water or dampness to evaporate before switching the TV on.

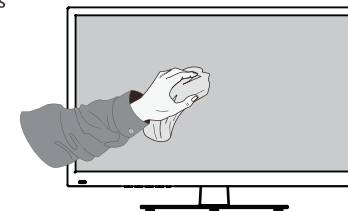

Never use alcohol, benzene, paint-thinner, cleaning fluid or other chemicals.
Do not use compressed air to remove dust.

Hints and Tips

The following table contains various hints and tips to get the best performance from your TV.

The TV does not operate properly.

The TV does not respond when pressing any buttons

- The TV may freeze up during use. Disconnect the mains cable from the mains socket for a few minutes. Reconnect the mains cable and try to operate it again as usual.

Disc Care

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

 
Track

A segment of picture or music on a CD, each track is numbered for searching.

Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and /or the center spindle hole. Do not touch the discs surface
2. Do not bend or press the disc.




Clock

Allows you to adjust timer zone, sleep timer, auto standby, OSD timer and summer time.

1. Press the ▲▼ buttons to **Clock** then press the **OK** button to confirm.

Date The Date are automatically set by the Digital TV signal.

 Time The Time are automatically set by the Digital TV signal.

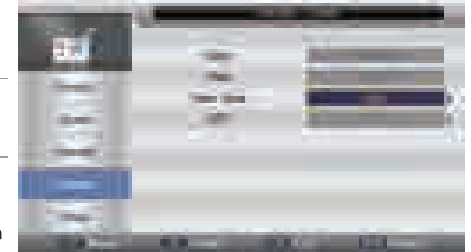

Time Zone When you select a Time Zone city, the TV time is set by the time offset information based on Time Zone and GMT (Greenwich Mean Time) which is received with the broadcast signal and the time is set automatically by a digital signal. Press the ▲▼ buttons to select the desired time zone city and then press the **OK** button to confirm. (DTV mode)

DST

(daylight saving time) [On, Off] if it's **On**, it'll be an hour earlier than the GMT. If Time Zone is set to **Off**, it's not available.

Sleep Timer The sleep timer automatically switches the TV to standby after the preset time has

elapsed. The clock will be set automatically when receiving a digital signal. Time must be set before using Sleep Timer function.

Press the ▲▼ buttons to select a period of time after which the TV automatically switches to standby mode: OFF/15/30/...105/120 min and then press the **OK** button to confirm. The timer begins to count down from the number of minutes selected.

Auto Power Off

The unit will automatically switch to standby mode 1, 2 or 4 hours after the last time the remote control was used. A reminder screen will pop up and count down before the unit switches to standby mode. If you want to operate the TV for a long period of time, turn off the auto standby function by selecting Never.

Hearing Impaired

Allows you to show more information in subtitles for the hearing-impaired in some programmes (for DTV channels only if available).

1. Press the ▲▼ buttons to select **Hearing Impaired** and then press the **OK** button to select **On / Off**.
2. Press the **Menu** button to return to the previous menu. Press the **Exit** button to exit the menu.



PVR/Time shift (DTV Mode)

Allows you to select your preferences in the PVR/Time shift

1. Press the ▲▼ buttons to select PVR/Time shift then press the **OK** button to confirm.

Record File Format press **OK** or ► button, then press ▲/▼ to select TS/PS,

Partition Select Press the **OK** buttons to enter the Partition Select menu. Display partition's information / Format partition function / Set default partition function.

Timer Press the **OK** button to select the Timer menu.

CH NO. Channel number.

Channel Start Channel name.

Start Start recording time.

Duration The total recording time.

Date The date the recording started.

Mode Record Mode.

On the left top of menu is current date and time.

Record List The **Record list** shows all previous recordings on the inserted USB storage device. you can also enter the Record list via press the PVRlist on the remote control.

Recorder Start Start an instant record by selecting **OK**

Time Shift Start Press ▲/▼ button to select **TimeShift Start**, press **OK** or ► button to enter the sub-menu start timeshift.

Timer Programming

This function is used to perform scheduled recording.

1. Press the evenlist button enter **Timer menu**.

2. Press Yellow button to enter **Timer Edit menu**, then press the ▲/▼ button to select the following item.

Recorder [When the PVR format support]

Press **OK** or ► to enter and press ▲/▼ to select On/Off.

Type: Press **OK** or ► button, then press ▲/▼ to select DTV or Radio

Channel: Press **OK** or ► button, then press ▲/▼ to select channel which you want to add to the timer list.

Start Time: Press **OK** or ► button, then press 0-9 button to set the record start time.

Duration: Press ▲/▼ to select **Duration**, then press **OK** to enter and press 0-9 button to input Duration.

Date: Press ▲/▼ to select **Date**, then press **OK** to enter and press 0-9 button to input date.

Mode: Press ▲/▼ to select **Mode**, then press **OK** or ► to enter and press ▲/▼ to select Once Daily, Weekly, Monthly.

Record List: Press ▲/▼ to select **Record List**, then press **OK** or ► to enter. Then will appear as Follows:

3. Press **MENU** to save the settings, press **EXIT** button to exit.

6. Preference Setup



1. TV Type

TV Type: select the colour type from PAL, AUTO or NTSC.

2. Audio

Please select the preferred language for DVD audio.

- 1) The selected language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
- 2) Languages vary between discs, depending on the DVD. You can also select alternative languages by pressing the AUDIO button on the remote

3. Subtitle

Selects the preferred language for subtitles recorded on Discs.

- 1) The selected subtitle language is assigned high priority and can therefore be adopted automatically when the player begins playing a disc.
- 2) Subtitles vary between discs, depending on the Discs. You can also select alternative subtitle language by pressing the SUBTITLE button on the remote.

4. Disc Menu:

Select the preferred language for the disc menu recorded on the Discs. This choice varies between Discs.

5. Parental

It is possible to restrict playback of certain Discs to a certain level of user, based on their age, for example. Certain scenes can be blocked or replaced with different scenes. The "Parental Control" function lets you set the access control level. This function is password-protected.

Note: If you play discs that do not support the Parental Control function, the DVD player cannot restrict access to the disc.

6. Password

 
Change the password to your desired. The default password is 0000.

7. Default

Restore the DVD player's system to factory default settings.

2. Audio Setup

When the DVD menu displayed, the DVD system will auto pause. Press SETUP again, it will go on

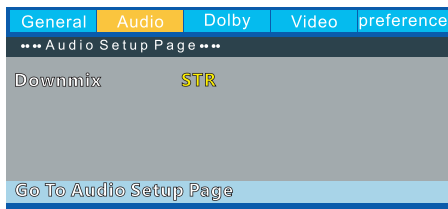

A. Press SETUP button on remote control during playing DVD, Press "▶ / ◀" until it will show following menu.

B. Press "▼/▲" to choose the items, then enter the desired item with OK button. It has been set already when the desired item becomes red.

Note: Press Left button to get back the previous menu.

C. Press SETUP to exit the menu.

D. The items of the menu as below.

Downmix: choose the downmix mode. There is only one item--stereo.

3. Dolby Setup



Dynamic is the difference between the maximum level and the minimum level of sounds. this function is generally used when playing high volume programs at night, in order not to disturb the neighbour. This setting can dynamo lower the volume and still keep the original tone quality. This is the range, measured in decibels(dB), between the loudest and the quietest sound registers in a soundtrack.

5. Video Setup



1). **sharpness** :
adjust the sharpness of the image.

2). **Brightness** :
Select 'Brightness' by using the "▼/▲" button, then press **OK** . You can adjust the Brightness by pressing the "◀/▶" button. To exit 'Brightness' setting, press **OK** again to return.

3). **Contrast** :
Select 'Contrast' by using the "▼/▲" button, then press **OK** . You can adjust the Contrast by pressing the "◀/▶" button. To exit 'Contrast' Setting, press **OK** again to return.

EPG (ELECTRONIC PROGRAM GUIDE)

Press **EPG** button on the remote control to display the EPG daily mode menu.

For more information about a program, press **Info** button.

Press **RED** button to switch between EPG weekly mode and EPG daily mode.

To see programmers for the yesterday or further, press the **YELLOW** button to decrease the date.

To see programmers for the next day or further, press **BLUE** button to increment the date.

Press **GREEN** button once to add channel to the recorder list.

Press **GREEN** button twice to Reminder the program, there will be a small logo or beside the program

Press **EPG** once more or **EXIT** once to cancel the operation.

Means the channel is encoded channel.

 
TEXT Press **TEXT** button on the remote control to display the text;

Press **TEXT** button on the remote control again to stop playing the text.

NOTE: Text is not available in all regions.

Multi-Audio Press **SOUND** button on the remote control to cycle soundmode among Movie/Music/speech/user/standard.

Setup Menu

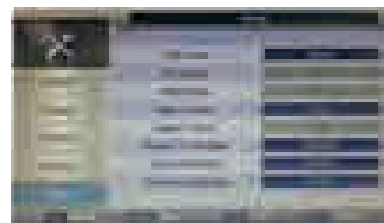

1. Press **MENU** button to display the main menu.
2. Press ▲/▼ button to select **Setup** in the main menu, then press **OK** or ▶ to enter.
3. Press ▲/▼ button to select the option that you want to adjust in the **Setup** menu, then press **OK** or ▶ button to enter.

OSD Timer

Press ▲/▼ button to select **OSD Timer**, then press **OK** or ▶ button to enter the sub menu, Then Press ▲/▼ button to select.(Available OSD Timer:5 Second, 10 Second, 15 Second, 20 Second, 25 Second, 30 Second, never), then press **OK** or ▶ button to confirm.

PC Setup

Press ▲/▼ button to select **PC Setup**, then press **OK** or ► to enter the sub menu, Then Press ► to enter, then press **OK** or ► to confirm(when the PC signal is connected).

HDMI Mode

Press ▲/▼ button to select **HDMI Mode**, then press **OK** or ► to enter the sub menu, Then Press ► to select.(Available: Auto,Underscan, Overscan), then press **OK** or ► to confirm(when the HDMI signal is connected).

Blue Mode

Press **OK** button to enter, then press▲/▼button to select ON/OFF.

Aspect Ratio

Press ▼ / ▲ button to select Aspect Ratio, then press Enter button to enter sub-menu. Press ▼ / ▲ button to select aspect ratio. (Available options are: 4:3,16:9,Full,Zoom1, Zoom2, Panorama)

Reset TV Setting

Press ▲/▼ button to select **Reset TV Setting**, and then press **OK** or ► to enter.

The password menu will appear when the Child Lock is on.

At the cursor input password to enter default password is "0000" The menu will appear as follows:

Return back to the previous menu if select "CANCEL" and press **OK** button.

Auto Installation

Press **OK** button to enter, then select **OK** to back to the Auto installation Menu.

Press **EXIT** button to exit entire menu and ignore following set.

Setup1

Press ▲/▼ button to select language.

Press **OK** button or **GREEN** button to enter setup 2 menu.

Setup2

Press▲/▼button to select country.

Press **RED** button to enter setup 1 menu.

Press **OK** button or **GREEN** button to enter setup 3 menu.

Setup3

Press▲/▼button to select Auto Power Off.

Press **RED** button to enter setup 2 menu.

Press **OK** button or **GREEN** button to enter setup 4 menu.

Setup4

Press **RED** button to enter setup 4 menu.

Press **OK** button to enter Auto Tune (Digital), the menu will appear.


Press **MENU** button to exit Auto Tune (Digital) menu, and enter setup 5 menu.

Setup5

Press **RED** button to enter setup 5 menu.

Press **OK** button to enter Auto Tune (Analogue), the menu will appear.

 PVR Mangage

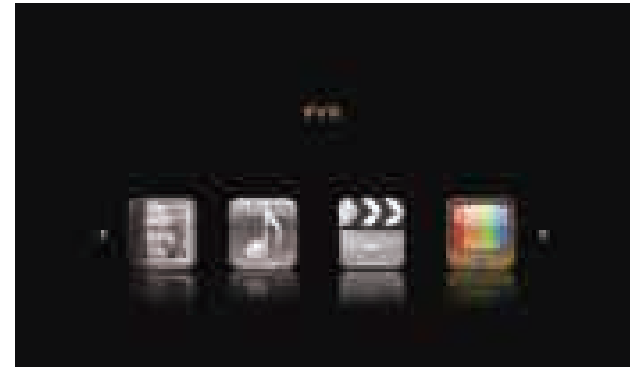

Press ▲/▼ to select the Video, press **OK** or ► button or ► button to play.

 
You can see the information of the current video playing at the first few seconds or after press **DISPLAY** button. Then press ► button to play, you can see the playing state in the right.

Notes: Other menu and description are the same as that for Movie menu.

DVD

The DVD settings menu by the remote control the lower arrow, Up and down buttons of the OSD menu. To change the OSD menu items. Left and right buttons of the OSD menu. To select the OSD menu items.

1. General Settings page

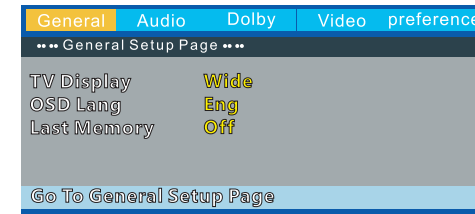

1. TV Display

Some DVD discs have been authored in 4:3 aspect ratio format. To see the material in its original mode, you may need to change the Aspect ratio.

Pan & Scan (4:3)

Black edges left and right will be seen.

Letterbox (4:3)

Top and bottom of the screen may be black.

Wide 16:9 (Widescreen)

Full width picture but may have black areas top and bottom.

OSD Language.

Select the OSD Language (English is default).


Last Memory, ON/OFF.

You may wish the player to remember where it finished playing a disc and then remove the disc. When you stop the disc, the player will automatically remember the point it finished playing. When the disc is re inserted the player will continue from the same point.

Photo Manager

Press ◀/▶ button to select **Photo** in the main menu, and then press **OK** button to enter.

 Press **EXIT** button to return back to the previous menu.

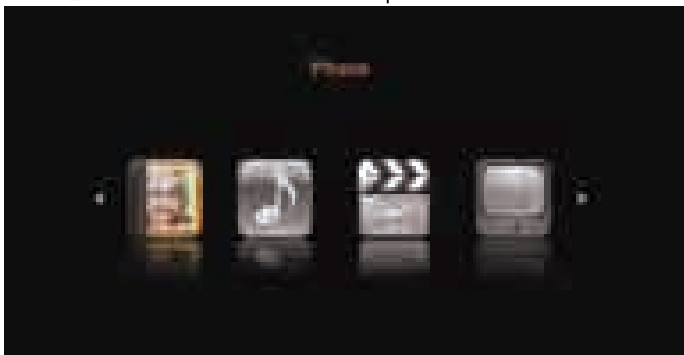

Press ▲/▼ to select the photos, press **OK** or ▶|| button or ▶ button to view.

You can see the information of the current playing photo after press **DISPLAY** button, then press ▶| button to play or pause, you can see the playing state in the right.

Then press ▲/▼ or ◀/▶ button to rotate the picture.

Notes: Other menu and description are the same as that for Movie menu.

 


File format supported: JPG / JPEG / BMP/PNG

Ebook

Press ◀/▶ button to select **Ebook** in the main menu, and then press **OK** button to enter.

Press **EXIT** button to return back to the previous menu.

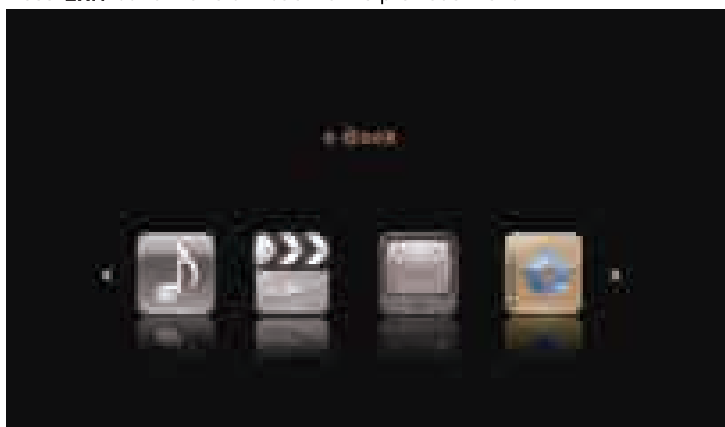

Press ▲/▼ to select the file, press **OK** or ▶|| button to read.

Press ◀/▶ button to select the previous/next file,

Press ▲/▼ button to select the previous /next page.

Software Upgrade

Press **OK** button to enter, then select **OK** to upgrade the software.

PC Setup (Only available on PC mode)

Press **MENU** button to display the main menu.

Press ▲/▼ button to select Setup in the main menu, then press **OK** or ▶ to enter the sub-menu to select the following item.



Auto Adjust

Press ▲/▼ button to select **Auto Adjust**, and then press **OK** or ▶ button, the menu will appear a few second.

H Position

Press ▲/▼ button to select **H Position**, and then press **OK** or ▶ to enter, press ◀/▶ to adjust the picture horizontally.

V Position

Press ▲/▼ button to select **V Position**, and then press **OK** or ▶ to enter, press ◀/▶ to adjust the picture vertically.

Phase

Press ▲/▼ button to select **Phase**, and then press **OK** or ▶ to enter, press ◀/▶ to adjust the picture phase.

Clock

 
Press ▲/▼ button to select **Clock**, and then press **OK** or ▶ to enter, press ◀/▶ to adjust the clock.

Media Menu

MEDIA OPERATION

Note: Before operation **MEDIA** menu, Plug in USB device or memory card, then press **SOURCE** button to set the Source to Media.

Press **▲/▼** button to select **MEDIA** in the **Source Menu**, and then press **OK** or **▶** to enter.

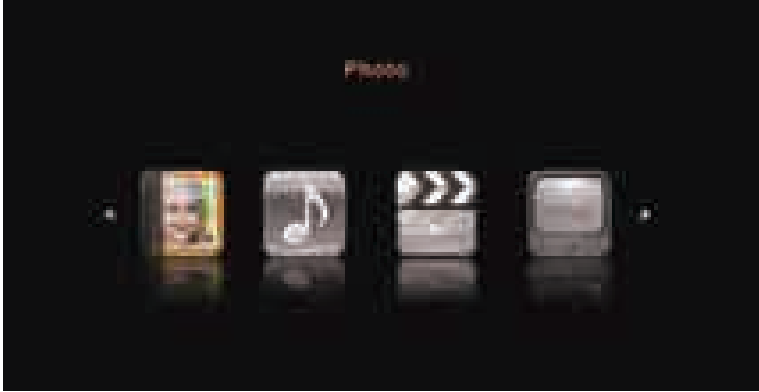

Press **▲/▼** button to select the option that you want to adjust in the **Media** menu, then press **OK** or **▶** button to enter.

Movie Menu

Press **◀/▶** button to select **Movie** in the main menu, then press **OK** button to enter.

Press **EXIT** button to return back to the previous menu.



Press **▲/▼** button to select the folder that you want to view.

Press **OK** button to select the sub folder.

Press **OK** button or **▶||** button to play,

Press **■** button or **EXIT** button to stop playing.

Press the **◀** button to return back to previous page.

You can see the information of the current playing media at the first few seconds or after press **INFOR** button.



- Some audio file formats will not be supported.
- Supported file formats and decoder is as follow:


Media	Ext.	Video	Audio
Movie	.mpg	MPEG-1, MPEG-e	MP3, AAC, AC3
	.avi	Xvid, MJPEG, MPEG-4 SP/ASP, H.264	
	.ts	MPEG-2, H.264	
	.mov/.mkv	MPEG-4 SP/ASP, H.264	
	.dat	MPEG-1	
	.mp4	MPEG-4 SP/ASP, H.264	
	.vob	MPEG-2	



Music Menu

Press **◀/▶** button to select **Music** in the main menu, and then press **OK** button to enter.

 Press **EXIT** button to return back to the previous menu.

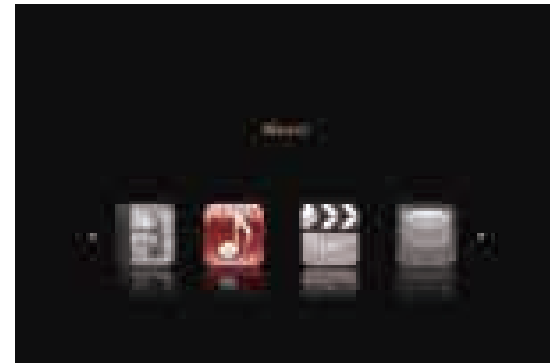

Press **▲/▼** button to select the song you want to listen, and then press **OK** or **▶||** or **▶** button to play.

Press **◀** button to return back to the previous menu.



- Some audio file formats will not be supported.
- Supported file formats: MP3/AAC/M4A/WAV.
- Supported Audio decoder:MP3/AAC/WAV.