



R/C CAR INSTRUCTIONS

RC CAR & TRANSMITTER

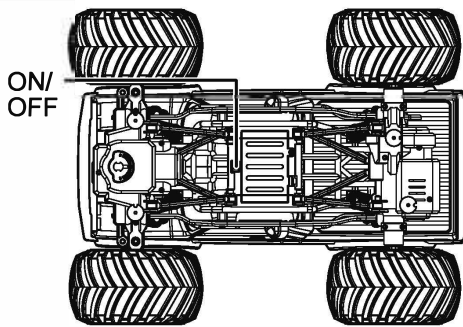


Press the ON to turn on the power of the remote control car and start the remote control car.

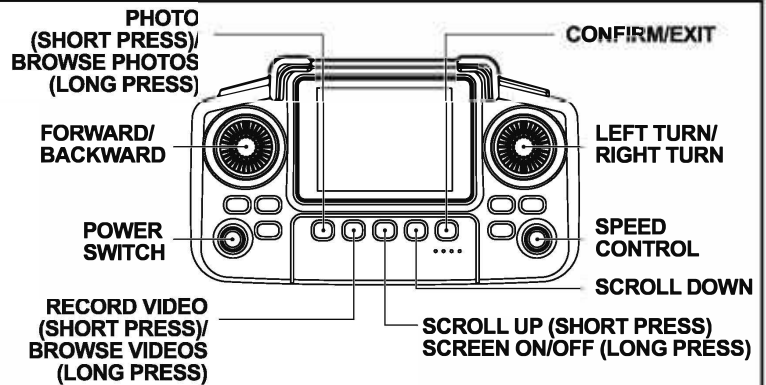

BATTERY INSTALLATION

battery Installation for vehicle


Remote control charging instructions

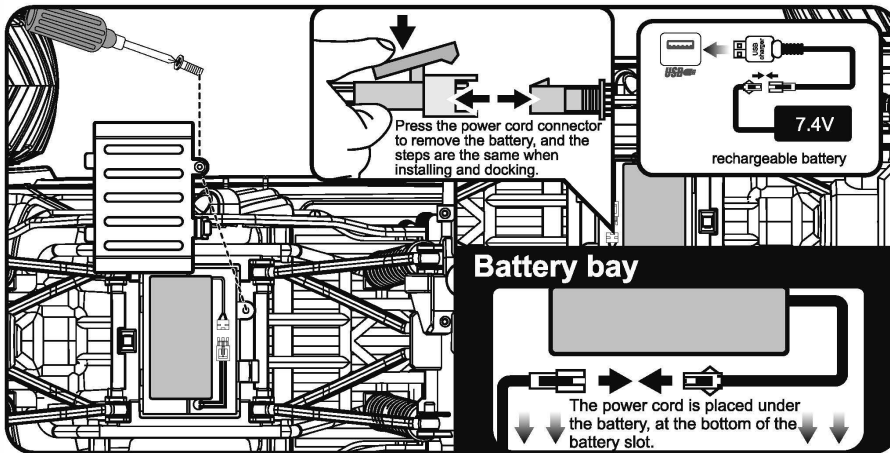

- 1 Remove the bottom screw of the remote control car and open the remote control car shell
- 2 Connect the RC car power cord to the battery power cord. When installing, place the power cord at the bottom of the battery compartment.



Note: Only use the special charger for battery charging

Connect the USB port of the USB charging cable to the corresponding socket according to the illustration and connect the plug of the other end of the USB charging cable to the remote control socket. When charging, the LED indicator light is always on. When charging is complete, the LED indicator goes off.


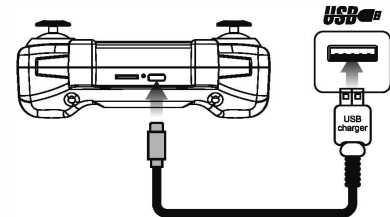


OPERATION MANUAL OF REMOTE CONTROL



FORWARD

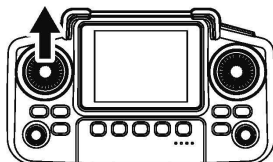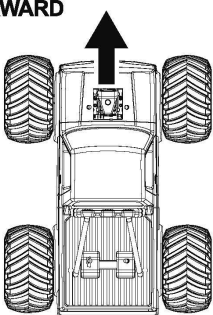



LEFT TURN

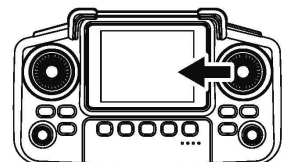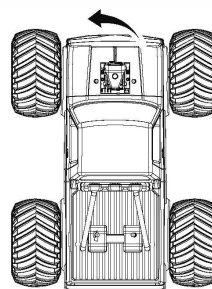

BACKWARD

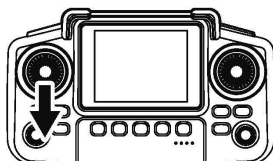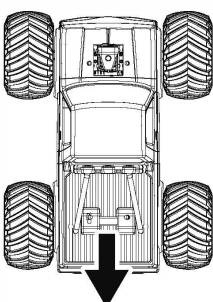

RIGHT TURN

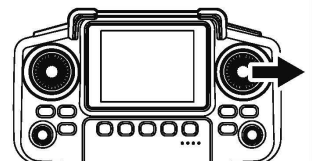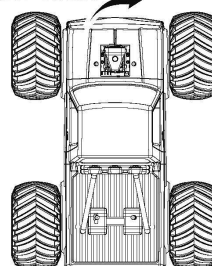

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

遥控车使用说明书


遥控车和遥控器的操作

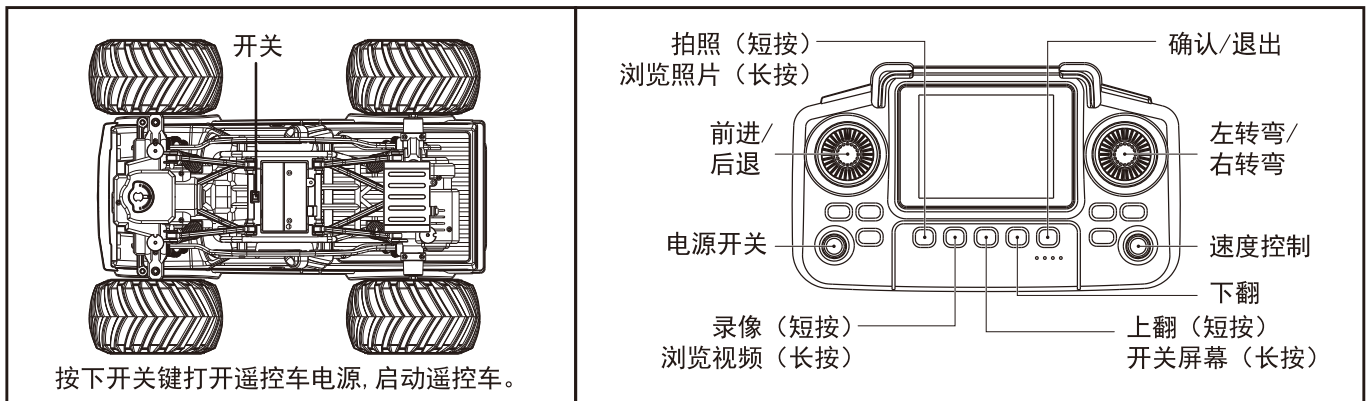


电池的安装方法

车体装入电池示意图

遥控器充电说明

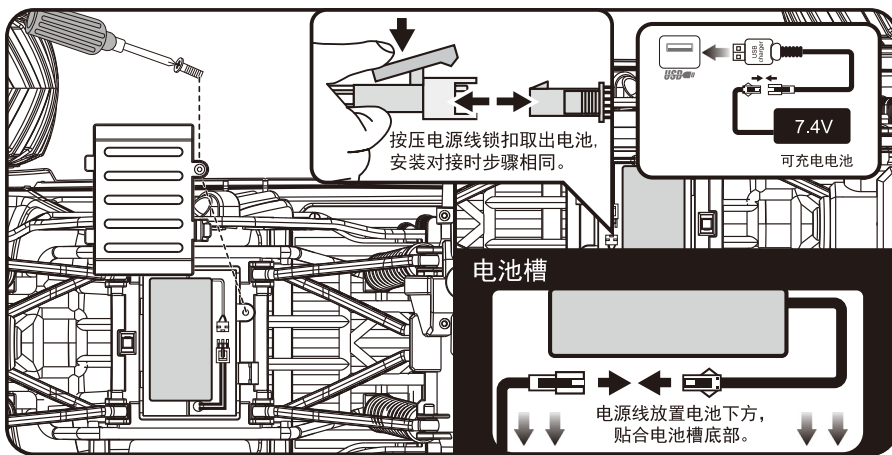

根据图示将USB充电线的USB接口连接到相应的插座, 并将USB充电线的另一端插头连接到遥控器插座上。充电时, LED指示灯常亮。充电完成后, LED指示灯熄灭。

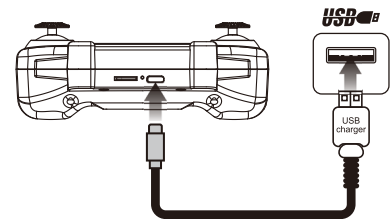

- 1 将遥控车底部螺丝取出打开遥控车外壳
- 2 将遥控车电源线与电池电源线进行连接。安装时请将电源线贴合电池槽底部。

注意: 必须使用专用充电器进行充电, 确保技术参数适合充电器

遥控操作说明

